


2 DAILY INSPECTIONS

2.1	End Seal Jaw Surface.	2-1
2.2	End Seal Jaw Knife Slot.	2-3
2.3	End Seal Jaw Knife Blade	2-4
2.4	Crumb Plate.	2-5
2.5	Pull Belt	2-6
2.6	Back seal Heater Band and Heater Block.	2-7
2.6.1	Back seal Heater Band.	2-7
2.6.2	Back seal Heater Block	2-8
2.7	Silicon Rubber and Teflon Tape	2-9


2 DAILY INSPECTIONS

2.1 End Seal Jaw Surface


1. Turn the main power OFF.

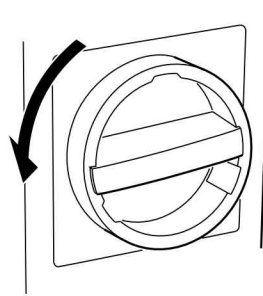


2. Open the front cover.

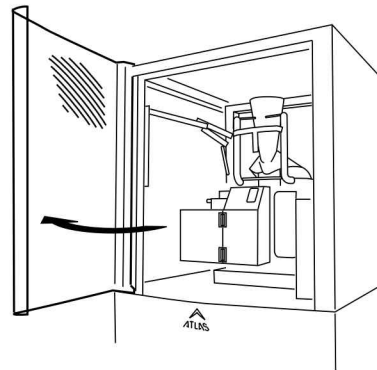

3. Pull the handle forward, and swing the back seal unit out.

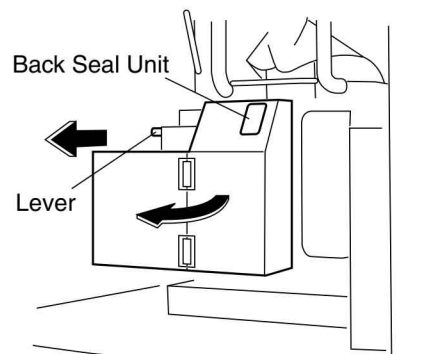

4. Remove 4 bolts and remove the crumb plate and the stripper plate.
5. Make sure that no film residue or product is adhering to the surface of the jaw.

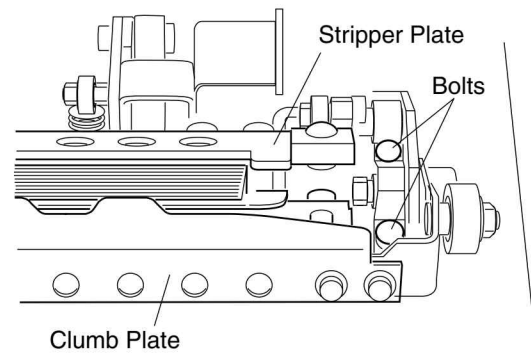

If residue or product is adhering to the surface of the jaw, use a wire brush to remove it.

 CAUTION

- **Do not touch the jaw with your hand. It is hot and you can get burned.**



2.2 End Seal Jaw Knife Slot


CAUTION

- Do not touch the jaw with your hand. It is hot and you can get burned.


1. Proceed steps 1 to 4 of the section "2.1 End Seal Jaw Surface".
2. Remove two bolts and remove the knife blade.

WARNING

- Be careful when removing the knife blade. It is very sharp and hot.

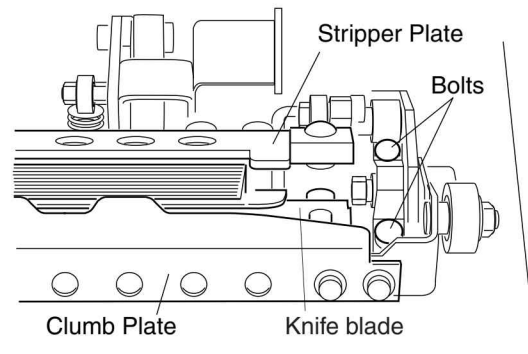

3. Clean out the knife slot, both front and rear.

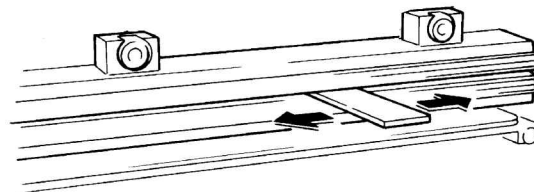

2.3 End Seal Jaw Knife Blade


CAUTION

- After operation, the end seal jaw knife blade is extremely hot. Be careful when inspecting.

1. Proceed steps 1 to 4 of the section "2.1 End Seal Jaw Surface".
2. Remove two bolts and remove the knife blade.

WARNING



- Be careful when removing the knife blade. It is very sharp and hot.

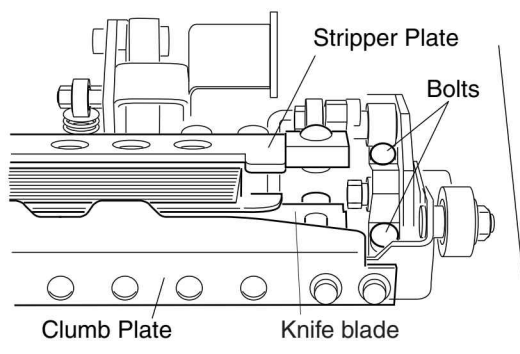

3. Check the surface of the knife blade. If it is dirty, remove the grime with a brush. If strange substance is adhering to the surface, scrape it off with a knife. If the knife blade is worn or damaged, replace it with a new one.

CAUTION

- Do not use a wire brush. The tip of the knife blade can get damaged.

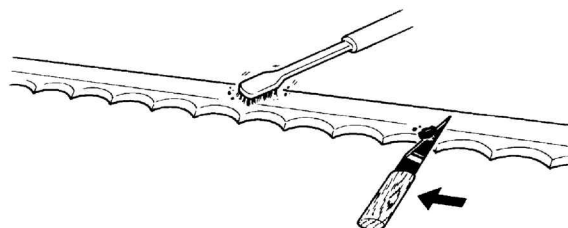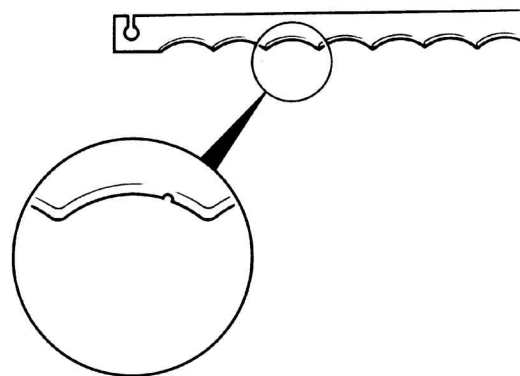

2.4 Crumb Plate



1. Proceed steps 1 to 3 of the section "2.1 End Seal Jaw Surface".
2. Compress the crumb plate and ensure the movement is free.
If not, check for broken springs.
If springs are broken, replace it.

Use following steps to replace the spring.

- (a) Loosen the fixing screws.
- (b) Replace the spring.


NOTE

- Similarly, confirm if the stripper plate moves smoothly.

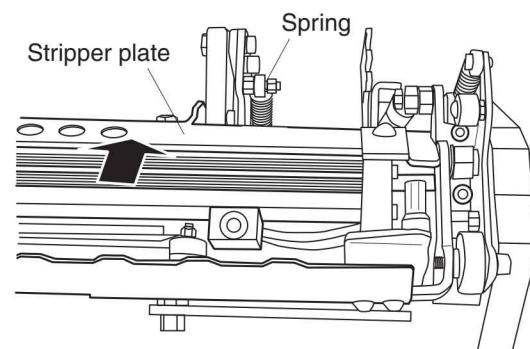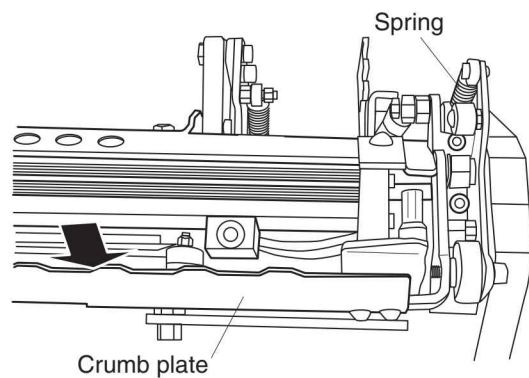

2.5 Pull Belt


1. Press the [Run/Lace] key.
 ▶The pull-down belts move outward.
2. Turn the main power OFF.
3. Open the front cover.
4. Pull the handle forward, and swing the backseal unit out.

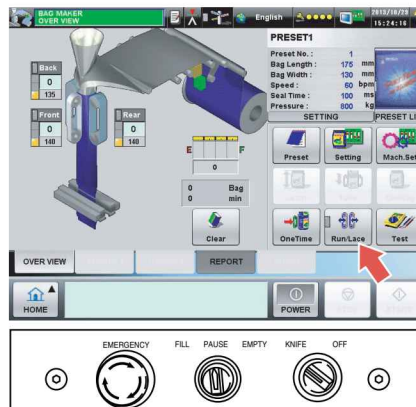

5. Move the former lever to the rear, and remove the former.

CAUTION


- Be careful when handling the former. It is heavy.

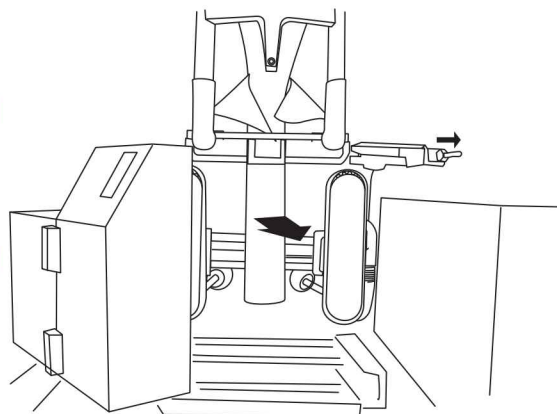

6. Check the surface of the pull belt. If it is dirty, remove the grime with a plastic brush or wet towel. If the belts are worn or split, replace them with new ones.
 (For details on how to replace the pull belts, see "4.3.2 Replacing the Pull Belt".)

CAUTION

- Do not use a detergent or cleanser to clean the pull belt. This can cause the pull belt to deteriorate.

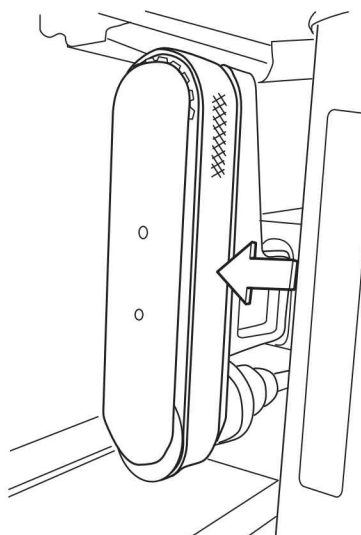

2.6 Back seal Heater Band and Heater Block


2.6.1 Back seal Heater Band

**CAUTION**


- After operation, the heater band is extremely hot. Be careful when inspecting.

1. Proceed steps 1 to 4 of the section "2.5 Pull Belt".

2. Open the back seal cover.

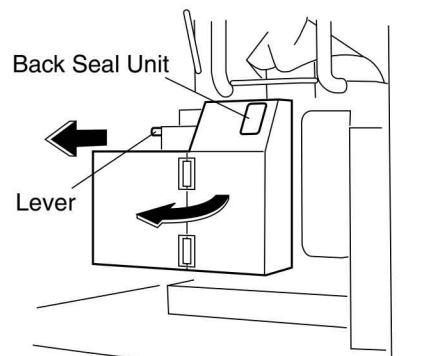

3. Check the surface of the heater band. If it is dirty, remove the grime with a brush. If the band is worn or damaged, replace it with a new one.
(For details on how to replace the heater band, see "4.2.1 Replacing the Heater Band".)

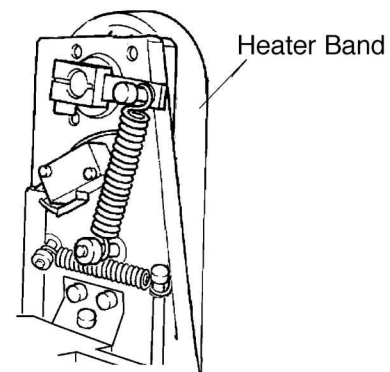


2.6.2 Back seal Heater Block





CAUTION

- After operation, the heater block is extremely hot. Be careful when inspecting.

1. Proceed steps 1 to 4 of the section "2.5 Pull Belt".
2. Open the back seal cover.

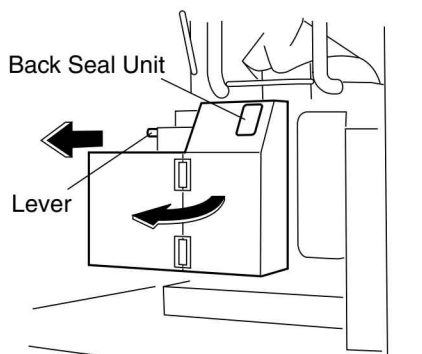


3. Lift the tension lever located on the back of the steel belt, and remove the heater belt.
4. Check the surface of the heater block. If it is dirty, scrape the grime off with a brush.

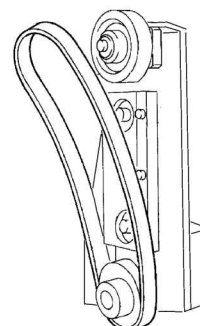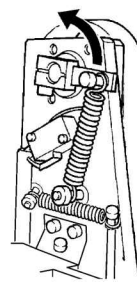

2.7 Silicon Rubber and Teflon Tape

1. Proceed steps 1 to 4 of the section "2.5 Pull Belt".
2. Open the back seal cover.

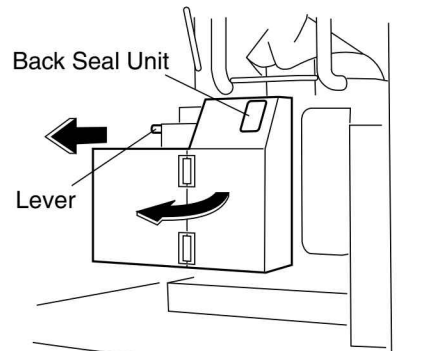

3. Check the condition of the Back Seal touching area surface.



- If the silicon rubber and teflon tape are conspicuously dirty with dark grime, split or otherwise damaged, replace them with new one.

