



6. Remove the heater block.

NOTE

- The lengths of the bolts that fasten the heater block are different.

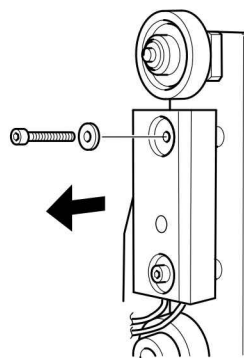

7. Remove the two bolts that fasten the heater shoe to the heater block.
8. Loosen the two allen screws ③ from the side of the heater block and remove the heater shoe.
9. Loosen the screws ① and/or ② from the side of the heater block, and pull out the heater and/or thermocouple.
10. Install the new heat pipe.
11. Reinstall all parts in the reverse order of removal.


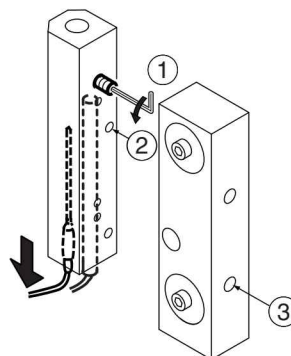


4.2.3 Replacing the Back Seal Air Cylinder

NOTE

- You must remove the back seal unit to access the back seal cylinder.


1. Turn the main power OFF.
2. Lift the pressure reducing valve knob; then turn the knob counterclockwise until the pressure is at 0.
3. Open the front cover, left upper cover and acrylic cover.
4. Pull the handle forward, and swing the back seal unit out.

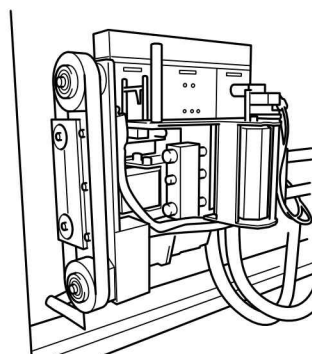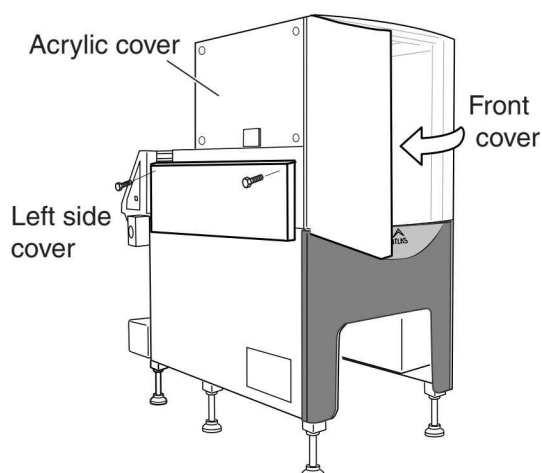

5. Remove the two bolts fixing the back seal unit, remove the back seal unit.


NOTE

- The back seal unit is heavy so put on the space carefully not causing any shock.
- The back seal unit removal is just to access to the back seal cylinder. Back seal unit is out of replacing items.

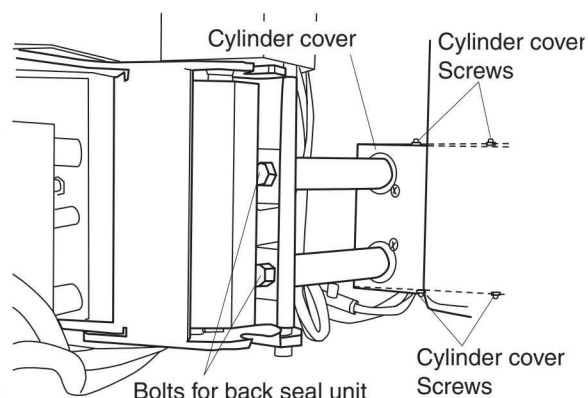

6. Remove each two screws on the top and bottom sides of cylinder cover and remove the cylinder cover.

7. Remove a nut fastened arm plate and remove the cylinder.
8. Remove the two air lines from the fitting.
9. Remove 4 screws and remove the cylinder from the main body.
10. Install the new air cylinder.
11. Reinstall all parts in the reverse order of removal.

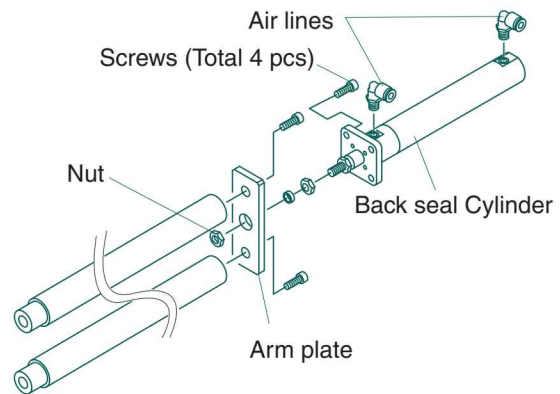

4.2.4 Replacing the Back Seal Unit M5 Motor

1. Turn the main power OFF.
2. Open the front cover.
3. Open the back seal unit.
4. Remove the arm cover.
5. Remove the CN sig cable from the M5 connector.




CAUTION

- Pull the cable out straight while holding the connector. Failure to do so can damage the cable.

6. Remove the M5 servo motor horizontally. The M5 motor is fastened by four allen bolts.

Tool: 5-mm hex wrench

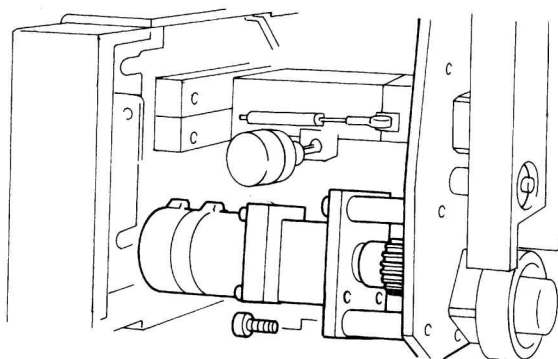


NOTE

- Removing the guard plate will make the replacement work easier.

7. Remove the gear from the M5 servo motor.

Tool: 2.5-mm hex wrench

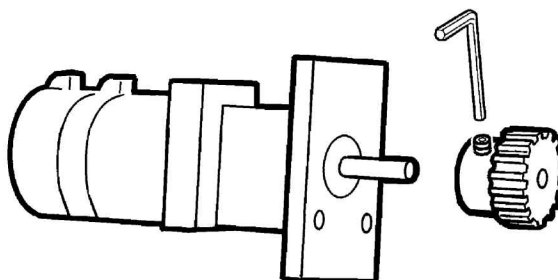

NOTE



- Replace the motor only. The gears are not included.

-
8. Attach the original gear to the new M5 servo motor.
 9. Attach the M5 servo motor to the back seal unit.
 10. Reinstall all parts in the reverse order of removal.

4.3 Pull Belt Unit

4.3.1 Replacing M1 Motor of the Pull Belt


1. Turn the main power OFF.
2. Open the left side upper cover.
3. Remove the 2 back side screws fixing the left side upper cover, then remove the front side 2 screws to remove the cover.
4. Remove the ten screws, remove the rear upper cover.

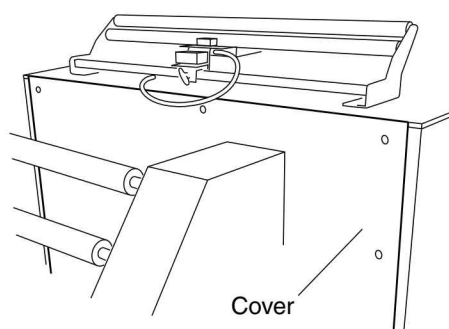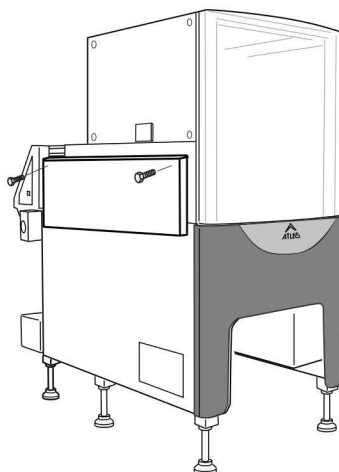

5. Loosen two tension bolts.
6. Remove 2 screws and remove the motor base A from the M1 motor with motor base B.
7. Remove 4 screws, remove the M1 motor from the motor base B.
8. Remove the timing belt if necessary.

NOTE

- You cannot remove timing belt without removing the motor.

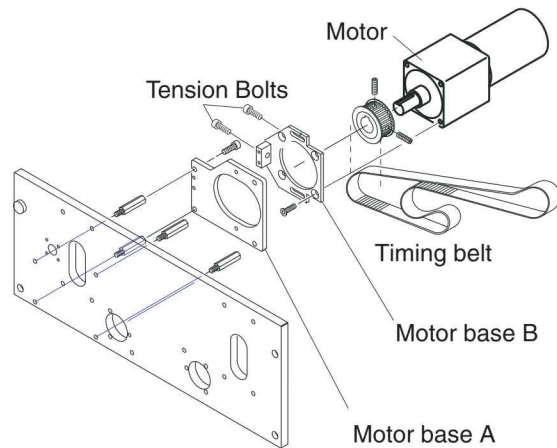

9. Reinstall all parts in the reverse order of removal.

10. Check for proper tension on pull belts.

Deflection : 3-4mm


4.3.2 Replacing the Pull Belt

1. Press the [Run/Lace] key.
 - ▶The pull-down belts move outward.
2. Turn the main power OFF.
3. Open the front cover.
4. Pull the handle forward, and swing the back seal unit out.
5. Remove the former, and make sure that the pull belt is free of grime, flaws, and splits.


**CAUTION**

- **Be careful when handling the former. It is heavy.**

6. Loosen the nut at the reverse side of the pull belt unit and loosen the tension.
7. Remove the pull belt.
8. Install the new pull belt.

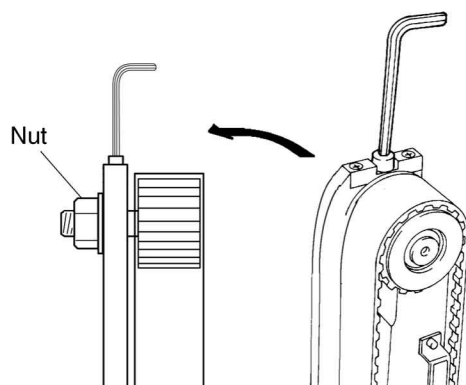


9. Press down on the center of the pull belt and adjust the tension that the belt deflects approximately 3 to 4 millimeters, then tighten the nut.

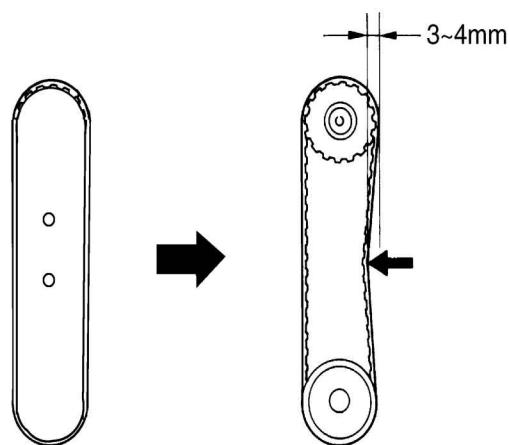


4.4 Dancer Roller

4.4.1 Replacing the Load Cell

1. Turn the main power OFF.
2. Remove the main unit lower cover on the right side.
3. Move the electrical control panel to remove the load cell connector in the back.

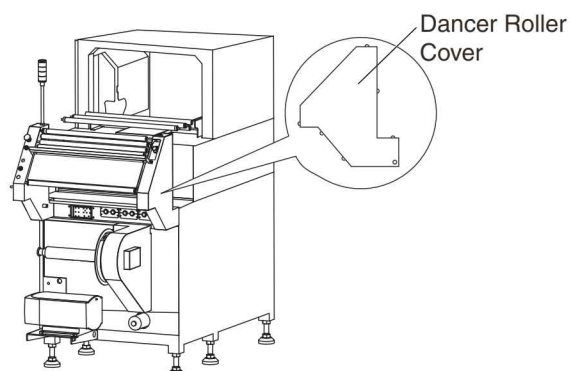


4. Remove the Dancer Roller cover on the left side.
5. Remove the dancer roller spring.
 Left: Remove the nut attaching the bottom of the spring.
 Right: Remove the 4 screws of the load cell move the load cell and detach the spring from the hook.

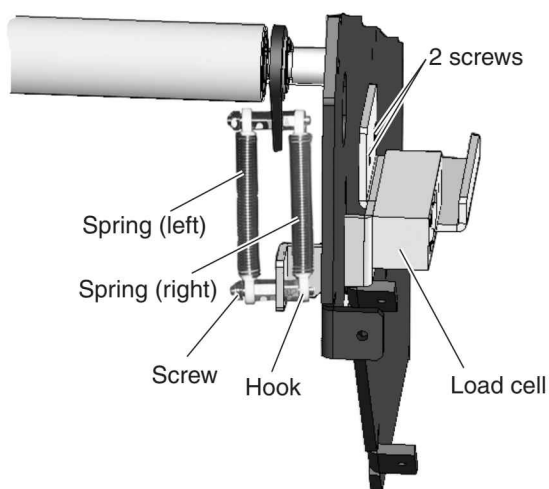


6. Remove the 2 bolts fixing the load cell fitting outside the frame.

7. Remove the load cell.

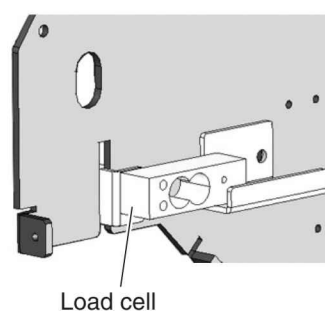


4.4.2 Dancer roller adjustment


1. Turn the main power supply ON.
2. Remove the Dancer Roller cover on the left side.

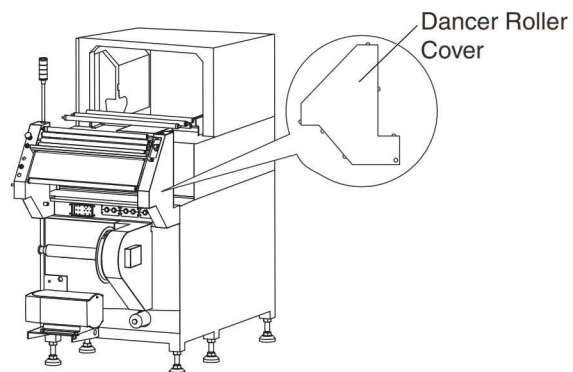

3. Press the operation level key  on a screen.
 ► The screen to select the operation level will appear.

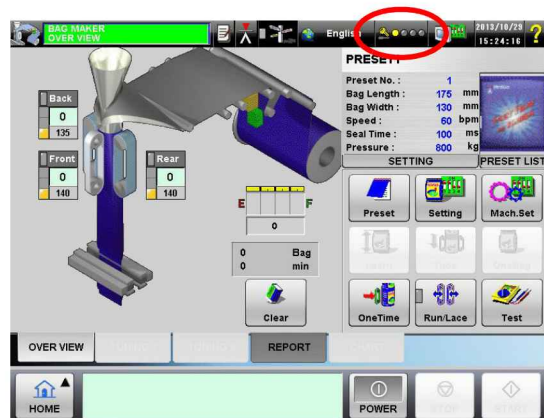

4. Select the Maintenance level.
 ► The keyboard to enter the password will appear.
5. Enter the password for the Maintenance level.
 ► The Operation Standby screen for the Maintenance level will appear.

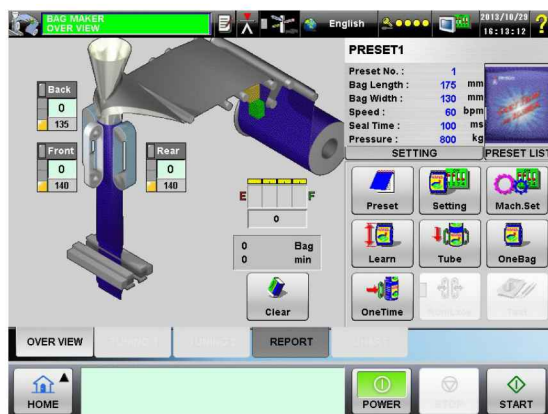

6. Press the  key.
 ► The MACHINE SETTING screen will appear.