

< Adjusting eyemark sensor >

**WARNING**


- Exercise extreme caution when handling the eyemark sensor.



1. Press the  button for 2 seconds or longer in the RUN mode.
2. When the display is changed, press the  button until the mark/color switch (CI) is displayed.
3. Press the [Teaching/Enter button].
4. Press the  button to select the mark mode (0_I).

**Two-point teaching in mark mode**

1. Set the first point color (color for eyemark).
2. Press the [Teaching/Enter button].
 - ▶ "02P" is displayed in the display.
3. Set the second point color (color for film ground).
4. Press the [Teaching/enter button].
 - ▶ When the teaching is performed normally, it returns to the RUN mode.
 - When an error occurs, "0Er" is displayed.
 - Press the [Teaching/Enter button] to perform the two-point teaching.

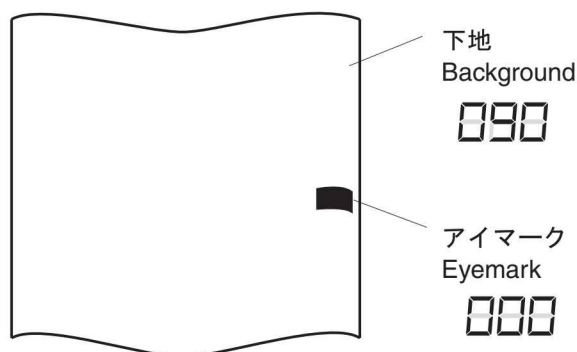**NOTE**

- For the film, the ground color is "90" or more and the eyemark color is close to "0."

Manual adjustment for threshold value

1. Press the  button.

▶ The threshold value is displayed, and the display blinks.



2. Press the  button.

▶ The threshold value is changed.

3. When proper threshold value is displayed, press the [Teaching/Enter button].

▶ It returns to the RUN mode.

NOTE

- The standard threshold value is set to 50.

4.9.4.2 Vacuum Pressure Switch Sensor


NOTE

- The * symbol used with the serial number shown on the board represents the board version number.

1. Turn the main power OFF.
2. Remove left lower cover.
3. Remove the XJ9 connector from the SCU2 (P-5492 *) board.

NOTE

- The connector of the vacuum pressure switch sensor cables have the following numbers:
Connector Number (XJ9) : Color
Pin 2 : Brown
Pin 3 : Blue

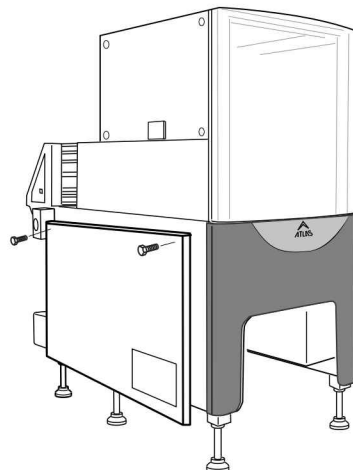


4. Remove the vacuum pressure switch sensor.



CAUTION


- Make sure that the cable is inserted properly. If the machine is operated when the connect is substandard or the terminal is incorrect, the sensor can malfunction and / or damage can be caused.**

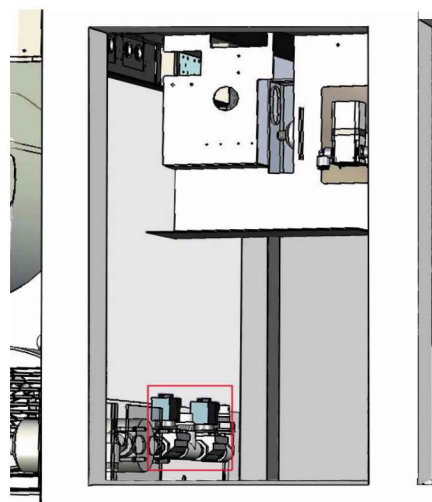

5. Install the vacuum pressure switch sensor.
6. Reinstall all parts in the reverse order of removal.

4.9.4.3 Front Door Ajar Switch


1. Turn the main power OFF.
2. Open the front cover.
3. Remove the front door ajar switch and bracket.
4. Loosen the screw at the bottom of the switch, and remove the cable.
5. Reattach the cable to the new switch.
6. Install the new switch into the main unit.
7. Reinstall all parts in the reverse order of removal.

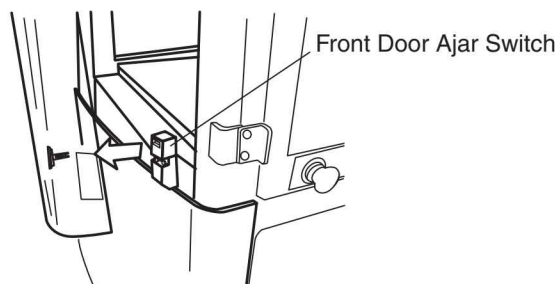

4.10 Shaker Unit (Option)

4.10.1 Replacing the M7 Motor

1. Turn the main power OFF.
2. Open the front cover.
3. Disconnect the two cables that are connected from the M7 servo driver to the M7 motor.
4. Remove the cover.
5. Loosen the allen screws, and remove the M7 motor from bracket.
 - M6 set bolt
 - Tool 5 mm hex wrench

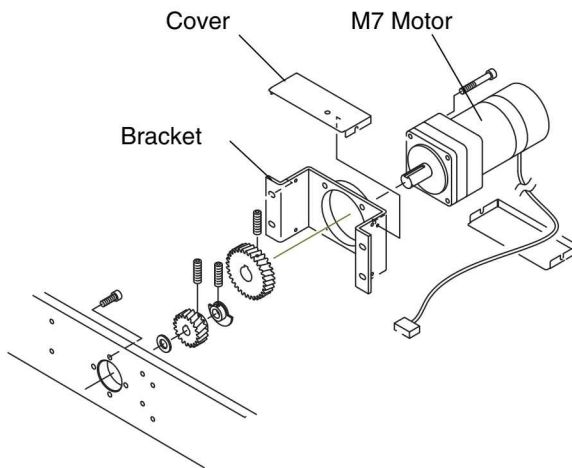

6. Attach the original gear to the new motor; then apply a small amount of graphite grease.

NOTE

- Replace the motor only. The gears are not included.

7. Install the new motor.
8. Reinstall all parts in the reverse order of removal.

4.11 Poker Unit (Option)

