

Connector classification

Connector No.		Function
XJ1	(2P)	Power supply pack (to main PS unit)
XJ2	(4P)	CPU board DC power(to JPWR1 on CPU board)
XJ3	(6P)	TP I/F board DC power
XJ4	(12P)	TP I/F
XJ6	(20P)	Printer I/F
XJ8	(4P)	USB camera selection signal
XJ10	(5P)	USB interface (to USB1 on CPU board)
XJ14	(3P)	Fan I/F
XJ15	(2P)	Buzzer I/F

Connector function in details

- (1) XJ1: Power supply pack (to main PS unit)

Connector No.	Pin No.	Signal name	Remarks
X J 1 DC Power IN	1	D C + 2 4 V	
	2	G N D	

- (2) XJ2: CPU board DC power(to JPWR1 on CPU board)

Connector No.	Pin No.	Signal name	Remarks
X J 2 DC power OUT (to JPWR1 on CPU)	1	D C + 5 V	
	2	G N D	
	3	D C + 1 2 V	
	4	G N D	

- (3) XJ3:TP I/F board DC power

Connector No.	Pin No.	Signal name	Remarks
X J 3 DC Power Output (For TP-I/F board)	1	+ 3 . 3 V	
	2	G N D	
	3	+ 5 V	
	4	G N D	
	5	+ 1 2 V	
	6	G N D	

(4) XJ4: TP-I/F

Connector No.	Pin No.	Signal name	Remarks
X J 4 TP-I/F board interface	1	+ 3.3 V	
	2	GND	
	3	I N T	
	4	C L K	
	5	M I S O	
	6	M O S I	
	7	S C L	
	8	S D A	
	9	GND	
	1 0	V R M T	
	1 1	V B R	
	1 2	GND	

(5) XJ6: Printer I/F

Connector No.	Pin No.	Signal name	Remarks	Pin No.	Signal name	Remarks
X J 6 Printer I/F	1	N.C		2	N.C	
	3	N.C		4	N.C	
	5	N.C		6	N.C	
	7	R x D		8	T x D	
	9	GND		1 0	GND	
	1 1	GND		1 2	+ 5 V	
	1 3	+ 5 V		1 4	+ 5 V	
	1 5	+ 5 V		1 6	+ 5 V	
	1 7	GND		1 8	GND	
	1 9	GND		2 0	+ 5 V	

(6) XJ8: USB camera selection signal

Connector No.	Pin No.	Signal name	Remarks
X J 8 USB camera selection signal	1	+ 5 V	
	2	O U T	
	3	GND	
	4	N.C	

(7) XJ10: USB interface (to USB1 on CPU board)

Connector No.	Pin No.	Signal name	Remarks
X J 1 0 USB Interface (to USB1 on CPU)	1	V B U S	
	2	G N D	
	3	D -	
	4	D +	
	5	F G	

(8) XJ14: Fan I/F


Connector No.	Pin No.	Signal name	Remarks
X J 1 4 Fan interface	1	+ 1 2 V	
	2	I N (ALARM)	
	3	G N D	

(9) XJ15: Buzzer I/F

Connector No.	Pin No.	Signal name	Remarks
X J 1 5 Bu7zzer interface	1	+ 5 V	
	2	O U T	

4.7.5 TP I/F board (P-5661*)

Appearance of TP-I/F board (P-5561*)

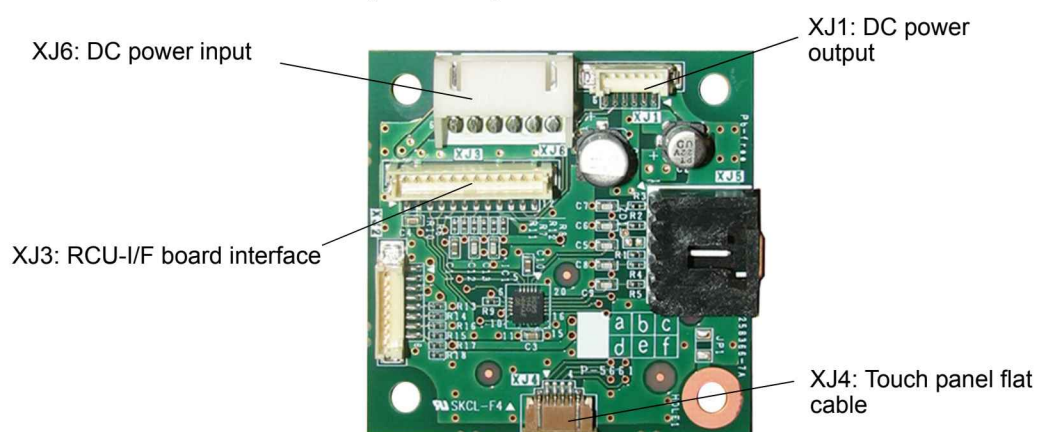


Functional description

1. Controls the signal sent from the touch panel and transmits it to CPU board via RCU/IF board.
2. Power supply to LCD unit

4.7.6 Printer Unit

Appearance of printer unit

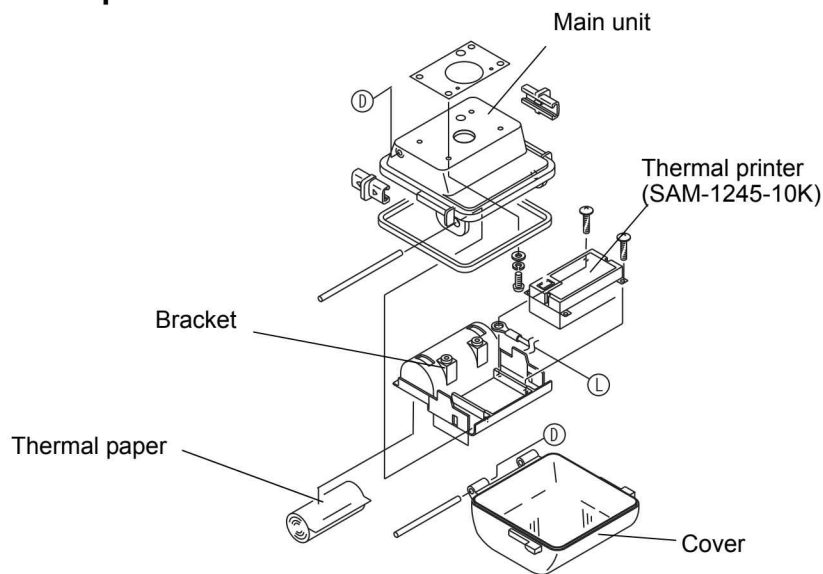


Function of unit

1. Printing statistical result totals
2. Printing presets and set values

4.7.6.1 Thermal Printer (SAM-1245-10K)


Appearance of thermal printer

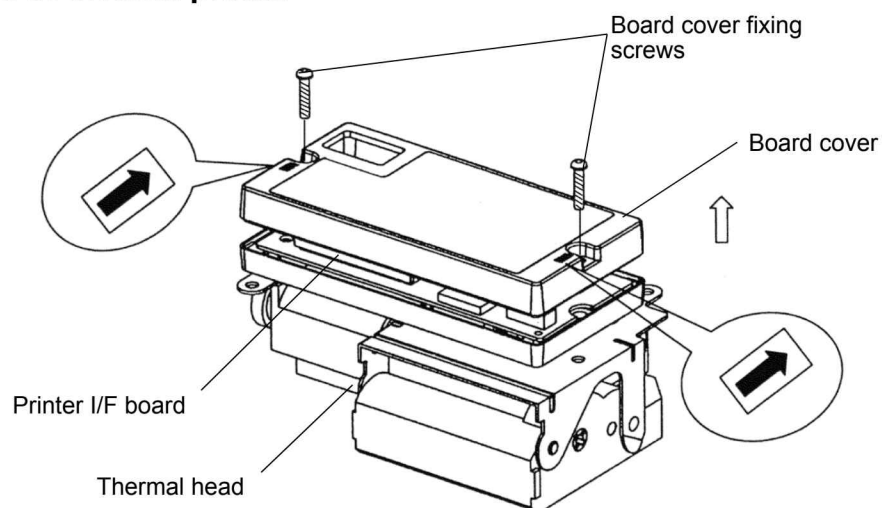

Replacement of thermal printer

1. Open the door of printer main body.
2. Remove the roll paper for printing.

3. Remove two screws from the plastic bracket fixing the thermal printer and remove the bracket.
4. Reverse the bracket and remove the connector connected to the thermal printer.
5. Remove three screws fixing the thermal printer to the bracket, and remove the thermal printer.
6. Prepare a new thermal printer.
7. Remove two screws fixing the board cover, and remove the board cover.
8. Allow the function selection of the thermal printer.
9. Short-circuit the soldering jumpers for JP1-6 on the board as shown below.

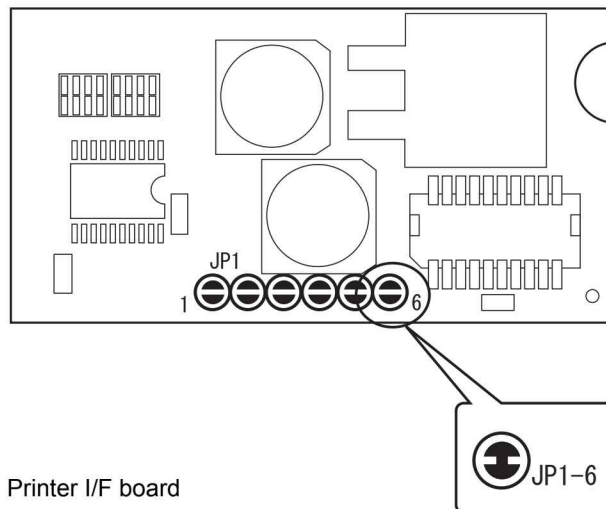


10. Attach the thermal printer in the reverse steps of the above 1 to 7.

NOTE


- As the soldering jumpers JP1-1 to JP1-6 of the new thermal printer are open, be sure to short circuit the soldering jumper for JP1-6. Using the thermal printer without performing soldering jumper results in malfunction.
- The same type of thermal printer is used for the DACS-W-N model with the different location of soldering jumper. Refer to the Service Manual of the DACS-W-N model.

4.8 Control Panel Items (Maintenance Service)

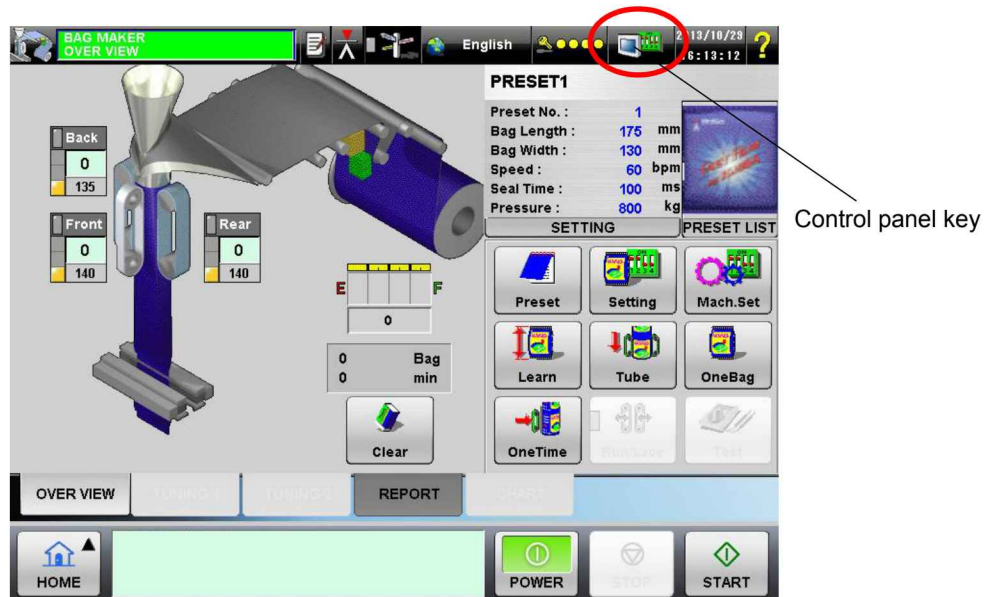

[Main menu screen]

Touch .

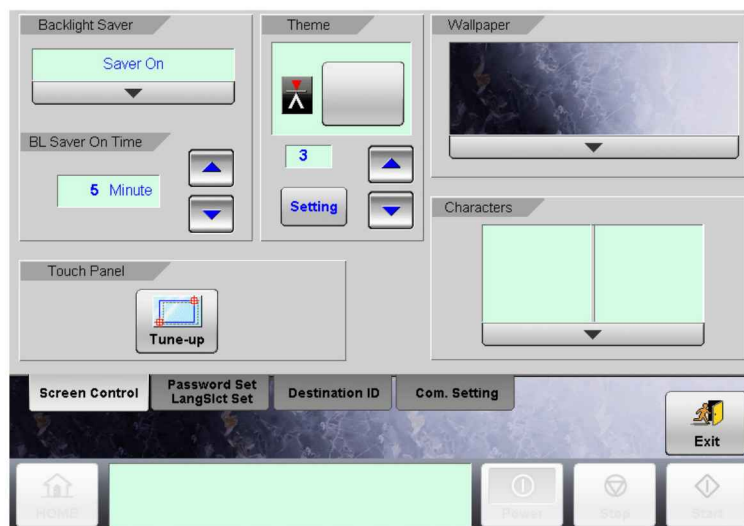


[Main Menu Screen with Control Panel Opened]

4.8.1 Display Control Menu Screens


4.8.1.1 Touch Panel Coordinate Adjustment

TIP

- When the other page such as "password setting" is opened right before the operation, touch the [Screen Control] menu.

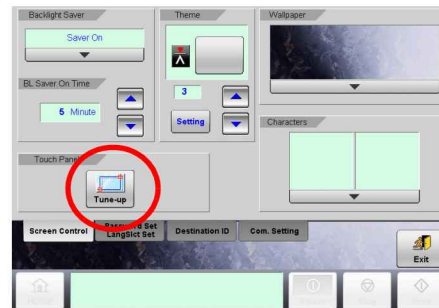

- Touch the [Tune-up] key on the [Display Control menu] screen.
- The [Confirmation Message] appears, and touch the [Yes] key. The [Touchkit] screen appears.
- Touch the [Cal 4 Point] key.
- The following screens appear, and touch on the mark at each coordinate position with a ball point pen, etc.

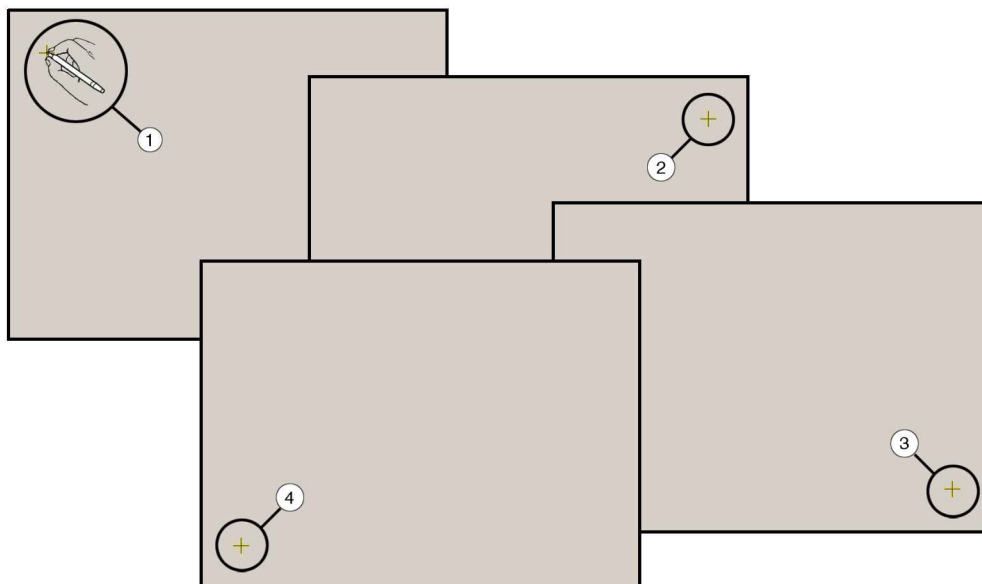

- Touch on the coordinate position mark displayed automatically in order. After 4 points are touched, the [Confirmation Message] appears automatically.

4.8.1.2 Switching Theme Display (New Function)

Design of each key can be switched according to the theme: [1: Model R, 2: European model, 3: Model RV].

(This function is newly added to the current model.)

1. Touch the  /  key of [Theme].



2. Switch the theme by selecting from [1: Model R, 2: European model, 3: Model RV].
3. Touch the [Setting] key.

The display automatically restarts, with the theme switched.



1: Model R



2: European model




3: Model RV

4.8.1.3 Desktop Wallpaper Display (Additional Types Available)

The desktop wallpaper can be switched by selecting from several types. (Additional types are available from the current model).

The step is as follows:

1. Touch the pop-up key of [Wallpaper].

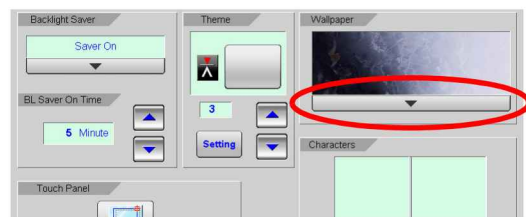

2. Select the wallpaper by touching it on the screen.
The wallpaper is automatically switched to the selected option.

Touching the [Return] key enables to check that the wallpaper for the main menu display has been switched.

