


4.8.1.4 Character Display (Additional Types Available)


By setting the character display, condition of the machine is easy to grasp by the face look of the character.

1. Touch the pop-up key of [Character].
2. Select the character by touching it on the screen. The selected character is displayed on the [Status Display].

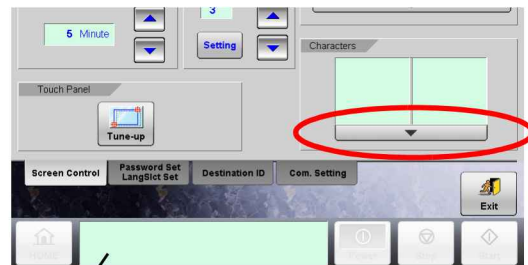


Status display

- The face look of the character shows the machine condition.

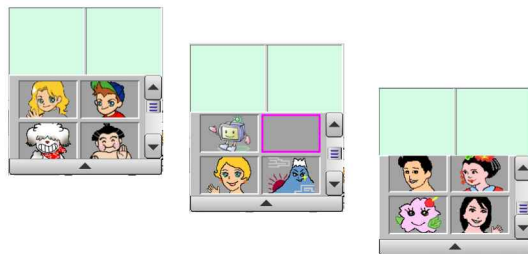

- When the machine condition is good, the character “smiles”, whereas when the machine condition has any problem, the character “cries”.

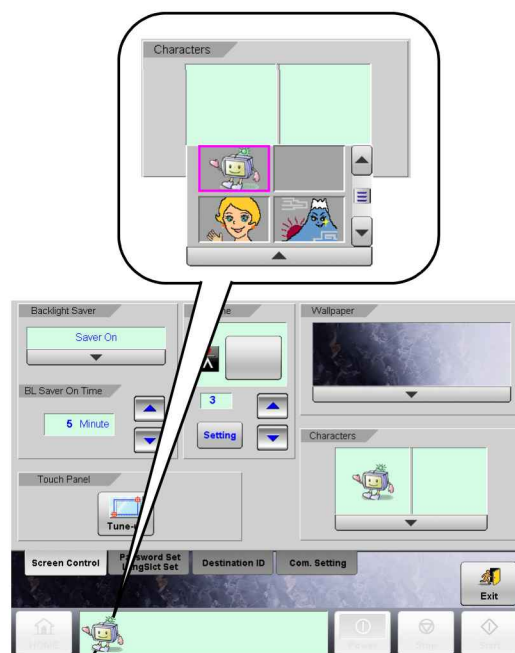

Status display


4.8.2 Password Set/Language Select Set Menu Screen

4.8.2.1 Language Select Setting


1. Touch the [Password Set/LangSlct Set] tab key.
The Password Set/Language Select Set menu screen appears. Touch the [Select display language] pop-up key.
2. Select a display language.

TIP

- This model supports multiple languages as CCW-R (seven languages can be selected at the same time).

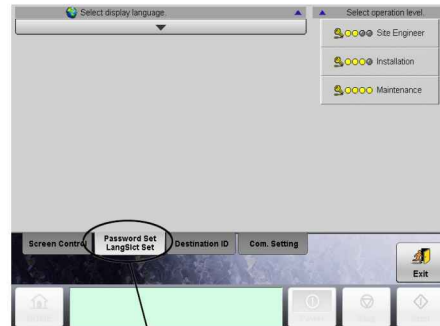


[Password Set/LangSlct Set] Tab Key

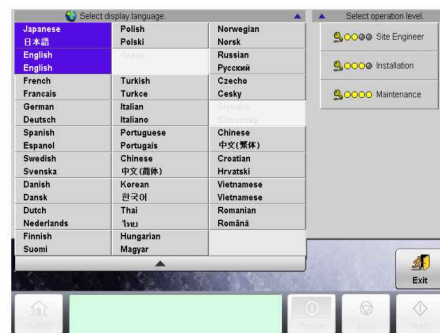

4.8.2.2 Password Setting

- Touch the key to change the password on the [Select operation level].

[Example]

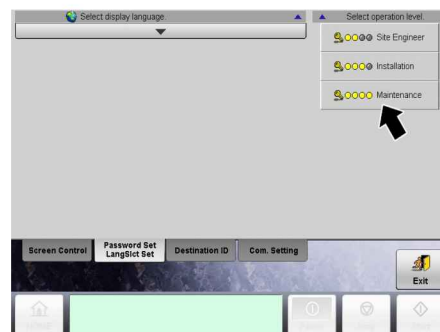


After entering password for change, touch the [Return] key.

4.8.3 Destination ID Menu Screen

4.8.3.1 Destination ID


1. Touch the [Destination ID] tab key. The Destination ID menu screen appears.

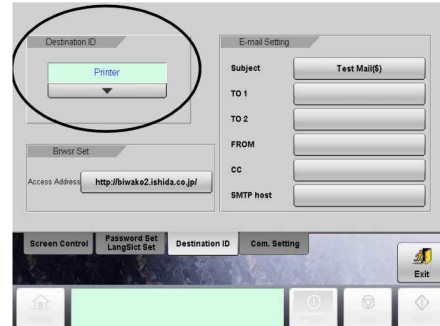

2. Touch the [Destination ID] pop-up key, and select one from [Off, Printer, CF/USB or E-mail].

TIP

- Usually, select the [Printer].

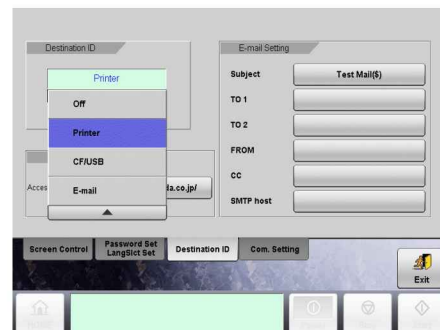

4.8.3.2 Browser Setting

- Set the [Access Address] accordingly.

4.8.3.3 E-mail Setting

- Set each item of [Subject, TO 1...etc.] accordingly.

TIP

- This equipment should be connected to the network before setting.




4.8.4 Communication Set Menu Screen

- Touch on the [Com. Setting] tab key. The [Communication Setting] menu screen appears.


4.8.4.1 [RCU] Communication Setting

- Set the [IP Address, GATEWAY, Subnet Mask] in RCU.

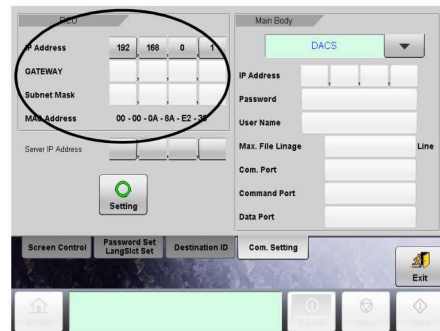

4.8.4.2 [Main Body] Communication Setting

- Set the [IP Address, Password, User Name, etc.] in COM selected in the Main Body.

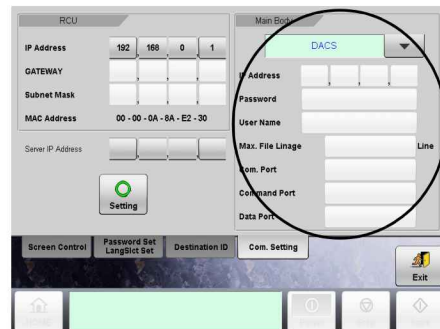

4.8.4.3 [Server IP Address] Setting

- Set the Server IP Address.
- When the machine is operated with i-STATION LINK2, input the same address as the RCU IP address and touch the [Setting] key.

The screen switches to the one with blue background. Be sure to wait for 30 seconds, and turn off the main power.



NOTE

- Be sure not to make an incorrect change. Otherwise, it may cause the communication failure.
- When the machine is operated with i-STATION LINK2, input the same address as the RCU IP address and touch the [Setting] key.
- When the screen switches to the one with blue background, be sure to wait for 30 seconds to turn off the main power.
- Turning off the main power at early timing may disable to switch to the correct IP address, resulting in “communication error”.

TIP

- At factory shipping, standard values are set; use them as they are.
- Change these values when interlocking with the computer after receiving the equipment.

4.9 Electrical System

WARNING

- Before replacing electrical components, make sure that the main power supply and motor power supply are turned OFF. Failure to do so can result in electrical shock.


4.9.2 Relay Selector Switch Replacement

4.9.2.1 Front Switch Panel

1. Turn the main power OFF.
2. Swing the remote control unit.
3. Remove 5 screws and remove the switch plate.
4. Disconnect the cables that are connected to the switch.

NOTE

- Remove the cables in order, starting with the cable having the lowest number. (Refer to the tags attached to the cables.)
- Be sure wires are numbered.

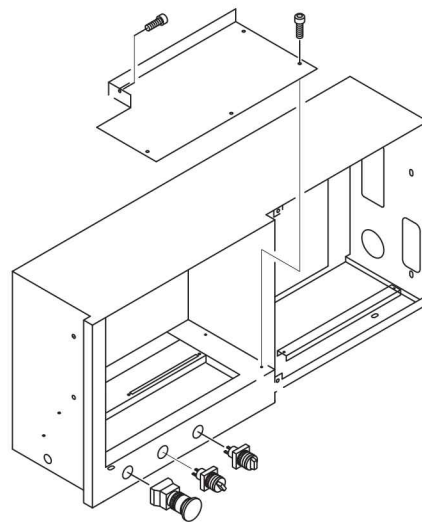


5. Remove faulty switch.
6. Install the new switch.
7. Wire each switch.

NOTE

- The tags on the switch connecting cables are numbered as follows:

8. Reinstall all parts in the reverse order of removal.

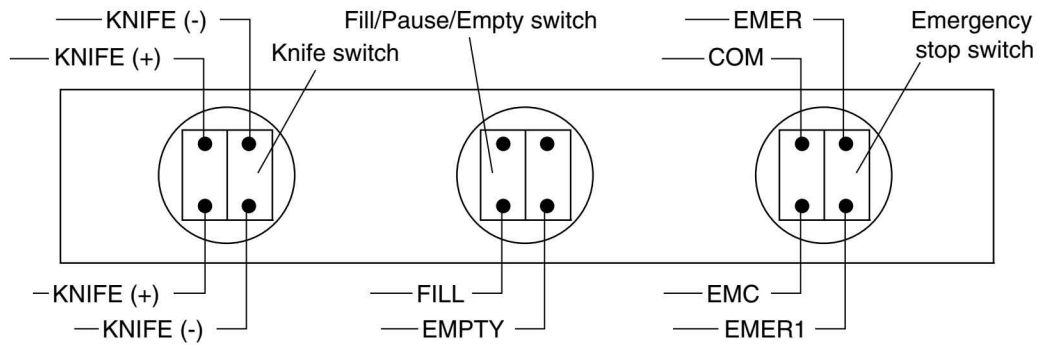


4.9.2.2 Rear Switch Panel

1. Turn the main power OFF.
2. Loosen the four bolts, and remove the rear switch panel from the guide arm.
3. Disconnect the cables that are connected to the faulty switch.

NOTE

- Remove the cables in order, starting with the cable having the lowest number. (Refer to the tags attached to the cables.)
- Be sure wires are numbered.

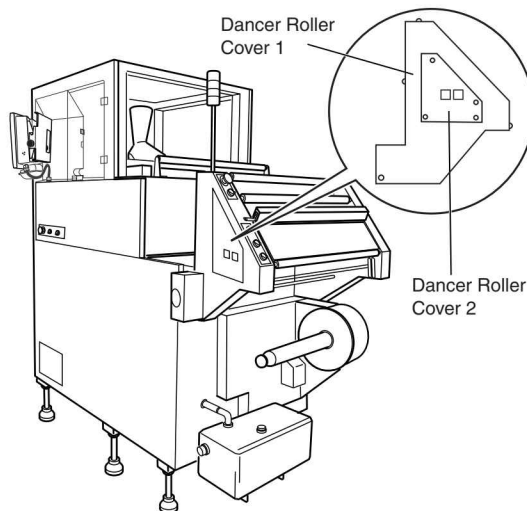


4. Remove faulty switch.
5. Install the new switch.

NOTE

- Refer to the illustration about the tag numbers on the switch connecting cables.

6. Reinstall all parts in the reverse order of removal.

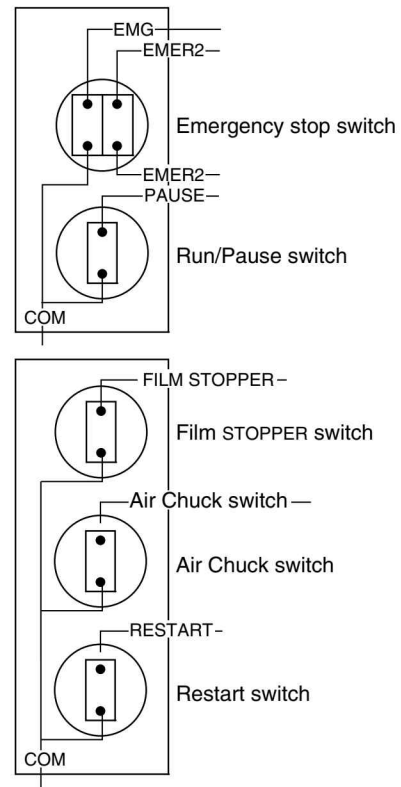

4.9.3 MCU Board

1. Turn the main power OFF.
2. Open the front cover.
3. Pull the handle forward, and swing the back seal unit out.
4. Turn the former release lever to the rear, and remove the former.



CAUTION


- **Be careful when handling the former. It is heavy.**

5. Remove the film roll.

NOTE

- Former and film must be removed to perform procedure!


6. Turn the main power supply ON.
7. Turn the motor power ON from Operation standby menu.
8. Enter the following password from the password screen:
Password: 3720
 - The MACHINE SETTING screen will appear.

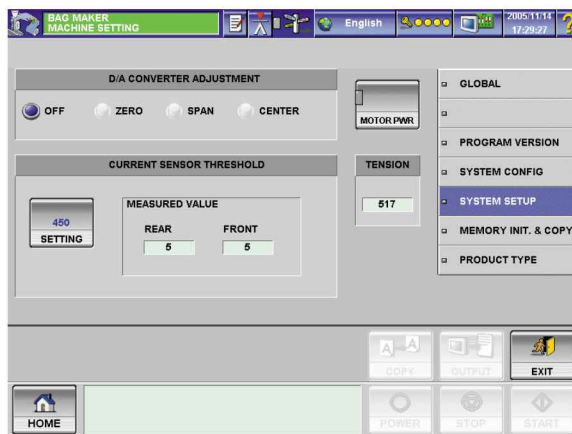

9. Press the following keys on the MACHINE SETTING screen to adjust D/A converter.
 - The left and right pull belt motor, back seal motor.
10. Press the ZERO key (ZERO adjust).
Please check each servo driver display shows "3000". If a display shows out of "3000±2" range, please tune ZERO adjust trimmer for the servo driver on MCU Board with a small driver (Plastic point is preferable.) The display should show within "3000±2".

NOTE

- If a display does not show " 3000 ± 2 " after tuning ZERO adjust trimmer, please refer to Appendix 2 and Appendix 3 and adjust the standard data. "500" in servo driver parameter Pr3.02. Then adjust ZERO / SPAN again.

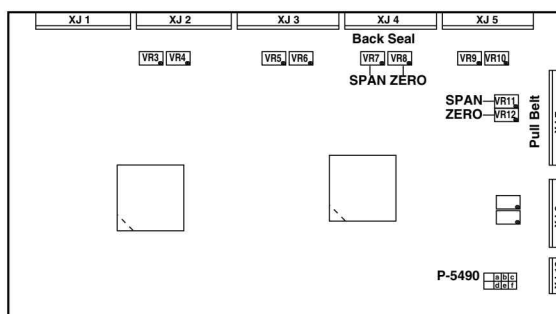MCU Board

- Press the CENTER key.
- Press the SPAN key (SPAN adjust).
Please check each servo driver display shows " -3000 ". If a display shows out of " -3000 ± 2 " range, please turn SPAN adjust trimmer for the servo driver on MCU Board with a small driver. The display should show within " -3000 ± 2 ".
- If SPAN adjustment is performed.
Please press the CENTER key again. Then press the ZERO key (ZERO adjust) and perform ZERO adjustment again as described in the above 11.
- Press the STOP key after finishing each servo driver's ZERO (3000) and SPAN (-3000) adjustments.

NOTE

- If all values are within the standard range, press the EXIT key.

4.9.4 Replacing the Sensors

4.9.4.1 Eyemark adjustment

WARNING


- Only authorized person can do this adjustment work.

1. Turn the main power supply OFF.
2. The angle of the eye sensor (located at the rear of the machine) is measured when facing, and measuring upward from, the center of the sensor bar. Set the angle to the following value:


Sensor angle: 0°

NOTE

- Sensor sensitivity may need to be adjusted by slightly changing the angle of the sensor bar when the eyemark sensor amplifier, which will be mentioned later, is adjusted.

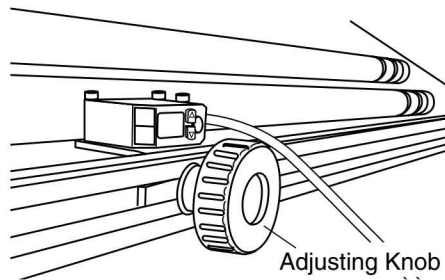

Name of Each Part

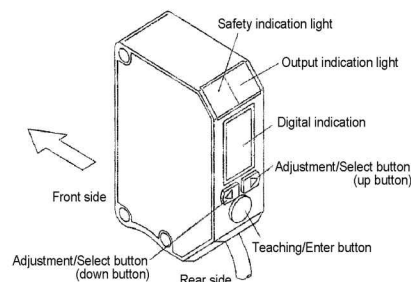

3. Turn the main power supply ON.

DANGER

- Wear protective clothing and protective gloves to touch electrical components. Failure to do so can result in electrical shock.