

Technical Manual

FastBack®

260E-G2 Conveyor



HEAT AND CONTROL®

Food Processing & Packaging Systems

Copyright © 2016 by Heat and Control, Inc.

All rights reserved. No part of the contents of this document may be reproduced or transmitted in any form or by any means without the written permission of Heat and Control, Inc.

The FastBack® Model 260E-G2 and all associated product handling equipment are covered by one or more of the following U.S. and foreign patents:

5,351,807

5,699,897

5,794,757

5,842,678

6,079,548

6,193,050

6,216,850

6,588,363

6,378,688

2324074 (U.K.)

Other patents pending

Proprietary Information

Certain information in this manual is considered proprietary to Heat and Control, Inc. Such information is disclosed in confidence to the reader and shall not be reproduced or transmitted in any form or by any means without the express written permission of Heat and Control, Inc.

Disclaimer

The information in this manual is a guide to the safe and efficient operation of equipment supplied by Heat and Control, Inc. only. The manual has been compiled using references from equipment suppliers and from the experience of Heat and Control, Inc.

As most values, intervals, quantities, etc. are somewhat arbitrary, and operating conditions of the machinery vary, this manual is offered as a guide only. It should be used in conjunction with the buyer's own maintenance program, engineering judgment, and safety procedures.

No responsibility, either direct or consequential, can be accepted by Heat and Control, Inc. resulting from the use of this manual.

NOTICES

FastBack® Model 260E-G2 Technical Manual

Certifications

Heat and Control, Inc. warrants that the components designed, manufactured, and sold by Heat and Control, Inc. as part of the FastBack Model 260E-G2 conveyor comply with the regulatory specifications regarding food safety and hygiene developed by the US federal government's regulatory bodies (primarily the FDA), as well as those of the European Union (CE).

All Heat and Control equipment is designed and manufactured using materials designated for food contact and in a manner to ensure food safety. Stainless steel is the primary food contact surface for the FastBack Model 260E-G2 conveyor. Other materials may include FDA-compliant plastics, such as UHMW, Nylon, and/or Urethane. For 3rd-party components that are part of Heat and Control's equipment, conformity to safe food contact surfaces is partially based on the information provided to Heat and Control by our suppliers/vendors.

The FastBack Model 260E-G2 conveyor design satisfies the applicable European directives regarding safety and health, and, therefore, will bear the CE mark when sold into a market requiring such. The Declaration of Conformity, provided as a separate document (when required), indicates the applicable directives to which the equipment conforms.

Revision Record for Individual Sections of this Manual

Starting with Revision 0, the following is a list of current revisions for each section of this manual:

Section	Revision Level for each Section		
	Overall Manual Revision 0	Overall Manual Revision 1	
Front Section 1 - Title Page	0	1	
Front Section 2 - Notices	0	1	
Front Section 3 - About This Manual	0	1	
Front Section 4 - Table of Contents	0	1	
Front Section 5 - Contact Information	0	1	
Section C-1 – Safety	0	1	
Section C-2 – About FastBack® 260E-G2	0	1	
Section C-3 – Pre-Installation Procedures	0	1	
Section C-4 – Installation Procedures	0	1	
Section C-5 – Maintenance Procedures	0	1	
Appendix A – Troubleshooting	0	1	
Appendix B – Spare Parts List	0	2	
Appendix C – Torque Specifications	0	1	
Appendix G – OEM Documentation	N/A	N/A	
Technical Publication PH002 – Wiring Diagrams	3	3	
Technical Publication PH005 – Ultrasonic Sensor Setup	1	1	
Technical Publication PH006 – Photoeye Setup	0	2	
Technical Publication PH009 – Yaskawa V1000 Setup	3	10	
Technical Publication PH015 – A-B PowerFlex 525 Setup	0	7	

NOTICES

FastBack® Model 260E-G2 Technical Manual

Revision Record

The following revisions have been made to the FastBack® Model 260E-G2 Technical Manual since the original publication in August 2010:

Revision	Date	By	Description
0	08/01/10	Ken Petri	Initial Release
1	08/08/17	Ken Petri & Arlene Mason	- Updated format. - Added TechPub on A-B PowerFlex 525. - Revised to latest Safety features included - Spare parts list update

About This Manual

The FastBack® Model 260E-G2 Technical Manual describes how to install, operate, and maintain the FastBack® Model 260E-G2. This section, About This Manual, describes how the manual is organized and the types of information in each section. Please take the time to read this section before reading further. Note that where appropriate, imperial values are followed by their metric equivalent. (i.e. 1.00 [25.4])

Organization

This manual is organized into the following sections:

- **Section 1 – Safety** provides general safety guidelines and emergency shutdown procedures.
- **Section 2 – About the FastBack® Model 260E-G2** describes the subassemblies that make up the FastBack® Model 260E-G2.
- **Section 3 – Pre-Installation Procedures** tells you how to prepare for installing the FastBack® Model 260E-G2.
- **Section 4 – Installation Procedures** describes how to install the FastBack® Model 260E-G2 at your facility.
- **Section 5 – Maintenance** describes various procedures for keeping all parts of the FastBack® Model 260E-G2 in good working condition.

- **Appendix A – Troubleshooting** provides troubleshooting guidelines.
- **Appendix B – Spare Parts List** lists recommended spare parts for the FastBack® Model 260E-G2, along with recommended quantities of each.
- **Appendix C – Torque Specifications** lists all torque values for bolts, screws, and nuts used in the FastBack® Model 260E-G2 subassemblies.
- **Appendix G – OEM Documentation** contains documentation from the original equipment manufacturers of the components used in the FastBack® Model 260E-G2.


- **Technical Publication PH002 – Wiring Diagrams** contains wiring diagrams for the Heat and Control utility enclosure, Photoeye, and ultrasonic level sensor.
- **Technical Publication PH005 – Ultrasonic Sensor Setup** contains procedures for positioning and adjusting the ultrasonic level sensor.
- **Technical Publication PH006 – Photoeye Setup** contains procedures for positioning and adjusting the efector Photoeyes.
- **Technical Publication PH009 - Yaskawa V1000 Setup** contains the setup procedure, parameter settings, and wiring diagram for the Yaskawa V1000, the default electrical drive package used for FastBack® Models 90E, 260E-G2, stand-alone Tumble Drums, and Revolution Tumble Drums and Gates.
- **Technical Publication PH015 – Allen-Bradley PowerFlex 525 Setup** contains the setup procedure, parameter settings, and wiring diagram for the Allen-Bradley PowerFlex 525, the alternative electrical drive package approved for use in FastBack® Models 90E and 260E-G2.

ABOUT THIS MANUAL

FastBack® Model 260E-G2 Technical Manual

Notes for Safe Operation

The following are used throughout this manual.

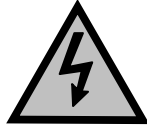

Indicates an electrical shock hazard. Follow the warnings to avoid death or serious injury.



Indicates a situation dangerous either to you or the equipment. Follow these warnings to avoid serious injury to yourself or damage to the equipment.



Indicates a situation that could cause minor or moderate injury to you or the equipment. Follow these warnings to avoid injury to yourself or damage to the equipment.

Note:

Indicates a step or information necessary to ensure proper operation.

Contact Information

Locations	Headquarters	Service and Training	Manufacturing and Spare Parts	Product Handling Systems Sales and Engineering
Heat and Control, Inc. 21121 Cabot Boulevard Hayward, CA, 94545, USA (800) 227-5980 (510) 259-0500 (510) 259-0600 (fax) Email: info@heatandcontrol.com	X			
Heat and Control, Inc. 187 West Airport Road Lititz, PA, 17543-9998, USA (800) 648-5313 (717) 519-5240 (717) 519-5260 (fax)		X	X	
Heat and Control, Inc. 1721 U.S. Highway 164 Galesburg, IL, 61401-9412, USA (309) 342-5518 (309) 342-9050 (fax)			X	
Heat and Control, Inc. 800 Lakeside Parkway Flower Mound, TX 75028, USA (469)464-2700 (469)464-2701 (fax)				X
Heat and Control Pty Ltd. Afton House, Starlow Park Livingston, EH54 7SF Scotland +44 (0) 1506 420 420 +44 (0) 1506 403 919 (fax)		X	X	X
Heat and Control, Ltd. 407 Creek Road Mt. Gravatt Queensland 4122, Australia 011-61-7-3-877-6333 001-61-7-3-343-8371 (fax)		X	X	X
Heat and Control S.A. de C.V. Circuito De La Productividad Sur 107 Parque Industrial Guadalajara El Salto, Jalisco C.P. 45690, Mexico 011-52-33-3689-1146/1147 011-52-33-3689-2240 (fax)			X	X

Table i – Heat and Control Locations

SERVICE AND TRAINING

FastBack® Model 260E-G2 Technical Manual

To Report a Problem with the FastBack® Model 260E-G2

If the FastBack® Model 260E-G2 fails to operate correctly:

- 1 Stop the FastBack® by rotating the emergency disconnect switch counterclockwise, to the OFF position.
- 2 Find the problem, using the troubleshooting guide in Appendix A if necessary.
- 3 Make a written record of your findings.
- 4 Call the Heat and Control Service Office in Lititz, PA at (800) 648-5313 or (717) 519-5240. Have the following information ready:
 - FastBack® model and serial number engraved on the nameplate, located on the lower edge of the drive unit, opposite the drive arm (see Photo i).
 - Part number of any component needing replacement (see Appendix B for a list of spare parts and part numbers).



Photo i – Close-up of FastBack® Nameplate