

K-1 Safety

The FastBack® Model 260E-G2 is designed for safe operation by trained personnel. As with all machinery involving moving components, injury may occur if proper safety procedures are not followed. The correct use, inspection, cleaning, and safe operation of the equipment are of paramount importance to your company and to Heat and Control.


Operations and maintenance staff should fully understand the proper use and care of the FastBack® Model 260E-G2. Please read this entire manual before operating the FastBack®.

General Safety Guidelines

- Report all unsafe conditions, equipment, and practices to your supervisor.
- Know the location of the emergency disconnect switches. These red and yellow switches are located on the left-hand side of the drive assembly when facing the access panel (see Photo 1-1). The top switch disconnects power to the drive assembly and the bottom switch disconnects power to the Revolution gate/tumble drum.



Photo 1-1 – Emergency Disconnect Switches

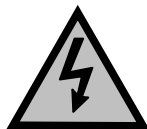


***The FastBack® Model 260E-G2 is powered by high voltage.
Only authorized personnel should service the equipment.***


The Heat and Control Office in Lititz, PA offers training in the operation and maintenance of the FastBack® Model 260E-G2. Contact the Service Office at (800) 648-5313 or (717) 519-5240 to schedule a training session for your maintenance facility's maintenance personnel.

K-1 – SAFETY

FastBack® Model 260E-G2 Technical Manual

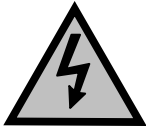

The FastBack® Model 260E-G2 has multiple voltage sources. Isolate all sources before servicing.

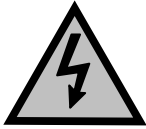

Overcurrent protection is required for 24V and 120V circuits.



WARNING

- Always disconnect power to the FastBack® before performing any maintenance.
- Observe all cautions and warnings placed on the equipment and printed in this manual.
- Inspect all equipment and tools before use. Do not use faulty or broken equipment.
- Do not wear jewelry or watches when operating the FastBack®.



CAUTION

- Use only ladders, platforms, steps, and handrails that your facility has approved for safety.
- Always wear eye protection when operating the FastBack®.
- Keep other objects out of the equipment work area.
- Clean up spilled product immediately.

Emergency Shutdown Procedure

- To shut off the FastBack® immediately, rotate the top emergency disconnect switch counterclockwise to the OFF position.

FastBack®-Specific Safety Features


Several safety components are incorporated in the area surrounding the FastBack® drive arm. These components include the following:

- Compliant Restriction Barrier
- Static Side Guards
- Dynamic Side Guards (only for pans wider than 18 inches)

These items are specifically designed to prevent appendage access into and around the reciprocating drive arm.




The FastBack® is never to be operated without these components properly secured in place.

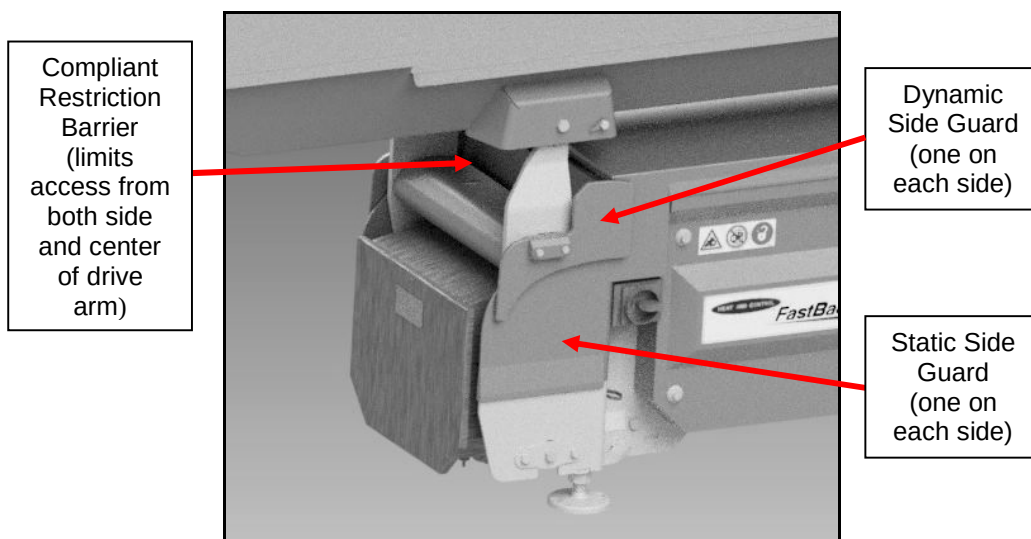


**Photo 1-2 – Both Static and Dynamic Side Guards and Compliant Restriction Barrier in Place
(Narrow drive arm configuration)**

K-1 – SAFETY

FastBack® Model 260E-G2 Technical Manual

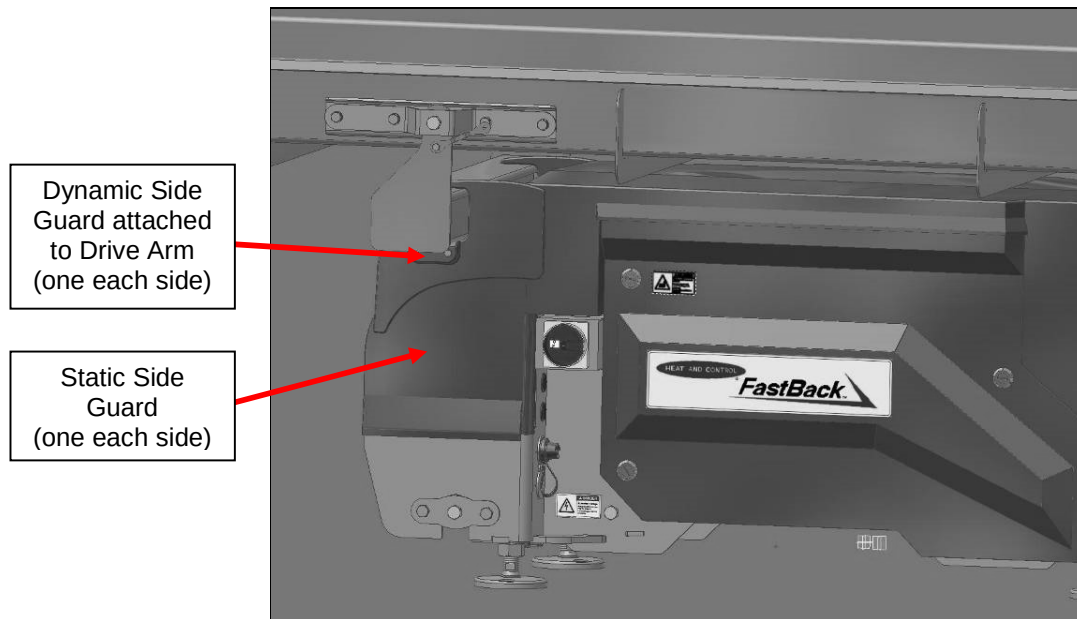

**Photo 1-3 – Both Static and Dynamic Side Guards in Place
(wide drive arm configuration)**

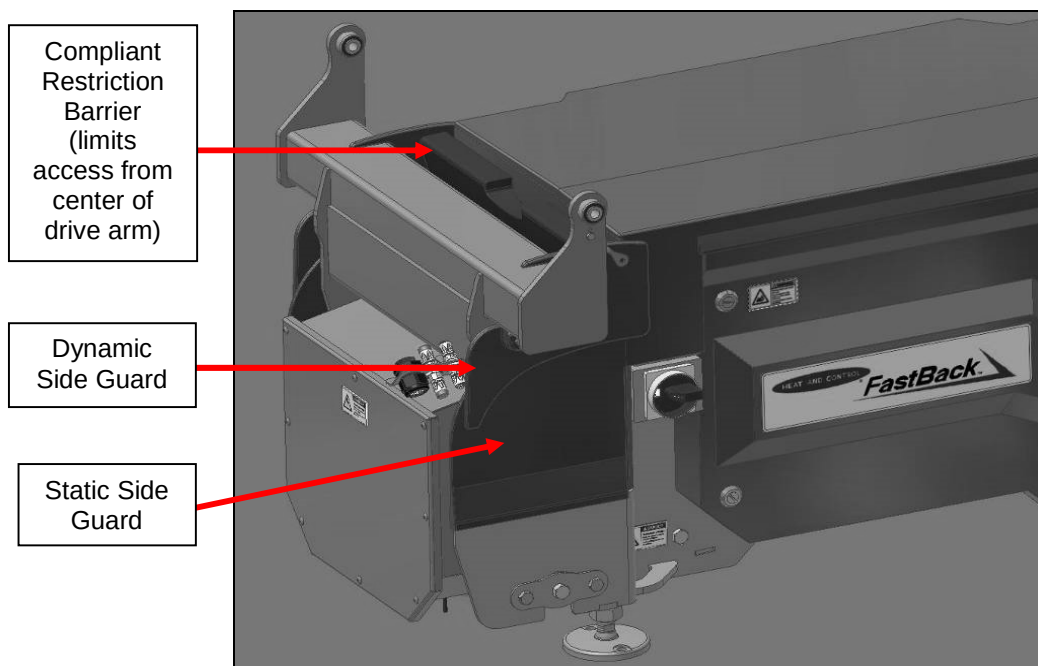

**Photo 1-4 – Static and Dynamic Side Guards and Compliant Restriction Barrier in Place
(wide drive arm configuration)**