

4 OPERATION PANEL

This chapter describes the components and functions of the operation panel unit.

⚠ WARNING

- Be sure to read this chapter carefully before attempting operation.

⚠ CAUTION

- For operational procedures, Refer to "5 PRODUCTION".

4.1 Operation Panel

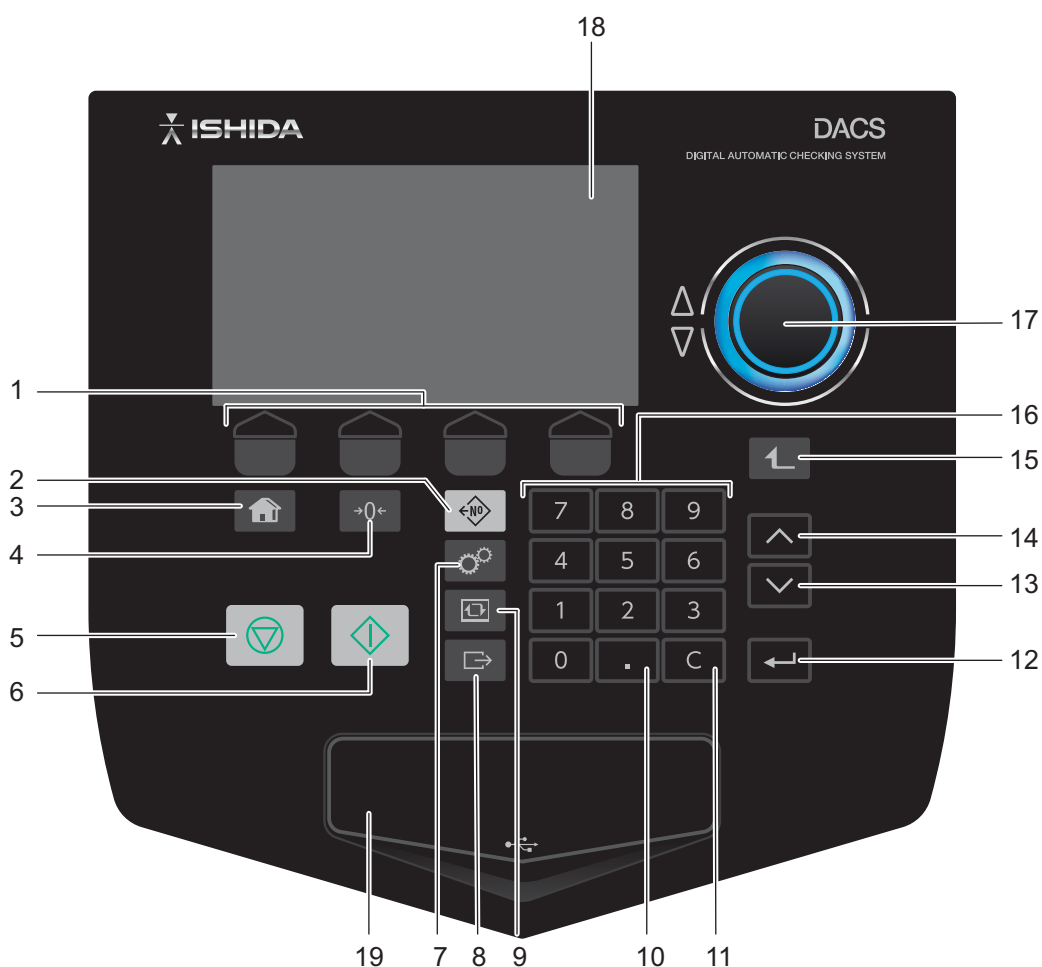


Fig. 4-1

Table 4-1

No	Name	Key	Function
1	[Function] key		Pressing each key when the menu is displayed on the above of the key on the screen, the function of the key is executed.
2	[Preset] key		Displays Preset Number Select Screen when pressed in standby state.
3	[Home] key		Displays Standby menu.
4	[Zero] key		Starts Zero adjustment when pressed in standby state. (Refer to "5.3.2 Zero Adjustment")
5	[Stop] key		Stops the conveyor when pressed in operation and returns the device to standby state.
6	[Start] key		Starts the conveyor when pressed in standby state.
7	[Setup] key		Displays Setup menu when pressed in standby state.
8	[Output] key		Displays Output menu.
9	[Display] key		Switches information display.
10	[Decimal point] key		Inputs decimal point.
11	[Clear] key		Cancels entered numeric values and characters.
12	[Enter] key		Executes selected value of the menu.
13	[Down] key		Moves the cursor down or decrease the input value by 1.
14	[Up] key		Moves the cursor up or increase the input value by 1.
15	[Exit] key		Ends or cancels current process and displays the previous screen.
16	[Numeric] keys		Inputs numeric values.
17	Command dial		Performs similarly to the [Up/Down] keys (13,14). Rotated clockwise: Moves the cursor down. Rotated counterclockwise: Moves the cursor up. Performs similarly to the ENTER key (12) when pressed. Displays the Function Command dialog menu "5.9 Function Dialog Menu" when pressed in the Operation Standby menu. Lights in Blue when the machine stops, green in production, and red when an error occurs. Performs similarly to the [Exit] key when passed and held.

Table 4-1

No	Name	Key	Function
18	Display Panel		Displays operational status, weigh settings, etc.
19	USB slot cover		1 USB slot is equipped inside.

4.2 Main Operations and Indications in this Manual

The operation of the RCU is mainly divided into three types.
In this manual, the three types of operation are indicated as below.

NOTE

- For the operation of device, refer to "5 PRODUCTION".

1. Select

To align the cursor with the item with the [Up/Down] key or Command dial.

- [Up] key  Moves the cursor up.
- [Down] key  Moves the cursor down.
- Command dial
Moves the cursor up when rotated clockwise
Moves the cursor down when rotated counterclockwise

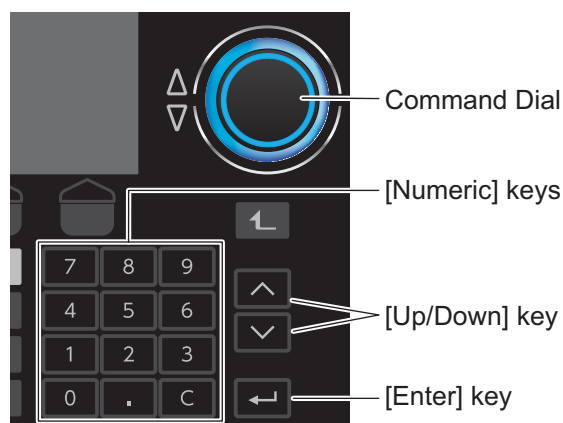


Fig. 4-2

2. Enter

To input the selected item by pressing the [Enter] key or Command dial.

3. Input the numeric value

To input the numeric value directly with the [Numeric] keys, or select the number on the screen with the [Up/Down] key or Command dial.

- [Numeric] keys
Inputs the numeric value directly.
- [Up] key 
Increases the numeric value by 1.
- [Down] key 
Decreases the numeric value by 1.
- Command dial
Increases the numeric value by 1 when rotated clockwise.
Decreases the numeric value by 1 when rotated counterclockwise.

4.3 Data Input Procedure for Alpha-numerical Values

Follow the procedure below to input alpha-numerical values via the operation panel.

1. Press the [Enter] key on the required Setup menu.
2. Input alpha-numerical values with [numeric] keys, [Up/Down] keys, or Command dial to the field on the screen.
 - ▶ The input values are displayed are highlighted.
3. Press the [Enter] key.
 - ▶ The input values are registered.

NOTE

- In this manual, the expression "input and enter" indicates to input alpha-numerical values via the operation panel, and register the value by pressing the [Enter] key or with Command dial.
- To correct the set alpha-numerical values, press the Clear key to clear the data, then re-input the data.