

6 OPERATION AND FUNCTION

This chapter describes the setting procedure for product data and functions for applied operations.

6.1 Overview of the Setting Item

Table 6-1

Operation key	Item			Operation level			Ref.	
				Operator	Site Engineer	Installation		
Preset	Preset number selection			*	*	*	—	
Setup	Preset setting	Product Name			*	*	"6.4.1"	
		Capacity			*	*	"6.4.2"	
		Reference Weight			*	*	"6.4.3"	
		Upper Limit+			*	*	"6.4.4"	
		Lower Limit-			*	*	"6.4.5"	
		OK-Upper Limit+			*	*	"6.4.6"	
		OK-Lower Limit-			*	*		
		Preset Tare			*	*	"6.4.7"	
		Product Length			*	*	"6.4.8"	
		Speed			*	*	"6.4.9"	
		Conv. Speed			*	*	"6.4.10"	
		Detailed Setting	Charg, Mix Wgt. Dev.±			*	*	"6.5.7.13"
	Timing Setting		Feed Conv. Speed			*	*	"6.4.12"
			Weigh Conv. Speed			*	*	
			Reject Conv. Speed			*	*	
			Reject Start Time			*	*	
			Reject ON Time			*	*	
Default Reject Time			*	*				
	Drive Weigh Standby Time			*	*			
	MD NG Input Delay Time			*	*			

Table 6-1

Operation key	Item				Operation level			Ref.
					Operator	Site Engineer	Installation	
Setup	Preset setting	Detailed Setting	Timing Setting	Auto Calculation			*	"6.4.12"
			Product Code			*	*	"6.4.13"
			Image			*	*	"6.4.14"
			Conveyor Mode			*	*	"6.4.15"
			Continuous N/G Count			*	*	"6.4.18.1"
			Over Weight Accept			*	*	"6.4.19"
			Metal Detection			*	*	"6.5.7.2"
			Dynamic Calibration			*	*	"6.4.20"
			Filter Simulation			*	*	"6.4.21"
			Set. chg. during driving			*	*	"6.5.7.10"
	Preset Copy						*	"6.5.8"
	Access Level Change				*	*	*	"6.2"
	Check Mode				*	*	*	"6.3.1"
	Test Mode				*	*	*	"6.3.2"
	Reject Setting					*	*	"6.4.16.1"
	Output Signal Setting	Output Condition Setting				*	*	"6.4.17.1"
		Output Timing Setting				*	*	"6.4.17.2"
	Statistics & Output Setting	Output Destination				*	*	"6.5.4.1"
		Line name				*	*	"6.5.4.2"
		Total Automatic Change				*	*	"6.5.4.3"
		Total items				*	*	"6.5.4.4"
		Total Auto Output				*	*	"6.5.4.5"
		Batch Analysis				*	*	"6.5.4.6"
		Batch Total Auto Output				*	*	"6.5.4.7"
		Batch Total Time				*	*	"6.5.4.8"
		Batch Total Count				*	*	"6.5.4.9"
		Total Output Time				*	*	"6.5.4.10"
		Always Metal M Output				*	*	"6.5.4.11"
		Each Time Output				*	*	"6.5.4.12"

Table 6-1

Operation key	Item		Operation level			Ref.
			Operator	Site Engineer	Installation	
Setup	Statistics & Output Setting	Each Time Output Contents		*	*	"6.5.4.13"
		Clear Batch Totals		*	*	"6.5.4.14"
		Clear All Totals		*	*	"6.5.4.14"
		X-bar chart		*	*	"6.5.4.15"
		Histogram		*	*	"6.5.4.16"
	System Configuration	Weight Display			*	"6.5.7.1"
		Metal Detection			*	"6.5.7.2"
		Printer			*	"6.5.7.3"
		Reject Func. Select.			*	"6.5.7.4"
		Speed Display			*	"6.5.7.5"
		Tare Subtraction			*	"6.5.7.6"
		Dynamic Calibration			*	"6.5.7.7"
		Reject. in Dynamic Cali.			*	"6.5.7.8"
		Preset No. Memorize			*	"6.5.7.9"
		Set.Chg. during drivng			*	"6.5.7.10"
		Weight Zone			*	"6.5.7.11"
		Weight Log			*	"6.5.7.12"
		Charg. Mix. Wgt. Dev			*	"6.5.7.13"
		Input Signal Port Setting			*	"6.5.7.14"
		Input Signal Setting			*	"6.5.7.15"
		Test Mode			*	"6.5.7.16"
		User Log In			*	"6.6"
		Startup Check			*	"6.5.7.17"
		Standby Disp. Pref.			*	"6.5.7.18"
	Weigh Unit Setting				*	"6.5.11"
	Screen Capture	Screen Capture			*	"6.5.12"
		Verify Save Data			*	
	Date/Time Setting				*	"6.5.9"
	Write/Road Set Value (USB)		*	*	*	"6.5.1"

Table 6-1

Operation key	Item		Operation level			Ref.
			Operator	Site Engineer	Installation	
Setup	Level 1&2&3 Passcode Setting	Level 1 Passcode Setting			*	"6.5.10"
		Level 2 Passcode Setting			*	
	Span Adjustment			*	*	"6.5.5"
	Linear Correction			*	*	"6.5.6"
	Program Version Information			*	*	"6.5.2"
	License			*	*	"6.5.3"
Display	Total Count Zoom		*	*	*	"5.8"
	Weight Value Zoom		*	*	*	
	Preset Information		*	*	*	
	Histogram Display		*	*	*	
	X-Bar Chart Display		*	*	*	
	Last 20 Weight Data Display		*	*	*	
	Pitch Adjustment Display		*	*	*	
Output	Output Destination		*	*	*	"6.5.4.1"
	Current Total Output		*	*	*	"5.10.1", "5.10.4"
	Total Items Output		*	*	*	
	Clear All Totals		*	*	*	"5.10.3"
	Each Time Output		*	*	*	"5.10.2"
	Preset Setting Output		*	*	*	"5.10.4", "5.10.5"
	All Preset Setting Output		*	*	*	
	Common Setting Output			*	*	
	Display access logs			*	*	
	Log Output			*	*	"5.10.3"
	Clear Log			*	*	
	Weight Log Output		*	*	*	"5.10.4", "5.10.5"
	Span Adjustment Log Output			*	*	
	Proper Feed		*	*	*	"5.10.4", "5.10.5"
	Cancel		*	*	*	

*: Indicates that the item can be operated.

6.2 Access Level Change

There are three operation levels: Operator level (Level 0), Site Engineer level (Level 1), and Installation level (Level 2). Operable items differ depending on the operation level. The detail of each operation level is shown in "Table 6-2".

Table 6-2

Name	Operation Objected Person	Operation Details	Passcode	
Operator level (Level 0)	Operator	Basic operations for daily production line work.	Not required	Lower↑
Site Engineer level (Level 1)	System manager	In addition to the Operator level operations, registration for weighing and adjustment operation.	Required	Upper↓
Installation level (Level 2)	Ishida Maintenance engineer	In addition to the Site Engineer level operations, adjustment and other operations required for installation of equipment.		

The operation panel is set to the Operator level as default when power is turned on. To switch the Operator level to a higher level, a passcode for the higher level is required. passcodes are registered as the factory setting shown in the table below. To change the passcodes, refer to "6.5.10 Level 1&2&3 Passcodes Setting" in the Control Panel screen. When switching from higher operation levels to a lower level, no passcode is required.

Table 6-3

Operation Level	Passcode
Site Engineer level	1
Installation level	2



- **Passcodes for the Site Engineer and higher operation levels are set in order to limit operations to authorized users for each operation. Passcodes need to be managed to avoid operation by unauthorized users.**

6.2.1 Switching to the Operator Level (Level 0)

No passcode is required for the Operator level. For switching to the Operator level, follow the procedures below.

1. Press the [Setup] key in the Standby menu.

► Setup menu is displayed.

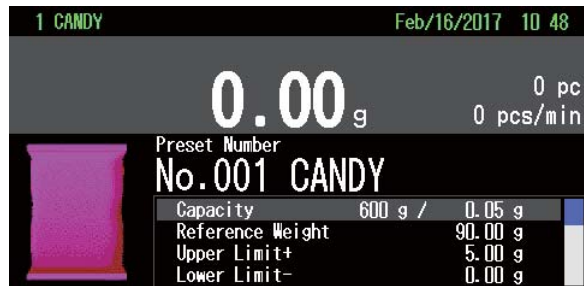


Fig. 6-1

2. Select and enter the "Access Level Change".

► The Access Level Change screen is displayed.

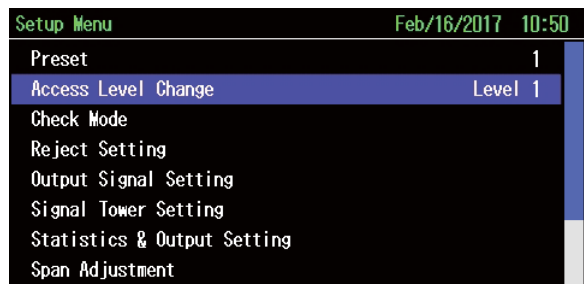


Fig. 6-2

3. Press the [Enter] key without entering anything into the passcode field.

► The Setup menu for the Operator level appears.

► Switching to the Operator level is completed.

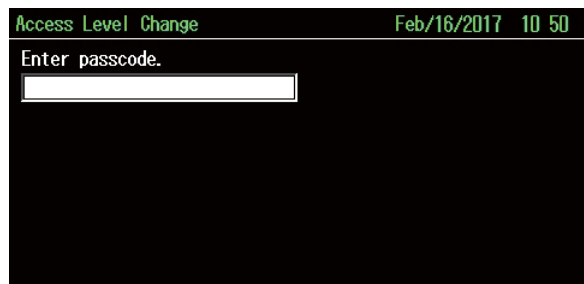


Fig. 6-3

6.2.2 Switching to the Site Engineer Level (Level 1)

To switch the Operator level and the Installation level to the Site Engineer level, the passcode for the Site Engineer level is required.

1. Press the [Setup] key in the Standby menu.

► The Setup menu is displayed.

2. Select and enter the "Access Level Change".

► The Access Level Change screen is displayed.



Fig. 6-4

3. Enter the passcode for the Site Engineer level via the [numeric] keys and press the [Enter] key.

- ▶ The Setup menu for the Site Engineer level is displayed.
- ▶ Switching to the Site Engineer level is completed.

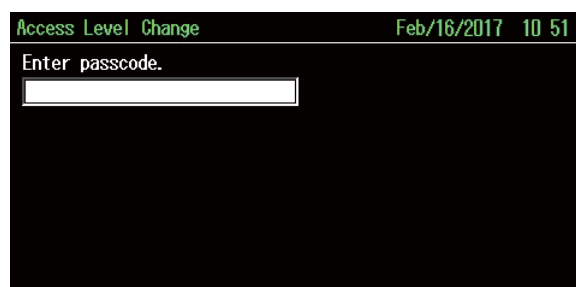


Fig. 6-5

6.2.3 Switching to Installation level (Level 2)

To switch the Operator level or the Site Engineer level to the Installation level, the passcode for the Installation level is required.

For switching to the Installation level, follow the procedures below.

1. Press the [Setup] key in the Standby menu.

- ▶ The Setup menu is displayed.

2. Select and enter the "Access Level Change".

- ▶ The Access Level Change screen is displayed.



Fig. 6-6

3. Enter the passcode for the Installation level via the [numeric] keys and press the [Enter] key.

- ▶ The Setup menu for the Installation level is displayed.
- ▶ Switching to the Installation level is completed.

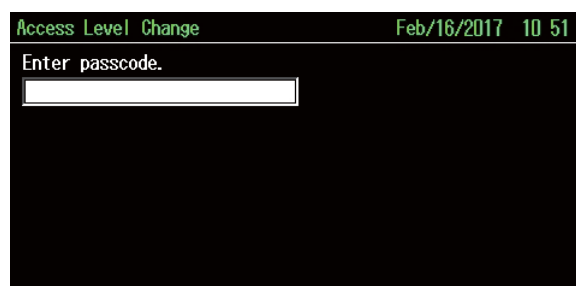


Fig. 6-7

6.3 Test Production

Test Production is an operating mode to test the weight inspection performance.

Test Production has two modes: a check mode and a test mode. The inspection performed during the test production is not totalled.

6.3.1 Check Mode

Check Mode is an operating mode to test the Reference Weight, Upper Limit, and Lower Limit that are set. Check results are stored in the access log.

For the settings of Reference Weight, Upper Limit, and Lower Limit, refer to "6.4.3 Reference Weight", "6.4.4 Upper Limit", and "6.4.5 Lower Limit".

6.3.1.1 Description of the Check Mode Screen

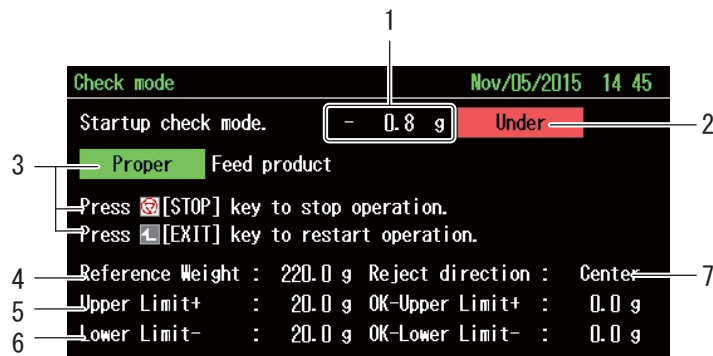


Fig. 6-8

Table 6-4

No.	Item	Function
1	Weight display	Displays the weight of the checked product
2	Inspection result	Displays the inspection results such as Proper, Over, and Under.
3	Operation procedure	Displays the next operation procedure.
4	Reference weight	Displays the Reference Weight that is set in the Preset.
5	Upper limit	Displays the Upper Limit that is set in the Preset.
6	Lower limit	Displays the Lower Limit that is set in the Preset.
7	Reject direction	Displays the reject direction for products.

6.3.1.2 How to Start the Check Mode during Stoppage

1. Display the Setup menu.
2. Select and enter the "Check mode"
 ► The Check Mode in Process screen is displayed.

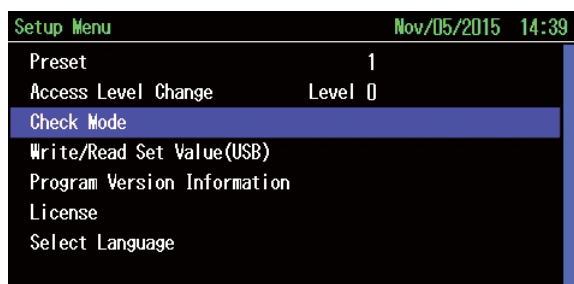


Fig. 6-9

3. Press the [Start] key.
 ► The Check mode screen is displayed.

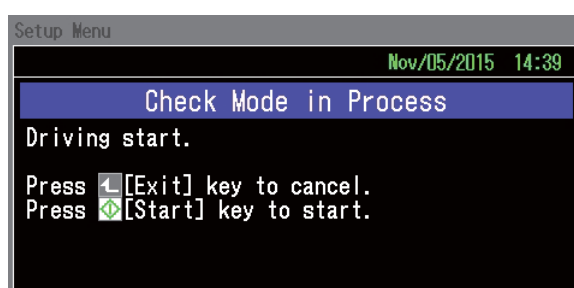


Fig. 6-10

6.3.1.3 How to Start the Check Mode during Operation

1. Press the [Function 2] key in the Standby menu.
 ► The Check Mode in Process screen is displayed.



Fig. 6-11

2. Press the [Enter] key.
 ► The Check mode screen is displayed.

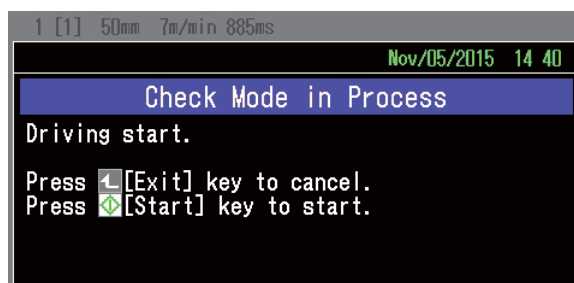


Fig. 6-12

6.3.1.4 Flow of Check Mode

1. Feed the Proper product.

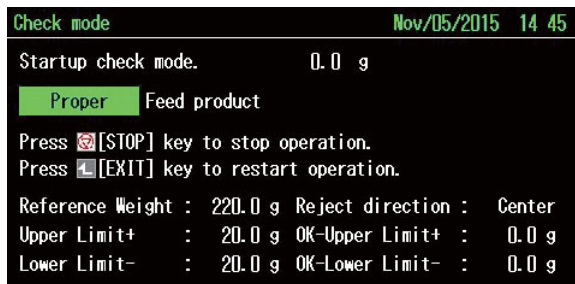


Fig. 6-13

2. Press the [Enter] key.

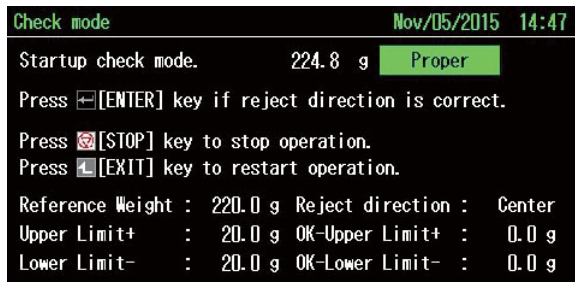


Fig. 6-14

3. Feed the Over product.

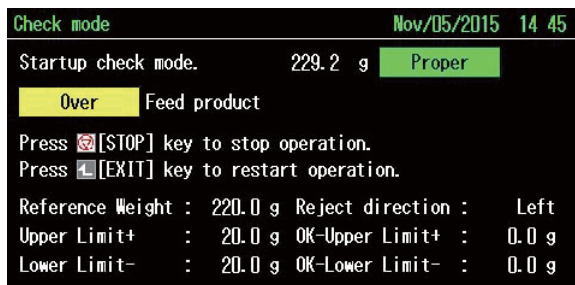


Fig. 6-15

4. Press the [Enter] key.

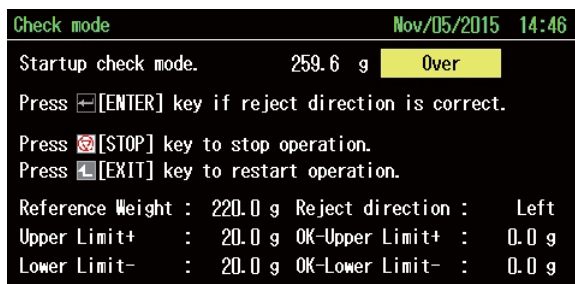


Fig. 6-16

5. Feed the Proper product.

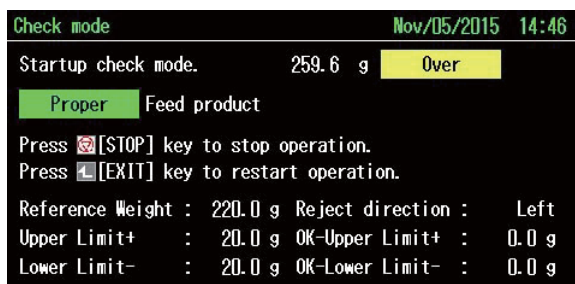


Fig. 6-17

6. Press the [Enter] key.

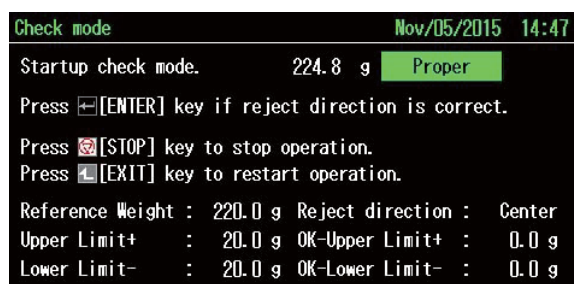


Fig. 6-18

7. Feed the Under product.

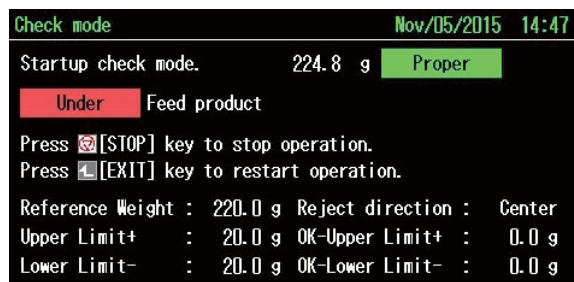


Fig. 6-19

8. Press the [Enter] key.

- The Check Mode Complete screen is displayed.

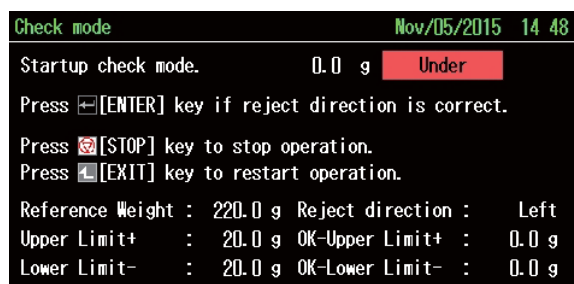


Fig. 6-20

9. Press the [Stop] key.

- Check mode is completed.

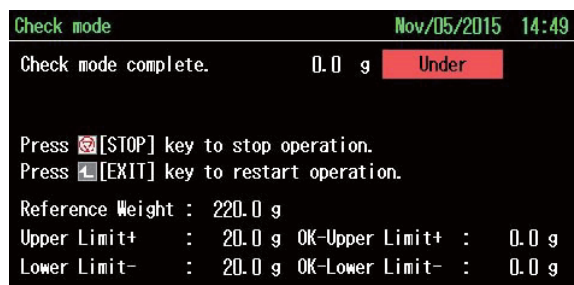


Fig. 6-21

NOTE

- If the [Exit] key or [Stop] key is pressed in a check mode without any instruction, the check mode is forcibly terminated, it is not completed but aborted.
- If the "Startup Check" is set to "ON" in the System Configuration, a check mode is used at the first operation after the power is turned on or the preset is changed. In this case, the standard production cannot be performed until the check mode is completed.

TIP

- If the "Metal Detection" is set to "ON" in the System Configuration, metal errors are additionally checked.
- The check mode can be started by pressing the [Function 2] key in the Standby menu or from the Function Dialog.

6.3.2 Test Mode

Test Mode is an operating mode to test any item regardless of Proper, Over, and Under. Follow the procedures below test mode.

NOTE

- This item is enabled only when the "Test Mode" is set to "ON" in the System Configuration.
- The Reject conveyor and the reject function will stop in a test mode.
- Remove the product promptly when the product in a test mode is reached the Reject conveyor.

6.3.2.1 Description of Test Mode Screen

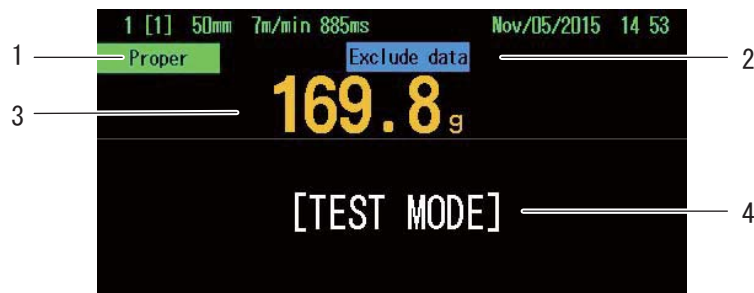


Fig. 6-22

Table 6-5

No.	Item	Function
1	Inspection result	Displays the inspection results such as Proper, Over, and Under.
2	Exclude data display	Displays when the inspection result is excluded to be on statistical data.
3	Weight display	Displays the weight of the checked product.
4	Test mode display	Displays the Test Mode is in operation.

6.3.2.2 How to Start the Test Mode during Stoppage

1. Display the Setup menu.
2. Select and enter the "Test Mode".
▶ The Initiate Test Mode screen is displayed.



Fig. 6-23

3. Press the [Start] key.
▶ Test mode is started.

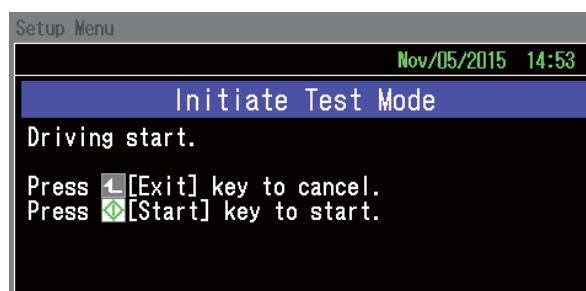


Fig. 6-24

6.3.2.3 How to Start the Test Mode during Operation

1. Press the [Function 1] key in the Standby menu.
▶ The Initiate Test Mode screen is displayed.



Fig. 6-25

2. Press the [Enter] key.
▶ Test mode is started.

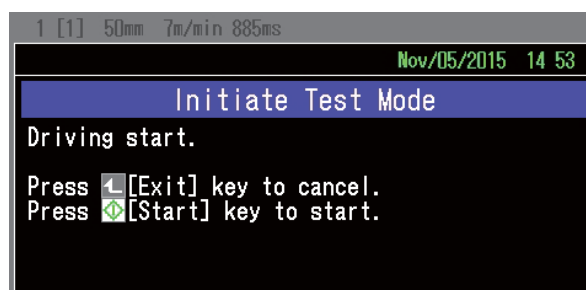


Fig. 6-26

6.3.2.4 How to Exit the Test Mode

1. Press the [Function 1] key.
 - ▶ The Check Mode Complete screen is displayed.
2. Press the [Enter] key.
 - ▶ Test mode is finished.

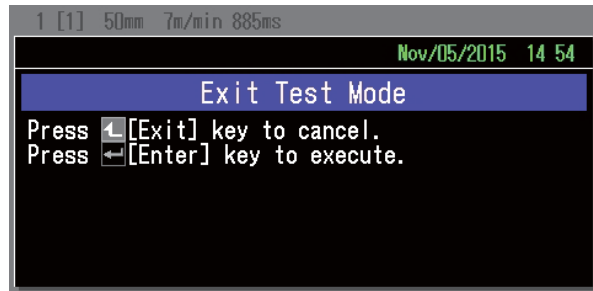


Fig. 6-27

NOTE

- Before exiting the test mode, make sure that there is no remaining product on the Weigh conveyor and the Reject conveyor.

TIP

- To exit the Test Mode during a test mode, press the [Exit] key or [Stop] key.
- To start or exit the Test Mode, press the [Function 1] key in the Standby menu. The Function Dialog (Refer to "5.9 Function Dialog Menu") can also start or exit the Test Mode.

6.4 Preset Setting

The Preset menu is to set the required weighing parameters prior to starting production. One set of the following 12 preset parameters is set for each product. There are 300 preset numbers, No.1 to No.300. Preset menu can be displayed by selecting the desired preset number in Preset Number menu. Follow the following procedure to display the Preset Setting screen.

NOTE

- Preset setting should be set by the site engineer or higher level personnel.

1. Display the Setup menu in Site Engineer Level. (Refer to "5.5.2 Switching to the Site Engineer Level (Level 1)")
2. Select and enter the "Preset".
 - ▶ The Preset Number menu is displayed.



Fig. 6-28

3. Select and enter the desired preset number.

► The Preset menu is displayed.

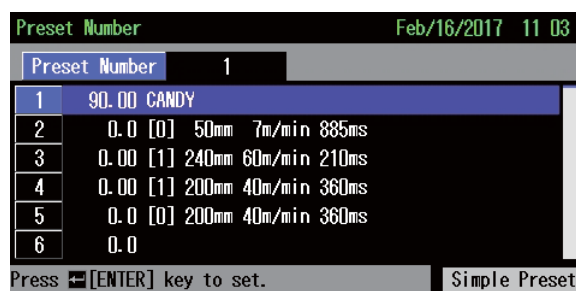


Fig. 6-29

TIP

- In addition to the above procedure, the Preset Number menu is displayed by pressing the [Preset] key in the Standby menu.

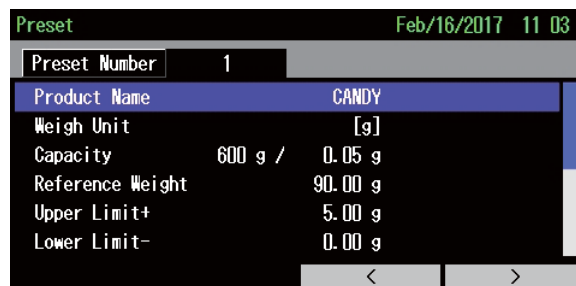


Fig. 6-30

NOTE

- Only up to 6 items can be displayed in the Preset screen at once. To display the rest of items, press the [Up/Down] key or scroll the screen with the command dial.
- To display the Preset menu (Detailed) screen, select "Detailed Setting" in the Preset screen and press the [Enter] key.

6.4.1 Product Name

Product Name defines the name of target product. Up to 12 characters can be set as the Product Name. To set the Product Name, follow the procedure below.

1. Display the Preset menu.
2. Select and enter the "Product Name".

► The Product Name setting screen is displayed.

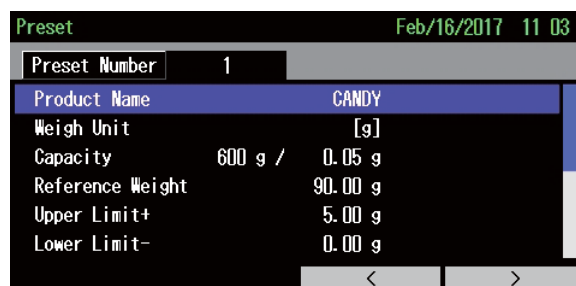


Fig. 6-31

3. Select and enter the category of character from the left column.
4. Select and enter the characters to be entered from the right column.
5. After setting all the desired numeric value or characters, press the [Exit] key.

► The setting of Product Name is reflected on the Preset menu.



Fig. 6-32

6.4.2 Capacity

Capacity sets the weighing capacity and minimum grad. To set Capacity, follow the procedures below.

1. Display the Preset menu.
2. Select and enter "Capacity".

► The Capacity menu is displayed.

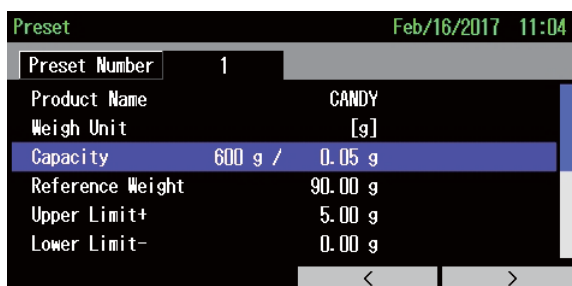


Fig. 6-33

3. Select and enter the "0" to Capacity 1500 g / Minimum grad.0.1 g.
Select and enter the "1" to Capacity 600 g / Minimum grad.0.05 g.
(This applies to the specification for DACS-GN-015. For other specification, refer to "11.1 Model Specifications".)

► The message "Reference weight, Upper limit, Lower limit, and Tare are also cleared. OK?" is displayed.

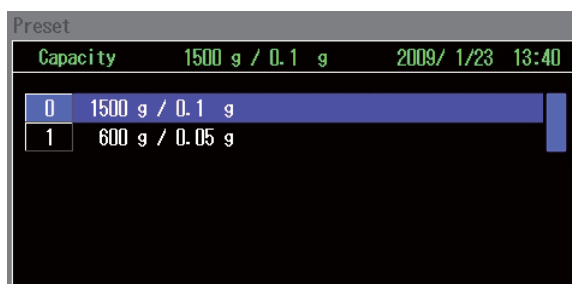


Fig. 6-34

4. Press the [Enter] key.

► The setting of Capacity is reflected on the Preset menu.

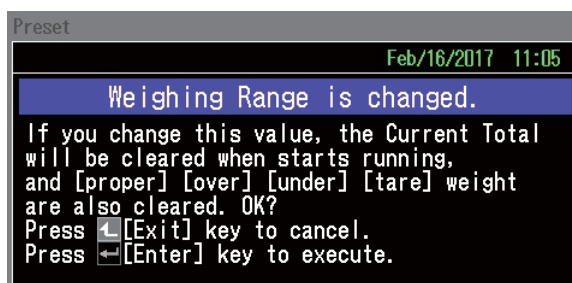


Fig. 6-35

6.4.3 Reference Weight

Reference Weight sets the weight of the product. The settable minimum unit is 0.1 g for the capacity 1500 g. To set Reference Weight, follow the procedure below.

1. Display the Preset menu.
2. Select and enter the "Reference Weight".

► The Reference Weight setting screen is displayed.

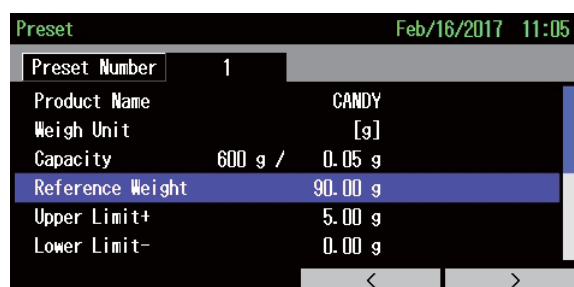


Fig. 6-36

3. Input and enter the numeric value.

► The setting of Reference Weight is reflected on the Preset menu.

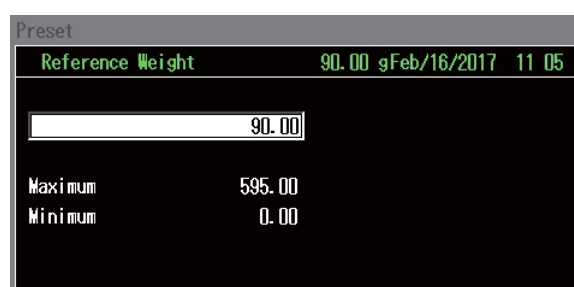


Fig. 6-37

6.4.4 Upper Limit+

Upper Limit+ defines the maximum upper offset from the standard weight as a proper product. The settable minimum unit is 0.1 g.

For example, if the Reference Weight is 100.0 g and the Upper Limit+ is 5.0 g, the product which weigh over 105.0 g is judged as over weight.

To set Upper Limit+, follow the procedure below.

1. Display the Preset menu.
2. Select and enter the "Upper Limit+".

► The Upper Limit+ setting screen is displayed.

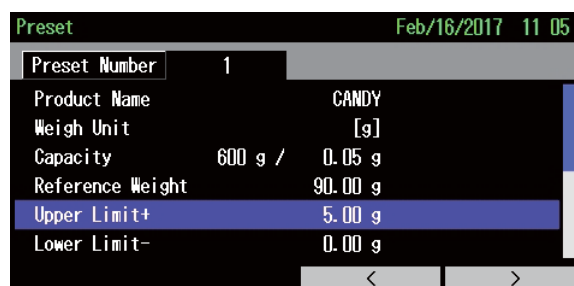


Fig. 6-38

3. Input and enter the numeric value.

► The setting of Upper Limit+ is reflected on the Preset menu.

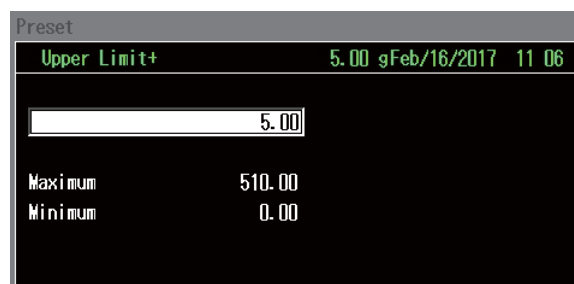


Fig. 6-39

6.4.5 Lower Limit-

Lower Limit- defines the minimum lower offset from the standard weight as a proper product. The settable minimum unit is 0.1 g.

For example, if the reference weight is 100.0 g and the Lower Limit- is 5.0 g, the product which weighs less than 95.0 g are judged under weight.

To set Lower Limit-, follow the procedures below.

1. Display the Preset menu.
2. Select and enter the "Lower Limit-".

► The Lower Limit- setting screen is displayed.

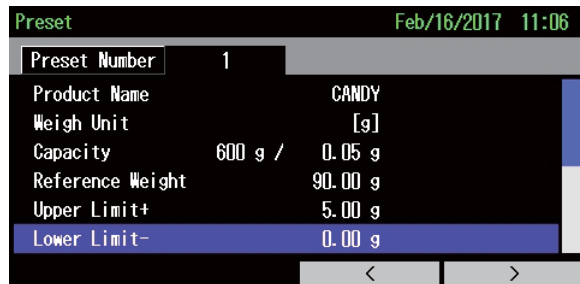


Fig. 6-40

3. Input and enter the numeric value.

► The setting of Lower Limit- is reflected on the Preset menu.

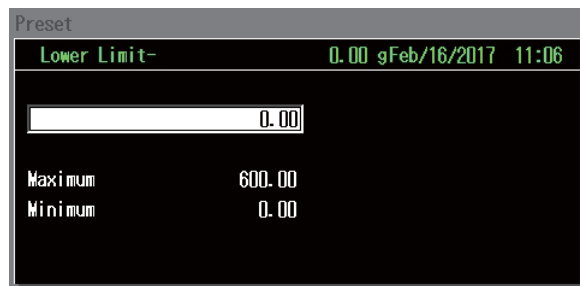


Fig. 6-41

6.4.6 OK-Upper Limit+ or OK-Lower Limit-

This item classifies the weight into 5 zones such as Over, OK-over, Proper, OK-under, and Under (the proper weight range is divided into three zones).

For details, refer to "6.5.7.11 Weight Zone (Switching the 3 Zone/5 Zone)".

NOTE

- When the weight zone is set to "3 Zone" in the System configuration of the installation level, the "OK-Upper Limit+" and "OK-Lower Limit-" are not displayed.

6.4.6.1 OK-Upper Limit+

OK-Upper Limit+ defines the upper limit recognized as the proper weight by deviation from the reference weight.

The range specified with the "OK-Upper Limit+" and "Upper Limit+" is the "OK-over".

Accordingly, set the "OK-Upper Limit+" < "Upper Limit+".

Example: If the Reference Weight is 100.0 g, the Upper Limit+ is 10.0 g, and the OK-Upper Limit+ is 5.0 g, the product which over 105.0 g is judged as "OK-over" and over 110.0 g is "Over".

To set the OK-Upper Limit+, follow the procedure below.

1. Display the Preset menu.
2. Select and enter the "OK-Upper Limit+".
 - ▶ The OK-Upper Limit+ screen is displayed.

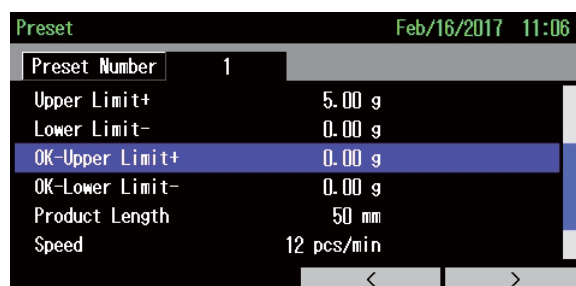


Fig. 6-42

3. Input and enter the numeric value.
 - ▶ The setting OK-Upper Limit+ is reflected on the preset menu.
 - ▶ OK-Upper Limit+ is completed.

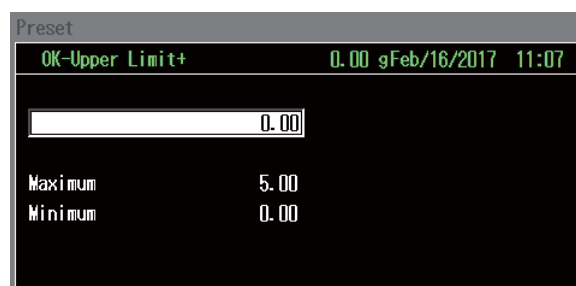


Fig. 6-43

6.4.6.2 OK-Lower Limit-

OK-Lower Limit- defines the lower limit recognized as the proper weight by deviation from the reference weight.

The range specified with the "OK-Lower Limit-" and "Lower Limit-" is "OK-under". Accordingly, set the "OK-Lower Limit-" < "Lower Limit-".

Example: If the Reference Weight is 100.0 g and the Lower Limit- is 10.0 g, and the OK-Lower Limit- is 5.0 g, the product which under 95.0 g is judged as "OK-under" and under 90.0 g is "Under".

To set OK-Lower Limit-, follow the procedure below.

1. Display the Preset menu.
2. Select and enter the "OK-Lower Limit-".
 - ▶ The OK-Lower Limit- screen is displayed.

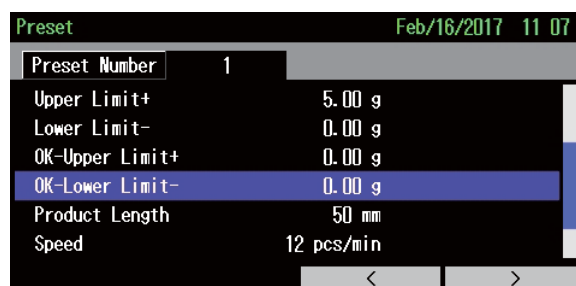


Fig. 6-44

3. Input and enter the numeric value.
 - ▶ The setting OK-Lower Limit- is reflected on the preset menu.
 - ▶ OK-Lower Limit- is completed.

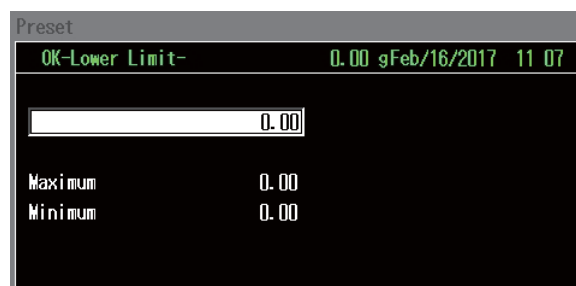


Fig. 6-45

6.4.7 Preset Tare

Preset Tare is used to check net weight of product by tare (weight of the container and package, etc.) subtraction.

NOTE

- This item will not be displayed on the Preset menu if the Tare Subtraction item is set to OFF in the System Configuration in the Installation Engineer level.

To set the Preset Tare, follow the procedure below.

1. Display the Preset menu.
2. Select and enter the "Preset Tare".
▶Preset Tare setting screen is displayed.

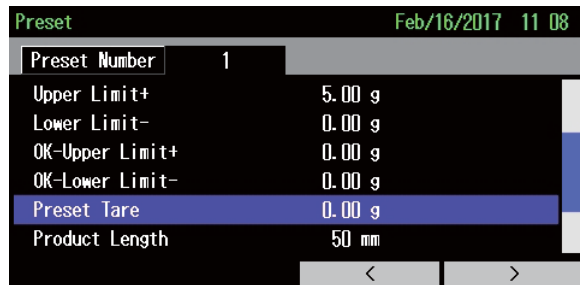


Fig. 6-46

3. Input and enter the numeric value.
▶The setting of Preset Tare is reflected on the Preset menu.

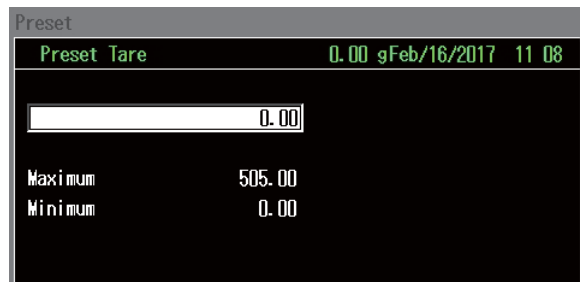


Fig. 6-47

6.4.8 Product Length

Product Length defines of the length of the target product.
To set the Product Length, follow the procedure below.

NOTE

- If the Auto Calculation is set to "OFF" in the timing setting of Installation level, the product length cannot be set.

1. Display the Preset menu.
2. Select and enter the "Product Length".
▶Product Length setting screen is displayed.

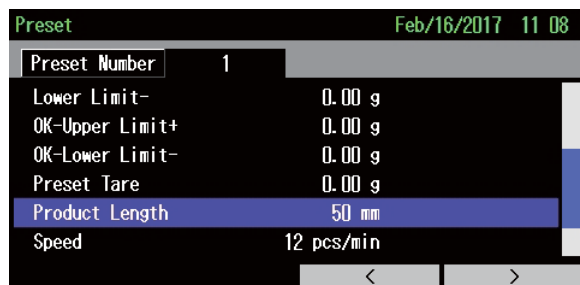


Fig. 6-48

3. Input and enter the numeric value.

- ▶ The setting of Product Length is reflected on the Preset menu.

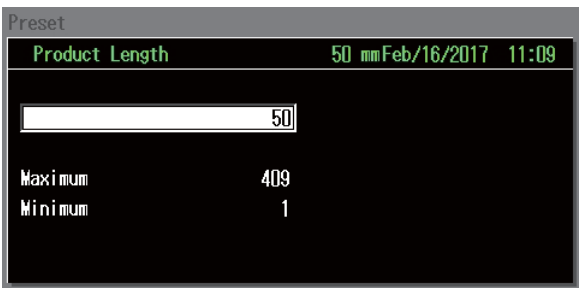


Fig. 6-49

6.4.9 Speed

Speed automatically calculates the Conv. Speed in a batch by setting the speed of the conveyor line to Speed. To set Speed, follow the procedure below.

NOTE

- If the Auto Calculation is set to "OFF" in the timing setting of Installation level, the Speed cannot be set.

TIP

- The speed is multiplied by 1.25 to automatically calculates the Conv. Speed.

1. Display the Preset menu.
2. Select and enter the "Speed".
 - ▶ The Speed screen is displayed.

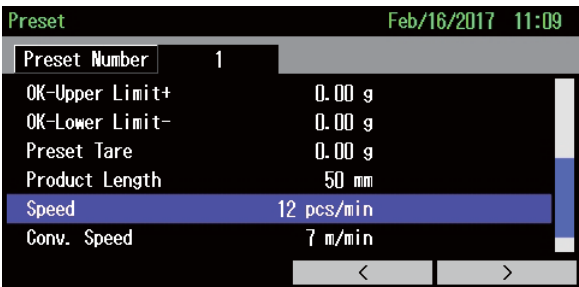


Fig. 6-50

3. Input and enter the numeric value.
 - ▶ The setting Speed is reflected on the preset menu.
 - ▶ Speed is completed.

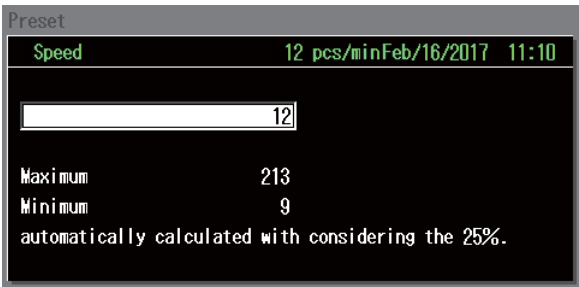


Fig. 6-51

6.4.10 Conv. Speed

Conv. Speed defines the speed for the infeed, weigh, and reject conveyors in a batch.
To set Conv. Speed, follow the procedure below.

NOTE

- If the Auto Calculation is set to "OFF" in the timing setting of Installation level, the Conv. Speed cannot be set.

1. Display the Preset menu.
2. Select and enter the "Conv. Speed".
▶ The Conv. Speed screen is displayed.

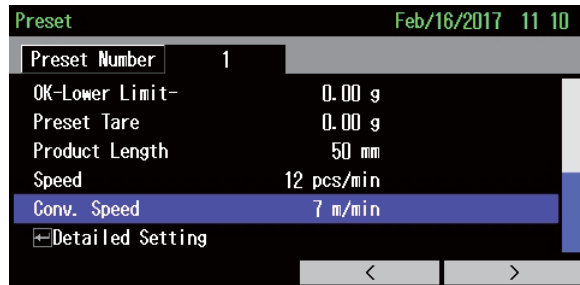


Fig. 6-52

3. Input and enter the numeric value.
▶ The setting Conv. Speed is reflected on the preset menu.
▶ Conv. Speed is completed.

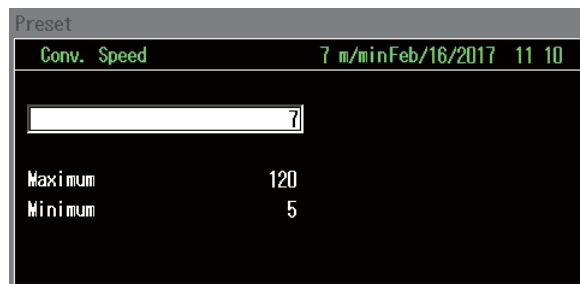


Fig. 6-53

6.4.11 Charge Mixing Weight Deviation $\pm$

Charge Mixing Weight Deviation defines the adjacent weight variation for reference to judge an error when connected with the bagger.

When an error is judged, the Charg.Mix.Wgt.Dev $\pm$ count will be counted up in the Standby menu (Refer to "Fig. 5-27 ") The Judgment criteria is "Under, then Over" and also "Total weight (Reference Weight) is within 2 (Charg, Mix Wgt. Dev. $\pm$) range ".

Example: If the Reference Weight" is 100.0 g and the Charg, Mix Wgt. Dev. $\pm$ " is 20.0 g, Under, then Over, and also the total weight is between 180.0 g and 220.0 g, the Charg.Mix.Wgt.Dev $\pm$ count will be counted up.

To set Charge Mixing Weight Deviation, follow the procedure below

NOTE

- If the "Charg, Mix Wgt. Dev. $\pm$ " is set to "OFF" in the System configuration of the installation level, the item of "Charge Mixing Weight Deviation" is not displayed. (Refer to "6.5.7.13 Charge Mixing Weight Deviation")

1. Display the Preset menu.
2. Select and enter the "Charg. Mix. Wgt. Dev".

► The Charge Mixing Weight Deviation setting screen is displayed.

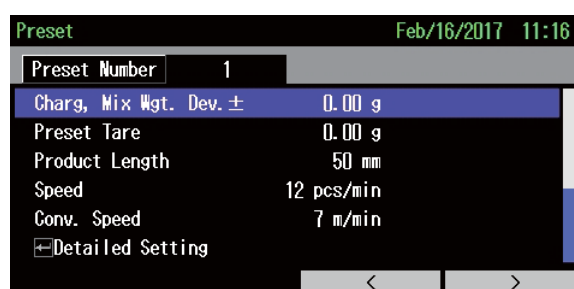


Fig. 6-54

3. Input and enter the numeric value.

► The setting of Charge Mixing Weight Deviation is reflected on the Preset menu.

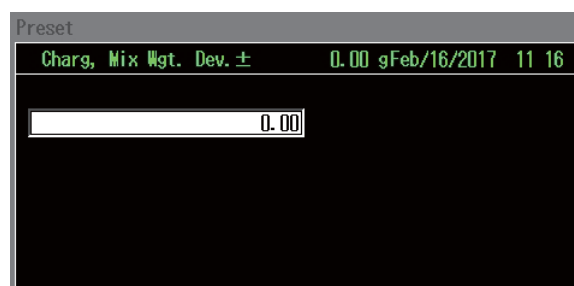


Fig. 6-55

6.4.12 Timing Setting

Timing Setting is used to adjust operational timing for the machine components to achieve a smooth flow of the product across the conveyors.

To set each timing parameters, follow the procedure below.

NOTE

- If the Auto Calculation is set to "OFF" in the timing setting of Installation level, speed of the infeed conveyor and the weigh conveyor cannot be set.
- If the "Metal Detection" is set to "OFF" in the System Configuration of Installation level, the MD NG Input Delay Time cannot be set.


Table 6-6

Item	Function
Feed Conveyor Speed	Sets the speed of Infeed conveyor.
Weigh Conveyor Speed	Sets the speed of Weigh conveyor.
Reject Conveyor Speed	Sets the speed of Reject conveyor.
Reject Start Time	Sets the timing of starting the rejector.
Reject ON Time	Sets the time interval of rejector action.
Default Reject Time	Sets the waiting time until the default reject starts.
Drive Weigh Standby Time	Sets the waiting time until the drive weigh starts.
MD NG Input Delay Time	Sets the metal detect signal output delay.
Arm Rejector Speed	Sets the arm speed of the rejector.
Output Signal 32 Delay (XT101)	Sets the Output Signal Delay.


Table 6-6

Item	Function
Output Signal 35 Delay (XT101)	Sets the Output Signal Delay.
Output Signal 38 Delay (XT101)	
Output Signal 41 Delay (XT101)	
Auto Calculation	Sets ON or OFF of the Auto Calculation.


1. Display the Preset menu.
2. Select and enter the "Detailed Setting".
 - ▶ The Preset menu (Detailed) screen is displayed.
3. Select and enter the "Timing Setting".
 - ▶ The Timing Setting menu is displayed.

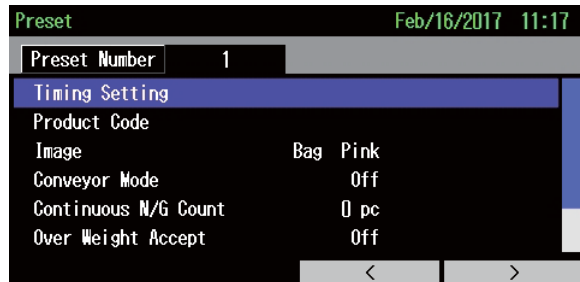**Fig. 6-56**

4. Select and enter the desired timing parameter.
 - ▶ The setting screen for each parameter is displayed.

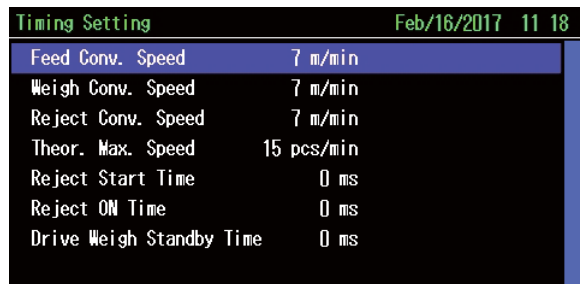**Fig. 6-57**

5. Input and enter the numeric value.
 - ▶ The setting of each parameter is reflected on the Timing Setting menu.

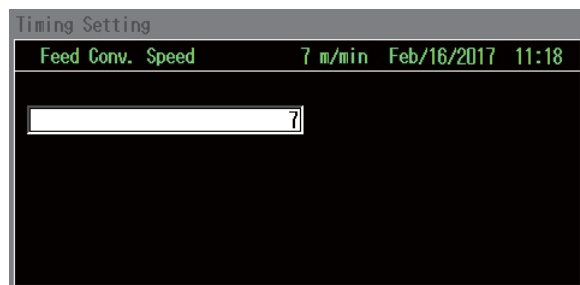**Fig. 6-58**

6.4.13 Product Code

Product Code defines the code number of the product to be displayed on the RCU. Up to 12 characters can be set as the Product Code. To set the Product Code, follow the procedure below.

1. Display the Preset menu.
2. Select and enter the "Detailed Setting".
 - ▶ The Preset menu (Detailed) screen is displayed.
3. Select and enter the "Product Code".
 - ▶ The Product Code setting screen is displayed.
4. Select and enter the category of character from the left column.
5. Select and enter the characters to be entered from the right column.
6. After setting all the desired numeric value or characters, press the [Exit] key.
 - ▶ The setting of Product Code is reflected on the Preset menu.

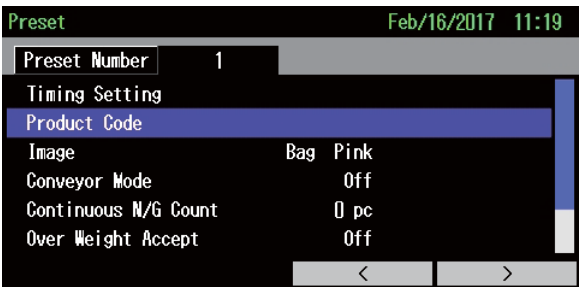


Fig. 6-59

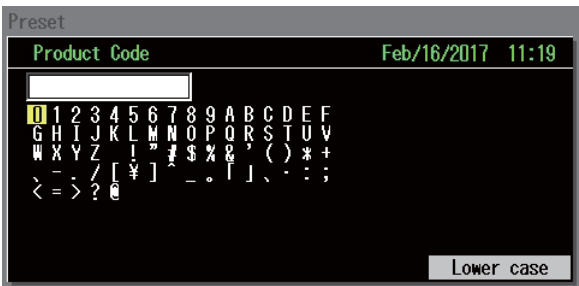


Fig. 6-60

6.4.14 Product Image

Product Image is to set the color and shape of the image of target product displayed on the bottom left of the Standby menu, by each preset number. To set the Product Image, follow the procedure below.

1. Display the Preset menu.
2. Select and enter the "Detailed Setting".
 - ▶ The Preset menu (Detailed) screen is displayed.
3. Select and enter the "Product Image".
4. Press the [Enter] key again.
 - ▶ The Product Image menu is displayed.
5. Select and enter the "Product Shape".
 - ▶ The Product Shape menu is displayed.

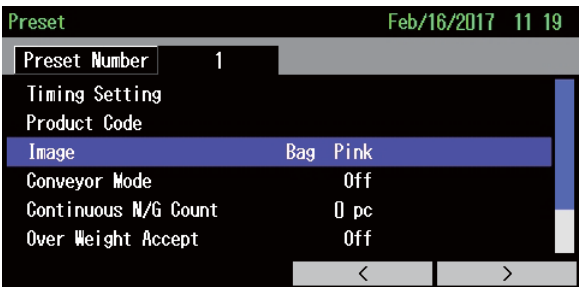


Fig. 6-61



Fig. 6-62

6. Select and enter the shape of image.
 - ▶ The setting of Product Shape is reflected on the Product Image menu.
7. Select and enter the "Product Color".
 - ▶ The Product Color menu is displayed.



Fig. 6-63

8. Select and enter the desired color.
 - ▶ The setting of Product Color is reflected on the Product Image menu.

NOTE

- When set "Preset No." as the Product Image, the Product Color is not settable.



Fig. 6-64

6.4.15 Conveyor Mode

Conveyor Mode is an operating mode in which the conveyor is allowed to operate without performing allocation judgments such as weight judgments and metal determination. (Statistical totaling not performed.) To set, follow the procedure below.

1. Display the Preset menu.
2. Select and enter the "Detailed Setting".
 - ▶ The Preset menu (Detailed) screen is displayed.
3. Select and enter the "Conveyor Mode".
 - ▶ The Conveyor Mode setting screen is displayed.
4. Select and enter the "0" to activate the Conveyor Mode.
 Select and enter the "1" to deactivate the Conveyor Mode.
 - ▶ The Preset menu for the Conveyor Mode setting will be displayed.

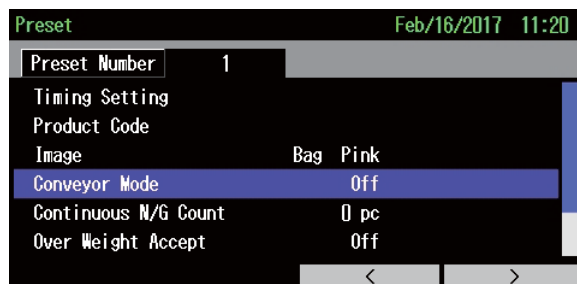


Fig. 6-65

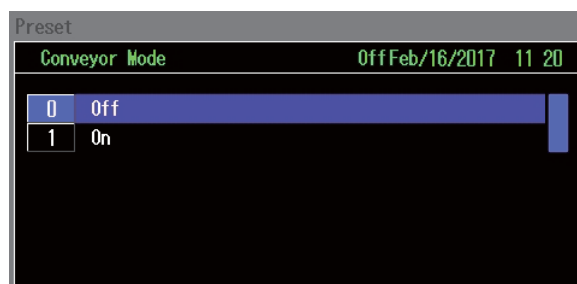


Fig. 6-66

6.4.16 Reject Setting

Rejector Setting is to set the rejector direction and output signal parameters and Cont.NG. Refer to the figure below. For Continuation NG is refer to "6.4.18 N/G Stop Setting".

The rejector is optional. To set the reject setting, follow the procedures below.

NOTE

- When the "Reject Setting" is set to "by Preset" in the System Configuration in Installation level (Level 2), Rejector Setting menu is displayed in the Preset menu. When set to "For All", the Rejector Setting is displayed in the Setup menu. (Refer to "6.5.7.4 Reject Func. Select.")

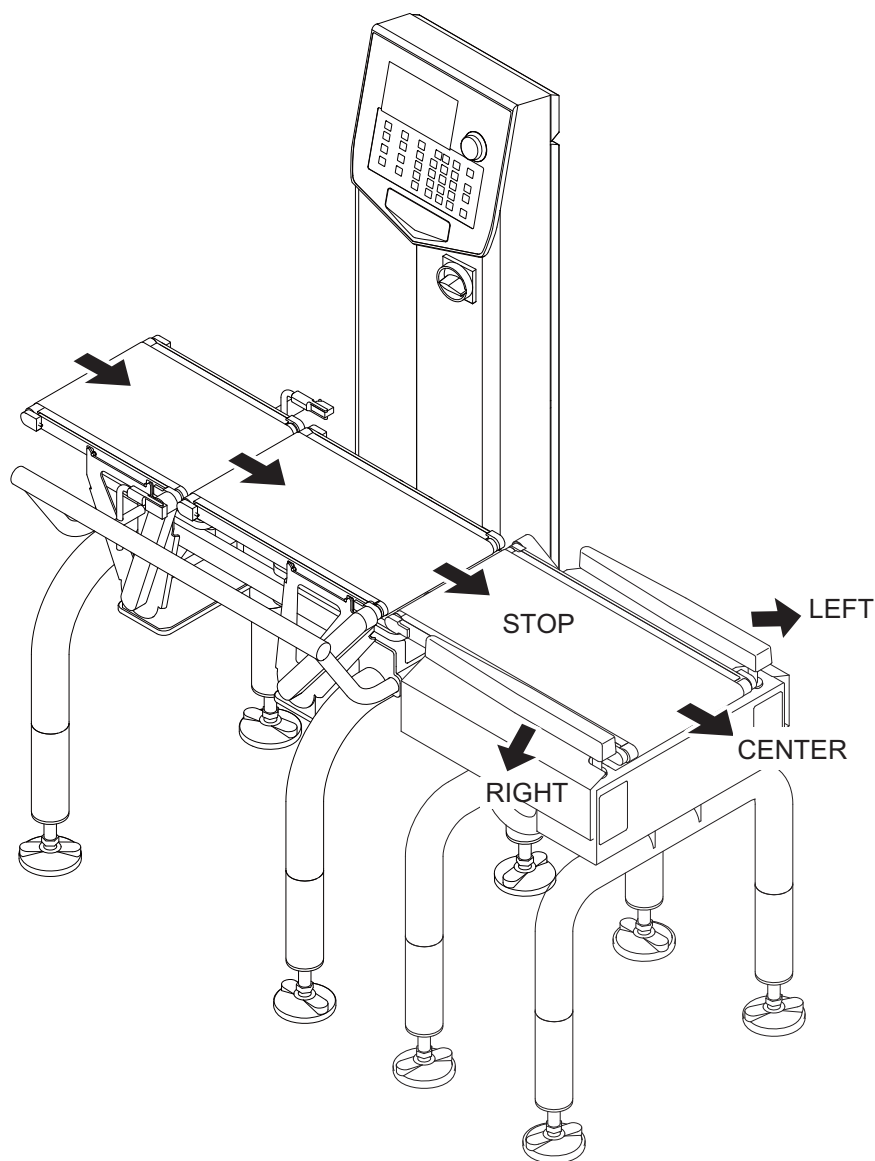


Fig. 6-67

< Overview of the Reject Setting Item >

The rejecter setting items and functions are given below. For the setting procedure, refer to the relevant procedure described in "Reference".

NOTE

- If Metal Detection is set to "OFF", Metal Detect Rej. Dir. in the System configuration of the installation level, the Metal Detection Signal cannot be set.

Table 6-7

Item	Function	Reference
Proper Wt. Rej. Dir.	Sets the reject direction for proper weight items.	"6.4.16.1 Reject Direction Setting"
Over Wt. Rej. Dir.	Sets the reject direction for over weight items.	
Under Wt. Rej. Dir.	Sets the reject direction for under weight items.	
OK-over Rej. Dir.	Sets the reject direction for "OK-over" items.	
OK-under Rej. Dir.	Sets the reject direction for "OK-under" items.	
Default Rej. Dir.	Sets the reject direction for the uninspected item (e.g., the item that was passed without blocking the incoming light from the photoelectric sensor).	
Metal Detect Rej. Dir.	Sets the reject direction for metal-containing items when a metal detector is connected.	
Ext. 1 Rej. Direction	Sets the reject direction for items when a signal is input from the External unit 1. (When the External unit 1 is not used, no setting is required.)	
Ext.2 Rej. Direction	Sets the reject direction for items when a signal is input from the External unit 2. (When the External unit 2 is not used, no setting is required.)	
Zero Error Reject Dir.	Sets the reject direction for items when a Zero error occurs.	
Pitch Error Rej. Dir.	Sets the reject direction for items when a pitch error occurs.	
Foreign Obj. Rej. Dir.	Sets the reject direction when a foreign object is detected in the product.	
Product Length Error Rej. Dir.	Sets the reject direction for items when 2 or more product packages are placed connectively.	
Continuous N/G Stop	Sets whether checkweigher will be stopped when Continuous N/G occurs.	"6.4.18.2 Continuous N/G Stop"

6.4.16.1 Reject Direction Setting

Reject Direction is used to set the direction to divert the product when each status occurs. To set the Reject Direction, follow the procedure below.

1. Display the Preset menu.
2. Select and enter the "Detailed Setting".
 - ▶ The Preset menu (Detailed) screen is displayed.
3. Select and enter the "Reject Setting".
 - ▶ The Reject Setting menu is displayed.
4. Select and enter the Reject Direction to be set.
 - ▶ The Reject Direction menu is displayed.
5. To set "Stop", Select and enter the "1".
 To set "Center", Select and enter the "2".
 To set "Left", Select and enter the "3".
 To set "Right", Select and enter the "4".
 - ▶ The setting of each Reject Direction is reflected on the Reject Setting menu.

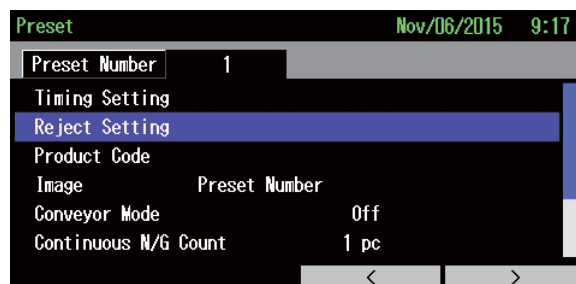


Fig. 6-68



Fig. 6-69

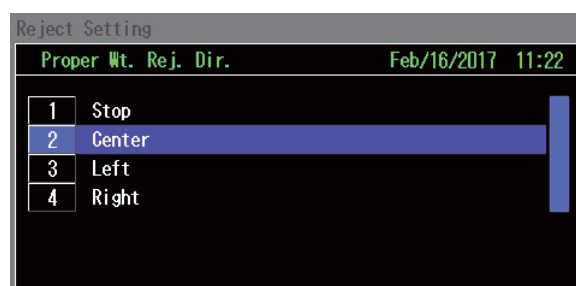


Fig. 6-70

6.4.17 Output Signal Setting

< Overview of the Output Signal Setting Item >

The output signal setting items and functions are given below. For the setting procedure, refer to the reference column below.

Table 6-8

Item	Function	Reference
Operation*	Sets the signal to be output during operation.	"6.4.17.1 Output Condition Setting"
Conveyor-running*	Sets the signal to be output while the conveyor is running.	
Stop*	Sets the signal to be output during stoppage.	
Error Stop*	Sets the signal to be output during error stoppage.	
Proper Wt.	Sets the signal to be output when a proper item passes.	


Table 6-8

Item	Function	Reference
Over Wt.	Sets the signal to be output when an over weight signal passes.	"6.4.17.1 Output Condition Setting"
Under Wt.	Sets the signal to be output when an under weight signal passes.	
OK-over Wt.	Sets the signal to be output when the "OK-over" item passes.	
OK-under Wt.	Sets the signal to be output when the "OK-under" item passes.	
Metal Detection	Sets the signal to be output when a metal-containing item passes.	
Ext. 1-2	Sets the signal to be output for the item to be rejected in the set direction when a signal is input from External unit 1.	
Pitch Error	Sets the signal to be output for the item to be rejected in the set direction when an pitch error occurs.	
Frn Obj.	Sets the signal to be output for the item to be rejected in the set direction when a foreign object error occurs.	
Product Length Error	Sets the signal to be output for the item to be rejected in the set direction when an product length error occurs.	
Rej. Dir. 1	Sets the signal to be output for the item to be rejected to the left side.	
Rej. Dir. 2	Sets the signal to be output for the item to be rejected to the right side.	

6.4.17.1 Output Condition Setting

Output Condition Setting menu defines which port should be used to output a signal corresponding to each condition such as overweight and under operation.

Output Condition Setting menu is as follows.

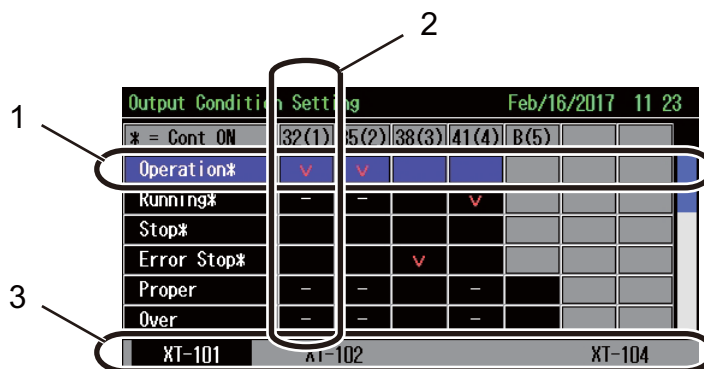**Fig. 6-71****Table 6-9**

No.	Function
1	The signal setting status for each condition is displayed. - V mark: Set - Blank: Not set - - mark: Setting impossible (Conveyor synchronization, Under operation, and others have been set.)

Table 6-9

No.	Function
2	The signal setting state for each port is displayed.
3	The setting target line is displayed. The current setting target is displayed in white. In the screen above, XT-101 is the target.

To set the output condition, follow the procedures below.

1. Display the Setup menu screen.
2. Select and enter the desired output signal.

► The Output Signal menu screen is displayed.

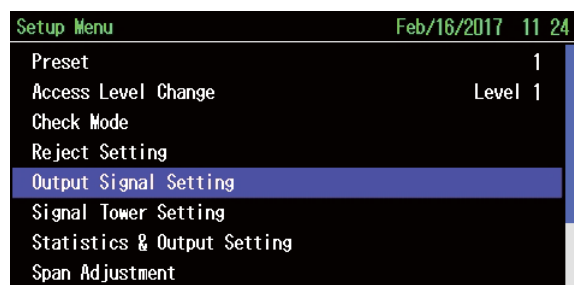


Fig. 6-72

3. Select and enter the output condition setting.

► The warning screen is displayed.

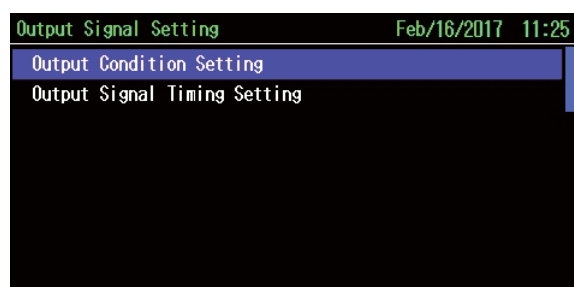


Fig. 6-73

4. Press the [Enter] key.

► Output Condition Setting menu screen is displayed.
All signals currently output are turned off.

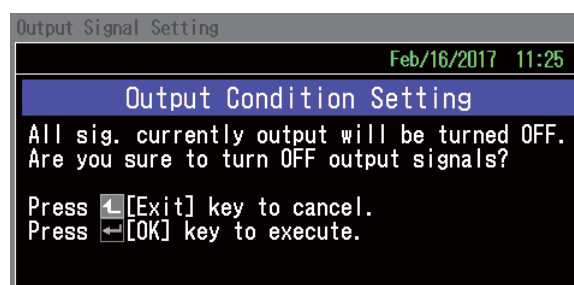


Fig. 6-74

5. Select the preferred line with a [Function] key.
Selects XT-101 with the [Function 1] key,
XT-102 with the [Function 2] key,
and XT-104 with the [Function 4] key.
6. Select and enter the preferred conditions with the [Up] or [Down] key.

► Output Condition Setting menu screen is displayed.

Output Condition Setting				Feb/16/2017 11 25			
* = Cont ON	32(1)	35(2)	38(3)	41(4)	B(5)		
Operation#	✓	✓					
Running#	-	-		✓			
Stop#							
Error Stop#			✓				
Proper	-	-		-			
Over	-	-		-			
XT-101	XT-102			XT-104			

Fig. 6-75

7. Press the [Enter] key when the warning screen is displayed.

NOTE

- The warning screen is displayed when a signal cannot be overlapped in the line due to the conditions such as under operation or conveyor synchronization.

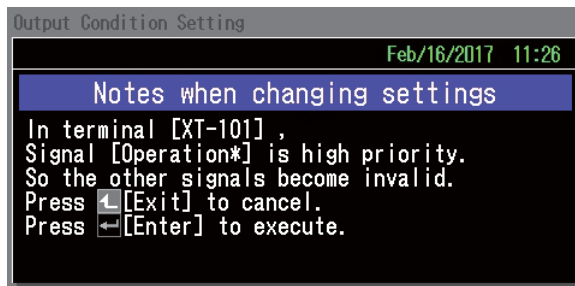


Fig. 6-76

8. Set "ON" or "OFF", then press the [Exit] key.
9. Press the [Exit] key after completing the setting.

► Stopped signal is output.

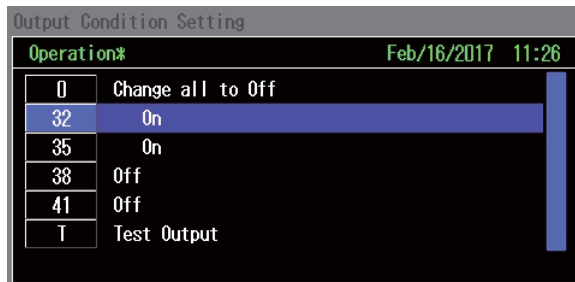


Fig. 6-77

TIP

- When selecting "Test Output", signals are output from all set ports and lines.
- Press any key to cancel the output.
- Buzzer does not support the test output.

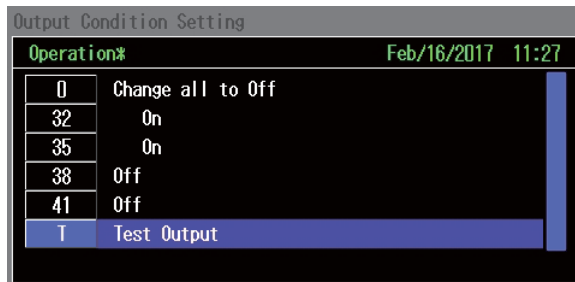


Fig. 6-78

TIP

- Short cut keys are follows.

[1] key: "ON/OFF" of the selected line 32.
 [2] key: "ON/OFF" of the selected line 35.
 [3] key: "ON/OFF" of the selected line 38.
 [4] key: "ON/OFF" of the selected line 41.
 [C] key: Sets "ON/OFF" to all ports of the selected line.

Output Condition Setting		Feb/16/2017 11:27				
* = Cont ON	32(1)	35(2)	38(3)	41(4)	B(5)	
Operation*	✓	✓				
Running*	-	-		✓		
Stop*						
Error Stop*			✓			
Proper	-	-		-		
Over	-	-		-		
XT-101	XT-102		XT-104			

Fig. 6-79

6.4.17.2 Output Timing Setting

In Output Timing Setting, the output delay time, ON Time, and flashing interval can be set for each port. Output Timing Setting menu screen is as follows.

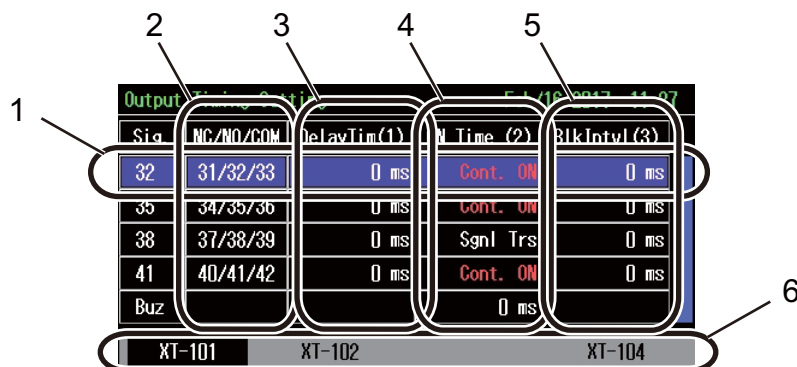


Fig. 6-80

Table 6-10

No.	Function
1	Displays the timing setting state for each port. Select the preferred port with the [Up] or [Down] key.
2	Displays the terminal number of NC/NO/COM.
3	Displays the delay time for each port.
4	Displays the ON Time for each port.
5	Displays the flashing interval for each port.
6	Displays the setting target lines. The current setting target is displayed in white characters. In the screen above, XT-101 is the target.

TIP

- Buzzer can be set ON Time only.
- When the ON Time is displayed as "Continuous ON" in red, the port has been set as a signal of "under operation" or "conveyor synchronization". They can be set only "Continuous ON" so that signals will not be overlapped.
- When "Continuous ON" displayed at the Output Signal ON Time is alternately flashing in red and white, the port has been set as a signal of "Stopped*" or "Error Stop*". Although "Stopped*" or "Error Stop*" is output as "Continuous ON", they can be overlapped with other signals. Other signals are output in Output Signal ON Time displayed in white.

For the output timing setting, follow the procedures below.

1. Display the Setup menu screen.
2. Select and enter the desired output signal.
 - ▶ The Output Signal menu screen is displayed.

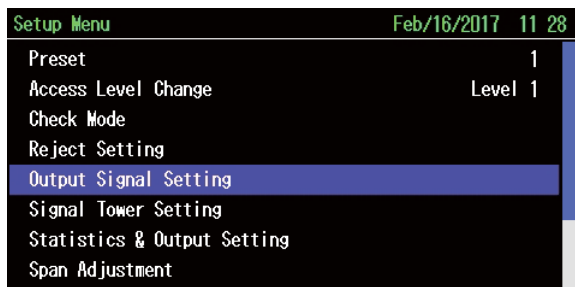


Fig. 6-81

3. Select and enter the output signal timing setting.
 - ▶ The output timing setting screen is displayed.

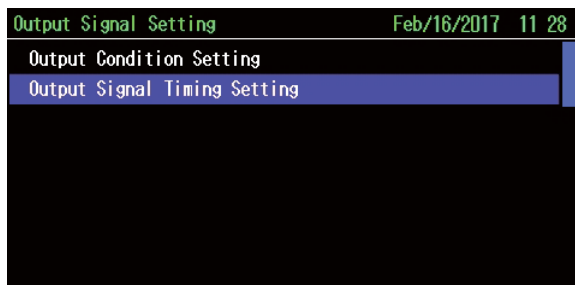


Fig. 6-82

4. Select the preferred line with a [Function] key.
 Selects XT-101 with the [Function 1] key,
 XT-102 with the [Function 2] key,
 and XT-104 with the [Function 4] key.
5. Select and enter the port.
 - ▶ The port item menu is displayed.

Output Timing Setting Feb/16/2017 11 28

Sig.	NC/NO/COM	DelayTim(1)	ON Time (2)	BlkIntvl (3)
32	31/32/33	0 ms	Cont. ON	0 ms
35	34/35/36	0 ms	Cont. ON	0 ms
38	37/38/39	0 ms	Sgnl Trs	0 ms
41	40/41/42	0 ms	Cont. ON	0 ms
Buz			0 ms	

XT-101 XT-102 XT-104

Fig. 6-83

6. Select the setting item.

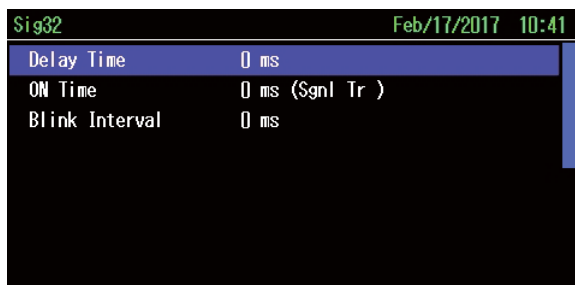


Fig. 6-84

7. Input and enter numerical value.
8. Press the [Exit] key after completing the setting.

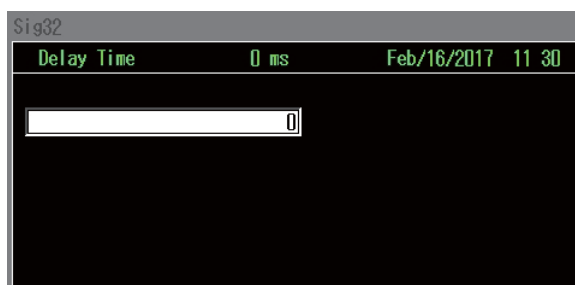


Fig. 6-85

TIP

- Short cut keys are follows.

[1] key: "Delay time" of the selected line.

[2] key: "Output Signal ON Time" of the selected line.

[3] key: "Flashing interval" of the selected line.

- If Output Signal ON Time is set to "0 ms", the signal keeps the current state until the next weighing is completed or stopped. (Signal transition)
- If Output Signal ON Time is set to "30000 ms", the signal keeps the current state until the current weighing is stopped. (Continuous ON)

Output Timing Setting				Feb/16/2017 11 30
Sig.	NC/NO/COM	DelayTim(1)	ON Time (2)	BlkIntvl(3)
32	31/32/33	0 ms	Cont. ON	0 ms
35	34/35/36	0 ms	Cont. ON	0 ms
38	37/38/39	0 ms	Sgnl Trs	0 ms
41	40/41/42	0 ms	Cont. ON	0 ms
Buz			0 ms	
XT-101		XT-102		XT-104

Fig. 6-86

6.4.18 N/G Stop Setting

N/G Stop Setting automatically stops the machine (Continuous N/G Stop) when N/G (Other than Proper) continuously occurs more than the set number of products (Continuous N/G Count). This also outputs signals (Continuous N/G Output) from the machine.

6.4.18.1 Continuous N/G Count

Continuous N/G Count defines the number to be regarded as continuous N/G.

To set the Continuous N/G Count, follow the procedure below.

- Display the Preset menu.
- Select and enter the "Detailed Setting".
 - The Preset menu (Detailed) screen is displayed.
- Select and enter the "Continuous N/G Count".
 - The Continuous N/G Count setting screen is displayed.

Preset		Feb/16/2017 11 32
Preset Number	1	
Timing Setting		
Product Code		
Image	Bag	Pink
Conveyor Mode		Off
Continuous N/G Count		0 pc
Over Weight Accept		Off
		< >

Fig. 6-87

- Input and enter the numeric value.

► The setting of Continuous N/G Count is reflected on the Preset menu.

TIP

- When set to "0", the Continuous N/G Stop and Continuous N/G Output are deactivated.

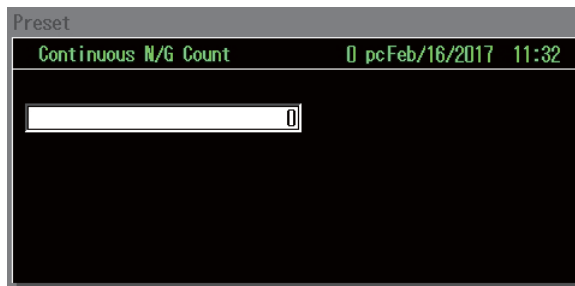


Fig. 6-88

6.4.18.2 Continuous N/G Stop

Continuous N/G Stop defines whether or not to automatically stop the machine when N/G (Other than Proper) continuously occurs more than the set number of products (Continuous N/G Count Signal). The number of rejected items is set in "Continuous N/G Count" of the Preset menu.

To set the Continuous N/G Stop, follow the procedure below.

- Display the Reject Setting menu.
- Select and enter the "Continuous N/G Stop".
 - Continuous N/G Stop screen is displayed.

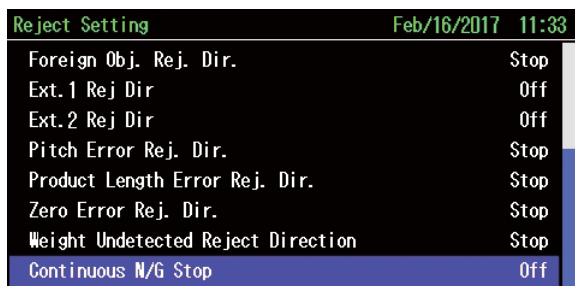


Fig. 6-89

- To deactivate the Continuous N/G Stop, Select and enter the "0".
To activate the Continuous N/G Stop, Select and enter the "1".
 - The setting of the Continuous N/G Stop is reflected on the Reject Setting screen.

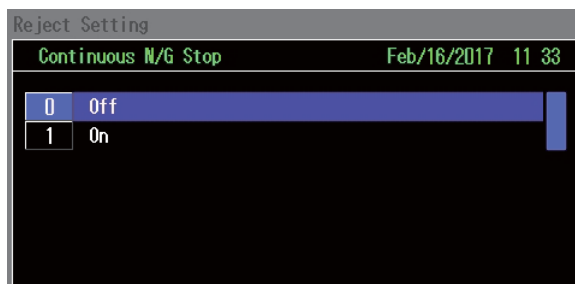


Fig. 6-90

6.4.19 Over Weight Accept

Over Weight Accept is set to ON when over weight products are to be judged as proper weight. When Over Weight Accept is enabled, over weight items are included in the totals for allowable products. To set the Over Weight Accept, follow the procedure below.

- Display the Preset menu.
- Select and enter the "Detailed Setting".
 - The Preset menu (Detailed) screen is displayed.
- Select and enter the "Over Weight Accept".
 - The Over Weight Accept menu is displayed.

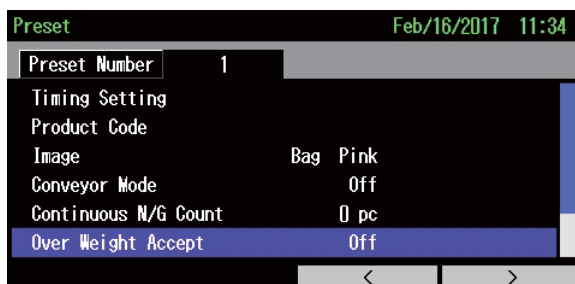


Fig. 6-91

4. To deactivate Over Weight Accept, Select and enter the "0".
To activate Over Weight Accept, Select and enter the "1".

► The setting of Over Weight Accept is reflected on the Preset menu.

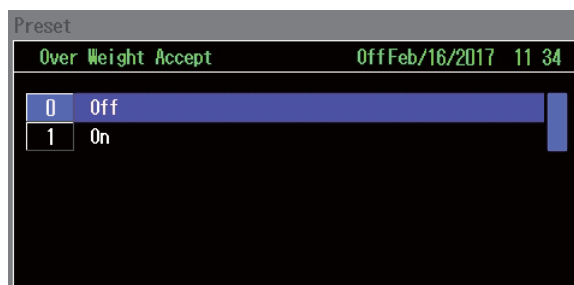


Fig. 6-92

6.4.20 Dynamic Calibration

Dynamic Calibration corrects the weighing result during production. This is used when there are differences in the weighing result between during production and in a stationary state due to lift forces or other factors. The weighing result during production become closer to in a stationary state by setting Dynamic Calibration.

Example: If the weighing result is 100.0 g in a stationary state and the during production is 99.0 g, the weighing result is corrected to approximately 100.0 g by setting the Dynamic Calibration.

To set the Dynamic Calibration, follow the procedure below.

NOTE

- When Dynamic Calibration is set to OFF in the System Configuration of the Installation level, Dynamic Calibration menu will not appear.
- When any of Capacity, Reference Weight, Preset Tare, Product Length, or Conv. Speed is changed, Dynamic Calibration will be initialized. In this case, execute the Dynamic Calibration again.
- All preset dynamic calibration settings are initialized when performing the span adjustment. (Refer to "6.5.5 Span Adjustment".) In that case, perform the dynamic calibration again.

1. Display the Preset menu.
2. Select and enter the "Detailed Setting".

► The Preset menu (Detailed) screen is displayed.

3. Select and enter the "Dynamic Calibration".

► Dynamic Calibration Standby menu is displayed.

4. Place the product on the weigh conveyor.

5. Press the [Enter] key.
Press the [Exit] key to cancel.

► The screen indicating the static weighing is in progress is displayed.

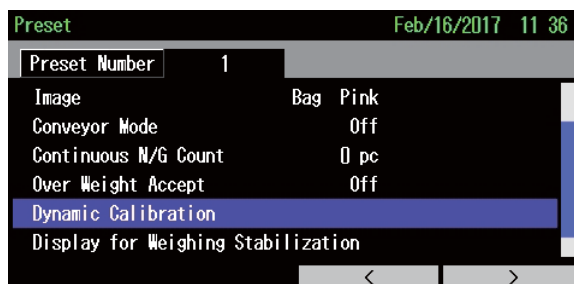


Fig. 6-93

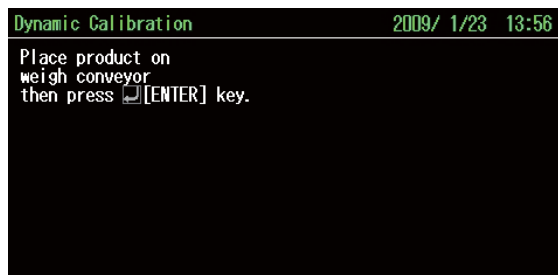


Fig. 6-94

- ▶ When static weighing calculation is completed, the Dynamic Calibration screen is displayed.



Fig. 6-95

- Remove the product from the weigh conveyor and press the [Start] key.
 - ▶ The weigh conveyor starts.
 - ▶ The screen with message indicating the Dynamic Calibration is in progress screen displayed.

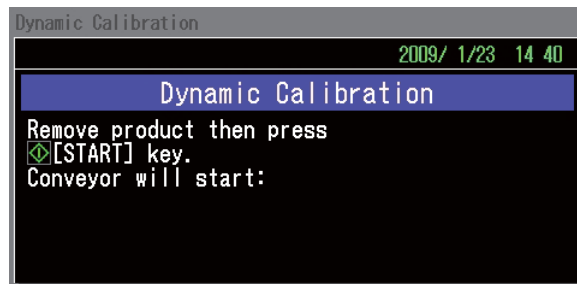


Fig. 6-96

- Place the product which was placed in the step 3 on the infeed conveyor.
- Place the product when it is discharged from the weigh conveyor.
- Repeat the step 7 and 8 until the weigh conveyor stops automatically.
 - ▶ When weighing is stabilized, the Dynamic Calibration is completed.

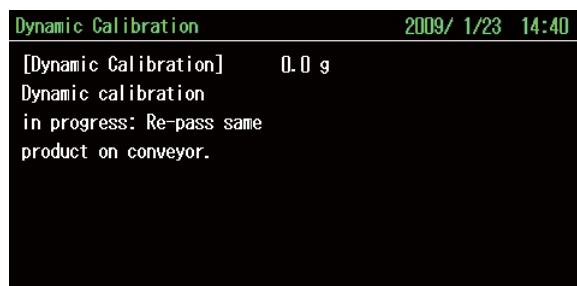


Fig. 6-97

NOTE

- If the weight is out of the range of 10% tolerance from the reference weight in the static weight calculation and dynamic calibration, the display as in the right will appear Access Denied screen and dynamic calibration will be stopped.

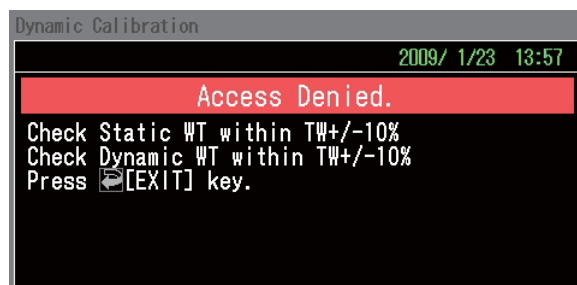


Fig. 6-98

6.4.21 Filter Simulation

Filter Simulation supports filter setting. This simulates the filter effects by applying desired filter to the weigh waveforms of the actual product, which allows the operator to check the filter effects while setting.

6.4.21.1 Acquisition of Weigh Waveforms

This item is used to acquire the weigh waveforms for filter simulations.
To set acquisition of weigh waveforms, follow the procedure below.

1. Start production.
2. Feed the products.
3. Press the [Stop] key.
4. Press the [Preset] key.
 - ▶ The Preset menu is displayed.
5. Select and enter the Detailed Setting.
 - ▶ The Preset menu (Detailed) screen is displayed.
6. Select and enter the "Display for Weighing Stabilization".
 - ▶ The acquired weigh waveform is displayed.

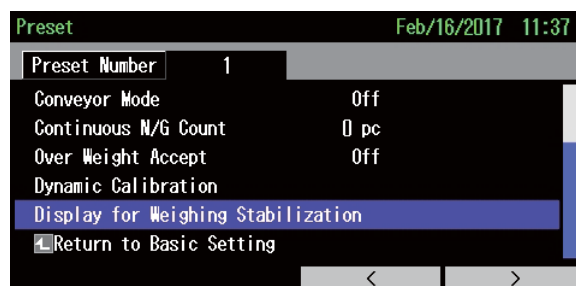


Fig. 6-99

TIP

- Weigh waveforms can be acquired in a test mode or check mode. (Refer to "6.3 Test Production".)

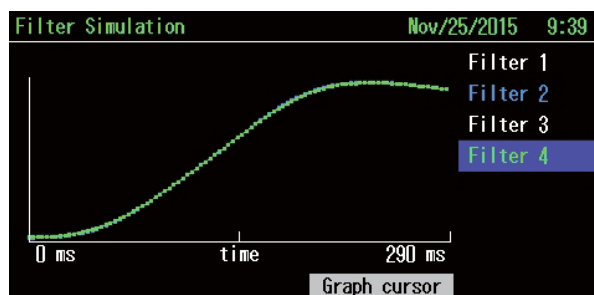


Fig. 6-100

6.4.21.2 Operation of Filter Simulation Screen

This item is used to simulate the filter with the acquired waveform. The Filter Simulation screen has two modes; a filter selection mode and graph cursor mode.

To operate the Filter Simulation, follow the procedure below.

NOTE

- If Auto Calculation is set to "ON" in the timing setting of Installation level, the Filter Simulation cannot be selected.
- The filter 2, filter 3 and filter 4 may not be set depending on the Preset Setting.

< Filter Selection Mode >

Filter Selection Mode is a mode to select a filter to simulate and change the filter setting.

1. Press the [Function 4] key.

- ▶ A cursor is displayed on the set filter.
- ▶ The graph is displayed by the blue line.

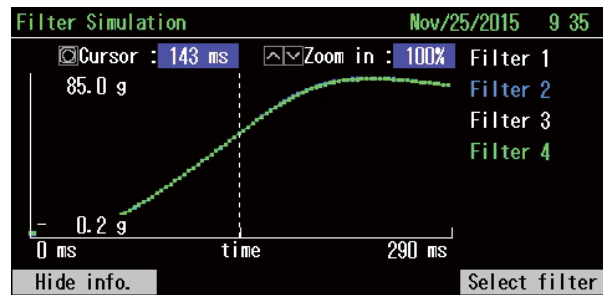


Fig. 6-101

2. Select a filter that you want to simulate.

- ▶ The set filter is displayed in blue, and the filter selected with a cursor is displayed in green.
- ▶ In a graph, the waveform using the set filter is displayed in blue, the waveform using the filter selected with a cursor is displayed in green.

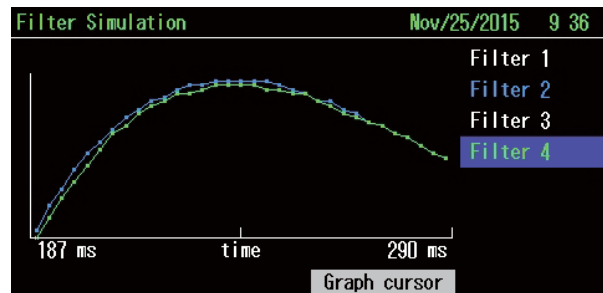


Fig. 6-102

3. Press the [Enter] key.

- ▶ The Filter change confirmation screen is displayed.

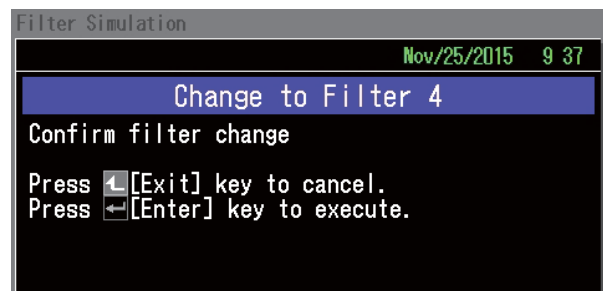


Fig. 6-103

4. Press the [Enter] key.

- ▶ Filter is changed.

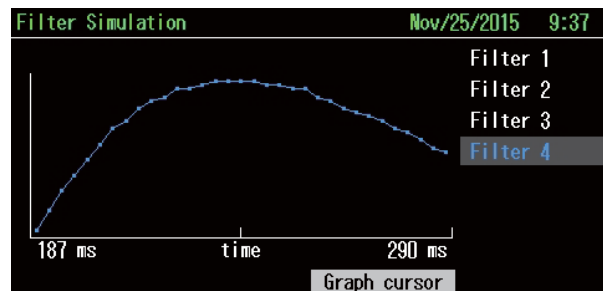


Fig. 6-104

< Graph Cursor Mode >

Graph Cursor Mode moves the graph cursor and zooms in a graph.

1. Press the [Function 3] key.

- ▶ The cursor position, horizontal magnification ratio, and the maximum and maximum values of the graph are displayed.

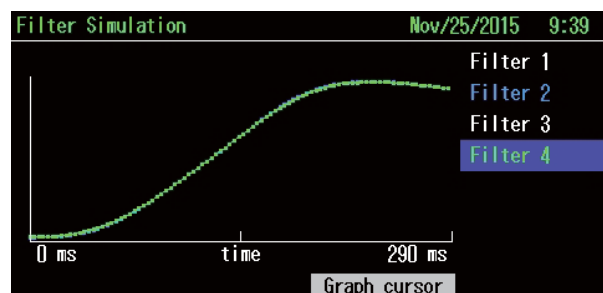


Fig. 6-105

2. Rotate the command dial.

- ▶ The vertical bar (cursor) moves to the dotted line in the graph.
- ▶ The value in the cursor position is changed.

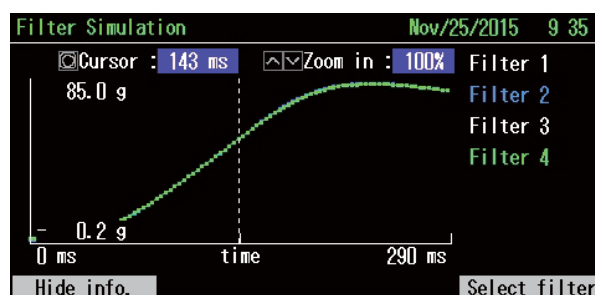


Fig. 6-106

3. Press the [Up/Down] key.

- ▶ The graph is zoomed in centered on the cursor position.
- ▶ The horizontal magnification ratio is changed.

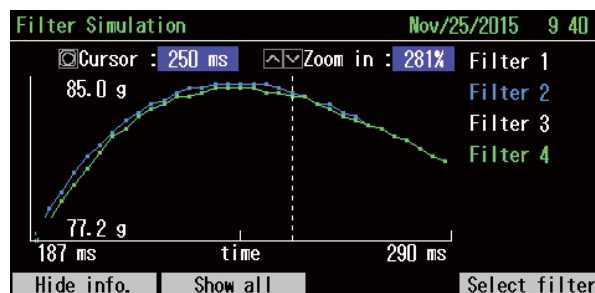


Fig. 6-107

4. Press the [Function 1] key.

- ▶ The indications of the cursor position, horizontal magnification ratio, and maximum and maximum values of the graph disappear.
- ▶ To display the indications of the cursor position, horizontal magnification ratio, and maximum and maximum values of the graph, press the [Function 1] key again.

5. Press the [Function 2] key.

- ▶ In case that the graph is zoomed in, the whole graph is displayed.
- ▶ The horizontal magnification ratio becomes 100%.

6.4.22 Set. chg. during driving

NOTE

- Setting change during the driving should be set by the site engineer or higher level personnel.

1. Display the Preset menu.

2. Select and enter the "Detailed Setting".

- ▶ The Preset menu (Detailed) screen is displayed.

3. Select and enter the "Set. chg. during driving".

- ▶ The Set. chg. during driving screen is displayed.

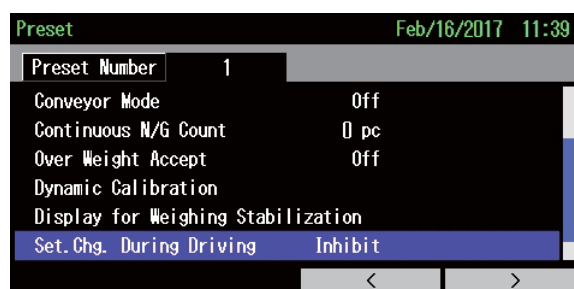


Fig. 6-108

4. To set "Inhibit Overwrite", select and enter the "0".
To set "Accept Overwrite", select and enter the "1".

▶ The Preset menu for the Set. chg. during driving setting will be displayed.

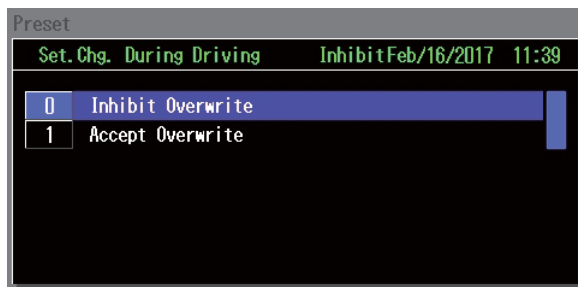


Fig. 6-109

6.4.23 Setting the Special X-bar Chart

This item is used to customize the display of the X-bar chart screen. Items such as X-bar Sample Count, X-bar Ref., X-bar Upper Limit, and X-bar Lower Limit can be set.

NOTE

- If X-bar Chart in the Statistics & Output Setting menu is set to "Standard", the above items are not displayed. (Refer to "6.5.4.15 X-bar chart")

6.4.23.1 X-bar Sample Count

The X-bar chart screen defines the number of products plotted for one point.

1. Display the Preset menu.
2. Select and enter the "Detailed Setting".
 - ▶ The Preset menu (Detailed) screen is displayed.
3. Select and enter the "X-bar Sample Count".
 - ▶ The X-bar Sample Count Setting screen is displayed.
4. Input and enter the numeric value.
 - ▶ The Total clear check screen is displayed.

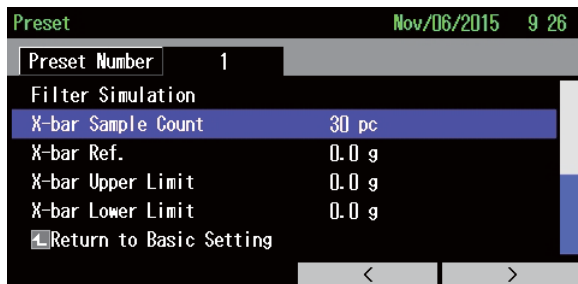


Fig. 6-110

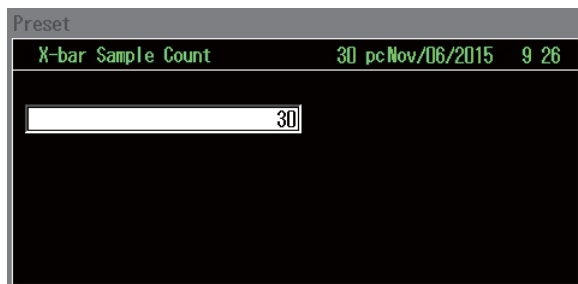


Fig. 6-111

5. Press the [Enter] key.
 - ▶ The Preset menu for the X-bar Sample Count setting will be displayed.

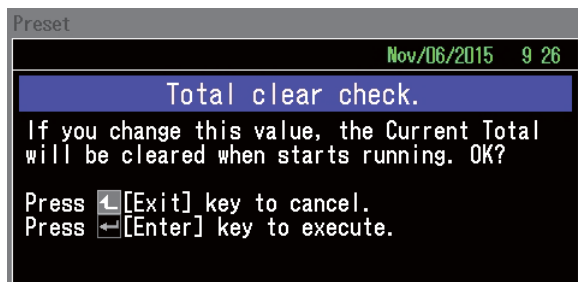


Fig. 6-112

6.4.23.2 X-bar Ref.

X-bar Ref. determines the center value for chart in the X-bar chart screen.

1. Display the Preset menu.
2. Select and enter the "Detailed Setting".
 - ▶ The Preset menu (Detailed) screen is displayed.
3. Select and enter the "X-bar Ref.".
 - ▶ The X-bar Ref. Setting screen is displayed.

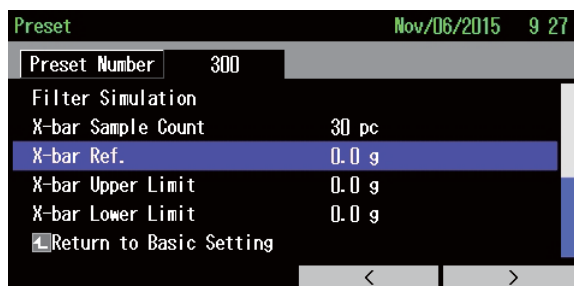


Fig. 6-113

4. Input and enter the numeric value.
 - ▶ The Total clear check screen is displayed.

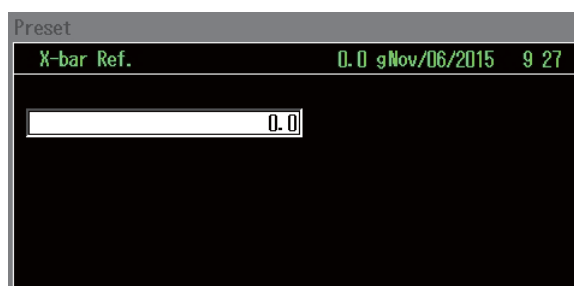


Fig. 6-114

5. Press the [Enter] key.
 - ▶ The Preset menu for the X-bar Ref. setting will be displayed.

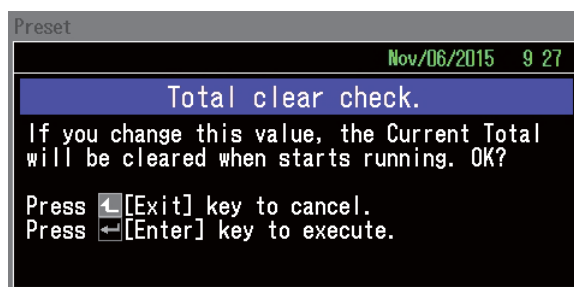


Fig. 6-115

6.4.23.3 X-bar Upper Limit or X-bar Lower Limit

X-bar Upper Limit or X-bar Lower Limit determines the upper limit or lower limit for chart in the X-bar chart screen.

1. Display the Preset menu.
2. Select and enter the "Detailed Setting".
 - ▶ The Preset menu (Detailed) screen is displayed.
3. Select and enter the "X-bar Upper Limit (X-bar Lower Limit)".
 - ▶ The X-bar Upper Limit (X-bar Lower Limit) Setting screen is displayed.

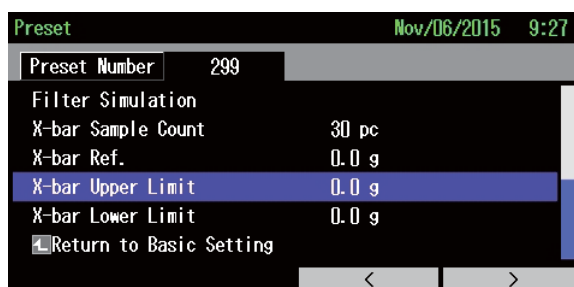


Fig. 6-116

4. Input and enter the numeric value.

► The Total clear check screen is displayed.

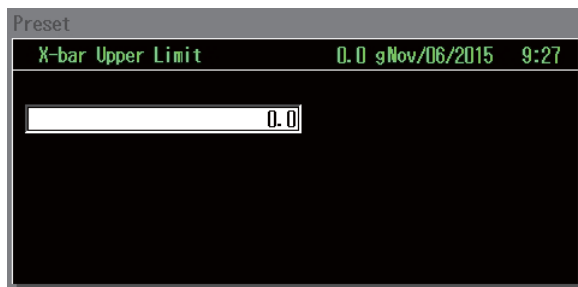


Fig. 6-117 X-bar Upper Limit

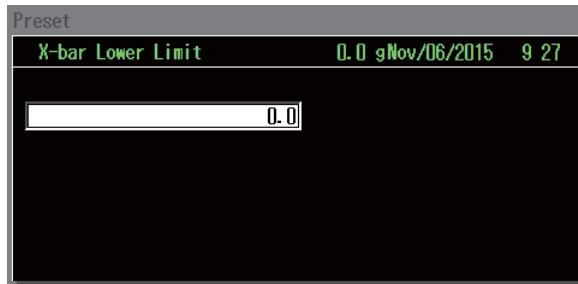


Fig. 6-118 X-bar Lower Limit

5. Press the [Enter] key.

► The Preset menu for the X-bar Upper Limit (X-bar Lower Limit) setting will be displayed.

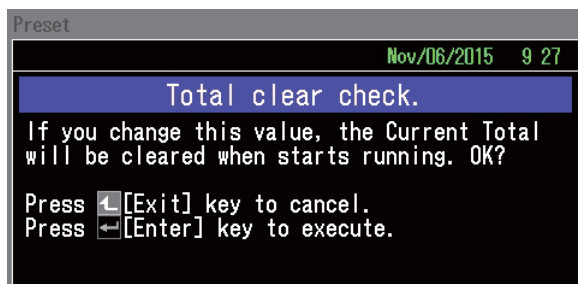


Fig. 6-119

NOTE

- When the relationship of "Upper Limit > center value > Lower Limit" does not exist, the X-bar chart is not displayed correctly.

6.4.24 Setting of the Special Histogram

This item is used to customize the display in the Histogram screen. Items such as Histogram Base and Histogram Gap can be set.

NOTE

- If Histogram is set to "Standard" in the Statistics & Output Setting menu, the above items are not displayed. (Refer to "6.5.4.16 Histogram")

6.4.24.1 Histogram Base

Histogram Base determines the center value for vertical axis on the Histogram screen.

1. Display the Preset menu.
2. Select and enter the "Detailed Setting".
 - ▶ The Preset menu (Detailed) screen is displayed.
3. Select and enter the "Histogram Base".
 - ▶ The Histogram Base Setting screen is displayed.
4. Input and enter the numeric value.
 - ▶ The Total clear check screen is displayed.

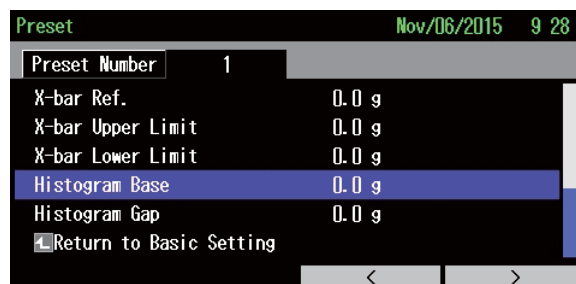


Fig. 6-120

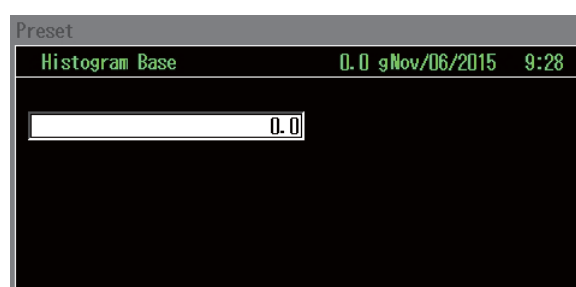


Fig. 6-121

5. Press the [Enter] key.
 - ▶ The Preset menu for the Histogram Base setting will be displayed.

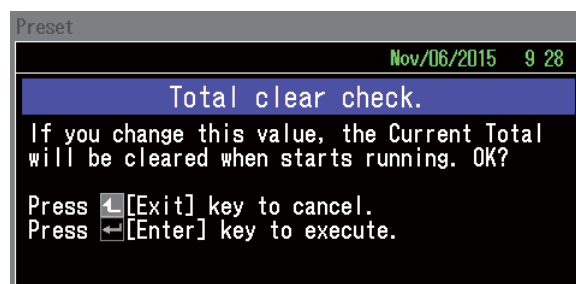


Fig. 6-122

6.4.24.2 Histogram Gap

Histogram Gap determines the weight gap for vertical axis on the Histogram screen.

1. Display the Preset menu.
2. Select and enter the "Detailed Setting".
 - ▶ The Preset menu (Detailed) screen is displayed.
3. Select and enter the "Histogram Gap".
 - ▶ The Histogram Gap Setting screen is displayed.

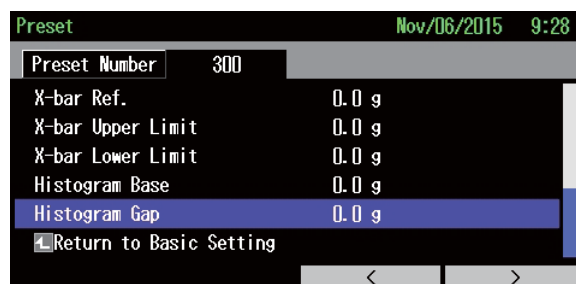


Fig. 6-123

4. Input and enter the numeric value.
 - ▶ The Total clear check screen is displayed.

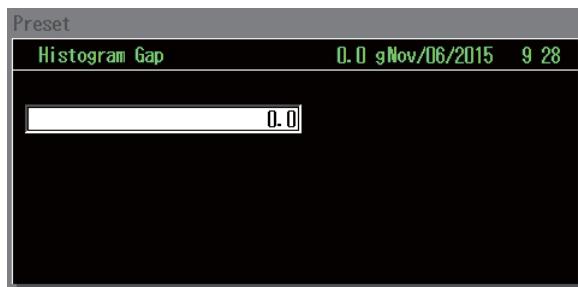


Fig. 6-124

5. Press the [Enter] key.
 - ▶ The Preset menu for the Histogram Gap setting will be displayed.

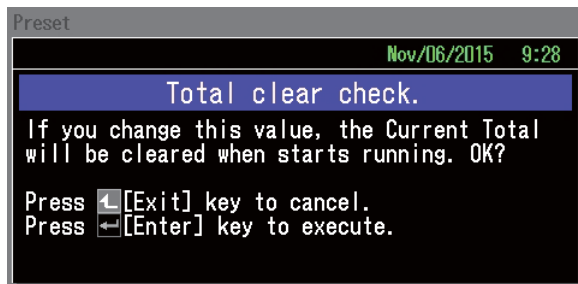


Fig. 6-125

6.4.25 Useful Preset Change

This is a function to support the preset setting.

6.4.25.1 Preset Number Change on the Preset Screen

This item is used to change the preset number on the Preset screen.

< Changing to the next preset number >

1. Display the Preset menu.
2. Press the [Function 4] key.

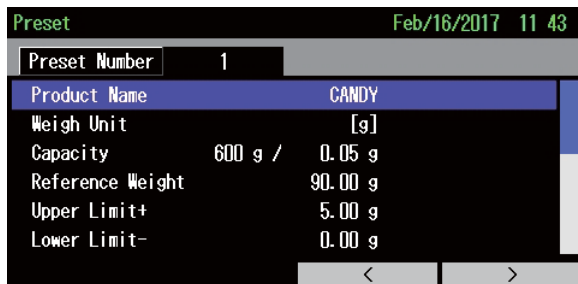


Fig. 6-126

< Changing to the previous preset number >

1. Display the Preset menu.
2. Press the [Function 3] key.

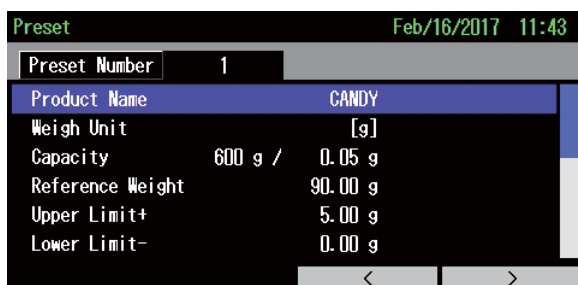


Fig. 6-127

< Changing to any preset number >

1. Display the Preset menu.
2. Input the preset number.
3. Press the [Function 4] key.

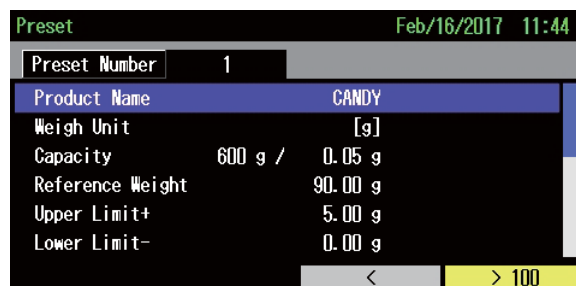


Fig. 6-128

6.4.25.2 Preset Setting Change in the Standby Menu

This item is used to directly enter values for the Preset Setting on the Preset Information screen. The items (Reference Weight, Upper Limit, Lower Limit, OK-Upper Limit, OK-Lower Limit, Conv. Speed (Feed, Weigh, Reject Conveyor speed are changed in a batch) can be changed. Values of the above items can be set even during production. To preset setting change, follow the procedure below.

NOTE

- To change the Preset Setting in the Standby menu during production, the initial setting is required by the Installation level personnel. For procedures on how to set, refer to "6.5.7.10 Set. chg. during driving".
- The change of the preset setting should be set by the site engineer or higher level personnel.

1. Display the Preset Information screen.
2. Select the setting you want to change and press the [Enter] key.
 - ▶ An input box is displayed.
3. Input and enter the numeric value.
 - ▶ Input data is reflected on Preset Information screen.



Input box

Fig. 6-129

NOTE

- When the Conv. Speed is changed during production, products can be forcibly discharged until the weigh becomes stable.

6.4.25.3 Simple Preset Setting

Simple Preset Setting can set Preset according to the guidance on the screen. Simple Preset, follow the procedure below.

NOTE

- Simple Preset should be set by the site engineer or higher level personnel.

1. Display the Preset Number Select screen.
2. Select and enter the desired preset number.
3. Press the [function 4] key.

► The Simple Preset screen is displayed.

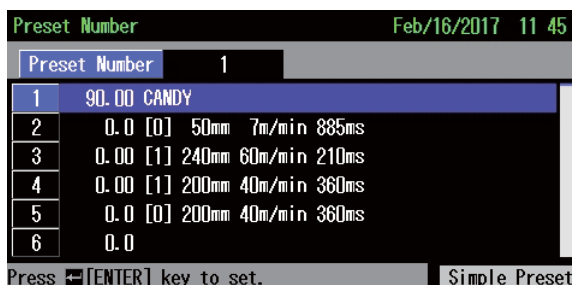


Fig. 6-130

4. Enter a value according to the screen.
(For item, refer to "Table 6-11 Overview of Simple Preset Item".)

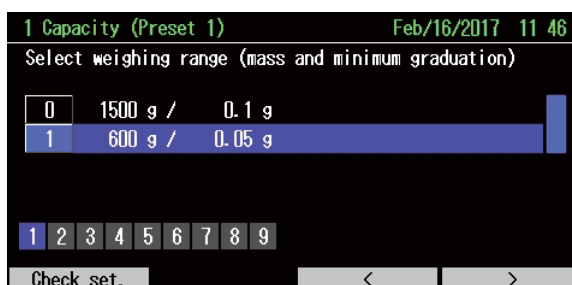


Fig. 6-131

5. When Check settings screen is displayed, Select and enter the "Update Current Preset Settings".

► The Change preset screen is displayed.

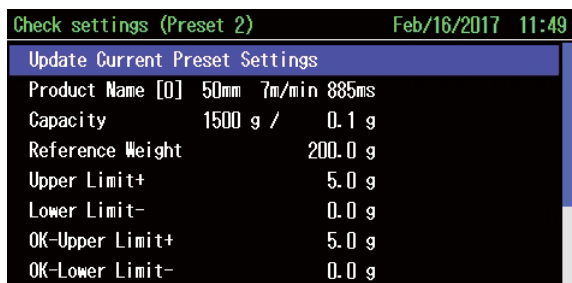


Fig. 6-132

6. Press the [Enter] key.

► The Preset Number Select screen is displayed.

NOTE

- If the [Exit] key is pressed before the [Enter] key after selecting "Update Current Preset Settings", the entered value is not reflected to Preset Setting.

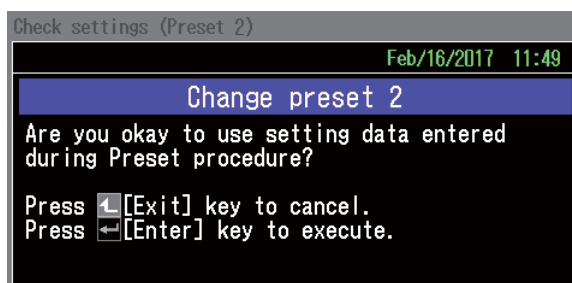


Fig. 6-133

Table 6-11 Overview of Simple Preset Item

No.	Item	Reference sections
1	Capacity	"6.4.2 Capacity"
2	Reference Weight	"6.4.3 Reference Weight"
3	Upper Limit	"6.4.4 Upper Limit+"
4	Lower Limit	"6.4.5 Lower Limit-"
5	OK-Upper Limit	"6.4.6.1 OK-Upper Limit+"
6	OK-Lower Limit	"6.4.6.2 OK-Lower Limit-"
7	Preset Tare	"6.4.7 Preset Tare"
8	Product Length	"6.4.8 Product Length"
9	Speed	"6.4.9 Speed"

TIP

- To check the setting value, press the [Function 1] key during setting.
- To return to the precious item, press the [Function 3] key during setting.
- To skip the item, press the [Function 4] key during setting.

6.5 Setup Menu

Setup Menu defines the common settings to all the presets.

To display the setup menu, follow the procedure below.

1. Press the [Setup] key in the Standby menu.

► The Setup menu for the Operator level is displayed.

**Fig. 6-134****Fig. 6-135**

6.5.1 Write/Read Set Value

Write/Read Set Value writes the set values for preset or common settings into the USB flash drive and read such saved set values from the USB flash drive into the machine.

6.5.1.1 Write Preset Setting

Write Preset Setting saves the preset setting into USB flash drive.
To operate the Write Preset Setting, follow the procedure below.

1. Display the Setup menu.
2. Select and enter the Write/Read Input and enter the numeric value.

► The Write/Read Set Value screen is displayed.

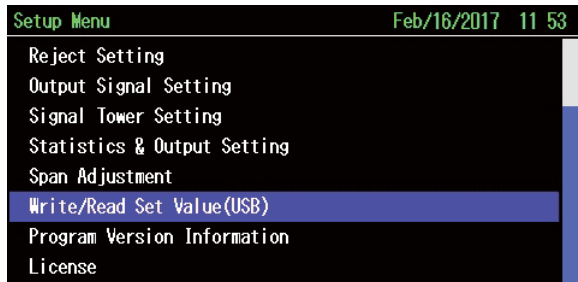


Fig. 6-136

3. Select and enter the "Write Preset Setting".

► Confirmation screen for the Write Preset Setting is displayed.

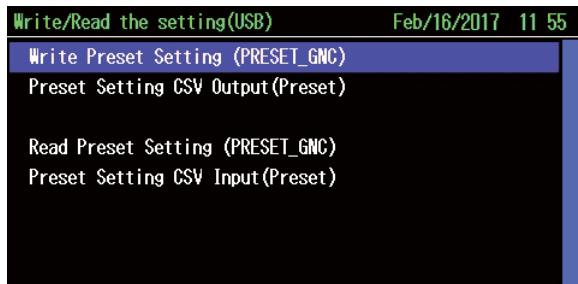


Fig. 6-137

4. Press the [Enter] key.

► Writing the setting screen is displayed.

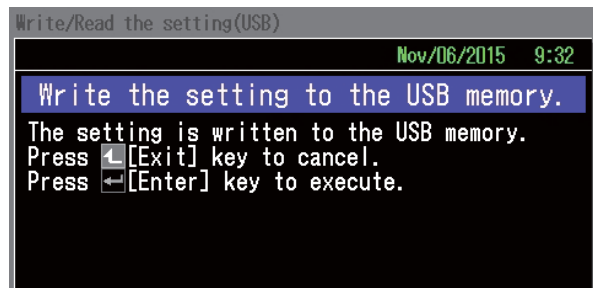


Fig. 6-138

► Writing the setting screen is displayed.

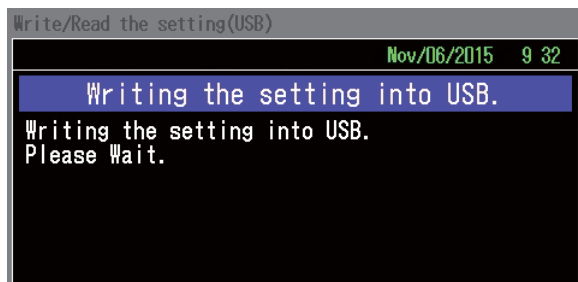


Fig. 6-139

- Press the [Exit] key.

► Write/Read Set Value screen is displayed.

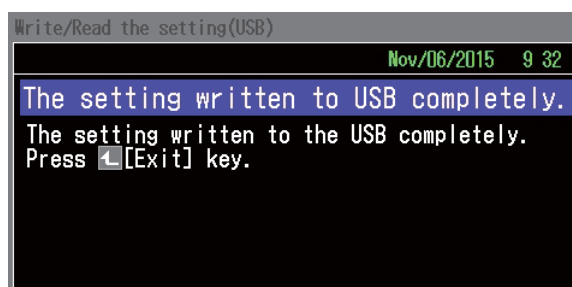


Fig. 6-140

NOTE

- Write Preset Setting saves a "wc" folder as well as four folders named "PRESET", "PRESET_GNC", "PRESETMD", and "PRESETMD_GNC" folders into USB flash drive. If a file of the same name exists, the existing file is automatically overwritten with the new file.
- Make sure that the saved file is successfully stored with the PC.
- Do not edit the saved file.

6.5.1.2 Read Preset Setting

Read Preset Setting reads the settings stored in USB flash drive to the main body. To operate the Read Preset Setting, follow the procedure below.

NOTE

- Read Preset Setting should be set by the site engineer or higher level personnel.

- Display the Setup menu.
- Select and enter the "Write/Read Set Value".
► Display the Write/Read Set Value screen.

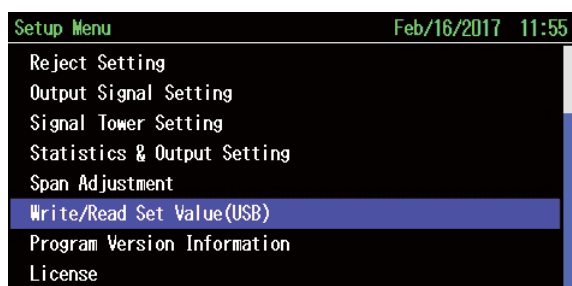


Fig. 6-141

- Select and enter the "Read Preset Setting".
► The Confirmation screen for Read Preset Setting is displayed.

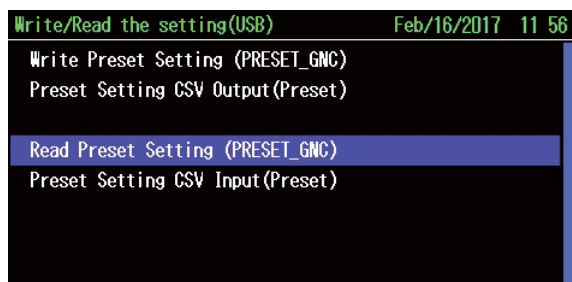


Fig. 6-142

4. Press the [Enter] key.

► The Read Preset Setting screen in progress is displayed.

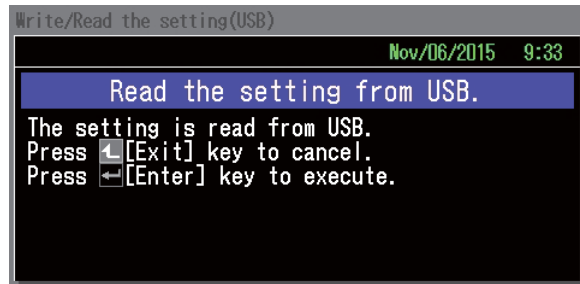


Fig. 6-143

► The Read Preset Setting completed screen is displayed.

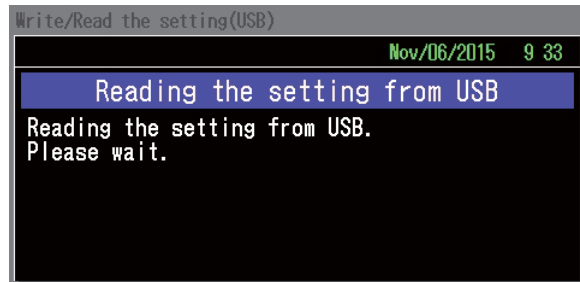


Fig. 6-144

5. Press the [Exit] key.

► Display the Write/Read Set Value screen.

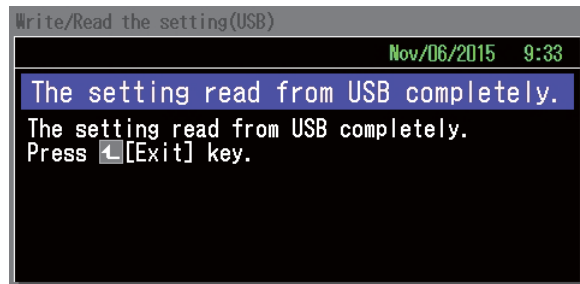


Fig. 6-145

6.5.1.3 Preset Setting CSV Output/Input

"Preset Setting CSV Write" saves some of the preset settings into the CSV file. "Preset Setting CSV Read" reflects the edited CSV file on the PC to the preset setting.

To operate the Preset Setting CSV Output/Input, follow the procedure below.

NOTE

- Preset Setting CSV Output / Input should be set by the site engineer or higher level personnel.

1. Display the Setup menu.
2. Select and enter the "Write/Read Set Value".

► Display the Write/Read Set Value screen.

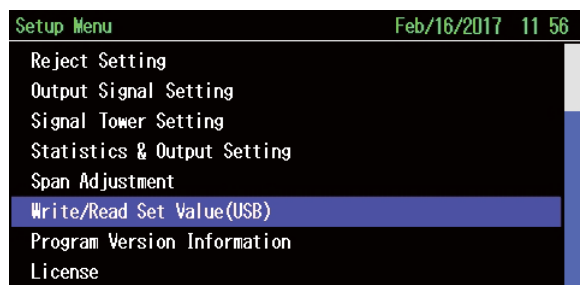


Fig. 6-146

3. Select and enter the "Preset Setting CSV Output/Input".

► The Confirmation screen for Preset Setting CSV Output/Input is displayed.

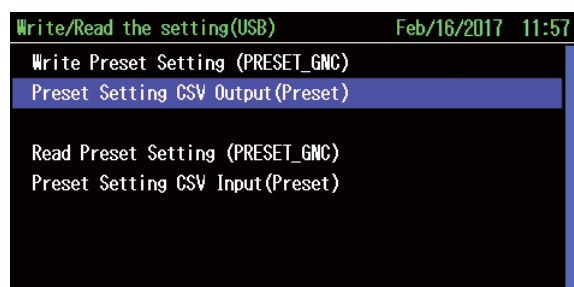


Fig. 6-147

4. Press the [Enter] key.

► The Preset Setting CSV Output/Input screen in progress is displayed.

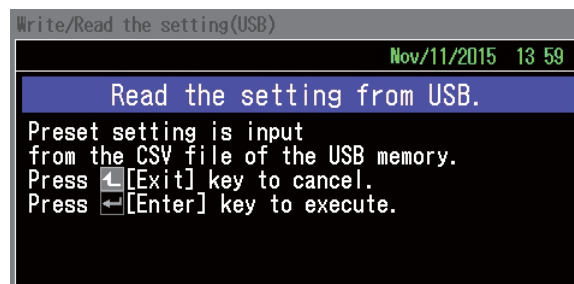


Fig. 6-148

► The Preset Setting CSV Output/Input completed screen is displayed.

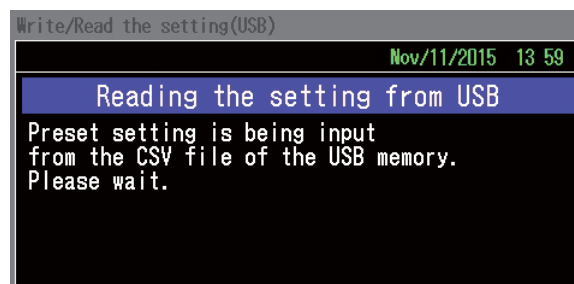


Fig. 6-149

5. Press the [Exit] key.

► Display the Write/Read Set Value screen.



Fig. 6-150

NOTE

- Preset Setting CSV Output saves the "wc" folder and "preset" file (CSV file) into USB flash drive. If a file of the same name exists, the existing file is automatically overwritten with the new file.
- Do not use a comma [,] when editing the "preset" file for Product Name or Product Code. Otherwise Preset Setting CSV Input fails.

6.5.2 Program Version Information

The current program version information is displayed.
For operating this screen, follow the procedure below.

1. Display the Setup menu.
2. Select and enter the "Program Version Information".
 - ▶ Program Version Information screen is displayed.

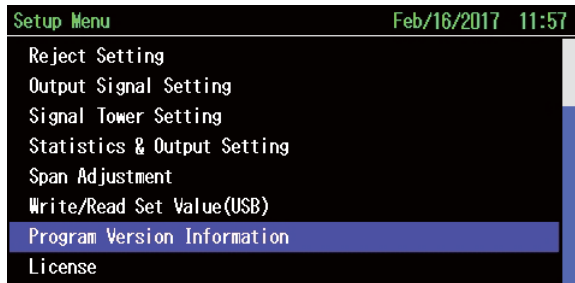


Fig. 6-151

3. Press the [Function 1] key to see the main program information.

Press the [Function 2] key to see the sub.
Press the [Function 3] key to see the etc.

4. Press the [Exit] key to exit.

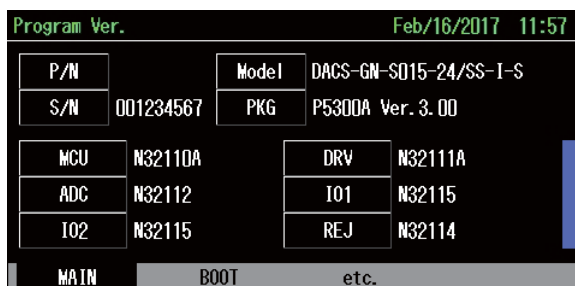


Fig. 6-152

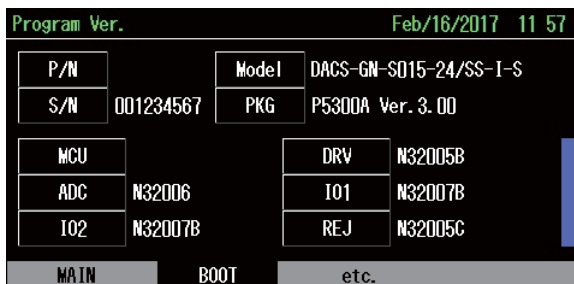


Fig. 6-153

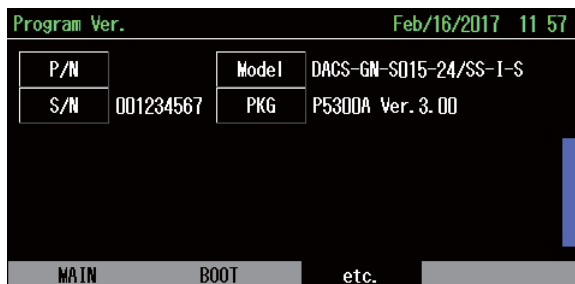


Fig. 6-154

6.5.3 License

This item is used to check the special functions applied to this machine.

1. Display the Setup menu.
2. Select and enter the "License".
 - ▶ The License screen is displayed.



Fig. 6-155

NOTE

- The license agreement is required to use the special functions. To use License, contact the distributor or Ishida customer support.

Show license		Feb/16/2017 11 58
i-STATION LINK		Non
Wei Output		Non
Floating Ref. Weight		Non
Reject Mode		Non
Preset Exchange		Non
Host Interface		Non
Proper Count		Non
FBC Control		Non

Fig. 6-156

6.5.4 Statistics & Output Setting

Statistics & Output Setting Menu sets the weigh data statistics and their parameters. To display the Statistics & Output Setting, follow the procedure below.

NOTE

- Statistics & Output Setting should be set by the site engineer or higher level personnel.

- Display the Preset menu.
- Select and enter the "Statistics & Output Setting".
 - The Statistics & Output Setting menu is displayed.

Setup Menu		Feb/16/2017 11 58
Reject Setting		
Output Signal Setting		
Signal Tower Setting		
Statistics & Output Setting		
Span Adjustment		
Write/Read Set Value(USB)		
Program Version Information		
License		

Fig. 6-157

6.5.4.1 Output Destination

For the Output Destination, refer to "5.10.4.1 Output Destination (When Printer is Installed)".

6.5.4.2 Line Name

Line Name is used to set the machine's name in order to identify it when multiple machines are operated. To set Line Name, follow the procedure below.

- Display the Statistics & Output Setting screen.
- Select and enter the "Line Name".
 - The Line Name setting screen is displayed.

Statistics & Output Setting		Feb/16/2017 11:59
Output Destination		USB
Line Name		0
Total Automatic Change		ON
Total Items		All
Total Auto Output		Off
Batch Analysis		Off
Batch Total Auto Output		Off
Batch: Total Time		0 h

Fig. 6-158

3. Select and enter the category of character from the left column.
4. Select and enter the characters to be entered from the right column.
5. After setting all the desired numeric value or characters, press the [Exit] key.

► The setting of Line Name is reflected on the Preset menu.



Fig. 6-159

6.5.4.3 Total Automatic Change

Total Automatic Change defines the timing to automatically reset total count or the level for setting change. (Refer to "Table 6-12 "). To set the Total Automatic Change, follow the procedure below.

NOTE

- Regardless of the Total Automatic Change setting, frequently backup the total count and properly manage it.

Table 6-12

No.	Item	Function
0	ON	This is the standard setting. Automatically switches the total count and clears the total display according to the preset number or setting changed.
1	OFF When input with the standby display	Automatically clears the total count according to the preset number or setting changed. (Same as when set to "ON") Note that the following items are added only on the Preset Information screen. (Refer to "5.8 Display of the Standby Menu") • Total counts are not cleared after the setting change. • The setting can be changed by the Operator Level.
2	OFF	Total counts are not cleared. To clear the total counts, perform the Clear All Totals. The histogram display (Refer to "5.8 Display of the Standby Menu") and the Histogram range with the total count output are changed after clearing the total counts. However, the total counts are automatically cleared when starting the operation after changing the preset number, capacity, and weight unit.

1. Display the Statistics & Output Setting screen.
 2. Select and enter the "Total Automatic Change".
- The Total Automatic Change screen is displayed.

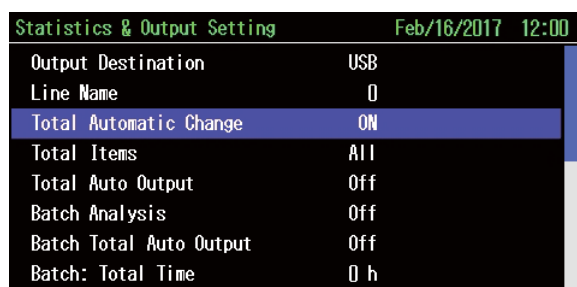


Fig. 6-160

3. Select and enter the item.
(Refer to "Table 6-12 ")

► The Statistics & Output Setting screen for the Total Automatic Change setting will be displayed.

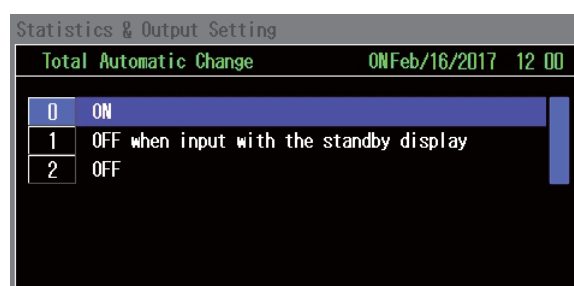


Fig. 6-161

6.5.4.4 Total Items

Total Items is used to set whether the all products or only the accepted products are to be on statistical data. To set Total Items, follow the procedure below.

1. Display the Statistics & Output Setting menu.
2. Select and enter the "Total Items".

► The Total Items menu is displayed.

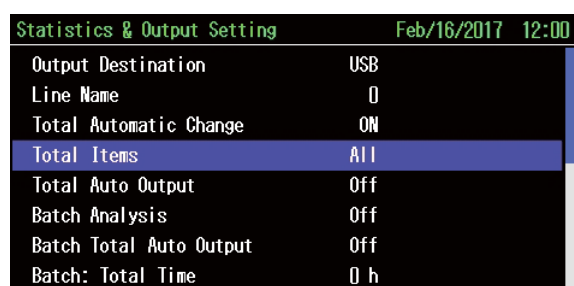


Fig. 6-162

3. To select all the products, Select and enter the "0"
- To select only the accepted products, Select and enter the "1".

► The setting of Total Items is reflected on the Statistics & Output Setting menu.

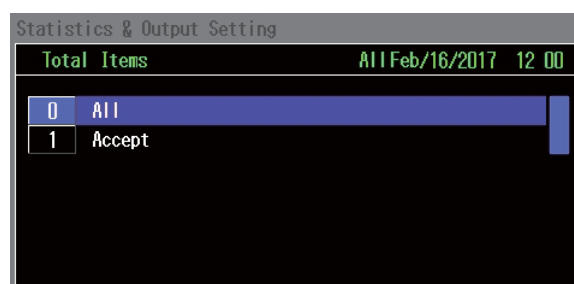


Fig. 6-163

6.5.4.5 Total Auto Output

Total Auto Output sets whether totals from the previous preset numbers are automatically output or not when the preset number are changed and operation is started.

To set the Total Auto Output, follow the procedure below.

1. Display the Statistics & Output Setting menu.
2. Select and enter the "Total Auto Output".

► The Total Auto Output menu is displayed.

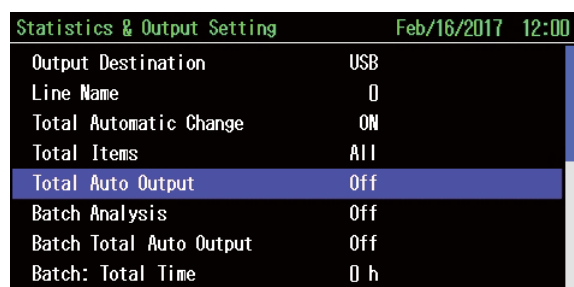


Fig. 6-164

3. To deactivate Auto Output, Select and enter the "0",
To activate Auto Output, Select and enter the "1".

► The setting of Total Auto Output is reflected on Statistics & Output Setting menu.

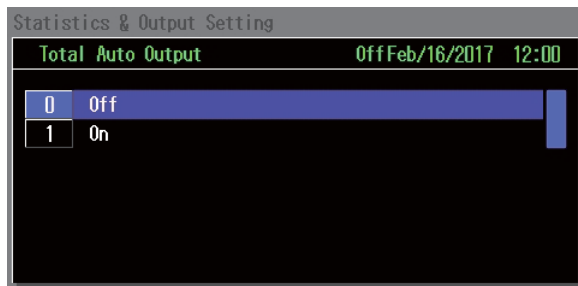


Fig. 6-165

6.5.4.6 Batch Analysis

Batch Analysis is used to select a batch method from the following; OFF (no analysis), Time (time interval analysis), Count (by weighed product count), or Accept Count (by accepted product count). To set the Batch Analysis, follow the procedure below.

1. Display the Statistics & Output Setting menu.
2. Select and enter the "Batch Analysis".

► The Batch Analysis menu is displayed.

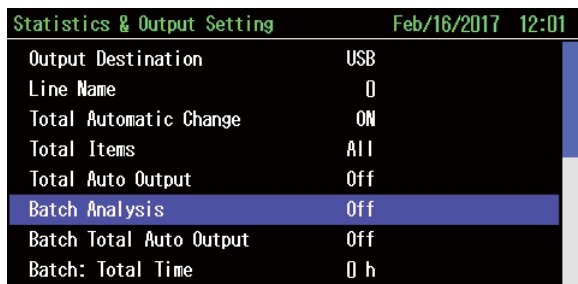


Fig. 6-166

3. To set to OFF, set "0"
to set by weighed product count, set "1",
to set by the time interval analysis, set "2",
to set by accepted product count, set "3".

4. Press the [Exit] key.

► The setting of batch analysis is reflected on the Statistics & Output Setting menu.

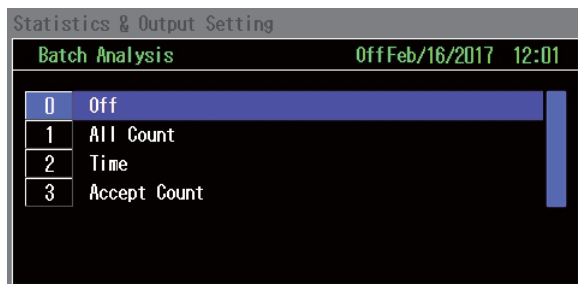


Fig. 6-167

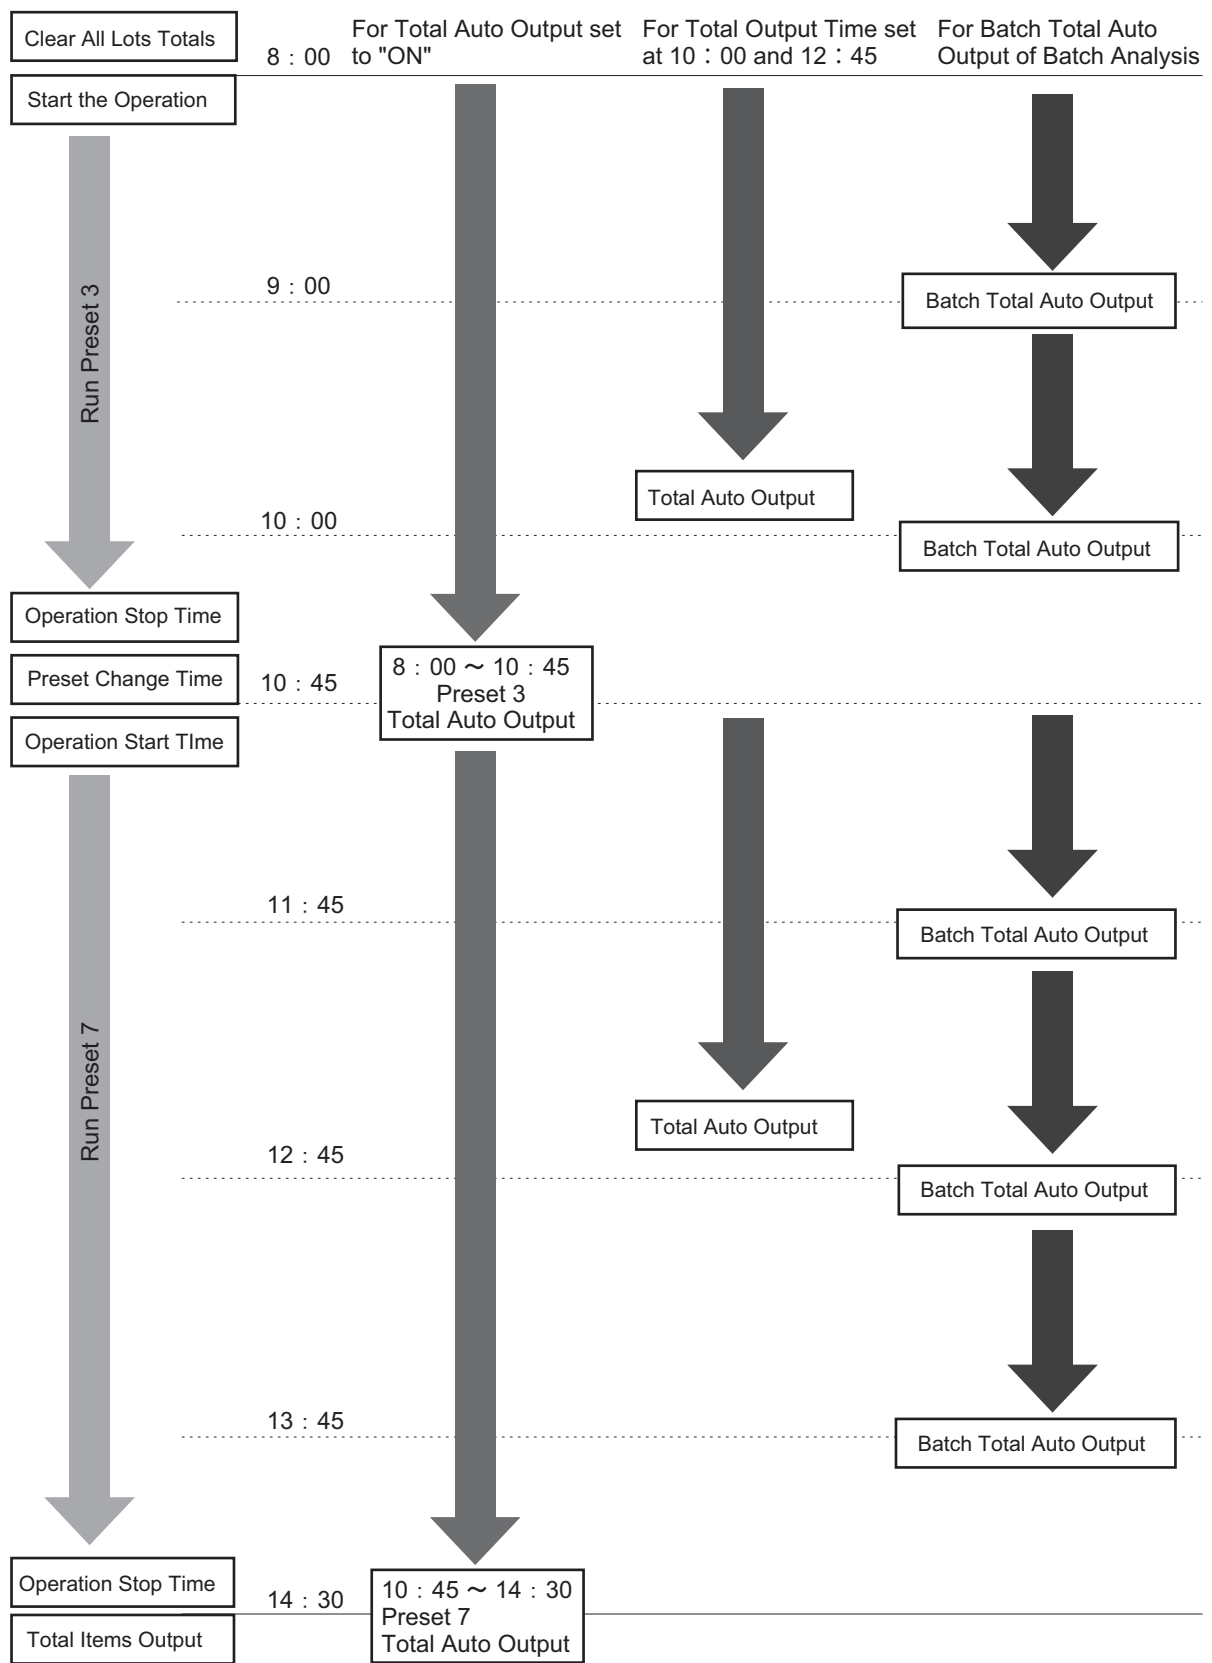



Fig. 6-168

6.5.4.7 Batch Total Auto Output

Batch Total Auto Output is used to select whether to automatically output or not the results of a Batch Analysis. To set Batch Total Auto Output, follow the procedure below.

1. Display the Statistics & Output Setting menu.
2. Select and enter the "Batch Total Auto Output".

► The Batch Total Auto Output menu is displayed.

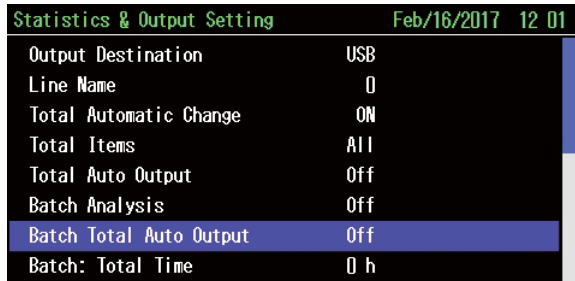


Statistics & Output Setting		Feb/16/2017 12:01
Output Destination	USB	
Line Name	0	
Total Automatic Change	ON	
Total Items	All	
Total Auto Output	Off	
Batch Analysis	Off	
Batch Total Auto Output	Off	
Batch: Total Time	0 h	

Fig. 6-169

3. To deactivate the output, set "0", to activate the output, set "1".

► The setting of Batch Total Auto Output menu is reflected on Statistics & Output setting menu.

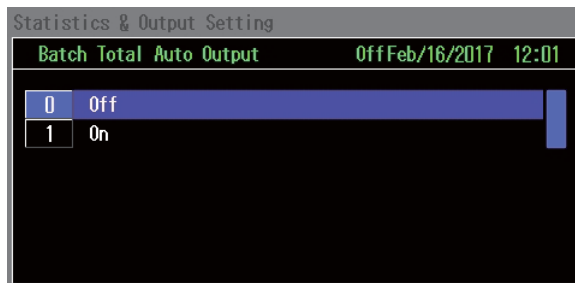


Batch Total Auto Output		Feb/16/2017 12:01
0	Off	
1	On	

Fig. 6-170

6.5.4.8 Batch Total Time

Batch Total Time is used to set the time interval between batch totals output. To set Batch Total Time, follow the procedure below.

1. Display the Statistics & Output Setting menu.
2. Select and enter the "Batch Total Time".

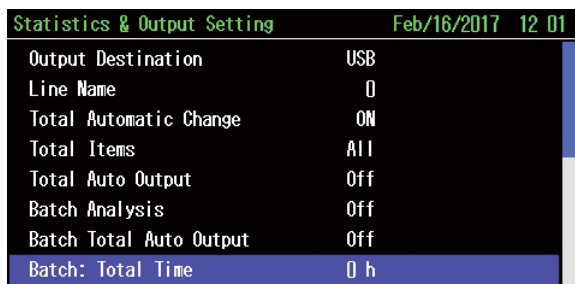


Statistics & Output Setting		Feb/16/2017 12:01
Output Destination	USB	
Line Name	0	
Total Automatic Change	ON	
Total Items	All	
Total Auto Output	Off	
Batch Analysis	Off	
Batch Total Auto Output	Off	
Batch: Total Time	0 h	

Fig. 6-171

3. Input and enter the numeric value.

► The setting of Batch Total Time is reflected on the Statistics & Output Setting menu.

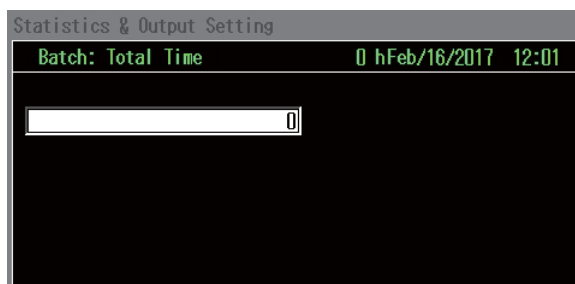

Batch: Total Time		Feb/16/2017 12:01
0		

Fig. 6-172

6.5.4.9 Batch Total Count

Batch Total Count is used to set the product count between batch totals output.

To set Batch Total Count, follow the procedure below.

1. Display the Statistics & Output Setting menu.
2. Select and enter the "Batch Total Count".

Statistics & Output Setting		Feb/16/2017 12:01
Line Name	0	
Total Automatic Change	ON	
Total Items	All	
Total Auto Output	Off	
Batch Analysis	Off	
Batch Total Auto Output	Off	
Batch: Total Time	0 h	
Batch: Total Count	0 pc	

Fig. 6-173

3. Input and enter the numeric value.

- The setting of Batch Total Count is reflected on the Statistics & Output Setting menu.

Statistics & Output Setting		Feb/16/2017 12:01
Batch: Total Count	0 pc	

Fig. 6-174

6.5.4.10 Total Output Time

Auto Lots Total Time is set to "ON" in the System Configuration in the Installation level.

When this function is set, all lot totals are automatically output at the scheduled time. When the output is completed, Clear All Totals is performed.

To set the Auto Lots Total Time, follow the procedure below.

1. Display the Statistics & Output Setting menu.
2. Select and enter the "Auto Lots Total Time".

- The Auto Lots Total Time menu is displayed.

Statistics & Output Setting		Feb/16/2017 12:02
Total Automatic Change	ON	
Total Items	All	
Total Auto Output	Off	
Batch Analysis	Off	
Batch Total Auto Output	Off	
Batch: Total Time	0 h	
Batch: Total Count	0 pc	
Total Output Time		

Fig. 6-175

3. Select and enter the desired items.

NOTE

- Up to 4 items are settable for this function.

- The Auto Lots Total Time setting screen is displayed.

Auto Total Output Time		Feb/16/2017 12:02
Total Time 1	:	
Total Time 2	:	
Total Time 3	:	
Total Time 4	:	

Fig. 6-176

4. Set the time with the [numeric] keys in 24-hour format. (Example: set 1308 for 1:08 p.m.)
5. Press the [Enter] key.
 - ▶ The setting of the time is reflected on the Auto Lots Total Time setting screen.
6. To cancel output of any of Auto Lots Total Time, press the [Clear] key to delete the set time.
7. Press the [Exit] key.
 - ▶ The setting of Auto Lots Total Time is completed.



Fig. 6-177

6.5.4.11 Always Metal M Output

Always Metal M Output selects whether or not to display the metal detection error next to the weight value of the Each Time Output result. To set the Always Metal M Output, follow the procedure below.

NOTE

- If Metal Detect is set to "OFF" in the System Configuration of the Installation level, items of Always Metal M Output are not displayed.

TIP

- For Each Time Output, refer to "5.10.2 Each Time Output".

1. Display the Statistics & Output Setting menu.
2. Select and enter the "Always Metal M Output".

- ▶ The Always Metal M Output menu is displayed.

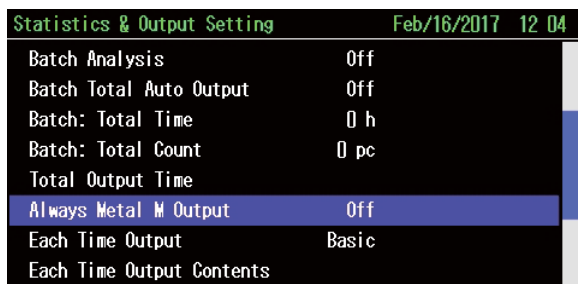


Fig. 6-178

3. To deactivate the Always Metal M Output, Select and enter the "0". To activate the Always Metal M Output, Select and enter the "1".
 - ▶ The Statistics & Output Setting menu for the Always Metal M Output setting will be displayed.

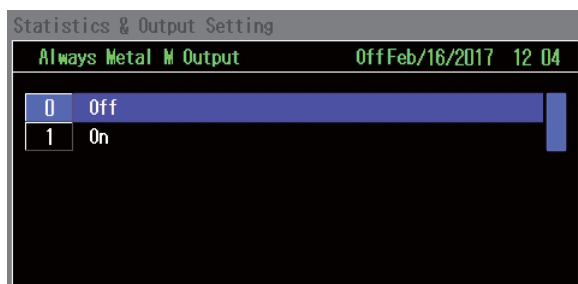


Fig. 6-179

6.5.4.12 Each Time Output

Each Time Output selects the result display next to the weight value of Each Time Output. For details, refer to "6.5.4.13 Each Time Output Contents".


To set the Each Time Output, follow the procedure below.

TIP

- For Each Time Output, refer to "5.10.2 Each Time Output".

- Display the Statistics & Output Setting menu.
- Select and enter the "Each Time Output".

► The Each Time Output menu is displayed.

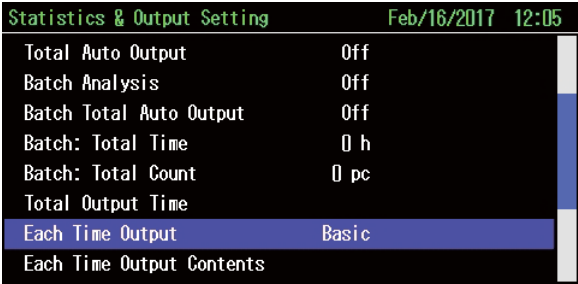


Statistics & Output Setting		Feb/16/2017 12:05
Total Auto Output	Off	
Batch Analysis	Off	
Batch Total Auto Output	Off	
Batch: Total Time	0 h	
Batch: Total Count	0 pc	
Total Output Time		
Each Time Output	Basic	
Each Time Output Contents		

Fig. 6-180

- To Basic the output, set "0",
To Detailed the output, set "1".

► The Statistics & Output Setting menu for the Each Time Output setting will be displayed.

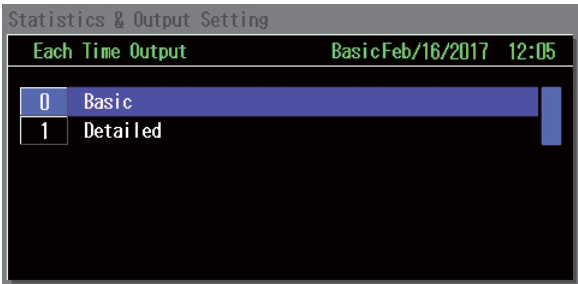

Statistics & Output Setting		Feb/16/2017 12:05
Each Time Output		Basic
0	Basic	
1	Detailed	

Fig. 6-181

6.5.4.13 Each Time Output Contents

Each Time Output Contents displays the result display next to the weight value of Each Time Output. This also tests output.


To set the Each Time Output Contents, follow the procedure below.

TIP

- For Each Time Output, refer to "5.10.2 Each Time Output".

- Display the Statistics & Output Setting menu.
- Select and enter the "Each Time Output Contents".

► The Each Time Output Contents screen is displayed.

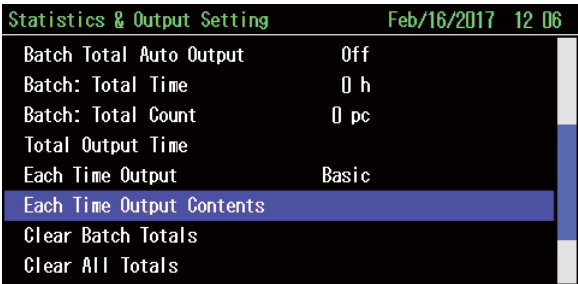

Statistics & Output Setting		Feb/16/2017 12:06
Batch Total Auto Output	Off	
Batch: Total Time	0 h	
Batch: Total Count	0 pc	
Total Output Time		
Each Time Output	Basic	
Each Time Output Contents		
Clear Batch Totals		
Clear All Totals		

Fig. 6-182

3. To test output, Select and enter the "Output".

NOTE

- Each Time Output: The simplified display is shown below.

• Metal	M
• Proper	(Blank)
• Under	*
• Over	*
- Each Time Output: The detailed display is shown below.

• Proper	(Blank)
• Under	L
• Over	H
• Metal	M
• Ext.1、 Ext.2	A
• Pitch Error	T
• Product Length Error	D
• Zero Error	Z
• Cont. NG	!
• Foreign Obj.	F

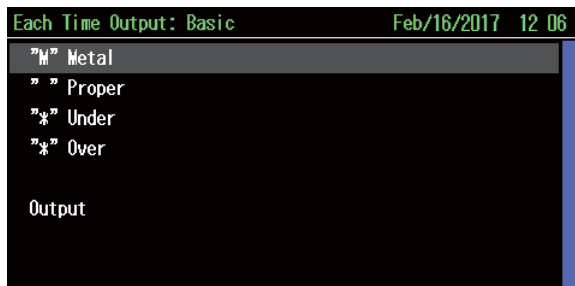


Fig. 6-183

6.5.4.14 Clear Batch Totals, Clear All Totals

These functions are used to clear the Batch Totals, and All Totals displayed on the Production screen. When the total data is cleared, the data up to the point is all cleared. To clear each data, follow the procedure below.

- Display the Statistics & Output Setting menu.
- Select the item from "Clear Batch Totals", "Clear All Totals" then enter.

- The confirmation screen for the selected item is displayed.

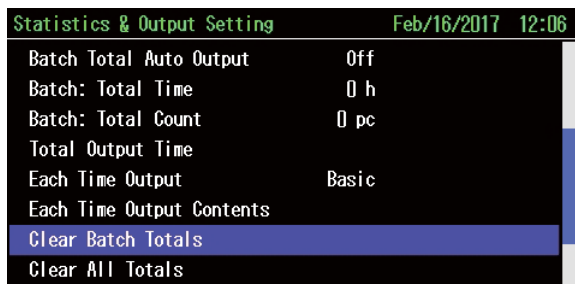


Fig. 6-184

- Press the [Enter] key.

- The screen indicating the data is being cleared is displayed.

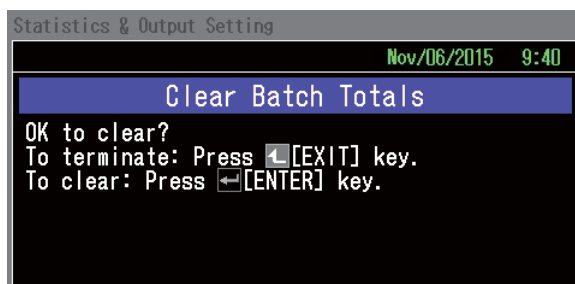


Fig. 6-185

- ▶ When the data is completely cleared, the display returns to the Statistics & Output Setting menu.
4. Press the [Exit] key.
 - ▶ The Statistics & Output Setting menu is displayed.

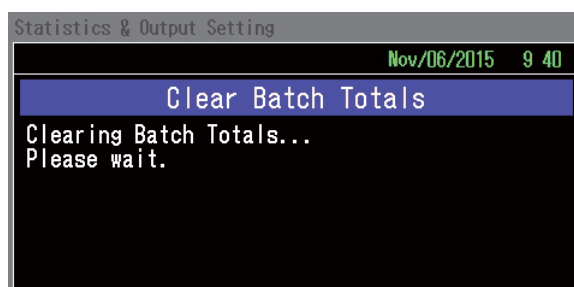


Fig. 6-186

6.5.4.15 X-bar chart

X-bar chart selects to set "Normal" or "Special" for X-bar chart display in the Standby menu.

If "0" (Standard) is set, automatically calculates the maximum and maximum values of the chart, and display entirely. It calculates the average weight for 20 items and plots one point.

If "1" (Special) is set, manually sets the maximum and maximum values, the center value of the chart. It also sets the number of products plotted for one point (Refer to "6.4.23.1 X-bar Sample Count".)

To set the X-bar chart, follow the procedure below.

1. Display the Statistics & Output Setting menu.
2. Select and enter the "X-bar chart".
 - ▶ The X-bar chart screen is displayed.

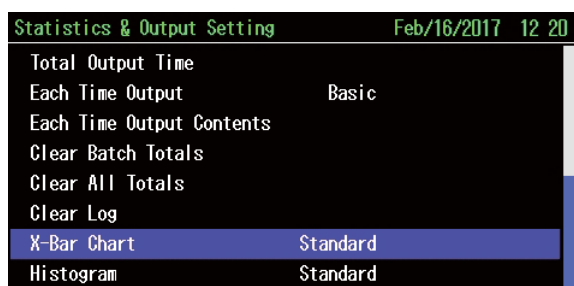


Fig. 6-187

3. To set "Normal", Select and enter the "0".
To set "Special", Select and enter the "1".
 - ▶ The Statistics & Output Setting menu for the X-bar chart setting will be displayed.

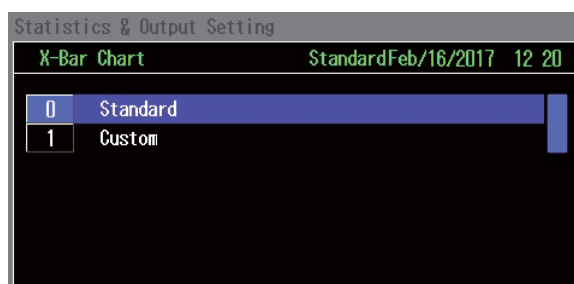


Fig. 6-188

6.5.4.16 Histogram

Histogram selects to set "Normal" or "Special" for histogram display in the Standby menu.

If "0" (Standard) is set, the center value for histogram is set based on the reference weight, interval is set based on the upper limit and lower limit. If "1" (Special) is set, the center value and interval can be set for histogram (Refer to "6.4.24 Setting of the Special Histogram".)

To set the Histogram, follow the procedure below.

1. Display the Statistics & Output Setting menu.
2. Select and enter the "Histogram".

► The Histogram screen is displayed.

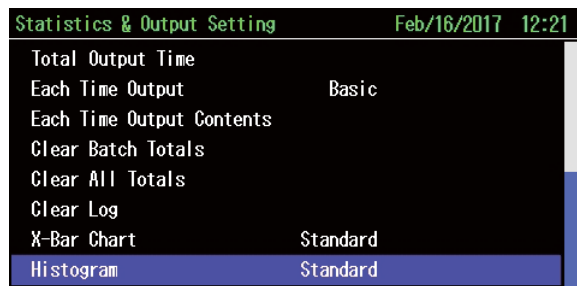


Fig. 6-189

3. To set "Standard", Select and enter the "0".
To set "Custom", Select and enter the "1".

► The Statistics & Output Setting menu for the Histogram setting will be displayed.

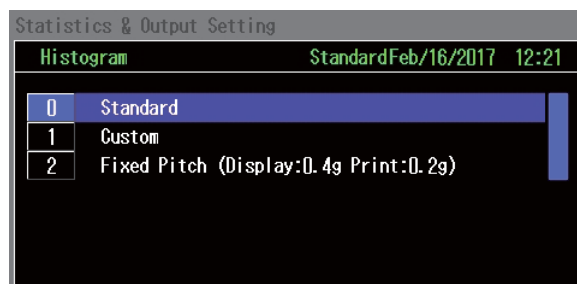


Fig. 6-190

6.5.5 Span Adjustment

Span Adjustment is performed by placing a span weight in the center of the weigh conveyor (for twin-cell specification, infeed or weigh conveyor) so that the weight is programmed into the weigher as a reference. Use the type of weight displayed on the Span Adjustment menu.

To perform Span Adjustment, follow the procedure below.

NOTE

- Span Adjustment should be set by the site engineer or higher level personnel.
- Be sure to use the span adjustment weights which are standard accessory.
As an example, the following provides the procedure when using a 1000.0 g span weight.

1. Perform zero adjustment. (Refer to "5.3.2 Zero Adjustment").
 2. Remove the wind cover (option).
 3. Display the Setup menu.
 4. Select and enter the "Span Adjustment".
- The Span Adjustment menu is displayed.

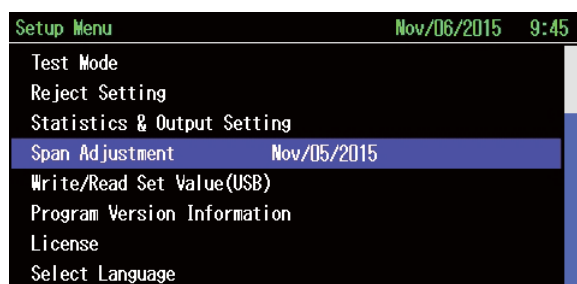


Fig. 6-191

5. Place the span adjustment weight in the center of weigh conveyor.

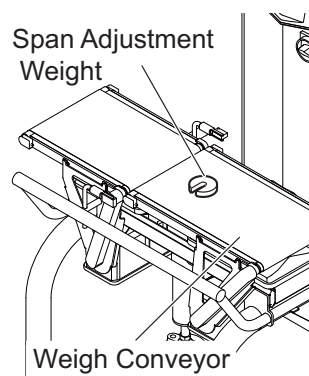


Fig. 6-192

6. Press the [Enter] key.
 - ▶ The span adjustment starts and the Span adjustment in progress screen appears.
 - ▶ When the span adjustment is completed, the Span adjustment completed screen appears.

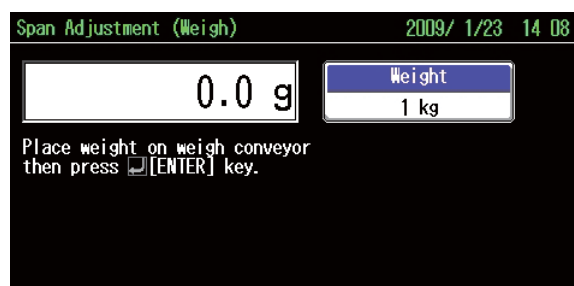


Fig. 6-193

7. Remove the span adjustment weight from the weigh conveyor.
8. Reattach the wind cover (option).
9. Press the [Exit] key.
 - ▶ The Setup menu is displayed.
10. Perform the zero adjustment. (Refer to "5.3.2 Zero Adjustment".)

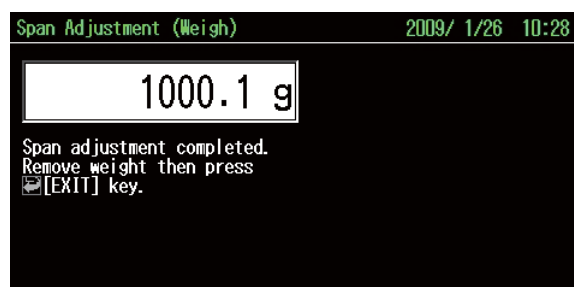


Fig. 6-194

6.5.6 Linear correction

When the weighing sensor is electromagnetic sensor (Force balance type) it is necessary to perform linear correction.

Linear correction corrects a linearity of the weight within the weigh range.

To perform linear correction, follow the procedure below.

NOTE

- Linear correction is operational only when the weighing sensor is force balance type.
- Linear correction should be set by the site engineer or higher level personnel.
- Make sure to use the provided linear adjustment weight.
- Perform the Linear Correction after adjusting the span.

1. Carry out the zero adjustment.
(Refer to "5.3.2 Zero Adjustment".)
2. Remove the wind cover (option).
3. Display the Setup menu for the Site Engineer level.
4. Select and enter the "Linear correction".

►The linear correction screen appears.

5. Select and enter the "Linear Adjust".

►[The Linear Adj. (1st) screen appears.

NOTE

- Linear adjustment is carried out a total of 5 times.
5 different linear adjustment screens, from 1st to 5th, are therefore displayed.

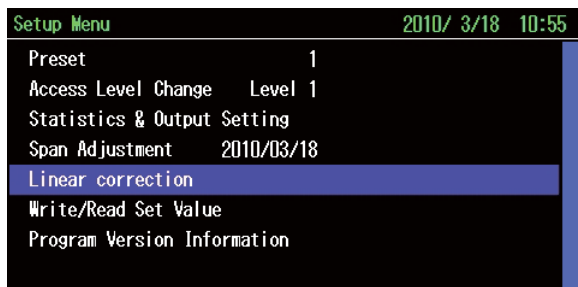


Fig. 6-195

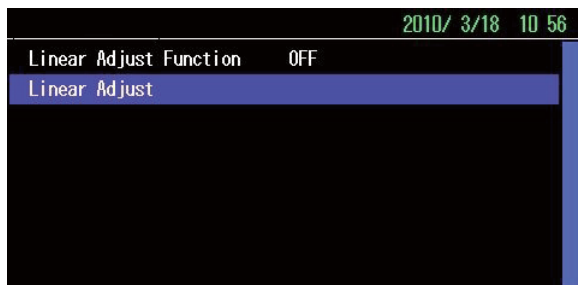


Fig. 6-196

6. Press the [ENTER] key, ensuring that there is no weight on the weigh conveyor.

►[The Linear Adj. (2nd) screen appears.



Fig. 6-197

7. Place the specified linear adjustment weight in the middle of the weigh conveyor.

8. Press the [ENTER] key.

►[The Linear Adj. (3rd) screen appears.

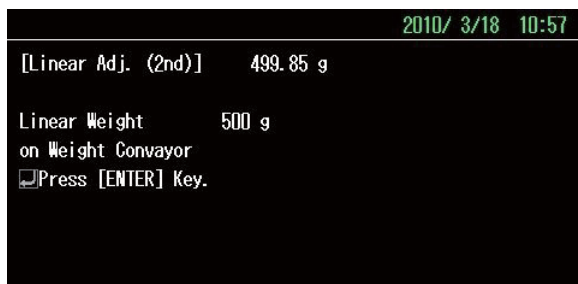


Fig. 6-198

9. Place the specified linear adjustment weight in the middle of the weigh conveyor.

10. Press the [ENTER] key.

►[The Linear Adj. (4th) screen appears.

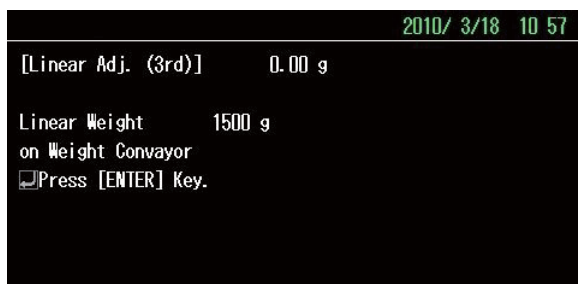


Fig. 6-199

11. Place the specified linear adjustment weight in the middle of the weigh conveyor.

12. Press the [ENTER] key.

►[The Linear Adj. (5th) screen appears.



Fig. 6-200

13. Place the specified linear adjustment weight in the middle of the weigh conveyor.

14. Press the [ENTER] key.

►Linear adjustment has now been completed. The linear adjustment completion screen appears.



Fig. 6-201

15. Remove the linear adjustment weight from the weigh conveyor.

16. Replace the wind cover (option).

17. Press the [EXIT] key.

►The Setup menu appears.

18. Carry out the zero adjustment.
(Refer to "5.3.2 Zero Adjustment".)

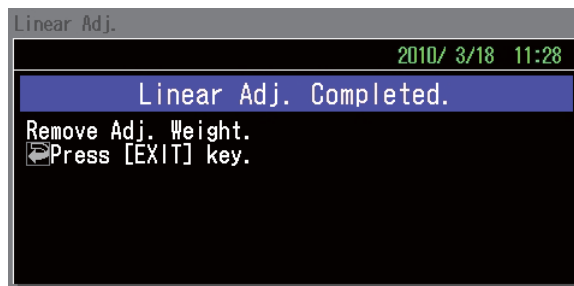


Fig. 6-202

6.5.7 System Configuration

In System Configuration, system-related items such as selecting options and type of rejector.
(Refer to "Table 6-1 ") To display the System Configuration menu, follow the procedure below.

NOTE

- System Configuration should be set by the site engineer or higher level personnel.

1. Display the Setup menu in the Installation level.
2. Select and enter the "System Configuration".

►The System Configuration menu is displayed.

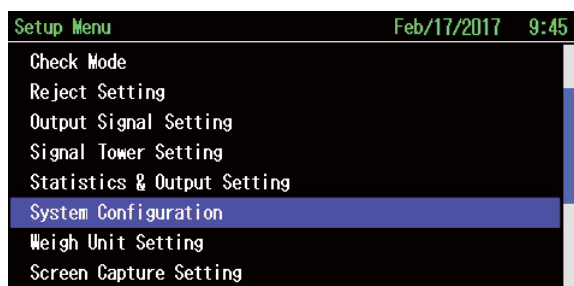


Fig. 6-203

6.5.7.1 Weight Display

This item sets the weight display during production.
Follow the procedure below to set the Weight Display.

NOTE

- The following weight values can be displayed during operation.
Absolute value: The actual weight is displayed.
Deviation value: The degree of deviation from the reference value is displayed.

- Display the System Configuration menu.
- Select and enter the "Weight Display".
▶ The Weight Display menu is displayed.

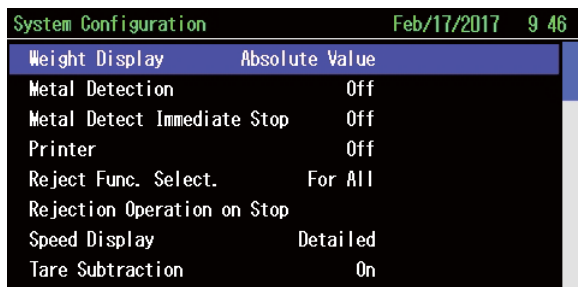


Fig. 6-204

- Select and enter the "0" when displaying Absolute value.
Select and enter the "1" when displaying Deviation value.
▶ The setting is reflected on the System Configuration menu.

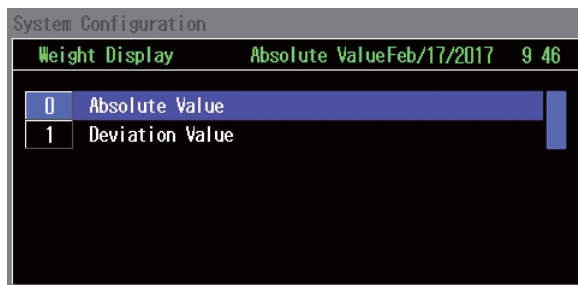


Fig. 6-205

6.5.7.2 Metal Detection

Metal Detection defines whether to reflect the detection to the weighing result when a single metal detector and contact signal are connected.
To set the Metal Detection, follow the procedure below.

- Display the System Configuration menu.
- Select and enter the "Metal Detector".
▶ The Metal Detector screen is displayed.

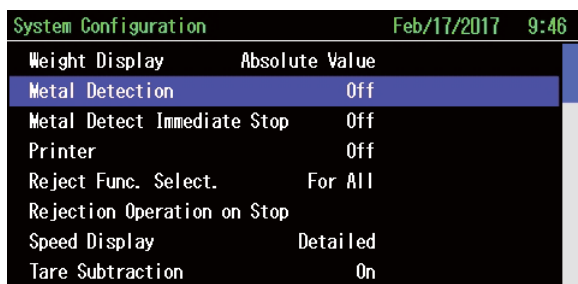


Fig. 6-206

- To set "OFF", Select and enter the "0".
To set "ON", Select and enter the "1".

► The setting is reflected on the System Configuration menu.

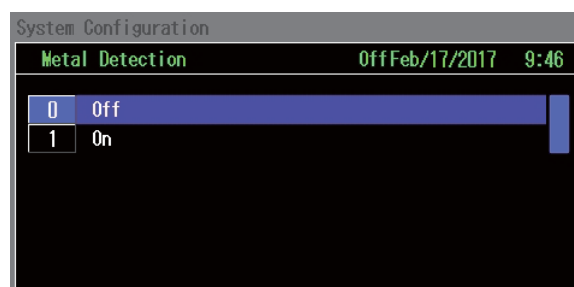


Fig. 6-207

6.5.7.3 Printer

This item sets whether the optional printer is installed or not. Follow the procedure below to set the Printer.

- Display the System Configuration menu.
- Select and enter the "Printer".

► The Printer menu is displayed.

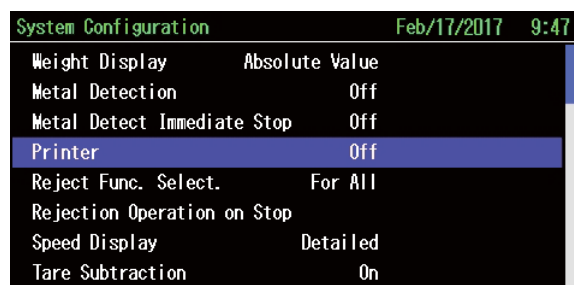


Fig. 6-208

- Select and enter the "0" when a printer is not installed.
Select and enter the "1" when a printer is installed.
- Press the [Exit] key.

► The setting is reflected in the System Configuration menu.

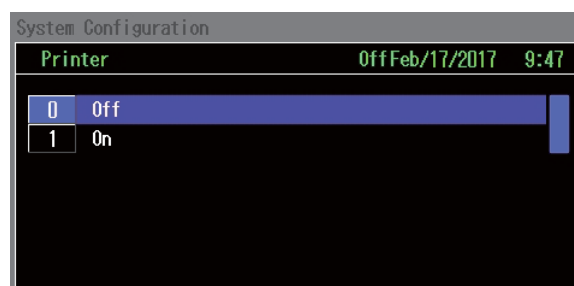


Fig. 6-209

6.5.7.4 Reject Func. Select.

Follow the procedure below to set the Reject Function Selection.

- Display the System Configuration menu.
- Select and enter the "Reject Func. Select".

► The confirmation screen is displayed.

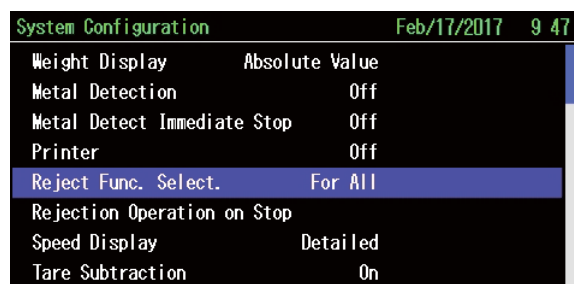


Fig. 6-210

3. Press [Enter] key.

► The Reject Func. Select. is displayed.

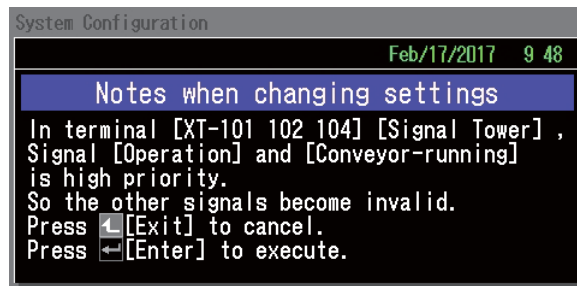


Fig. 6-211

4. Enter For All (0) to set rejector for all preset.
Enter By Preset (1) to set by preset.

► The setting is reflected on the System Configuration menu.

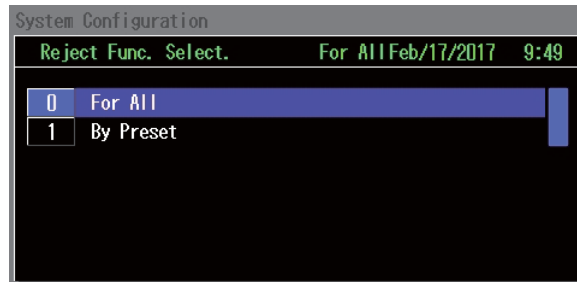


Fig. 6-212

6.5.7.5 Speed Display

Speed Display selects the definition for "Speed" values displayed in the Standby menu from "Detailed" or "Basic".

< Detailed >

If "0" (Detailed) is set, up to 100 product pitches will be stored and the average value will be calculated. The value of "60 seconds (1 minute) divided by the average value" is displayed as actual speed. The display interval is every 10 seconds. If no product is weighted for 10 seconds, the display will be cleared.

$$\text{Actual speed (pcs / minute)} = \frac{60 \text{ (second)}}{\alpha \text{ (second)}} \quad \leftarrow \text{Average value for 100 pitches}$$

NOTE

- The pitch average value is reset at 0 (second) each time the operation starts. The value will not be updated when the operation starts for the first time as the pitch is not judged.

TIP

- Updating is performed for each weighing.

< Basic >

If "1" (Basic) is set, "the number of products to weigh for 10 seconds × 6" is displayed as actual speed. (Equal to DACS-G before Ver.4, and before DACS-WN)

TIP

- Updating is performed for every 10 seconds.

< Setting procedure >

To set the Speed Display, follow the procedure below.

1. Display the System Configuration menu.
2. Select and enter the "Speed Display".

► The Speed Display screen is displayed.

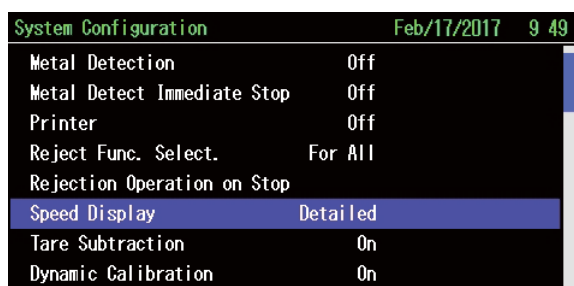


Fig. 6-213

3. To set "Detailed", Select and enter the "0".
To set "Basic", Select and enter the "1".

► The setting is reflected on the System Configuration menu.

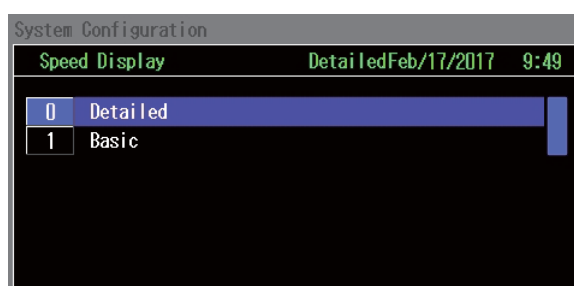


Fig. 6-214

6.5.7.6 Tare Subtraction

This item sets whether to activate the tare subtraction or not.
Follow the procedure below to set the Tare Subtraction.

1. Display the System Configuration menu.
2. Select and enter the "Tare Subtraction".

► The Tare Subtraction menu is displayed.

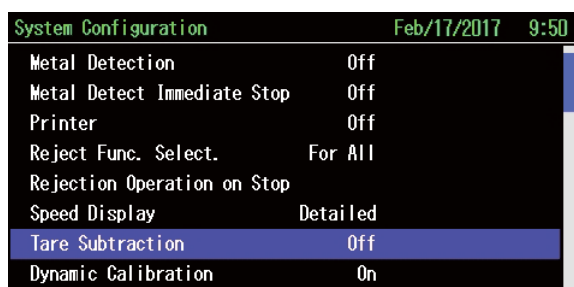


Fig. 6-215

3. Select and enter the "0" to deactivate the Tare Subtraction,
Select and enter the "1" to activate the Tare Subtraction.

► The setting is reflected on the System Configuration menu.

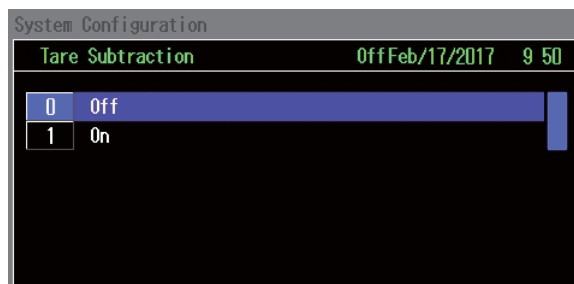


Fig. 6-216

TIP

- For the preset tare setting, refer to "6.4.7 Preset Tare".

6.5.7.7 Dynamic Calibration

This item sets whether to activate the Dynamic Calibration. Follow the procedure below to set the Dynamic Calibration.

- Display the System Configuration menu.
- Select and enter the "Dynamic Calibration".

► The Dynamic Calibration menu is displayed.

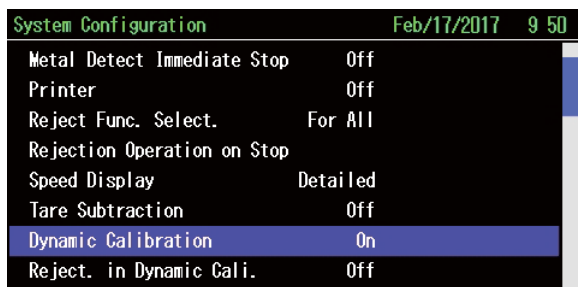


Fig. 6-217

- Select and enter the "0" to deactivate Dynamic Calibration, Select and enter the "1" to activate Dynamic Calibration.

► The setting is reflected on the System Configuration menu.

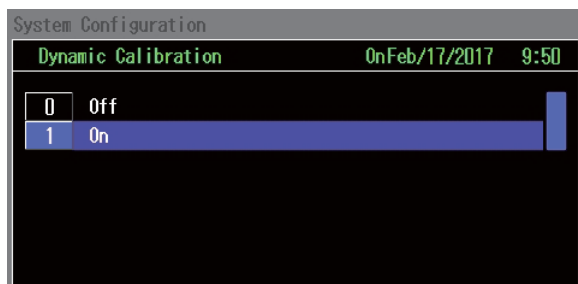


Fig. 6-218

TIP

- For the dynamic calibration setting, refer to "6.4.20 Dynamic Calibration".

6.5.7.8 Reject. in Dynamic Cali.

This item is used to select whether or not to perform the reject operation for dynamic calibration (Refer to "6.4.20 Dynamic Calibration"). To set the Reject. in Dynamic Calibration, follow the procedure below.

NOTE

- To set this item, select "Preset setting" -> "Reject setting" -> "REJECT_BYPASS_DIR".
- To display this item, set Dynamic Calibration to "ON".

1. Display the System Configuration menu.
2. Select and enter the "Reject. in Dynamic Cali."

► The Reject. in Dynamic Calibration screen is displayed.

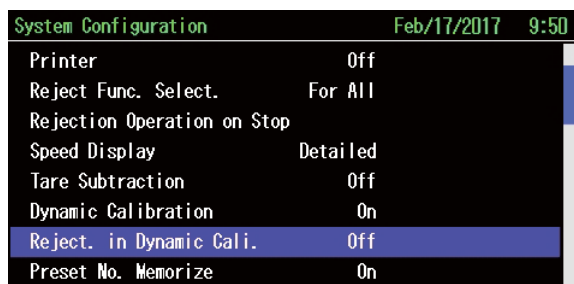


Fig. 6-219

3. To set "OFF", Select and enter the "0".
To set "ON", Select and enter the "1".

► The setting is reflected on the System Configuration menu.

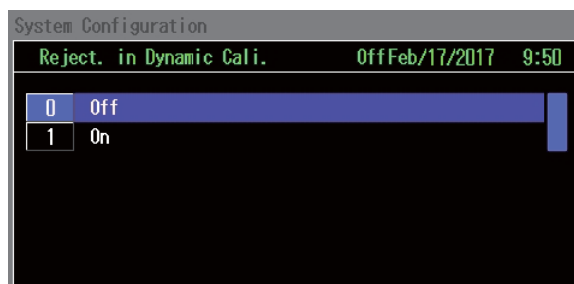


Fig. 6-220

6.5.7.9 Preset Number Memorize

This item sets whether to memorize the preset number before power-off.
Follow the procedure below to set the Preset Number Memorize.

1. Display the System Configuration menu.
2. Select and enter the "Preset Number Memorize".

► The Preset Number Memorize screen is displayed.

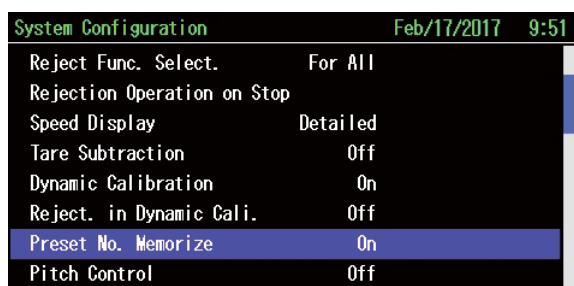


Fig. 6-221

3. Select and enter the "0" to deactivate the function,
Select and enter the "1" to activate the function.

► The setting is reflected on the System Configuration menu.

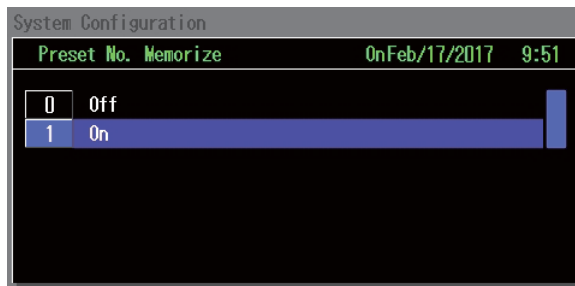


Fig. 6-222

6.5.7.10 Set. chg. during driving

This item is used to select whether or not to change the preset setting in the Standby menu.
The preset setting can be changed in the Standby menu.

(Refer to "6.4.25.2 Preset Setting Change in the Standby Menu", "6.4.22 Set. chg. during driving")
To set the Setting change during the driving, follow the procedure below.

Table 6-13 Function of the Each Item

No.	Item	Function
0	Inhibit Overwrite	Changes the preset setting only during stoppage.
1	Accept Overwrite	Changes all the preset setting during stoppage or product.
2	Set by Preset	Changes all the preset setting during stoppage or product, and inhibits overwrite for each individual preset.

< Setting procedure >

1. Display the System Configuration menu.
2. Select and enter the "Set. chg. during driving".
► The Setting change during driving screen is displayed.

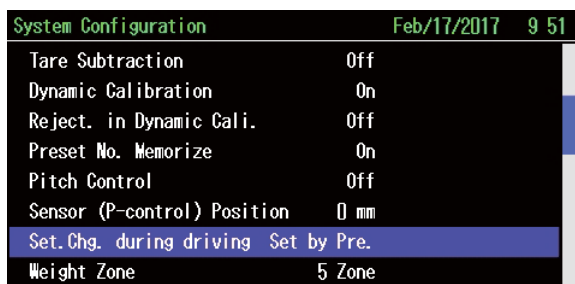


Fig. 6-223

3. Select and enter the item.
(Refer to "Table 6-13 Function of the Each Item")

► The setting is reflected on the System Configuration menu.



Fig. 6-224

6.5.7.11 Weight Zone (Switching the 3 Zone/5 Zone)

This chapter describes the calculation of 5 Zone (Proper is divided in to three zones).

6.5.7.11.1 Weight Zone Overview

3 Zone consists of 3 ranks such as Proper, Over, Under to judge the weight. 5 zone is used to judge the weight in 5 ranks such as Under, Over as well as Ok-Over, Proper, and OK-Under that are divided from the Proper area.

The Proper area has a wide range in 5 Zone. This classification is effective to understand the product is relatively heavier proper or lighter proper. This also useful when reviewing a production process by classifying the product into the weight zone.

The boundaries of the zones are shown below.

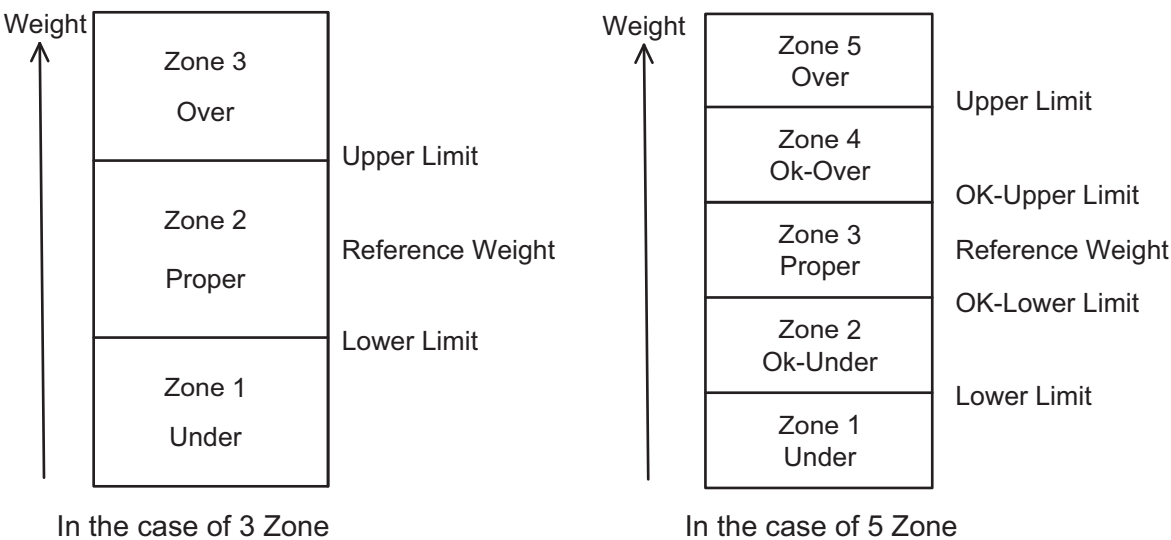


Fig. 6-225

6.5.7.11.2 Weight Zone settin procedure

Follow the procedure below to set the Weight Zone.

- 1. Display the System Configuration menu.
- 2. Select and enter the "Weight Zone".
▶The Weight Zone screen is displayed.

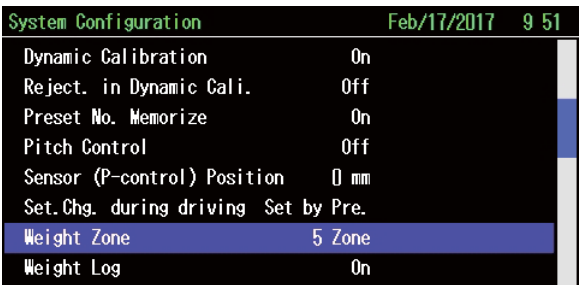


Fig. 6-226

- To set the "3 Zone" for weight zone, Select and enter the "0".
To set the "5 Zone" for weight zone, Select and enter the "0".

► The setting is reflected on the System Configuration menu.

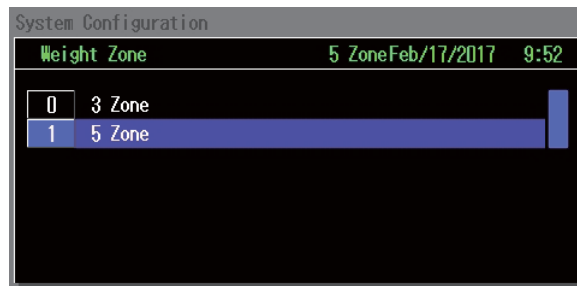


Fig. 6-227

6.5.7.12 Weight Log

This item sets whether to record the weight log data (each weighing data). Follow the procedure below to set the Weight Log.

- Display the System Configuration menu.
- Select and enter the "Weight Log".

► The Weight Log is displayed.

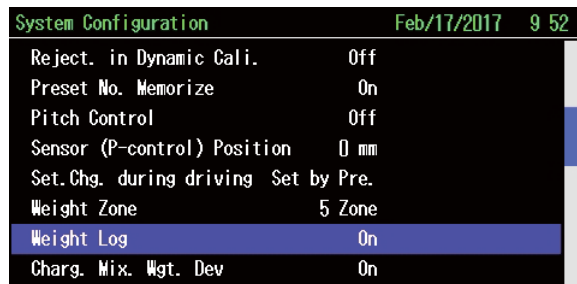


Fig. 6-228

- Select and enter the "0" to deactivate the function.
Select and enter the "1" to activate the function.

► The setting is reflected on the System Configuration menu.

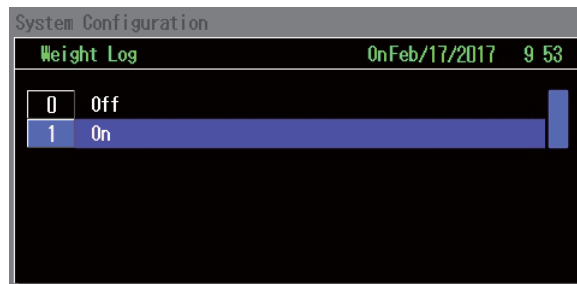


Fig. 6-229

6.5.7.13 Charge Mixing Weight Deviation

This item sets whether to judge an error by weight deviation for the adjacent weighing. Follow the procedure below to set the Charge Mixing Weight Deviation.

- Display the System Configuration menu.
- Select and enter the "Charg.Mix.Wgt.Dev".

► The Charge Mixing Weight Deviation menu is displayed.

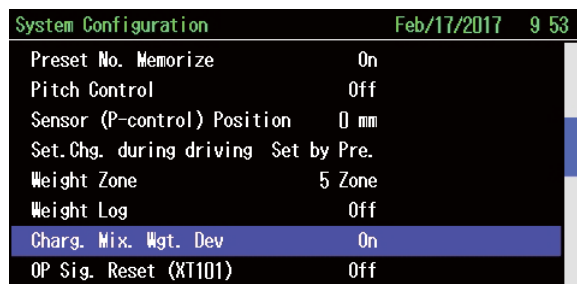


Fig. 6-230

3. Select and enter the "0" to deactivate the function,
Select and enter the "1" to activate the function.

► The setting is reflected on the System Configuration menu.

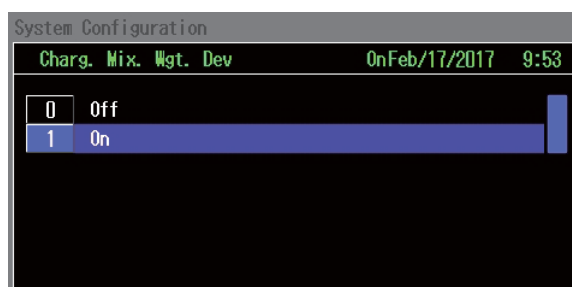


Fig. 6-231

TIP

- For the setting of Charge Mixing Weight Deviation, refer to "6.4.11 Charge Mixing Weight Deviation±"

6.5.7.14 Input Signal Port Setting

Input Signal Port Setting defines the port to which various types of input signals are inputted. Follow the procedure below to set the each input signal.

CAUTION

- To input a signal, optional external signal terminal is required.

1. Display the System Configuration menu.
2. Select and enter the "Input Signal Port Setting".

► The Input Signal Port Setting screen is displayed.

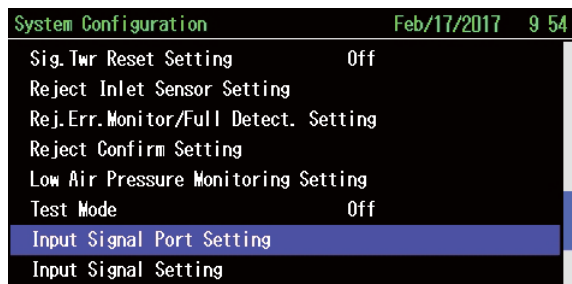


Fig. 6-232

3. Select and enter the desired input signal.

► The each input signal Setting screen is displayed.

Input Signal Port Setting					Feb/17/2017 9:54
No.	Term.	Terminal No.	Port		
EXI-1	XT101	23/24(COM)	OFF		Non
EXI-2	XT101	25/26(COM)	ON		Non
EXI-3	XT101	27/28(COM)	OFF	Ext. 1NG In Sig	
EXI-4	XT101	29/30(COM)	OFF	Ext. 2NG In Sig	
EXI-5			OFF		Non
EXI-6			OFF		Non
EXI-7			OFF		Non

Fig. 6-233

4. Select and enter the desired input signal types.

► The setting is reflected on the System Configuration menu.

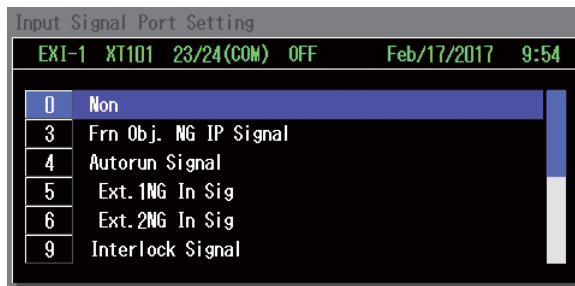


Fig. 6-234

TIP

- Each port indicates the current input signal state:
 - ON: The signal is input.
 - OFF: The signal is not input.

6.5.7.15 Input Signal Setting

Input Signal Setting defines the polarity (logic) for various types of input signals. Follow the procedure below to set the each input signal.

CAUTION

- To input a signal, optional external signal terminal is required.

1. Display the System Configuration menu.
2. Select and enter the "Input Signal Setting".
 - The Input Signal Setting screen is displayed.

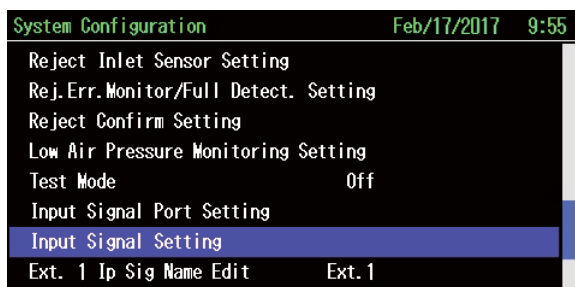


Fig. 6-235

3. Select and enter the desired input signal.
 - The each input signal Setting screen is displayed.

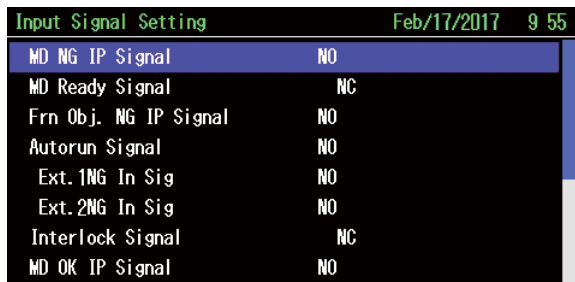


Fig. 6-236

4. Select and enter the input signal of polarity (logic).

► The setting is reflected on the System Configuration menu.

TIP

- NO (normally open) : Contact pair is closed when energized.
- NC (normally closed) : Contact pair is open when energized.

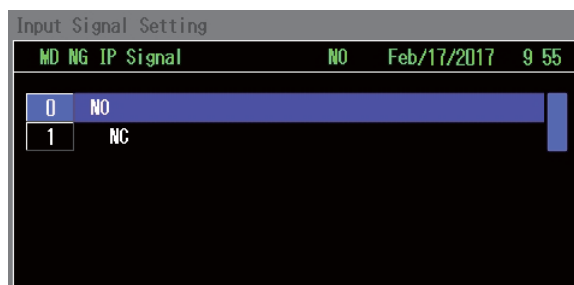


Fig. 6-237

6.5.7.16 Test Mode

Test Mode defines whether to enable or disable the test mode.

1. Display the System Configuration menu.
2. Select and enter the "Test Mode".

► The Test Mode screen is displayed.

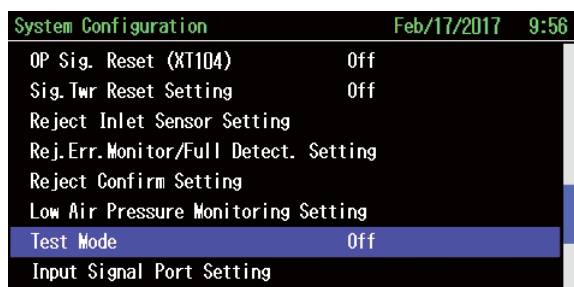


Fig. 6-238

3. To set the "OFF", Select and enter the "0".
To set the "ON", Select and enter the "1".

► The setting is reflected on the System Configuration menu.

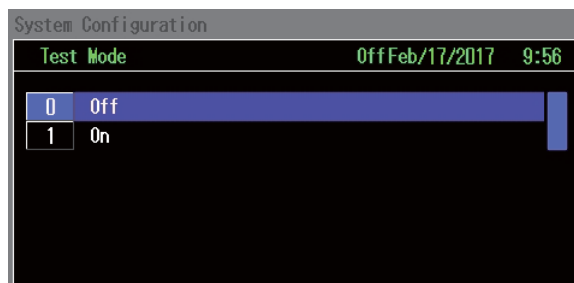


Fig. 6-239

6.5.7.17 Startup Check

Startup Check selects whether or not to perform a check in a check mode every time after the power is turned on at the first startup.

1. Display the System Configuration menu.
2. Select and enter the "Startup Check".

► The Startup Check screen is displayed.

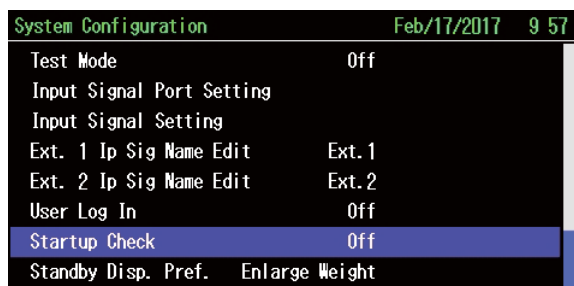


Fig. 6-240

- To set the "OFF", Select and enter the "0".
To set the "ON", Select and enter the "1".

- Press the [Exit] key.

►The setting is reflected on the System Configuration menu.

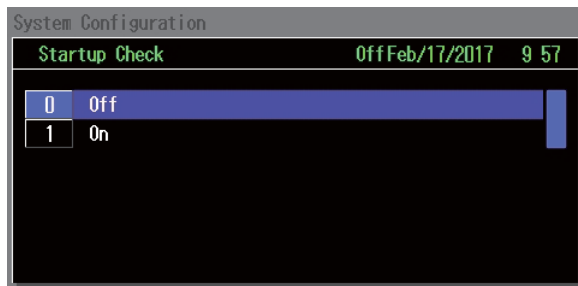


Fig. 6-241

6.5.7.18 Standby Display Preference

This item is used to select the layout for weights or other values in the Standby menu.

- Display the System Configuration menu.
- Select and enter the "Standby Disp. Pref.".

►The Standby Display Preference screen is displayed.

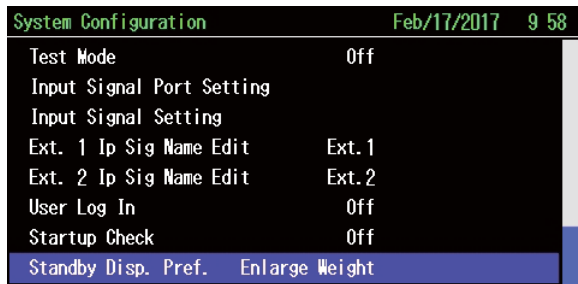


Fig. 6-242

- To set the "Enlarge Weight", Select and enter the "0".
To set the "Enlarge Quantity", Select and enter the "1".
To set the "Enlarge Speed", Select and enter the "2".

►The setting is reflected on the System Configuration menu.

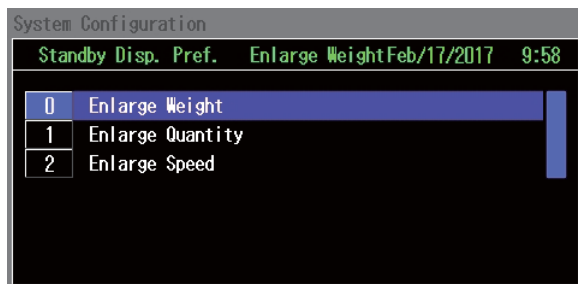


Fig. 6-243

<Display example>

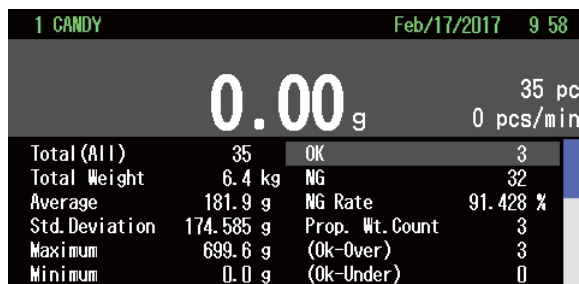


Fig. 6-244 Enlarge Weight

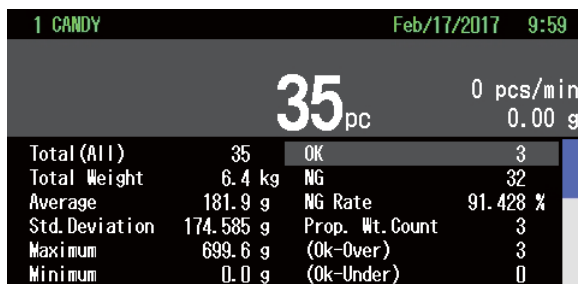


Fig. 6-245 Enlarge Quantity

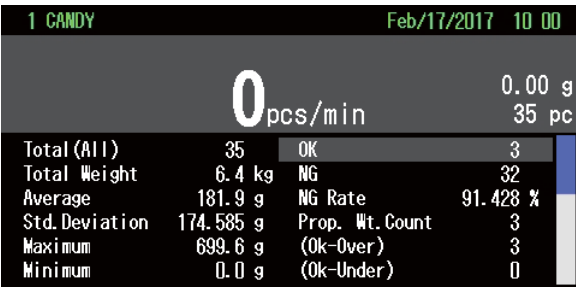


Fig. 6-246 Enlarge Speed

6.5.8 Preset Copy

This item is used to copy the preset data for one preset number to another. Follow the procedure below to execute the Preset Copy.

NOTE

- Preset copy should be set by the Installation level personnel.

1. Display the Setup menu.
2. Select and enter the "Preset Copy".
▶ The Preset Copy menu is displayed.

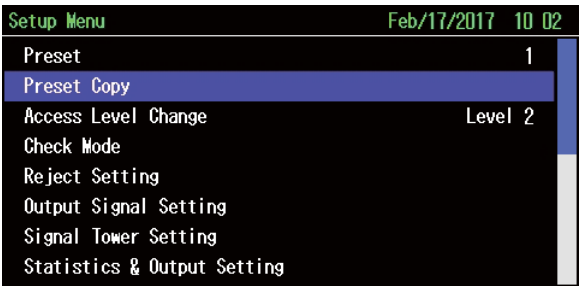


Fig. 6-247

3. Select and enter the source preset number.
▶ The Preset Copy Confirmation screen is displayed.

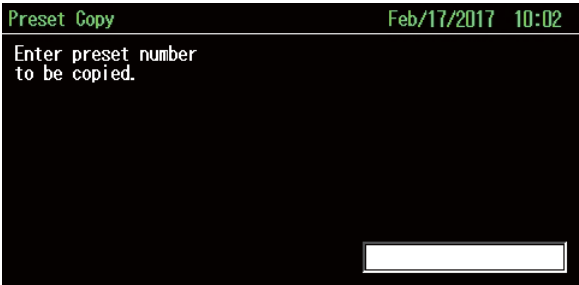


Fig. 6-248

4. Select and enter the destination preset number.
▶ The Preset Copy in Progress screen is displayed.

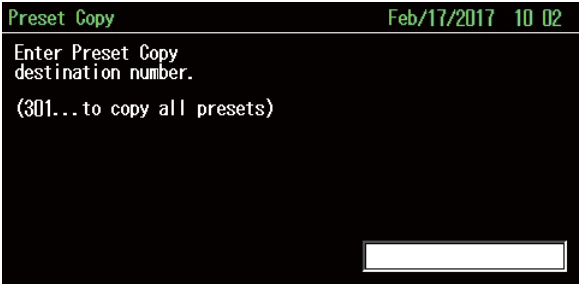


Fig. 6-249

- When the preset copy is completed, the display returns to the Setup menu.

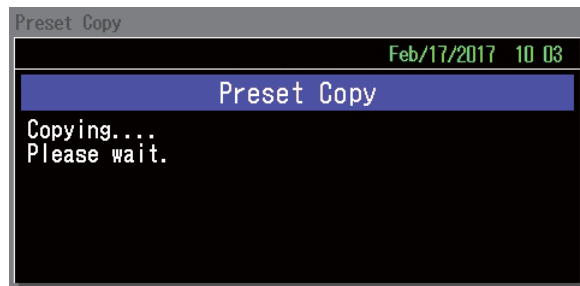


Fig. 6-250

6.5.9 Date/Time setting

This item sets current date and time.

NOTE

- Date and Time setting should be set by the Installation level personnel.

6.5.9.1 Date Setting

Follow the procedure below to set the date.

1. Display the Setup menu in the Installation level.
2. Select and enter the "Date/Time Setting"
 - The Date /Time Setting menu is displayed.

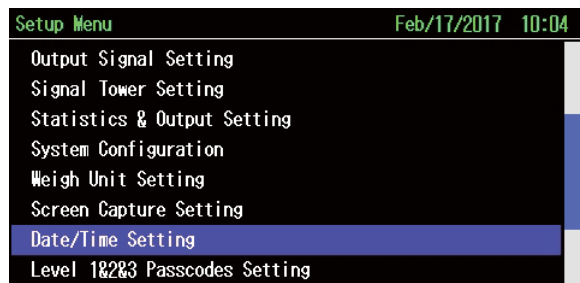


Fig. 6-251

3. Select and enter the "Date Setting"
 - The Date Setting screen is displayed.



Fig. 6-252

4. Enter the date in year(4 digits)-month (2 digits) -day (2 digits) order with the [numeric] keys.
(Example: For February 1, 2009, enter 20090201)
5. Press the [Enter] key
 - ▶ The setting is reflected on the Date/Time setting screen.



Fig. 6-253

6.5.9.2 Time Setting

Follow the procedure below to set the time.

1. Display the Setup menu.
2. Select and enter "Date/Time Setting"
 - ▶ The Date/Time Setting menu is displayed.

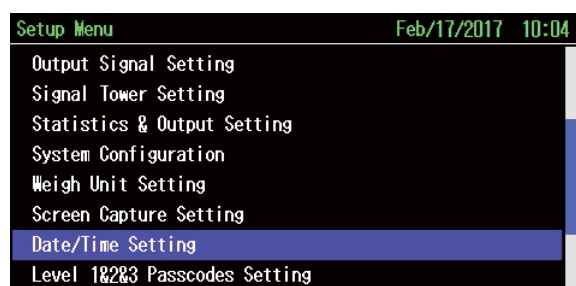


Fig. 6-254

3. Select and enter the "Time Setting".
 - ▶ The Date Setting screen is displayed.

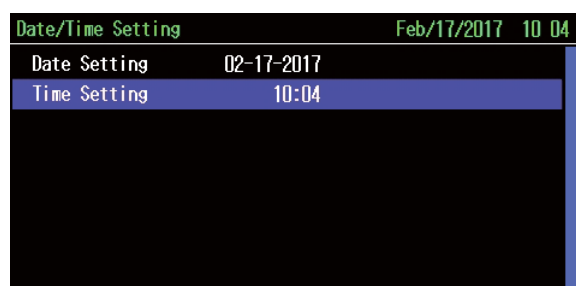


Fig. 6-255

4. Enter the Time in time (2 digits)-minute (2 digits) -second (2 digits) order with the [numeric] keys.
(Example: For 1:08:30 pm, enter 130830)
5. Press the [Enter] key.
 - ▶ The setting is reflected on the Date/Time setting screen.

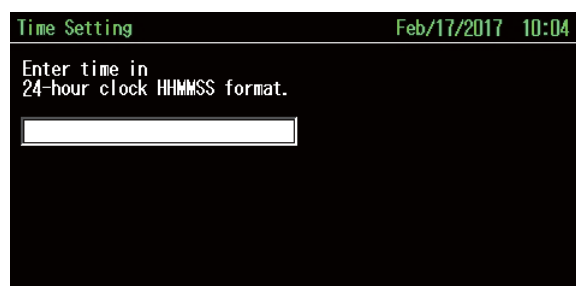


Fig. 6-256

6.5.10 Level 1&2&3 Passcodes Setting

This item is used to set the passcode for the Site Engineer Level and Installation Level. The default passcode for the Site Engineer level (Level1) is "1", and "2" for the Installation level (Level 2).

**CAUTION**


- **Passcodes for the Site Engineer and higher operation levels are set in order to limit operations to the authorized users for each operation. Passcodes need to be managed to avoid operation by unauthorized users.**

NOTE


- When changing the passcode, make a note of the new passcode in case you forget it.
- Level 1 & 2 passcodes Setting should be set by the Installation level personnel.

Follow the procedure below to set the passcodes for operation levels.


1. Display the Setup menu.
2. Select and enter the "Level 1&2&3 Passcodes Setting".
 - ▶ The Level 1&2&3 Passcodes Setting menu is displayed.

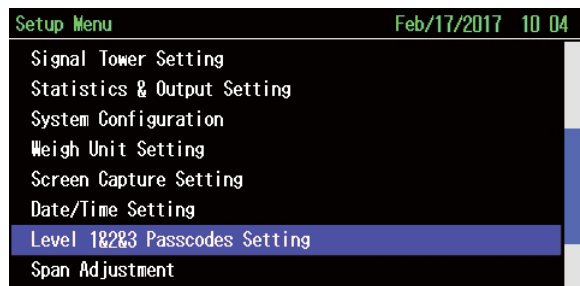**Fig. 6-257**

3. Select and enter the desired operation level.
 - ▶ The Passcode Setting screen for the desired operation level is displayed.

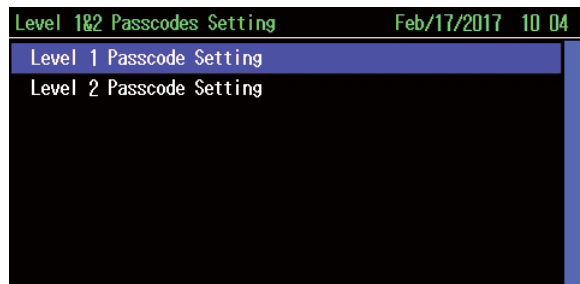**Fig. 6-258**

4. Set a new passcode with the [numeric] keys (up to 12 characters).
 - ▶ The new passcodes is set and the display returns to the Level 1&2&3 Passcodes Setting menu.
5. Press the [Exit] key.
 - ▶ The Setup menu is displayed.

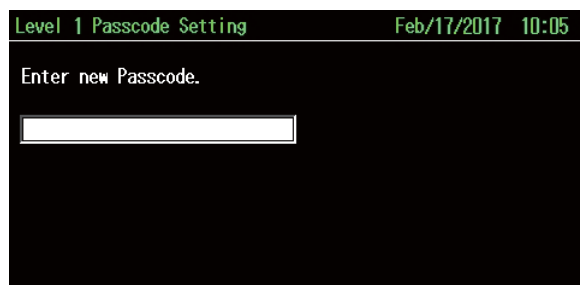**Fig. 6-259**

6.5.11 Weigh Unit Setting

NOTE

- Weigh Unit Setting should be set by the Installation level personnel.

1. Display the Setup menu.
2. Select and enter the "Weigh Unit Setting".

► The Weigh Unit Setting screen is displayed:

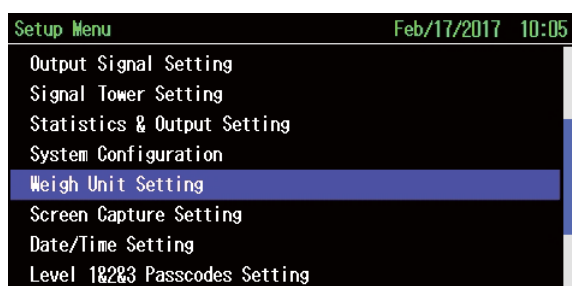


Fig. 6-260

- Weigher: Confirm the weigher name.
- Applicable country: Confirm the applicable country.
- Maximum: Confirm the capacity of the device.

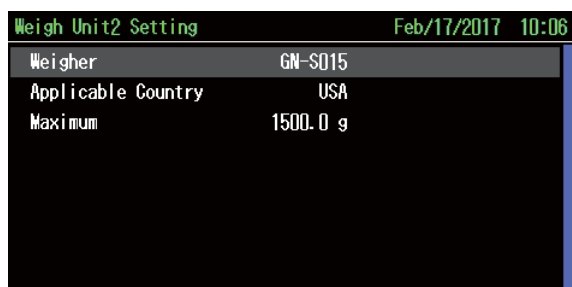


Fig. 6-261

6.5.12 Screen Capture

Screen Capture saves (captures) any screen into USB flash drive as an image file. Follow the procedure below to set the Screen Capture.

NOTE

- Screen Capture should be set by the Installation level personnel.
- The Filter Simulation screen can not be captured.

1. Display the Setup menu.
 2. Select and enter the "Screen Capture".
- The Screen Capture screen is displayed.

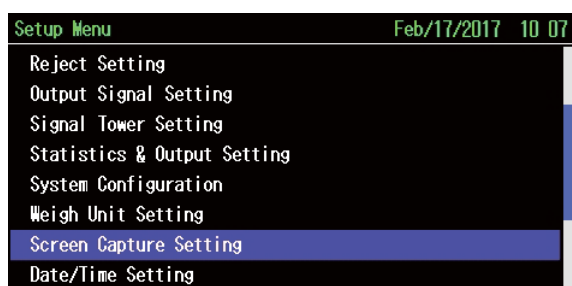


Fig. 6-262

3. Select and enter the "Screen Capture By F3 key".

► The Screen Capture screen is displayed.

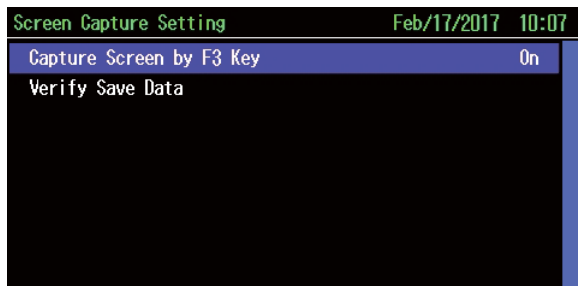


Fig. 6-263

4. To set the "OFF", Select and enter the "0". To set the "ON", Select and enter the "1".

► The setting is reflected on the System Configuration menu.

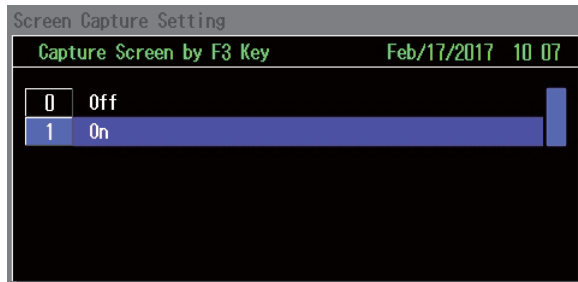


Fig. 6-264

< Screen Capture Procedure >

1. Press the [Function 3] key on any screen.

► The screen is captured.

TIP

- If the text file named "cpmode" exists in USB flash drive, any screen (Filter Simulation excluded) can be captured by pressing the [Function 3] key, regardless of the setting of Screen Capture.
- Even a different function is allocated to the [Function 3] key, the screen can be captured. When a function that switches screens is allocated to the [Function 3] key, the screen before switching is captured.

< Verify Save Data >

This is used to check data stored into USB flash drive. Follow the procedure below to set the Verify Save Data.

NOTE

- The Verify Save Data cannot be selected if no USB flash drive is inserted.

- 1. Display the Setup menu.
- 2. Select and enter the "Screen Capture Setting".
▶The Screen Capture screen is displayed.

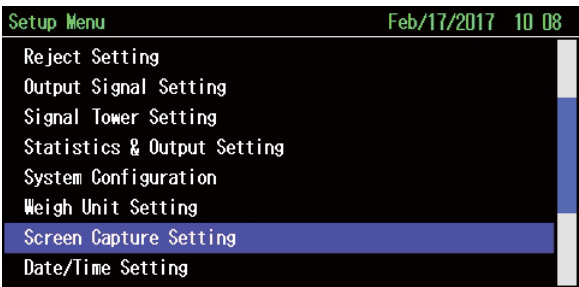


Fig. 6-265

- 3. Select and enter the "Verify Save Data".
▶The Verify Save Data screen is displayed.

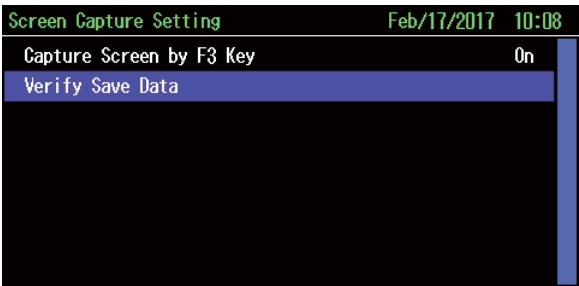


Fig. 6-266

- 4. Enlarge the data by pressing the [Enter] key or the [Function 4] key.

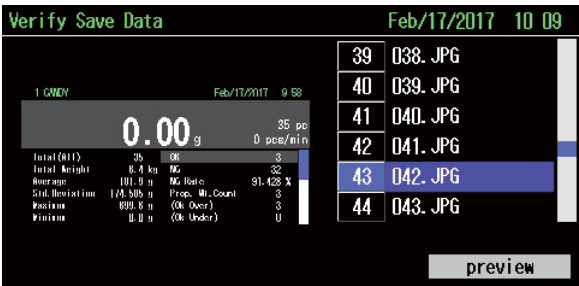


Fig. 6-267

- 5. To return, press any key.

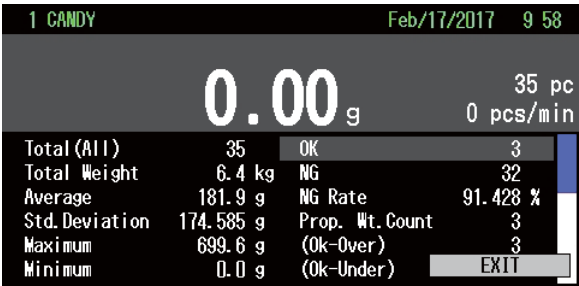


Fig. 6-268

6.6 User Log In

User Log In defines the operation level and login passcode for each operator of the machine. This function records who performed what operation.

NOTE

- An operator cannot access to multiple levels.

6.6.1 Overview of the User Login Setting Item

Table 6-14

Operation key	Item	Operation level			Ref.
		Operator	Site Engineer	Installation	
Setup	Log In	*	*	*	"6.6.3"
	Log Out	*	*	*	"6.6.4"
	Register ID		*	*	"6.6.5"
	Delete ID		*	*	"6.6.6"
	Passcode change	*	*	*	"6.6.7"
	passcode unlock		*	*	"6.6.3.1"
	Auto Logged-Out Time			*	"6.6.8"
	Passcode validity			*	"6.6.9"
System Configuration	User Log In			*	"6.6"
Output	User List Output		*	*	"6.6.11"

*: Indicates that the item can be operated.

6.6.2 Setting of User Log In

This item is used to select whether to enable or disable the user log in.
Follow the procedure below to set the user log in.

NOTE

- User log in should be set by the Installation level personnel.

- Display the System Configuration menu.
- Select and enter the "User Log In".
▶ The User Log In screen is displayed.

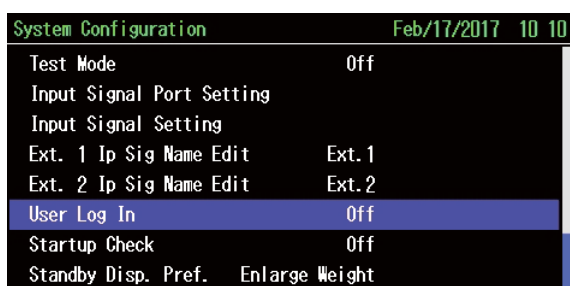


Fig. 6-269

3. To set the "OFF", Select and enter the "0".
To set the "ON", Select and enter the "1".
 - ▶ The restart request screen is displayed
4. Turn OFF the power of machine and restart.
 - ▶ The setting of User Log In is reflected.

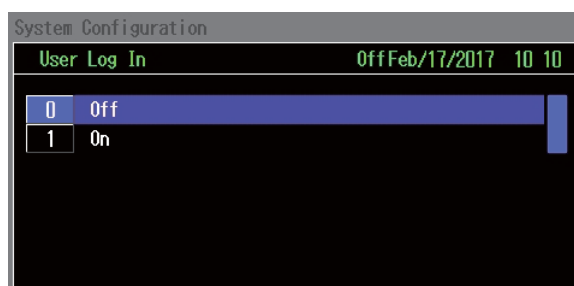


Fig. 6-270

6.6.3 Log In

There are two log in procedures for a first log in and standard log in.
Follow the procedure below to set the Log In.

⚠ CAUTION

- Since a login is required to stop the machine, the machine must be turned OFF to stop in emergency.

< First log in >

1. Display the Setup menu.
2. Select and enter the "Log In".
 - ▶ The ID list screen is displayed.

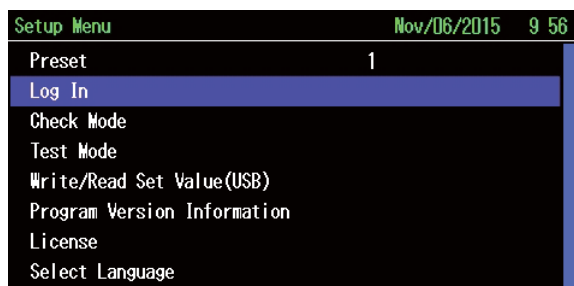


Fig. 6-271

3. Select and enter the "Login number".
 - ▶ The passcode input screen is displayed.



Fig. 6-272

4. Input and enter the passcode.
 - ▶ The Passcode confirmation screen is displayed.

⚠ CAUTION

- If a wrong passcode is entered, an error screen is displayed. Press the [Enter] key and enter the correct passcode.

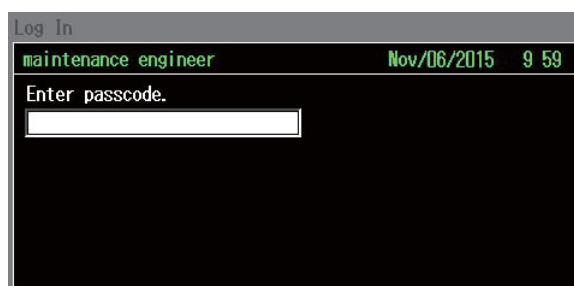


Fig. 6-273

- If entering the wrong passcode three times, logins are disabled. For the resetting method, refer to "6.6.3.1 Passcode Unlock".



5. Press the [Enter] key.

6. Input and enter the new passcode.
- ▶The Standby menu is displayed.

TIP



- The log in user name is displayed on the top left corner of the screen In a logged-in state.

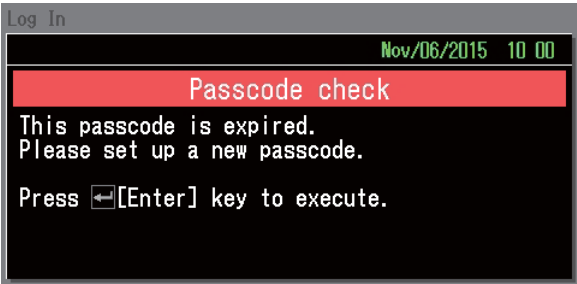


Fig. 6-274

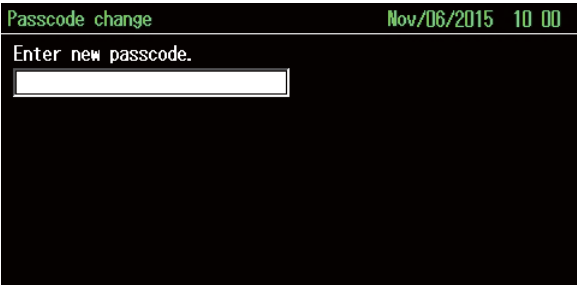


Fig. 6-275

< Standard log in >

1. Display the Setup menu.
2. Select and enter the "Log In".
- ▶The ID list screen is displayed.
3. Select and enter the "Login number".
- ▶The passcode input screen is displayed.

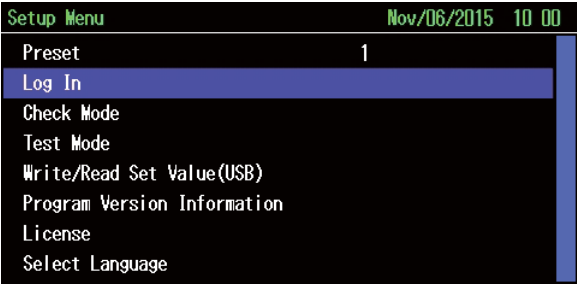


Fig. 6-276

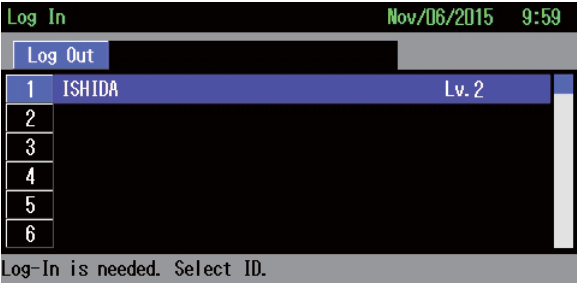


Fig. 6-277

4. Input and enter the passcode.

- ▶ The Passcode confirmation screen is displayed.

CAUTION

- If a wrong passcode is entered, an error screen is displayed. Press the [Enter] key and enter the correct passcode.
- If entering the wrong passcode three times, logins are disabled. For the resetting method, refer to "6.6.3.1 Passcode Unlock".



Fig. 6-278

TIP

- The logging in user name is displayed on the top left corner of the screen in a logged-in state.

6.6.3.1 Passcode Unlock

The passcode Unlock releases the ID that is locked with the passcode. Follow the procedure below to release the passcode lock.

TIP

- The locked ID No. is displayed in red.
- Log in at higher level than that of the locked ID is required.

1. Display the Setup menu.

2. Select and enter the "Log In".

- ▶ The ID list screen is displayed.

3. Select and enter the locked ID.

- ▶ The Passcode lock screen is displayed.

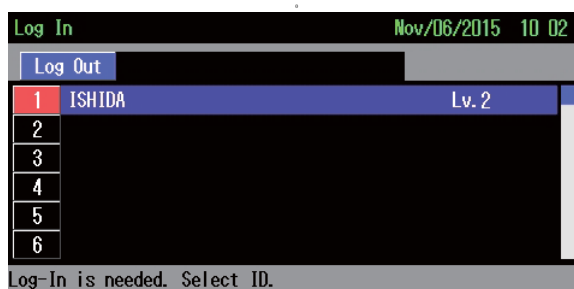


Fig. 6-279

4. Press the [Enter] key.

- ▶ The Passcode change input screen is displayed.

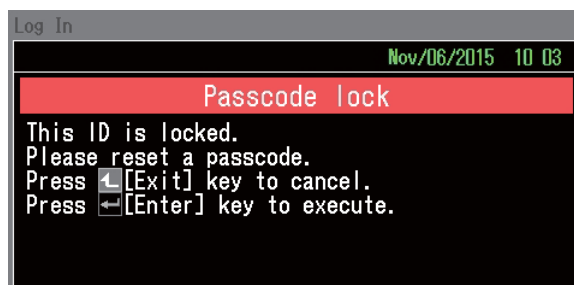


Fig. 6-280

- 5. Input and enter the new passcode.



Fig. 6-281

- ▶The Passcode change screen is displayed.
- ▶The lock is released.

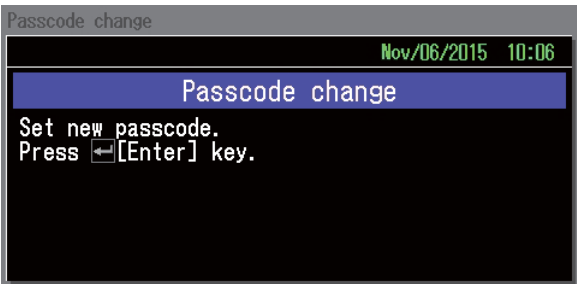


Fig. 6-282

6.6.4 Log Out

Follow the procedure below to set the Log Out.

- 1. Press the [Enter] key in the Standby menu.
 - ▶A screen to select an operation is displayed.
- 2. Select and enter the "Log Out".
 - ▶The Standby menu is displayed.

TIP

- "Log Out" is displayed on the top left corner of the screen in the log-out state.

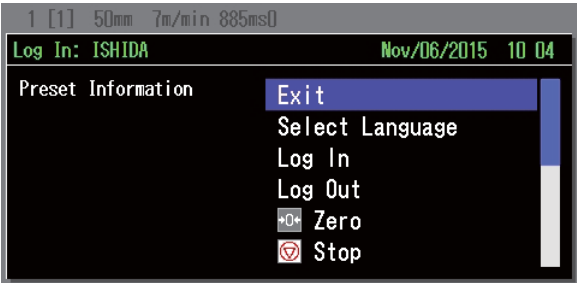


Fig. 6-283

6.6.5 Register ID

Register ID registers new ID for log in. Follow the procedure below to set the Register ID.

- 1. Display the Setup menu.
- 2. Select and enter the "Register ID".
 - ▶The Register ID screen is displayed.

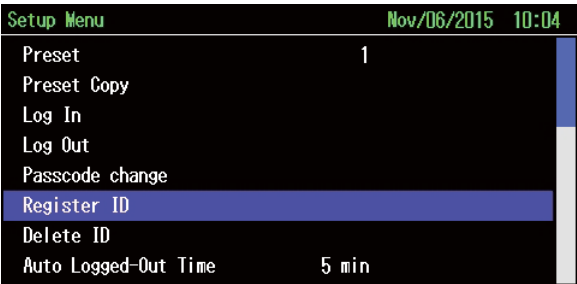


Fig. 6-284

- 3. Selects any number that has not been registered and press the [Enter] key.

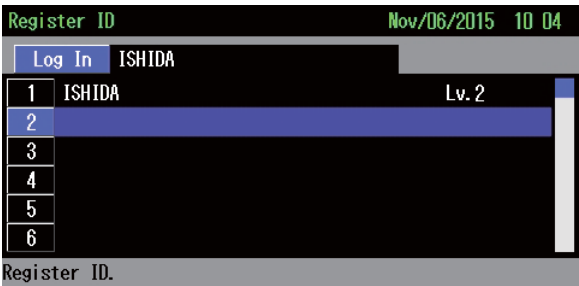


Fig. 6-285

- 4. Input and enter "User Name", "Passcord" and "Operation level".

►The Register ID screen is displayed.

TIP

- As for operation level, equivalent or lower than those who sets the passcode can be selected.



Fig. 6-286

6.6.6 Delete ID

NOTE

- Delete ID for the operator level should be set by the site engineer or higher level personnel.
- Delete ID for the site engineer level or Installation level (Level 2) should be set by the Installation level personnel.

Follow the procedure below to set the Delete ID.

- 1. Display the Setup menu.
- 2. Select and enter the "Delete ID".

►The Delete ID screen is displayed.

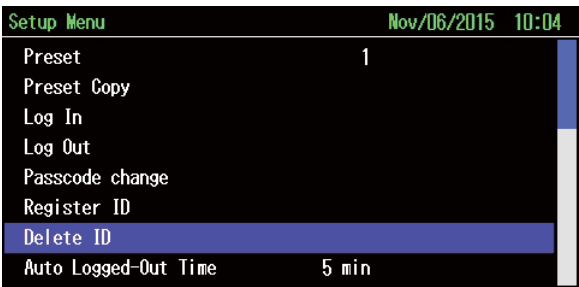


Fig. 6-287

- 3. Select the ID to delete by pressing the [Enter] key.

TIP

- Multiple IDs can be selected to delete.
- The ID during login or ID that can not be selected are displayed in gray. These IDs can not be deleted.

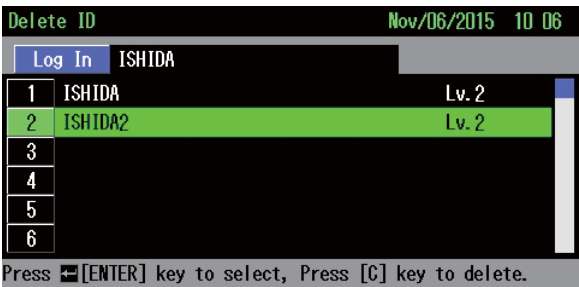


Fig. 6-288

4. Press the [Clear] key.
 - ▶ The ID clear confirmation screen is displayed.
5. Press the [Enter] key.
 - ▶ The ID list screen after deleting ID is displayed.

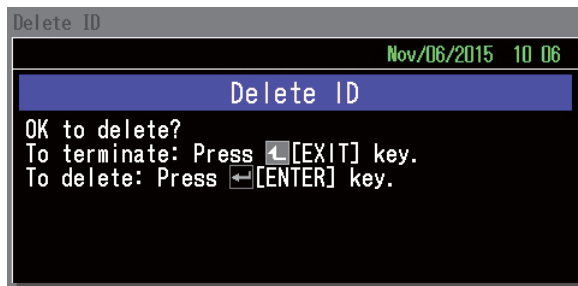


Fig. 6-289

6.6.7 Passcode Change

Follow the procedure below to set the Passcode Change.

1. Display the Setup menu.
2. Select and enter the "Passcode Change".
 - ▶ The passcode input screen is displayed.

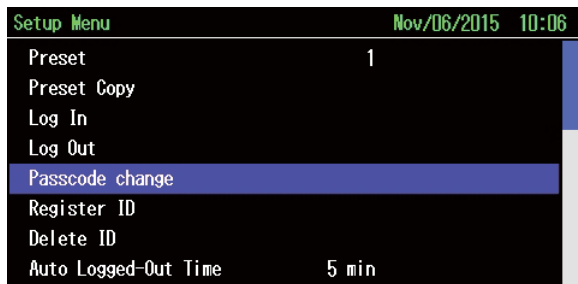


Fig. 6-290

3. Enter the set passcode and press the [Enter] key.
 - ▶ The new passcode input screen is displayed.



Fig. 6-291

4. Input and enter the new passcode.
 - ▶ The Passcode Change Confirmation screen is displayed.

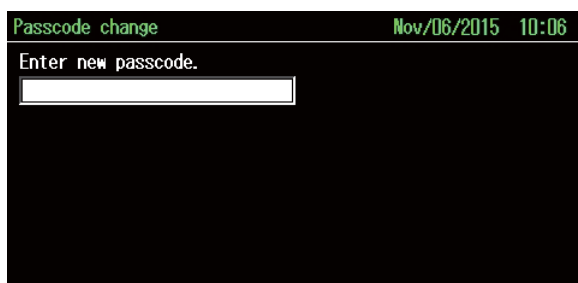


Fig. 6-292

- Press the [Enter] key.

► The Setup menu is displayed.

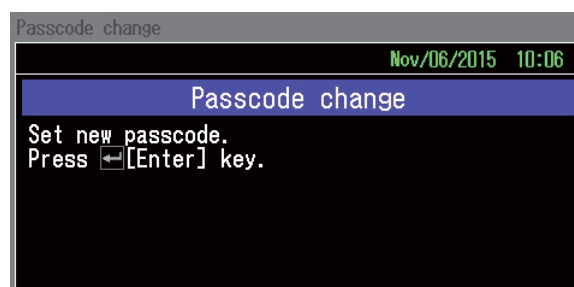


Fig. 6-293

6.6.8 Auto Logged-Out Time

This item is used to determine a standby time before logging out. Follow the procedure below to set the Auto Logged-Out Time.

- Display the Setup menu.
- Select and enter the "Auto Logged-Out Time".

► The Auto Logged-Out Time screen is displayed.



Fig. 6-294

- Input and enter the time.

TIP

- The range between 1 minute and 60 minutes can be set.

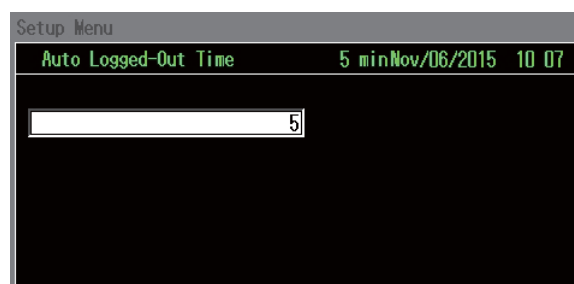


Fig. 6-295

- Press the [Enter] key.

► The Setup menu screen is displayed.

6.6.9 Passcode validity

This item is used to determine the validity period of the passcode. Follow the procedure below to set the passcode validity.

- Display the Setup menu.
- Select and enter the "Passcode validity".

► The Passcode validity screen is displayed.



Fig. 6-296

- Input and enter the time.

TIP

- The range between 1 minute and 180 days can be set.

- Press the [Enter] key.

► The Setup menu screen is displayed.

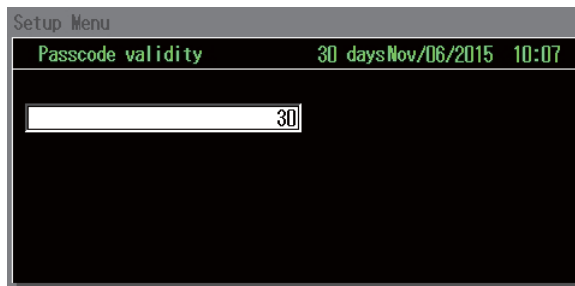


Fig. 6-297

6.6.10 ID52 "maintenance engineer"

ID52 "maintenance engineer" is an ID to be used when the Installation level (Lv.2) ID is not registered or is locked. Follow the procedure below to set the ID52 "maintenance engineer".

NOTE

- ID52 "maintenance engineer" cannot be deleted with Delete ID.

- Display the Setup menu.
- Select and enter the "Log In".

► The ID list screen is displayed.



Fig. 6-298

- Select and enter the "maintenance engineer" of ID52.

► The passcode input screen is displayed.



Fig. 6-299

- Input and enter the passcode.

► The Standby menu is displayed.

TIP

- The default passcode is "2".

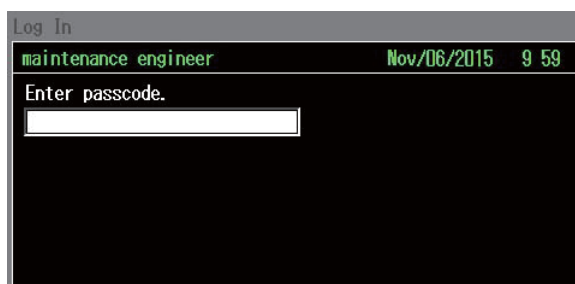


Fig. 6-300

- The passcode cannot be changed with Passcode change, however, it can be changed when user log in is set to "OFF" by setting the passcode for the Site Installation Level. (Refer to "6.5.10 Level 1&2&3 Passcodes Setting")

6.6.11 User List Output

User List Output outputs the registered user IDs. Follow the procedure below to set the User List Output.

NOTE

- User List Output should be set by the site engineer or higher level personnel.

1. Display the Output menu.
2. Select and enter the "User List Output".

►User List is Output

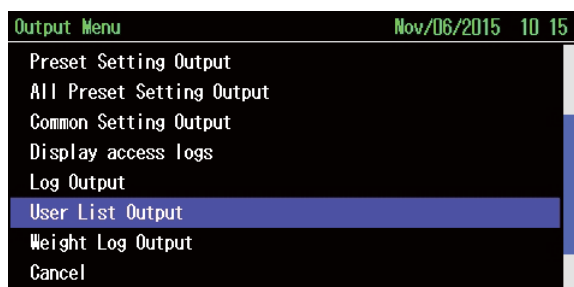


Fig. 6-301

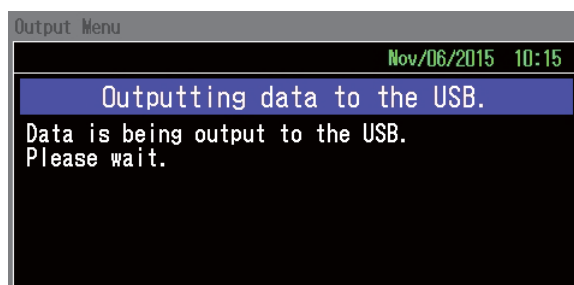


Fig. 6-302

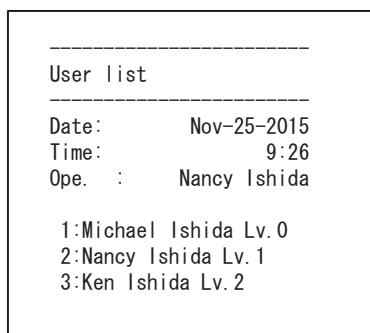


Fig. 6-303

