

7 CLEANUP PROCEDURES

This chapter explains cleaning procedures for each component. Clean the components properly according to the cleaning standard of the product line and dirt condition of the machine.

WARNING

- **When cleaning each component, the operator must turn OFF and lock the main power switch, and keep the key in his/her possession during the work. Injury or electrical shock may result if the device is turned on by another person while the device is being cleaned.**

CAUTION

- **When the cleaning procedures specified, wipe with a dry cloth. Failure to do so may cause malfunction or damage to the device.**
- **For unpacked food, the risk of an unhygienic condition may occur through the usage of the device. To prevent such risk, clean the device properly depending on product type and processing methods. For cleaning methods, read and thoroughly understand Chapter 8 and follow the instructions.**

7.1 Washing and Sterilization

The device allows only the components contacting products to be removed for washing or sterilizing. This checkweigher has removable and unremovable units or components. To clean and sterilize the removal components, be sure to remove them from the device beforehand. (Refer to "7.3 Removing and Attaching Each Parts")

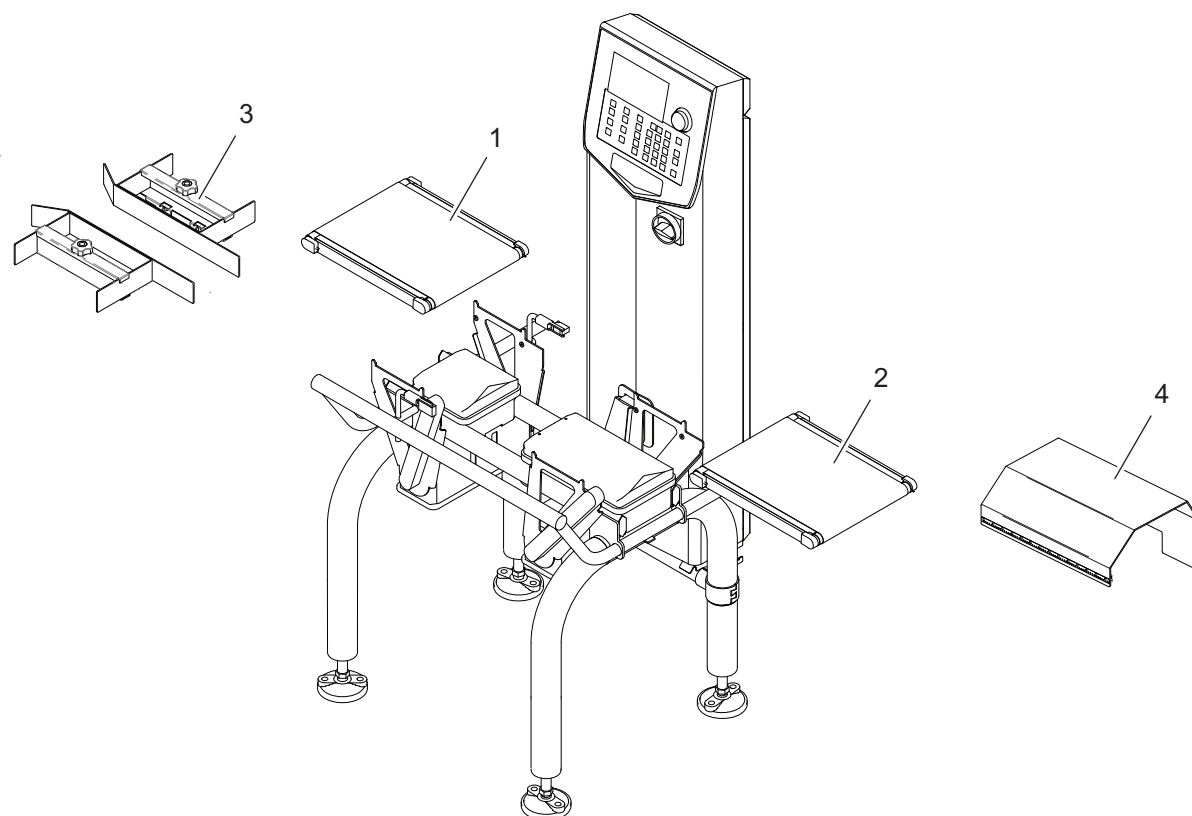


Fig. 7-1

Table 7-1

No.	Removable Unit
1	Infeed Conveyor
2	Weigh Conveyor
3	Infeed Conveyor Guide (Option)
4	Wind Cover (Option)

7.2 Washing and Sterilization Methods

"Table 7-2 ", "Table 7-3 " shows the recommended standard methods for washing and sterilizing. Create a washing and sterilization manual, and perform daily washing and sterilization work. For creating a manual, refer to "Table 7-2 ", "Table 7-3 ".

For the details of each component, refer to "7.3 Removing and Attaching Each Parts".

CAUTION

- **Washing and sterilizing methods differ depending on product types, processing methods, and bacterial conditions.**
For details, contact the distributor or Ishida customer support.
- **For the removable units and parts, washing and sterilization methods differ depending on the machine specifications (mainly the specifications of waterproof)**
The specification can be identified by determining whether the name of your device ends with "CR" or "SS".
[Example]
DACS-GN-**-**/SS-**: IP30(Non-waterproof)
DACS-GN-**-**/CR-**: IP69K(Waterproof, corrosive-resistant)
For details, contact the distributor or Ishida customer support.
- **Be sure to wipe with water-soaked cloth and dry after washing and sterilization, washing and sterilization.**
- **If spot welding cause the development of bacteria, contact the distributor or Ishida customer support.**

Table 7-2

SS Specification (IP30)	
Washing Method	Sterilization Method
<Wiping wash> 1. Wiping wash Wipe with a cloth with the specified detergent (neutral detergent) and then wipe with a damp cloth in water and dry. <Immersion cleaning> *Infeed conveyor guide only Soak the unit and parts in the specified detergent (neutral detergent) and after removing, brush and rinse with water and dry. NOTE - Avoid overload to the Weigh drive unit, as it is interlocked to the weight sensor. - Dry after washing.	<Wiping sterilization> 1. Wiping sterilization Wipe with a cloth with disinfectant and dry. * Disinfectant Alcohol: 80v/v% <Immersion sterilization> * Infeed conveyor guide only Soak the unit and parts in warm water or disinfectant for sterilization, then rinse with water and dry. 1. Warm Water Soak approximately 30 minutes in 80 to 90°C water. 2. Disinfectant Soak approximately 20 minutes in sodium hypochlorite (available chlorine concentration 250 ppm, 20 to 25°C.) NOTE - Avoid overload to the Weigh drive unit, as it is interlocked to the weight sensor. - Dry after washing.

Table 7-3

CR Specification (IP69K)	
Washing Method	Sterilization Method
<Brushing wash or wiping wash> 1.Brushing wash Using a brush with the specified detergent (neutral detergent), brush the surface, and then wipe with a damp cloth in water and dry. 2.Wiping wash Wipe with a cloth with the specified detergent(neutral detergent) and then wipe with a damp cloth in water and dry. <Immersion cleaning> *Infeed conveyor guide only Soak the unit and parts in the specified detergent (neutral detergent) and after removing, brush and rinse with water and dry. NOTE • Use a soft brush. • Avoid overload to the Weigh drive unit, as it is interlocked to the weight sensor. • For the remote control unit and printer unit, wipe wash only. • For the wind cover, wipe wash only. • Dry after washing.	<Spray sterilization or wiping sterilization> 1.Spray sterilization Spray the disinfectant by a sprayer and dry. 2. Wiping sterilization Wipe with a cloth with disinfectant and dry. * Disinfectant Alcohol: 80v/v% <Immersion sterilization> *Infeed conveyor guide only Soak the unit and parts in warm water or disinfectant for sterilization, then rinse with water and dry. 1. Warm water Soak approximately 30 minutes in 80 to 90°C water. 2.Disinfectant Soak approximately 20 minutes in sodium hypochlorite (available chlorine concentration 250 ppm, 20 to 25°C). NOTE • Avoid overload to the Weigh drive unit, as it is interlocked to the weight sensor. • For the remote control unit and printer unit, wipe wash only. • After sterilizing, rinse with water and dry.

7.2.1 Rinsing with Water Method

Observe the following two conditions of rinsing with water after sterilizing.

CAUTION

- **Do not rinse the SS specification machine with water.**

1. Water pressure

When using a hose, the inside diameter of hose should be 6.3 mm. The water pressure in use should be the level to allow the water to rise to 1.5 m when facing the hose at an upward angle. (As a reference, the water of 10.5 L will be pooled per minute at water pressure of 18kPa)

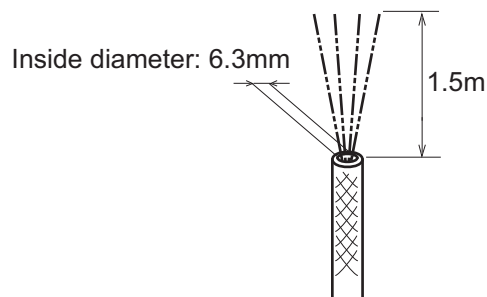


Fig. 7-2

2. Water temperature

Make sure to use water below 50°C from tap.
Do not use boiling water and steam.

CAUTION

- **Do not pour water in the following areas:**

- (1) Motor box diaphragm
- (2) Remote control cap
- (3) Printer (optional)

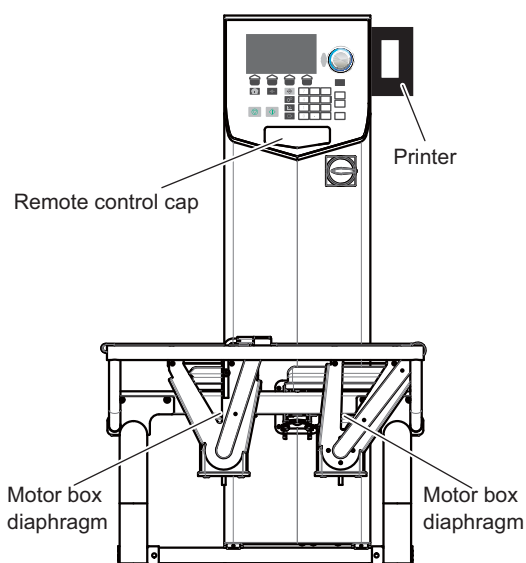


Fig. 7-3

7.3 Removing and Attaching Each Parts

7.3.1 Infeed and Weigh Conveyor Unit

< SS Specification (IP30) >

CAUTION

- The conveyor is spring mounted.
Remember the following points when removing or replacing conveyor.

< How to Remove >

1. Release the lock by pushing down the spring plates under the both side edges of Infeed or Weigh conveyor.

CAUTION

- When you release the lock, do not trap your fingers between the spring plate and conveyor. Failure to do so may result in injury.

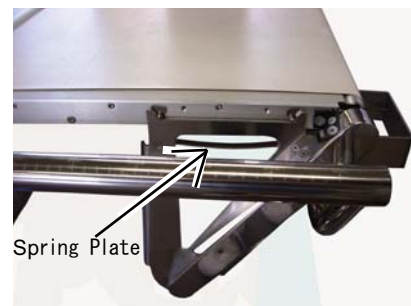


Fig. 7-4

2. Lift up the infeed-edge of conveyor.
3. Take off the conveyor gear from timing belt of the main body by slanting the conveyor.



Fig. 7-5

< How to Attach >

1. Insert the conveyor gear into the socket of the timing belt of main body.
2. Pull down the conveyor so that the conveyor pin and the hook are in proper position.
3. Lock the conveyor by pulling down the spring plates under the both side edges of conveyor.

CAUTION

- Do not apply excessive load to the weigh conveyor, as the weigh conveyor is directly connected to the weigh sensor.
- Take care not to hit the conveyor to photo sensor when mounting and removing the conveyor. Failure to do so may result in damaging the photo sensor.



Fig. 7-6

CR Specification (IP69K)

CAUTION

- The conveyor is spring mounted. Remember the following points when removing or replacing conveyor.

< How to Remove >

1. Lift the inlet side of Infeed or Weigh conveyor and take off the shaft from the hook.

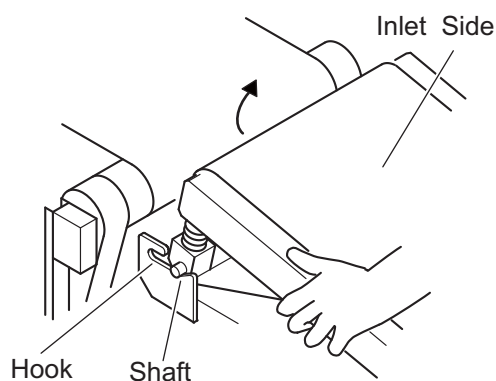


Fig. 7-7

2. Lift the discharge side of the conveyor in the direction of the arrow as shown on the right figure (1).
- (2) Slightly pull out the conveyor and lift in the direction of the arrow.

CAUTION

- If the shaft is released from the hook, the moving part at the conveyor end is loosened and your hand may be caught in the conveyor frame. Keep your hand or fingers clear to the moving parts.

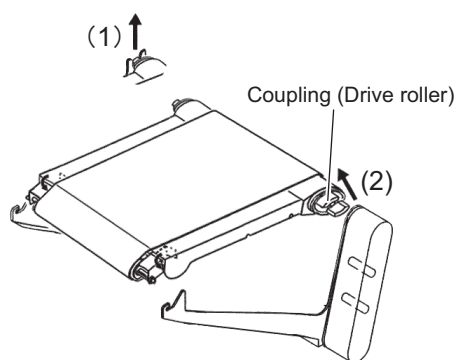


Fig. 7-8

3. Take off the conveyor belt.

< How to Attach >

1. Check the arrow (running direction) on the back side of the belt.
2. Reattach the conveyor belt by aligning the belt meander preventing guide inside the belt with the groove on the roller.
3. Align the notch of the conveyor's coupling (drive roller side) with the coupling pin (Inboard bearing side).

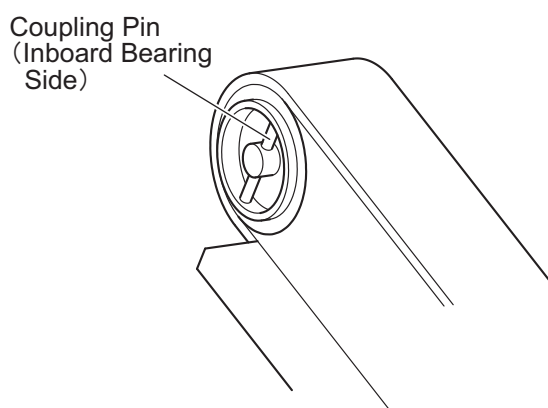


Fig. 7-9

4. (1) Insert the discharge side of the conveyor (drive roller) in the direction of the arrow as shown on the right figure.
- (2) Insert in the direction of the arrow.

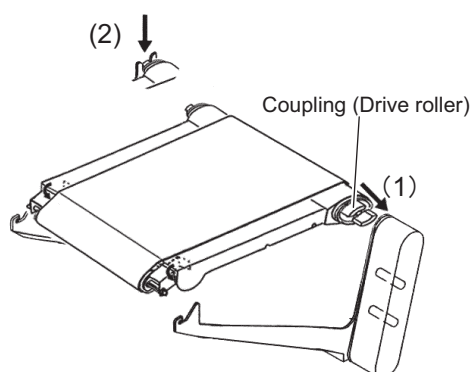


Fig. 7-10

- Place your fingers on the conveyor base and push the inlet side of the conveyor into the position as shown on the right figure.

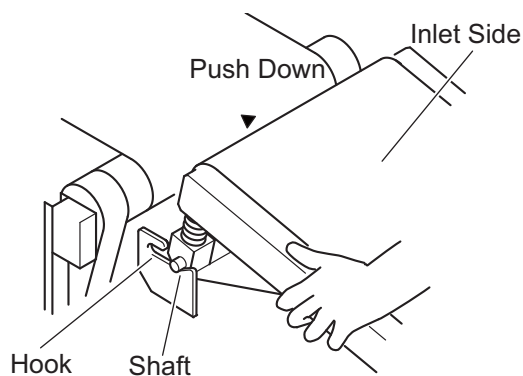


Fig. 7-11

CAUTION

- When replacing the conveyor, ensure the pins are correctly seated into the hooks. Do not force the pins into the hooks.
- Be sure to push the shaft of infeed down until it is surely fixed.
- Do not apply excessive load to the weigh conveyor. The weigh conveyor is directly connected to the weigh sensor.

7.3.2 Wind Cover (Option)

CAUTION

- When cleaning the wind cover, do not drop it or apply excessive pressure on it. Doing so may damage the wind cover.

< How to Remove >

- Lift the cover not to hit the conveyor.

< How to Attach >

- Hook the bracket onto the bumper and mount the window cover without hitting to the conveyor.

NOTE

- Mount the wind cover after installation of infeed and weigh conveyors.

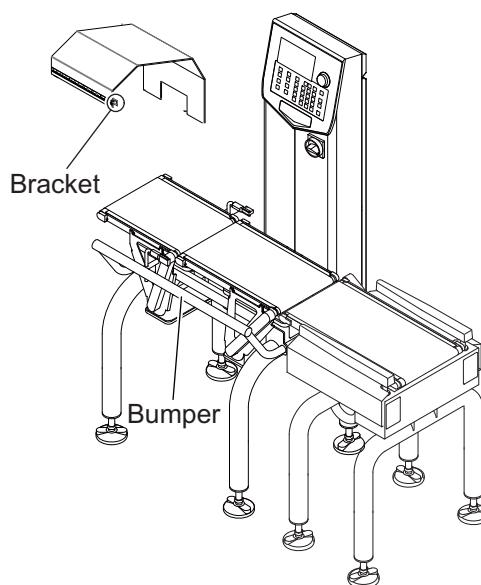


Fig. 7-12