

8 MAINTENANCE AND INSPECTION

This chapter describes the maintenance and inspection procedures in order to maintain the weighing machine in good condition.

WARNING

- When performing maintenance and inspections, clearly indicate to other operators that maintenance and inspections are in progress.

8.1 Adjusting the Tension and Meandering of Infeed and Weigh Conveyor Belt


WARNING

- Be sure to stop the conveyor when adjusting the belt tension.
- Adjust the belt tension and meandering after removing the wind cover (optional).

8.1.1 Adjusting the Tension

< SS Specification >

1. Adjust both sides of the conveyor tension and loosen the lock nut for the bolt.
2. To increase the tension of the belt, turn the tension adjustment bolt clockwise.
To decrease the tension of the belt, turn the bolt counterclockwise.
3. Operate the conveyor to make sure that the belt is not meandering.
4. If the belt is meandering, adjust the meandering. (Refer to "8.1.2 Adjusting the Meandering")
5. Stop the conveyor, tighten each lock nut of the tension adjustment bolt.
▶ Adjusting the Tension for conveyor is completed.

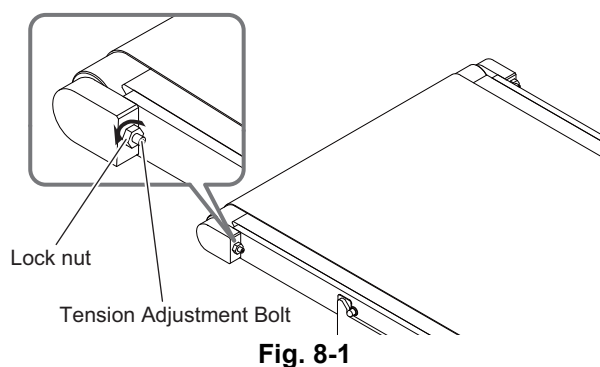

< CR Specification >

CR specification defines the appropriate length of the spring used to adjust the tension.

To adjust the tension, operate the tension adjustment bolt, and adjust the spring to the appropriate length.

1. To shorten the spring length (increase the belt tension), turn the tension adjustment bolt of the driven roller side of the conveyor clockwise, and to lengthen the length (Increase the tension), turn the bolt counterclockwise.
2. Make sure that the spring is 36 mm long.

▶ Adjusting the Tension for conveyor is completed.

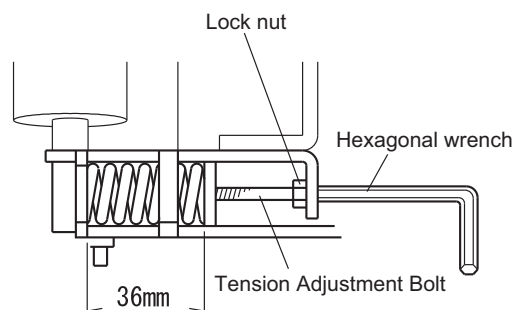


Fig. 8-2

CAUTION

- Do not apply too much tension to the belt. It may damage the bearing.

8.1.2 Adjusting the Meandering

< SS Specification >

1. Adjust both sides of the conveyor tension and loosen the lock nut for the bolt.
2. Operate the conveyor.
3. Check the status of meandering and stop the conveyor.
4. If the belt is located further to direction A, tighten the tension adjustment bolt A, or loosen the tension adjustment bolt B. If the belt is located further to direction B, tighten the tension adjustment bolt B, or loosen the tension adjustment bolt A.
5. Operate the conveyor to make sure that the belt is not meandering. Repeat the steps 2 to 4 until the belt is not meandering.
6. Stop the conveyor, tighten each lock nut of the tension adjustment bolt.

▶ Adjusting the Tension for conveyor is completed.

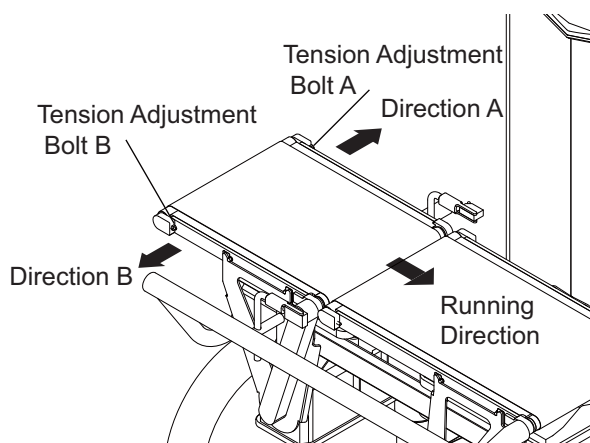


Fig. 8-3

CAUTION

- Do not apply too much tension to the belt. It may damage the bearing.
- If the belt running direction cannot be corrected only by tightening the adjusting bolt, loosen the adjusting bolt on the other side so that the belt tension will not be increased excessively.

< CR Specification >

There is no need to adjust meandering for CR specification, as the belt meander preventing guide is provided.

8.2 Regular Inspection

To maintain the machine in optimal condition and enhance the product efficiency, perform maintenance and inspections by following "Table 8-1".

Table 8-1

Inspection Item	Cycle	Reference Section
Span Adjustment	Monthly	Perform span adjustment. (Refer to "6.5.5 Span Adjustment")
Air supply pressure adjustment	Monthly	Use the pressure reducing valve.

8.3 Service Parts

The service parts used for this equipment are listed in "Table 8-2". These parts are consumable. After a certain service life, they will rapidly deteriorate i the performance and durability and may be finally broken. We recommend checking these parts regularly and replace them immediately if any problem is found.

CAUTION

- Contact your distributor or Ishida customer support for replacement parts.

NOTE

- The replacement interval depends on the actual conditions of use.

Table 8-2

Part	Replacement interval
Bearing	2 years
Timing belt	1 years
Conveyor belt	1 years
Timing belt cover gasket (CR specification)	2 years or when removed

Table 8-2

Part	Replacement interval
Oil seal (CR specification)	6 months or when removed
Drive roller resin coupling (CR specification)	1 years

8.4 Replacing Battery for Memory Backup

This machine uses a lithium primary battery as a backup battery for saving preset settings. The battery should be replaced once for five years, which is the average battery life. Contact your nearest Ishida representative or the Ishida Service Center for replacing battery. (The battery life depends on the using environment.)

8.5 Replacing Printer Paper

NOTE

- Printer is optional.

When the printer paper is run out, the message appears on the RCU display indicating “Printer no paper”. To replace the paper roll, proceed as shown below.

1. Release the binding and open the printer cover.



Fig. 8-4

2. Press open the roll holder clips and remove the empty roll core.
3. Press the lever down.



Fig. 8-5

4. Load a new roll, making sure that it is properly inserted as shown to the right.
5. Insert the paper edge into the rear of printer head.
6. Remove the paper winding bar out of the printer unit.
7. Rotate the roller upward to pull out the paper edge, and insert it to the rear of the bar on the upper side.



Fig. 8-6

8. Set the paper edge into the cut on the paper winding bar and wind the paper 30mm to 40mm.

NOTE

- Make sure that the winding direction is correct.

9. Set the paper winding bar to the unit.

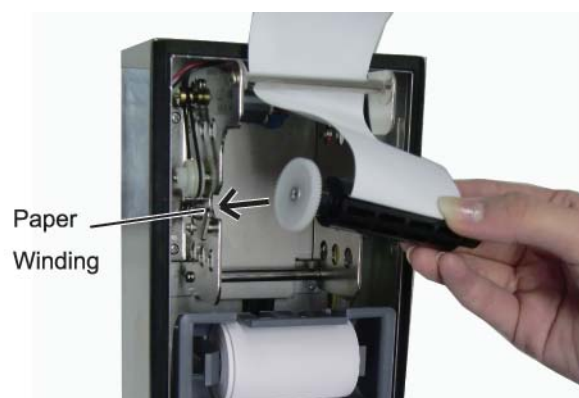


Fig. 8-7

10. Press the lever up.



Fig. 8-8

- 11. Close the printer cover and fix the binding.
- 12. Press the [Output] key to display the Output menu on the RCU.
- 13. Select and enter the "Paper Pass".
(Refer to "5.10.4 Printer Data Output")
▶Printer paper replacement is completed.



Fig. 8-9