

USER NAME HEAT AND CONTROL INC



PARTS MANUAL

MODEL NAME IX-EN-4093

ORDER No. 915844

PROJECT No. 2090511-01

ISHIDA CO., LTD.






HOW TO USE THIS PARTS MANUAL

□ OVERVIEW

This parts manual contains a list of replacement parts for a standard equipped machine. Please refer to this manual when ordering or replacing parts.

□ HOW TO REFER TO THIS MANUAL

- The machine is divided into sections.
- The Parts Section Locator, found on the first page, contains an illustration showing the location of main components (units). Refer to the illustration to locate the corresponding section for the desired unit. Some units may contain sub sections. Sub sections are listed within a section heading on the Parts Section Locator.
- The Table of Contents, found on the second page, contains the section/page number, unit name, part code, and drawing number for each unit. For a detailed list of parts and parts code used within each unit, refer to the corresponding unit section.
- Page references are constructed as follows: section number, sub section number (if any), and page number.
- A disassembly illustration is found on the left-hand side page of each parts list.

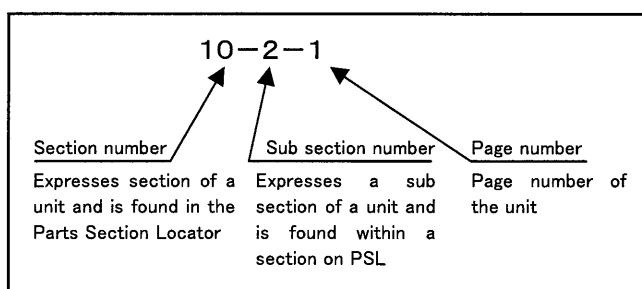

□ ORDERING A PART

When ordering a part, be sure to specify the

part by referring to this manual and advising Ishida of the following information:

- Parts manual number (indicated on the upper side of the Table of Contents)
- Job number of the machine (found on the plate fitted to the main body)
- Company name
- Contact information
- Part code of the required item
- Part name
- Quantity

When you need to order a whole unit, please specify the part code with the marking ● on the itemized list.

REMARK

- The items listed on this manual are original equipment specifications and may be slightly different from the items actually equipped to your Ishida machine now in operation. For this reason, always be sure to indicate job number (indicated on the cover sheet of this manual) when ordering parts.



IX-GN, EN

PARTS SECTION LOCATOR

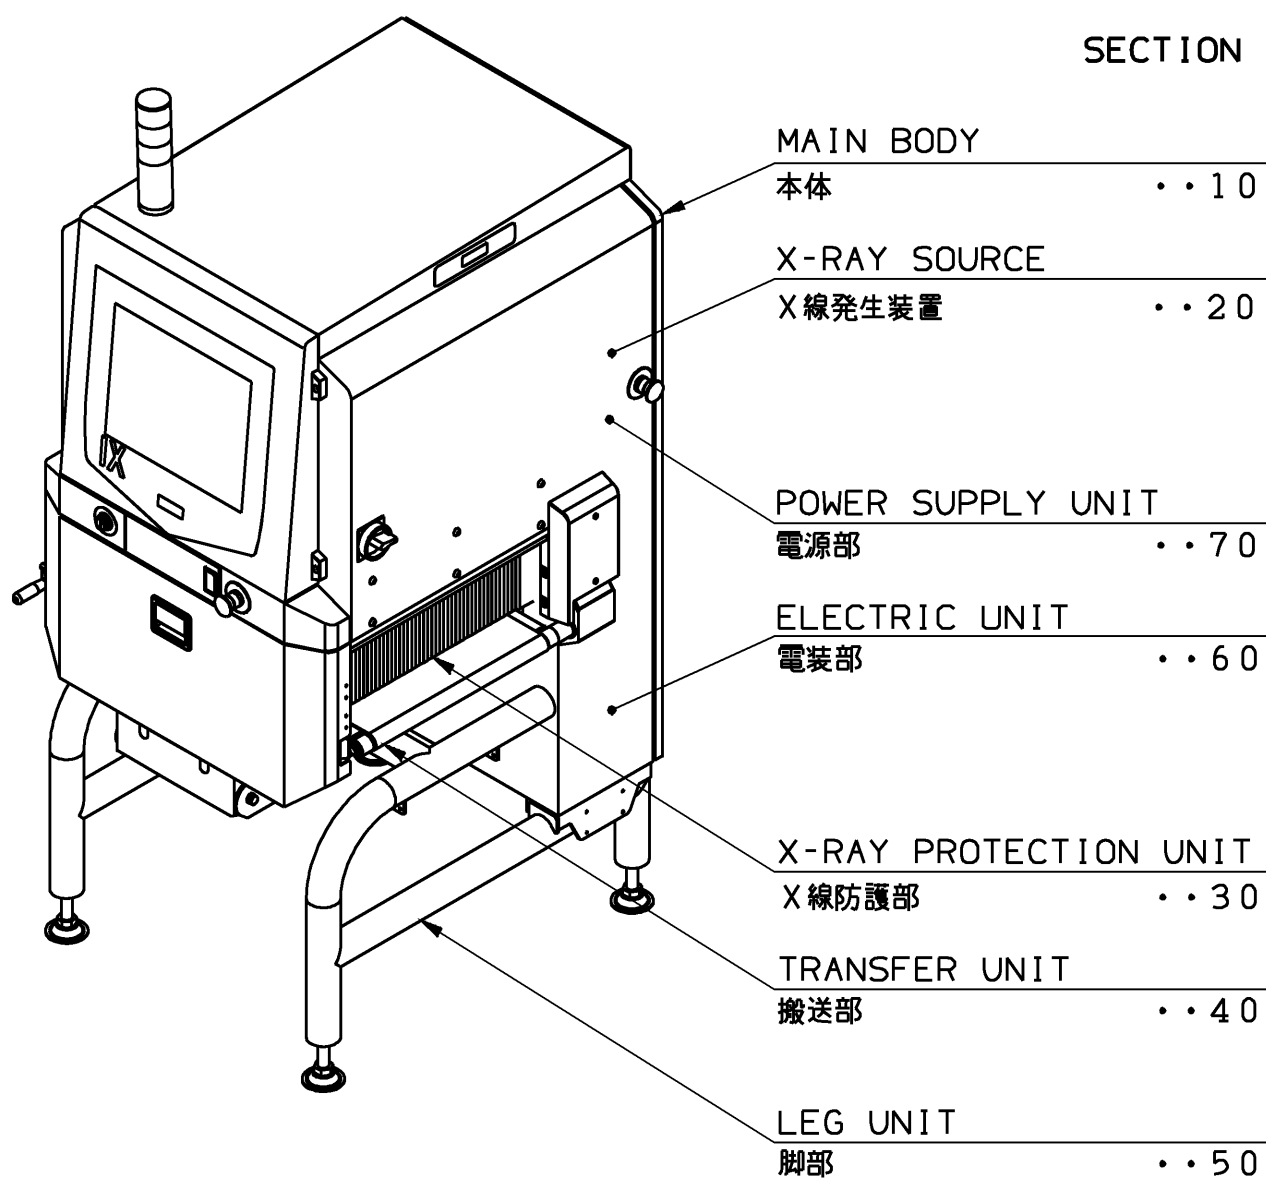


TABLE OF CONTENTS

MODEL NAME IX-EN-4093

PROJECT No. 2090511-01

SECT- PAGE	UNIT NAME	PART CODE	DRAW No.
10- 1	MAIN BODY UNIT::	100-013-1137-01	4D-52362
10- 2	DOOR UNIT:OPERATION:	100-011-4578-03	4D-52700
10- 3	SHEET UNIT::	100-009-2849-01	4D-53981
10- 4	SWITCH UNIT:DOOR:CURTAIN	100-013-1189-01	4D-52399
10- 5	DOOR UNIT:INSPECTION ROOM:	100-007-3798-05	4D-52063
10- 6	COVER UNIT:BACK:	100-011-2162-02	4D-52400
10- 7	ACCESSORY:BOTTOM PLATE:	100-007-0360-02	4D-53983
10- 8	CABLE BUSH UNIT::	100-007-0390-02	4D-50612
10- 9	COVER UNIT:UPPER:	100-007-2878-02	4D-50090
20- 1	X-RAY GENERATOR UNIT::	100-016-7555-00	4D-54024
20- 2	POWER SUPPLY UNIT:GENERATOR:	100-016-7605-00	4D-53944
20- 3	SLIT UNIT::	100-007-4633-02	4D-51677
20- 4	LINE SENSOR UNIT::	100-009-1581-04	4D-50896
30- 1	HOLDER UNIT:CURTAIN:	100-011-0020-01	4D-51816
30- 2	CURTAIN UNIT:IX:	100-009-1769-00	4D-42475
30- 3	COVER UNIT:SIDE:	100-013-1251-00	4D-52365
30- 4	COVER UNIT:SIDE:	100-013-1252-00	4D-52366
30- 5	PILEUP DETECTION UNIT::	100-009-1288-04	4D-50899
30- 6	PILEUP DETECTION UNIT::	100-009-1289-04	4D-50900
40- 1	CONVEYOR AS::	100-010-4203-02	4D-51680
40- 2	LINING UNIT:CONVEYOR:	100-010-1007-01	4D-51819
40- 3	BELTIDLERUNIT::	000-135-6328-10	4D-42483
40- 4	DRIVE UNIT::	100-007-0785-03	4D-50623
40- 5	OPTION UNIT:CONVEYOR:	100-010-3979-03	4D-51505
50- 1	STAND UNIT:IX:	100-014-3023-00	4D-53169
50- 2	STAGE UNIT:IX:	100-007-4108-00	4D-50112
50- 3	ANCHORUNIT::	000-132-8700-09	4D-40988
60- 1	PC UNIT::	100-007-3437-04	4D-50095
60- 2	ACCESSORY:PC UNIT:	100-007-6170-02	4D-35912
60- 3	ELECTRIC UNIT::	100-007-2209-03	4D-61171
60- 4	IO UNIT::	100-011-1455-04	4D-51379
60- 5	SWITCH UNIT:EMG:	100-007-4572-02	4D-50626
60- 6	PS UNIT::	100-009-0950-01	4D-53442
60- 7	ACCESSORY:IX:	100-011-0219-06	4D-52367
60- 8	HARNESS UNIT::	100-013-0686-01	4D-52783



IX-GN, EN

PARTS SECTION LOCATOR

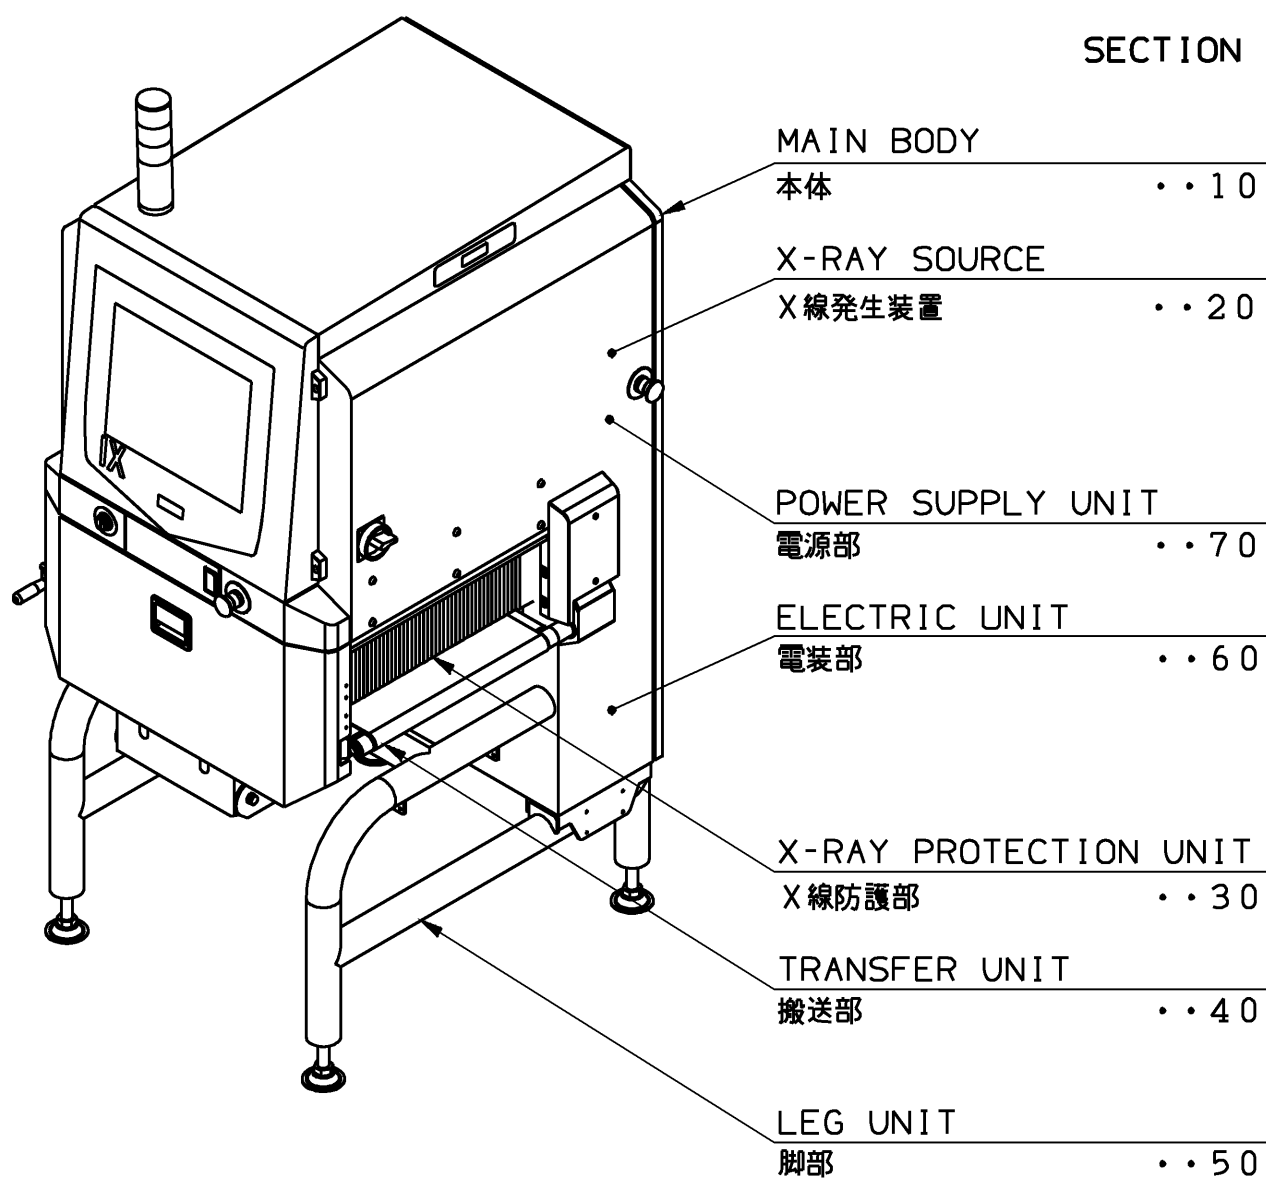


TABLE OF CONTENTS

MODEL NAME IX-EN-4093

PROJECT No. 2090511-01

[illegible]