



PARTS MANUAL

MODEL NAME	TSC-RS-120R
ORDER No	2008022657/265043
JOB No.	08-14323-053

ISHIDA CO., LTD.


HOW TO USE THIS PARTS MANUAL

□ OVERVIEW

This parts manual contains a list of replacement parts for a standard equipped machine. Please refer to this manual when ordering or replacing parts.

□ HOW TO REFER TO THIS MANUAL

- The machine is divided into sections.
- The Parts Section Locator, found on the first page, contains an illustration showing the location of main components (units). Refer to the illustration to locate the corresponding section for the desired unit. Some units may contain sub sections. Sub sections are listed within a section heading on the Parts Section Locator.
- The Table of Contents, found on the second page, contains the section/page number, unit name, part code, and drawing number for each unit. For a detailed list of parts and parts code used within each unit, refer to the corresponding unit section.
- Page references are constructed as follows: section number, sub section number (if any), and page number.
- A disassembly illustration is found on the left-hand side page of each parts list.

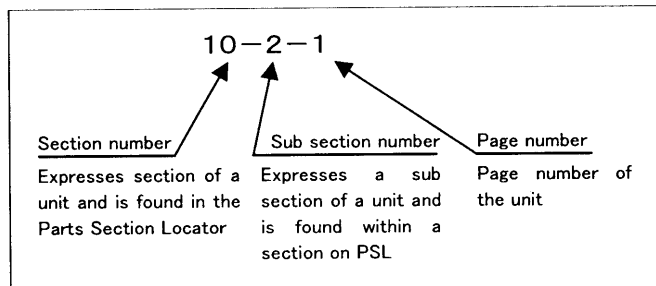

□ ORDERING A PART

When ordering a part, be sure to specify

the part by referring to this manual and advising Ishida of the following information:

- Parts manual number (indicated on the upper side of the Table of Contents)
- Job number of the machine (found on the plate fitted to the main body)
- Company name
- Contact information
- Part code of the required item
- Part name
- Quantity

When you need to order a whole unit, please specify the part code with the marking ● on the itemized list.

REMARK

- The items listed on this manual are original equipment specifications and may be slightly different from the items actually equipped to your Ishida machine now in operation. For this reason, always be sure to indicate job number (indicated on the cover sheet of this manual) when ordering parts.

TSC-RS

PARTS SECTION LOCATOR

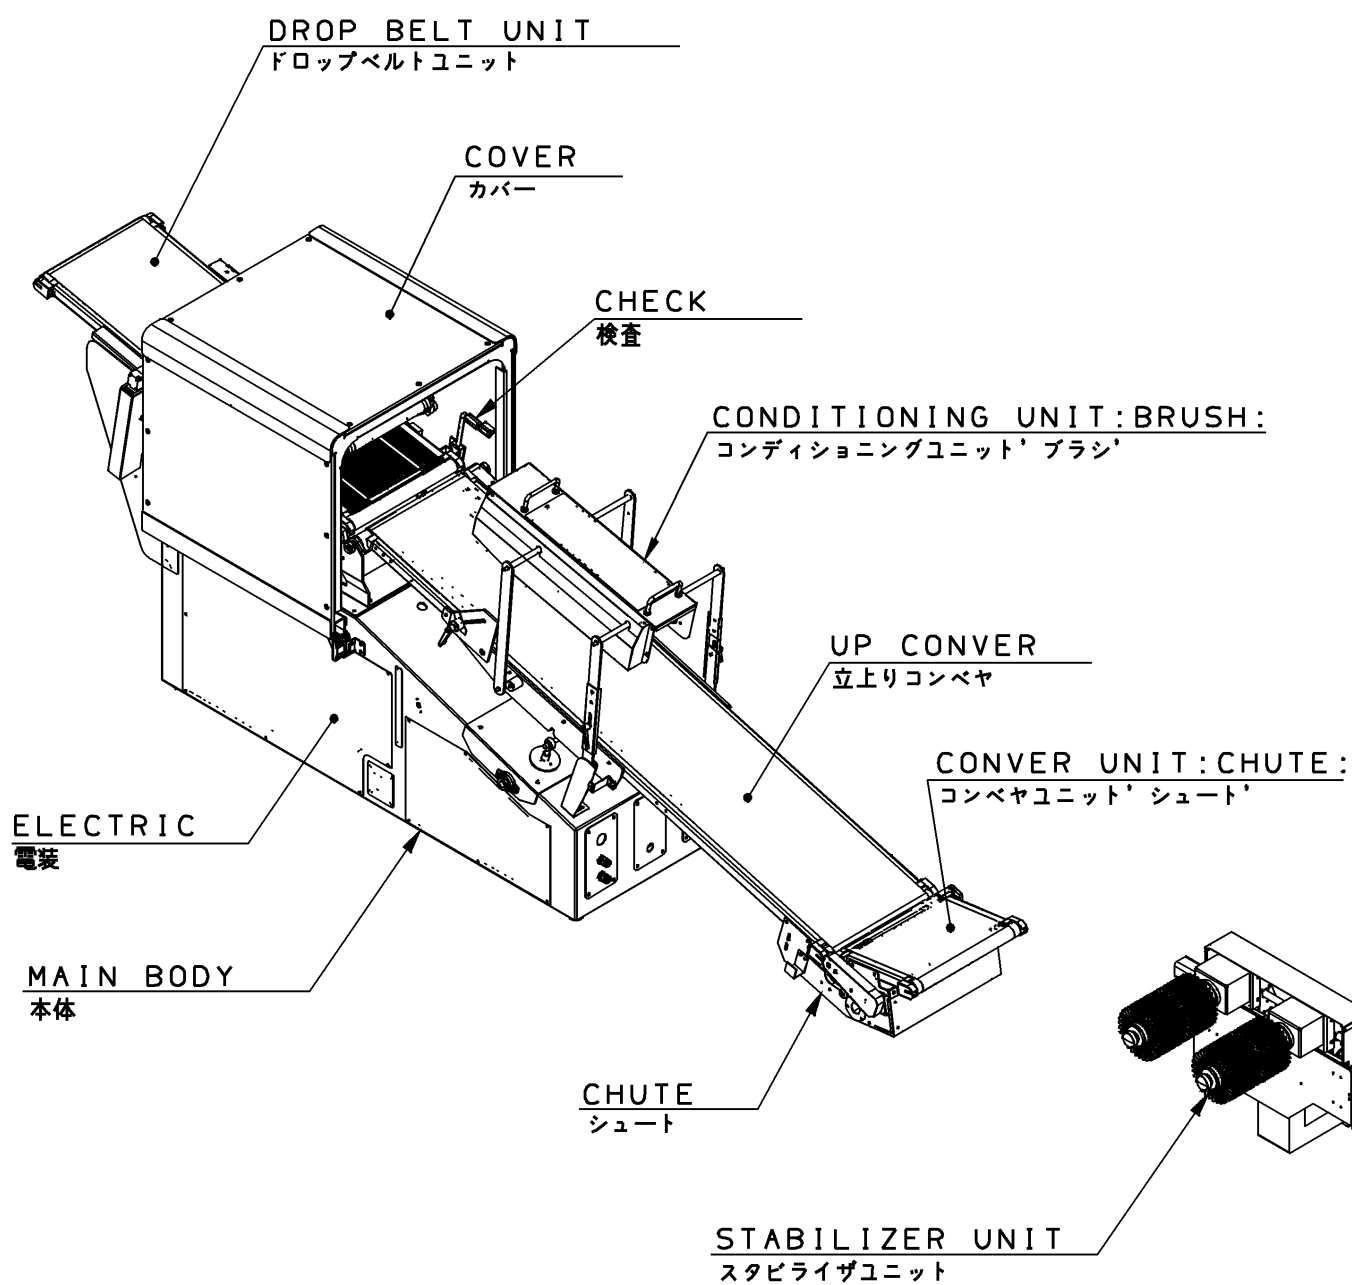


TABLE OF CONTENTS

MODEL NAME TSC-RS-120R
JOB No. 08-14323-053

SECT- PAGE	UNIT NAME	PART CODE	DRAW No.
10- 1	ACCESSORY:MAIN BODY:	126-1200-08	4D-38257
11- 1	STABILIZER UNIT::	123-9020-11	4D-38258
20- 1	ACCESSORY UNIT::	126-1204-02	4D-38259
20- 2	CONVEYOR UNIT:TAKEAWAY:	125-7914-08	4D-38260
20- 3	MAIN BODY UNIT:UP CONVER:	125-7903-07	4D-38261
20- 4	ADJUST UNIT:CONVEYOR:	123-9019-25	4D-38262
20- 5	CLEANING UNIT::	123-0201-06	4D-38263
20- 6	CONDITIONING UNIT:BRUSH:	123-1661-28	4D-38264
20- 7	MAIN BODY UNIT:CHUTE:	125-7945-03	4D-38265
20- 8	CONVEYOR UNIT:CHUTE:	122-5729-15	4D-38266
30- 1	CONVEYOR UNIT:UNDER:	110-2096-53	4D-20507
30- 2	MAIN BODY UNIT:EXAMINE:	124-5353-04	4D-38267
30- 3	CONVEYOR UNIT:UPPER:240	122-8781-20	4D-38268
40- 1	CLEANING UNIT:EXAMINE:CONVEYOR	123-0099-02	4D-38269
40- 2	MAIN BODY UNIT:TSC-R:	126-1199-07	4D-38270
40- 3	AIR UNIT::	123-6259-12	4D-38271
40- 4	FRAME UNIT:REMOTE CONTROL:	126-1076-02	4D-38492
40- 5	COVER UNIT:SLIDER:	125-7839-01	4D-38272
60- 1	CONVEYOR UNIT:REJECTOR:AIR	122-5547-23	4D-38274
60- 2	AIR UNIT:REJECTOR:	122-5545-26	4D-38275
60- 3	DROP BELT UNIT::	123-9018-12	4D-38276
70- 1	REMOTE CONTROL BOX UNIT::	123-6319-12	4D-33208
70- 2	REMOTE CONTROL BOX AS::	115-3009-21	4D-34445
80- 1	CONTROL UNIT:TSC-R:R	123-9209-17	4D-38277
80- 2	HARNESS UNIT:J BELT:	123-0260-15	4D-38278
80- 3	HARNESS UNIT:TSC-R:OTHERS	123-0462-11	4D-38279
80- 4	HARNESS UNIT:REJECTOR:	123-0793-13	4D-38280
80- 5	HARNESS UNIT:STABILIZER:	123-6241-16	4D-38281
80- 6	HARNESS UNIT:MAIN BODY:	123-9231-10	4D-38282
80- 7	CONTROL UNIT:AUTOMATIC:	123-6437-28	4D-38283
80- 8	PS UNIT:TSC-R:R	120-9795-49	4D-38284