


EC **EC1248, EC1848 & EC2472**

Easteey EC Series Variable Speed Conveyors

User Guide

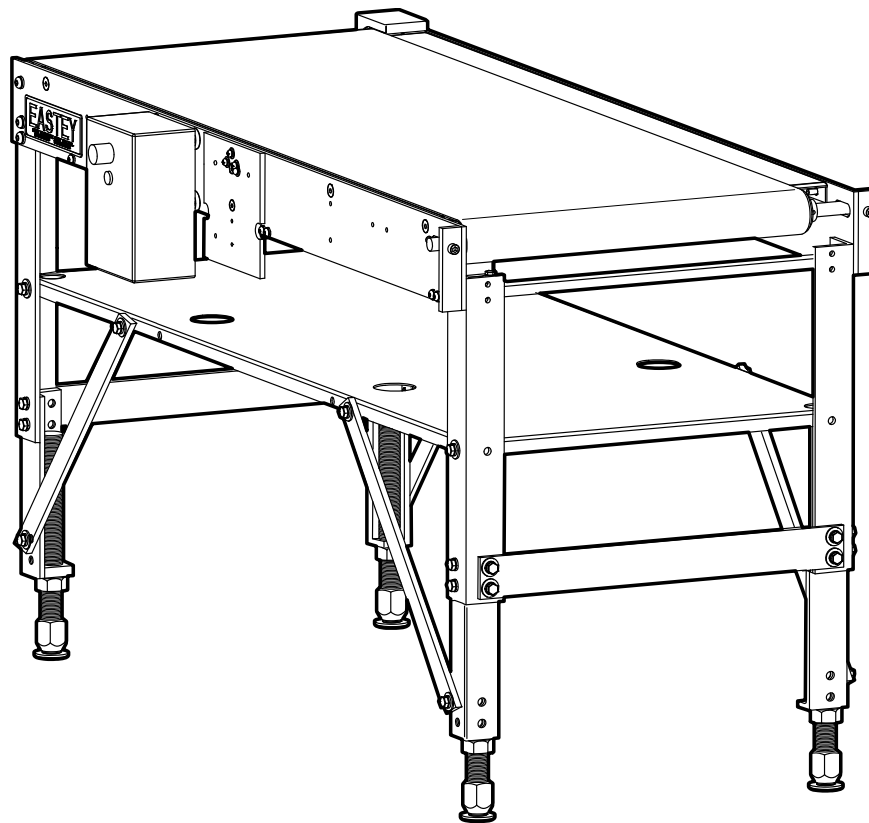

EASTEY®

EC EC1248, EC1848 & EC2472

Eastey EC Series Variable Speed Conveyors

User Guide

Revised 01/11/2022

P/N C001000 Rev C1

Copyright and Trademarks

Copyright ©2017-2022 Engage Technologies Corporation
All rights reserved. All trademarks and brand names
are the property of their respective owners.

Eastey
7041 Boone Ave. N.
Brooklyn Park, MN 55428

Phone: (763) 428-4846; Fax (763) 795-8867; 1-800-835-9344

www.eastey.com

Contents:

Safety	7
Explanation of Symbols	8
Introduction	9
Easteey EC Series Variable Speed Conveyor Overview	9
Specifications	10
Dimensions	12
Installation	13
Optional Casters	13
Move Conveyor into Operating Location	13
Height Adjustment and Leveling	13
Location Requirements	16
Mounting the Ink Jet Printer	17
Guide Rail Assembly and Installation (C0000501 or C0000511)	18
Operation	19
Power	19
Control Box	20
Adjustments	21
Height Adjustment and Leveling	21
Conveyor Tension Adjustment	23
Advanced Speed and Control Function Adjustment	24
Maintenance	27
Cleaning the Belt	27
Changing the Belt	27
Troubleshooting	29
Parts List	32
Conveyor — EC1248, EC1848 & EC2472	32
Option / Accessory Kits — EC1248, EC1848 & EC2472	34
Appendix A: Electrical Schematic	35
Warranty Statement	36
Customer Support	38

Safety

General Safety Precautions

Before installing, operating or servicing this equipment, please read the following precautions carefully:

- This machine is equipped with moving belts. Do not place hands near the rear of this unit when the belts are moving as fingers may be pinched where belts enter the frame.
- Do not attempt to open or work on the electrical box, junction boxes or other electrical components of the unit without first disconnecting power to the machine. Electrical shock hazard exists if power is not disconnected.
- Do not by-pass any factory-designed safety features such as guards, interlocks, switches, etc.
- Do not place hands or body inside the confines of the machine unless all mechanisms are securely fastened and the electrical supply is shut off.
- Never provide service or clear a box jam when machine is running.
- Do not wear loose clothing such as ties, scarves, jewelry etc. Long hair should be pulled back and/or covered while operating this machine.
- Do not stand or climb on any part of the conveyor or frame.


Explanation of Symbols



Caution sign or Safety Alert symbol. Indicates caution, be alert, Your safety is involved. Knowledge of safe operation is required.



Ground symbol. Indicates ground. Use Class-3 (lower than 1000) cable to ground to earth. Incomplete grounding may lead to electrical shock.

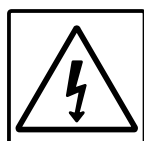

Electrical hazard. Indicates electrical danger. Only a trained electrician can uncover the electrical panel or box.



Entanglement hazard. Moving parts can crush and cut. Keep hands and fingers clear of moving parts. Shut down the machine before performing maintenance. Keep hands and fingers clear of belt, rollers, and drive mechanism before starting conveyor and while it is in operation.



Pinch hazard. Do not place your hands or fingers in the moving mechanism. Shut down the machine before performing maintenance.



Moisture hazard. Keep equipment dry. This equipment is designed for indoor operation in a typical clean, dry factory environment, protected from rain and moisture. Do not operate the machine in any extremely wet or oily environment that may exceed operating specifications.



Warning symbol. Indicates a hazardous situation which, if not avoided could result in death or serious injury. A warning indicates a situation potentially more severe than indicated by a caution message but not immanent as a danger message.

The warning symbol is associated with messages for conditions as shown below.

