

Installation

Carefully unpack the outer carton and shipping material. Avoid damaging the conveyor frame.

Remove shipping bolts or brackets securing the conveyor to the shipping base. Lift the conveyor off the shipping base.

CAUTION! The conveyor may require more than one person to move safely off the shipping base.

Optional Casters

The conveyor is delivered flat leveling feet, standard. If the conveyor is ordered with optional locking casters, the casters are installed at the factory and the conveyor is delivered with them installed, attached to the bottom of the threaded leveling legs.

Move Conveyor into Operating Location

Move the Eastey EC Series Variable Speed Conveyor to the desired location where it will be operating. If the conveyor is equipped with the standard leveling feet, it may require some lifting, but will easily skid across a smooth level floor surface. If you have purchased the optional locking casters you can roll the conveyor easily over a smooth flat surface. Move each caster lever to the locked position to keep the conveyor from moving.

Height Adjustment and Leveling


Conveyors are shipped at minimum height to conserve space during shipping so it is likely you will need to increase the conveyor height to bring it up to the desired height of your conveyor line. All four legs at the corners of the conveyor are adjustable for height and leveling, and two mechanisms allow for height adjustment: threaded-rod legs and leg-extension angle brackets.

Threaded-rod legs: threaded-rod legs are adjustable for their total length (less approximately ½ inch of threads required to secure the legs in the bottom of leg-extension angle brackets) and provide for fine adjustment to level the conveyor at the required conveyor height.

Leg-extension angle brackets: Extending or retracting the leg-extension angles provide five inches (5") additional height when extended, or less five inches (5") when retracted. When extending the leg-extension angles, it is recommended to reposition the leg brace strap for stability. See the illustrations on the following page.


Raising the Conveyor

Begin raising the conveyor by turning the feet clockwise, as viewed from above.

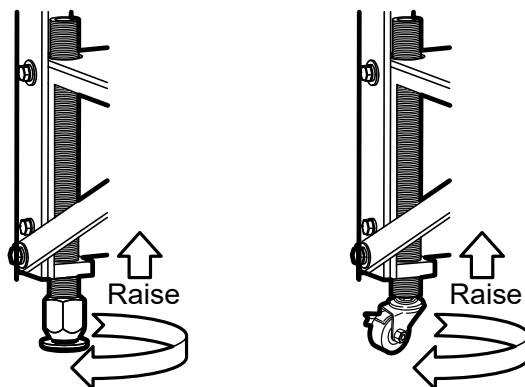

Note: Thread-locking compound is used to secure the feet or optional casters to the leveling leg.

If you will be raising the conveyor more than $\frac{7}{8}$ inches from the minimum shipping height, thread the threaded-rod leg all of the way out of the bottom of the conveyor leg-extension angle bracket and thread a 1"-8 UNC standard nut (4 provided – one for each leg) onto the threaded rod, and then re-thread the threaded rod back into place. The 1-8 UNC nut will function as a jam nut to lock the conveyor at the level height when the conveyor is adjusted and leveled at the required height.

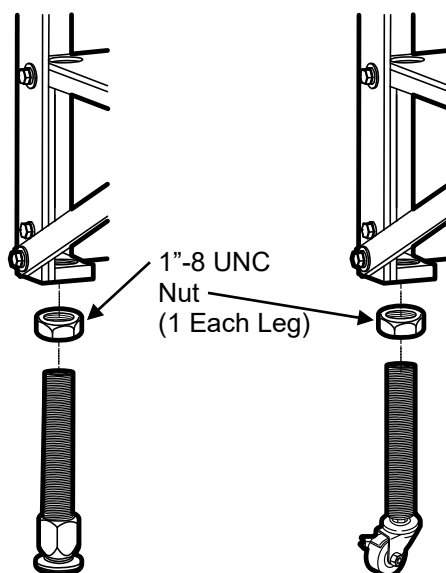


Note: An open-end wrench or channel-style wrench with a 1- $\frac{1}{2}$ " opening is required for the 1"-8 UNC standard nuts.

Leg Extension Angle Brackets

For fine-adjustment of the leg height, twist to thread the threaded-rod leg into or out of the conveyor leg angle bracket to adjust each leg up or down. (Loosen the 1"-8 UNC standard nut when applicable to allow adjustment of the threaded rod.)

If the conveyor is to be raised more than 5-7/8 inches in height from minimum shipping height, extend the leg extension angle brackets on all four corners. Instructions for extending the leg extension angle brackets are provided below.

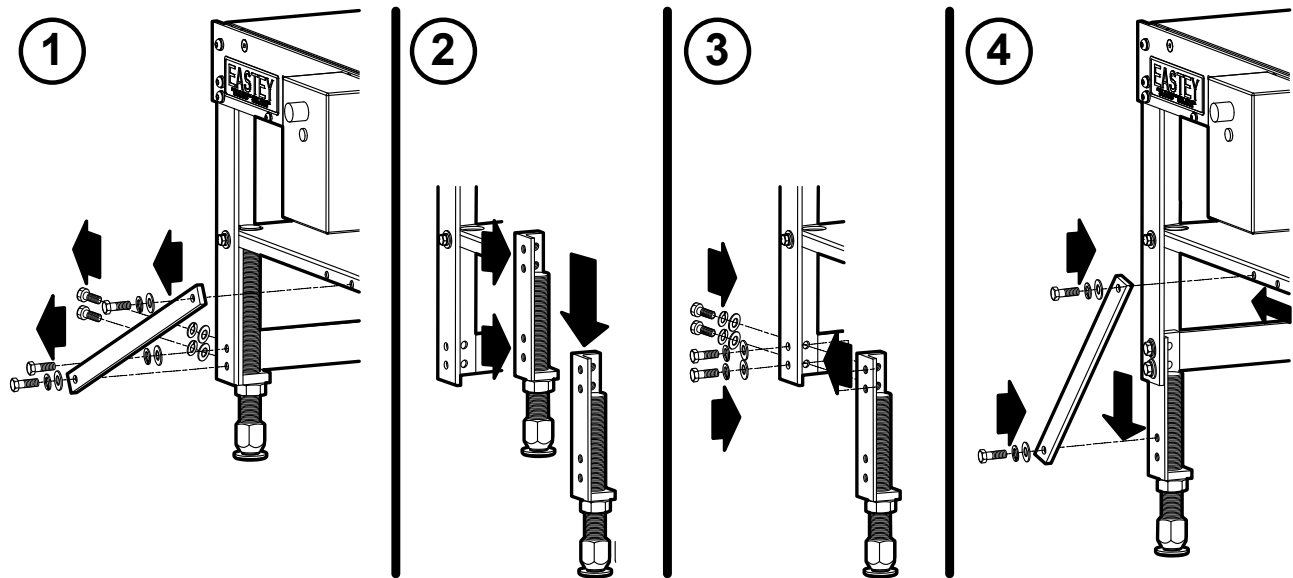


1. Temporarily remove and save the hardware that fastens the leg extension angle bracket and leg brace bar. Remove both ends of the leg brace bar, as the brace bar will be repositioned to other holes when it is refastened to the leg extension angle bracket.
2. Reposition the leg extension angle to align the upper holes in the leg extension angle with the bottom holes in the vertical leg of the conveyor base frame.
3. With the leg extension angle bracket extended, use the same hardware removed previously to refasten the leg extension angle bracket to the conveyor base frame.
4. Reposition the leg brace bar as shown, to align the top hole with the hole closer to the corner in the side brace of the conveyor base frame, and to use the upper of the two holes near the bottom of the leg extension angle bracket.

Note: If higher conveyor height is required, optional 17-inch long threaded rod legs are available to provide up to 8 inches of additional adjustable conveyor height.

Height Fine-Adjustment and Leveling

For fine-adjustment of the leg length for fine-adjustment of height or for final leveling of the conveyor, first loosen the 1"-8 UNC standard nut, if applicable, and then twist the threaded-rod leg into or out of the conveyor leg angle bracket.

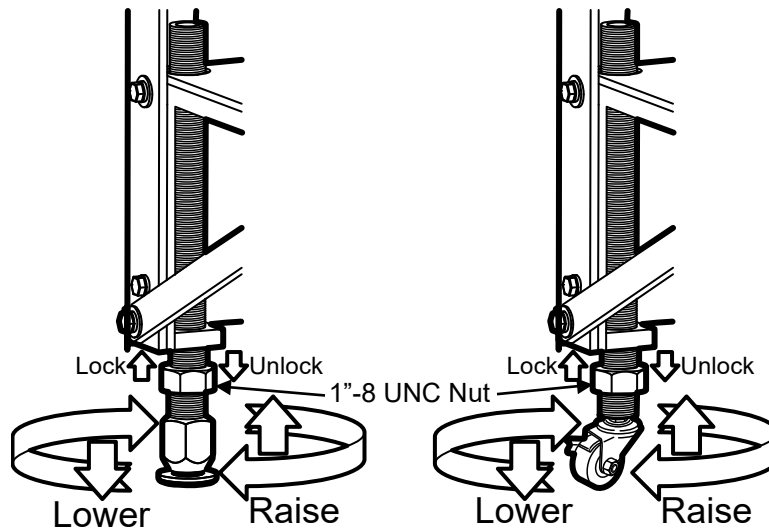

Note: An open-end wrench or channel-style wrench with a 1-1/2" opening is required for the 1"-8 UNC standard nuts.

Location Requirements

When installing the Eastey EC Series Variable Speed Conveyor please be aware of the following considerations:

1. The mounting surface is flat and level.
2. Conveyor or packing table height.
3. Alignment with packaging line.

A packing table may be provided at the in feed end where items may be placed before sending them on to the conveyor. It can also be convenient to have a pack table at the exit end of the conveyor line. It is essential that the conveyor be at the same approximate height as other components of the line.

The conveyor should be placed on a flat, level floor so that it does not rock or move. We recommend that the machine be securely locked in place when used.


Mounting the Ink Jet Printer

There are mounting holes predrilled that allow you to mount a variety of printing systems on the Variable-Speed Conveyor. **Refer to the User Guide that came with your printer for mounting instructions.**

The illustrations that follow in this section show examples of possible locations for attaching mounting brackets for some common printer configurations. Your printer configuration may be different.

Example of Variable Speed Conveyor with CoPilot Mounting Bracket

A pre-drilled and tapped mounting Bracket Support Plate is provided for installation of the Printer Mounting Bracket. Use four (4) $\frac{1}{4}$ -20 $\times$ 1" hex-head bolts with flat washers and lock nuts to fasten the Baseplate Connector Clamp to the Bracket Support Plate.

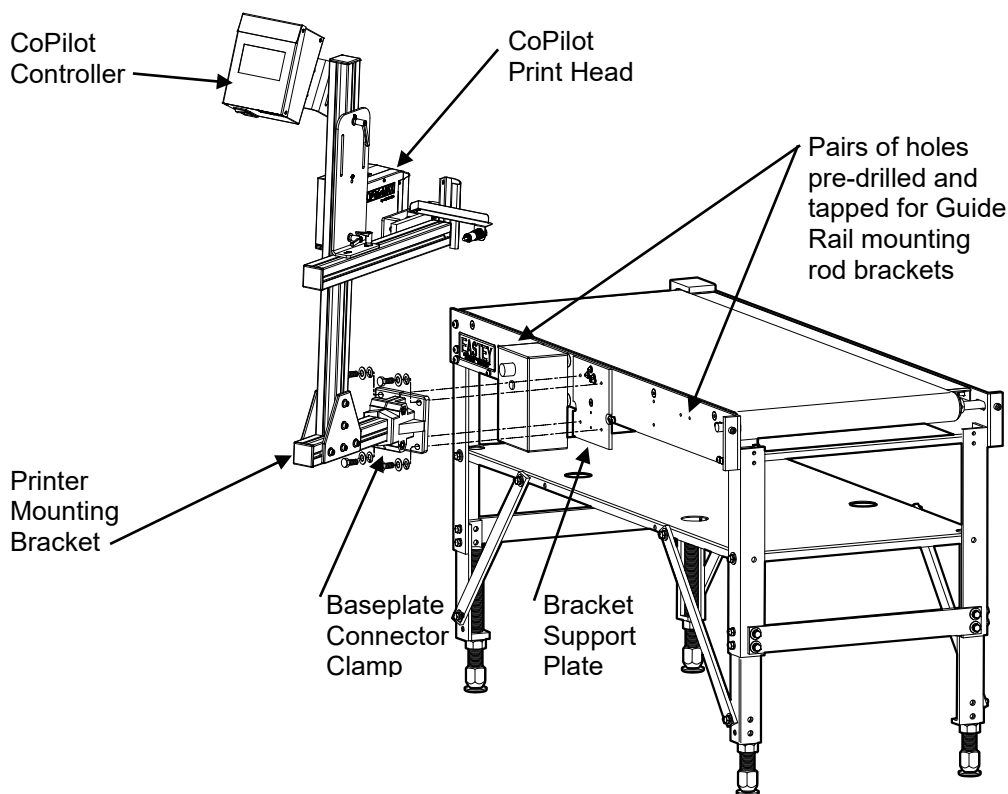


Note The above example shows a CoPilot Max system on 2005061 kit. Other printers can be mounted in a similar way.

Note Threaded holes in the conveyor side plates are provided on both sides of the conveyor for mounting Guide Rail mounting rod brackets.

Example of Variable Speed Conveyor with Squid Ink PZ Mounting Bracket or DOD Mounting Bracket

For a Squid Ink PZ or DOD printer, fasten the applicable mounting bracket to the Variable Speed Conveyor side plate as shown in the illustration below. **Refer to the User Guide that came with your printer for mounting instructions.**

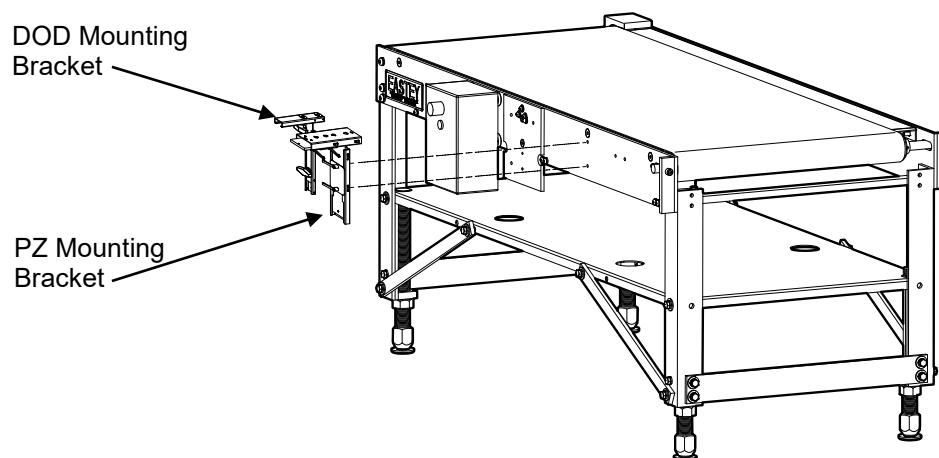

Note Threaded holes in the conveyor side plates are provided on both sides of the conveyor for mounting PZ or DOD mounting brackets.

Guide Rail Assembly and Installation (C0000501 or C0000511)

Drilled and threaded holes are provided in the Variable Speed Conveyor side plates in both sides for attaching a Guide Rail to either side of the conveyor.

