

Maintenance


The Eastey EC Series Variable Speed Conveyor will provide many hours of maintenance free operation. There are a few items that may require attention from time to time.

Cleaning the Belt

Make sure the belt stays clean and grease free. If the belt requires a more thorough cleaning, use a soft, lint-free cloth with a mild detergent and water and let dry. **Never use harsh or abrasive cleaners or chemical agents when cleaning any part of the machine.**


Changing the Belt

Shut off power and disconnect electrical connections before beginning the belt changing procedure. You may choose either side from which to remove and replace the conveyor belt; attaching hardware on the opposite side will hold rollers and plates in position while rail is removed from one side. Save all removed parts and attaching hardware, noting if necessary where each is used. Re-use removed parts for reassembly; replacing any excessively worn, broken, or missing parts with replacements that meet specifications of original parts. Reassembly is the reverse of disassembly.

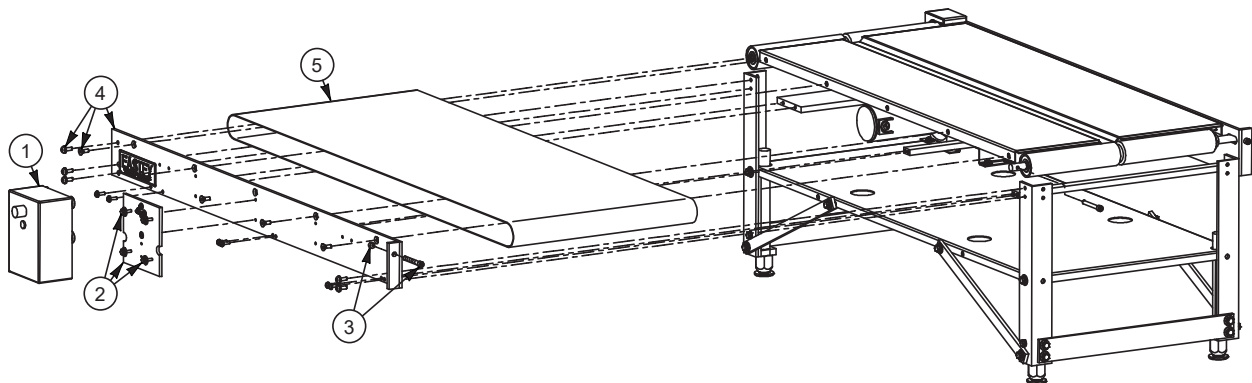

1. Remove the magnetically-mounted control box (1) and set it aside if it is on the side from which you will be replacing the conveyor belt.
2. Remove attaching socket head cap screws and mounting plate (2). Set aside mounting plate and retain attaching hardware for re-use.

3. Loosen conveyor tension adjustment and jam nut (3) only from the side from which you will be changing the belt. Loosen completely and remove tensioning screw from idler roller shaft. On the opposite side, loosen the conveyor tension, but it is not necessary to disassemble the mechanism.
4. Remove attaching flat head socket cap screws and side rail (4) from the side from which you are removing the belt, and retain for re-use.
5. With the belt loose, carefully slide the belt (5) out the open side, off of the drive and idler rollers and slide plates. Attaching hardware on the opposite side will hold rollers and slide plates in position while the belt is removed. Taking care to not nick or snag the belt on any exposed sharp corners, slide the replacement belt onto the rollers and slide plates to take the place of the removed worn or damaged conveyor belt.
6. With replacement belt (5) in place, re-use existing hardware to reattach the side rail (4) and reassemble the belt tensioning mechanism (3), running the adjustment screw through the side rail flange, through the jam nut, and through the roller shaft.

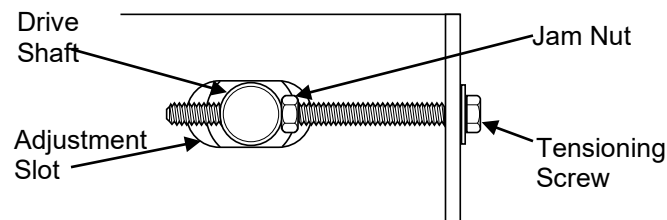

7. Fasten the mounting plate (2) to the side rail, re-using existing hardware. Place magnetically-mounted control box (1) where desired along the side rail.

When reassembly is complete, check the conveyor to make sure it will not catch or snag on any parts. Plug in and turn on the conveyor to resume operation. Perform the Conveyor Tension Adjustment described in the Adjustments section to adjust the conveyor to correct tension and make sure the belt tracks true.