


Use Diagram as reference for all connections in section 2
(Consult the CD30 manual for more detail)

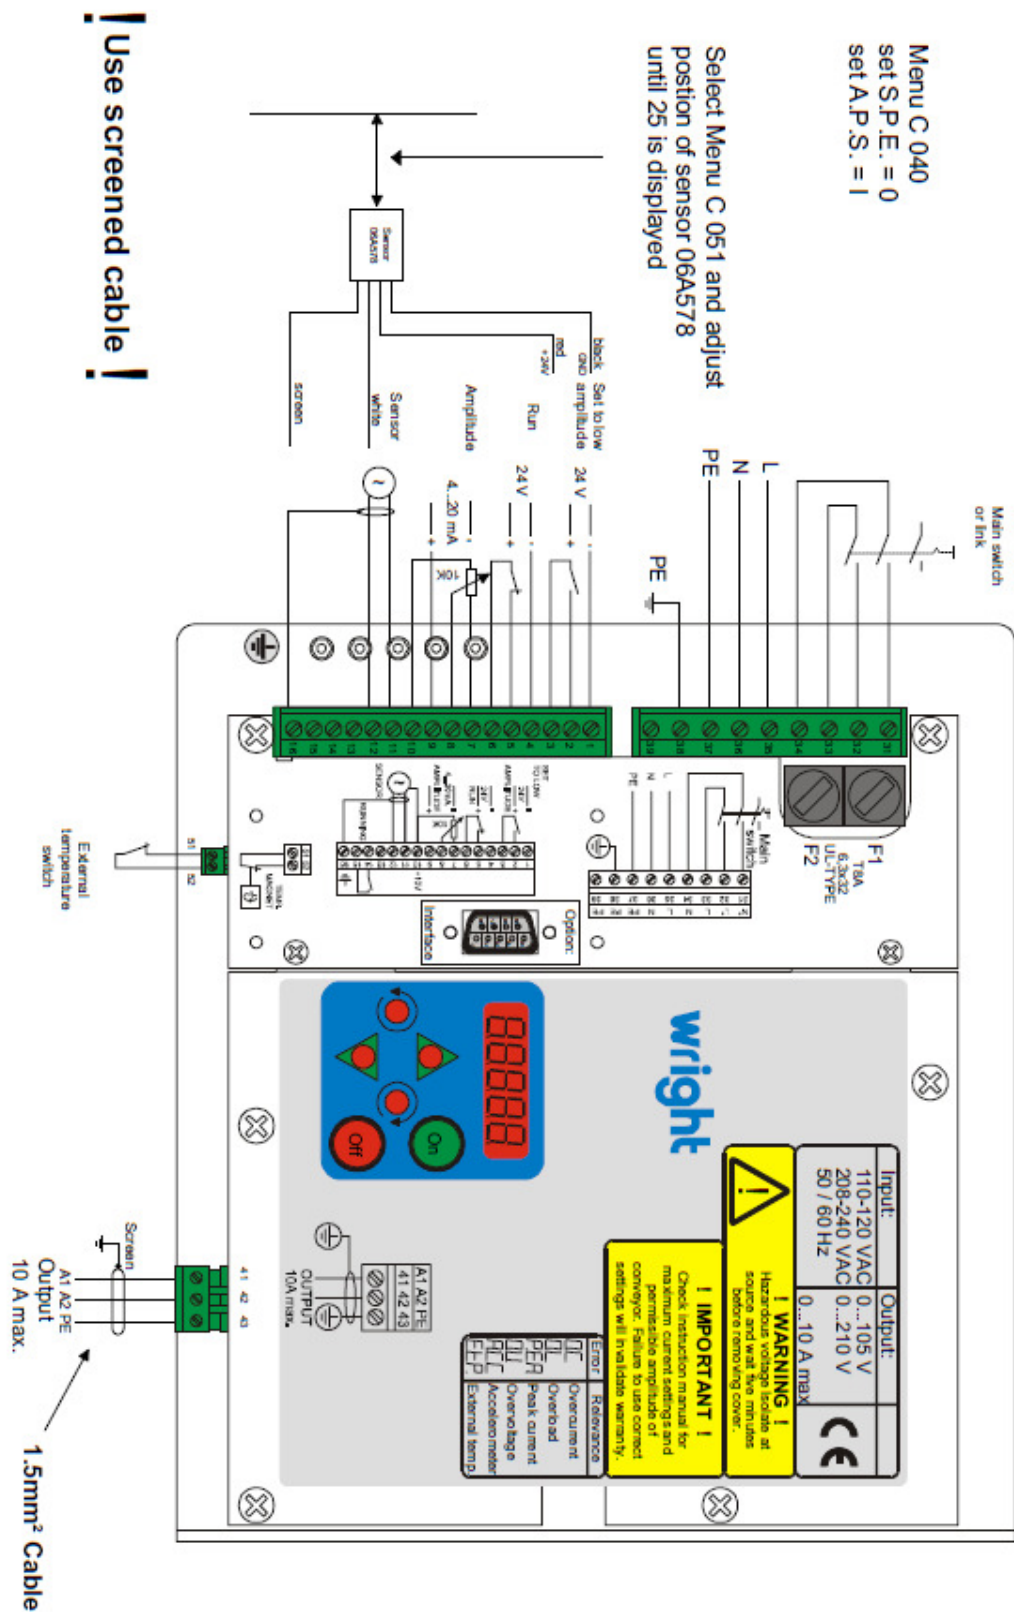

2.1 – POWER (IN/OUT)

- Incoming Plant Power (230v, 1PH, 50/60hz)
 - If local disconnect is used (typically on the door of the CD30):
 - 1st hot leg into terminal 35 (L)
 - 2nd hot leg into terminal 36 (N)
 - Ground into terminal 38 (PE)
 - If not local disconnect is present (i.e. chassis mounted)
 - 1st hot leg into terminal 31 (L)
 - 2nd hot leg into terminal 32 (N)
 - Ground into terminal 38 (PE)
- Outgoing power to coil (removable connector on bottom of CD30)
 - 1st hot leg into terminal 41 (A1)
 - 2nd hot leg into terminal 42 (A2)
 - Ground into terminal 43 (PE)

2.2 – FEEDBACK SENSOR

The CD30 is setup to operate with the standard DMT & Mag II sensor (Gordon p/n 06A578) as well as PPM's own accelerometer. It gets wired into the terminal strip on the CD30/35, so the existing DMT connector on the end of the sensor wire must be cut off if replacing an existing DMT or Mag II with a CD30/35.

Wiring connections for DMT/Mag II sensor:

- Black (ground) – terminal 1
- Red (+24v) – terminal 3
- White/grey (sensor) – terminal 12
- Black (large wire) (shield) – terminal 16

2.3 – SYSTEM CONTROL WIRING

2.3.1 – ENABLE UNIT

The Unit is enabled by closing contacts or by applying a 24v signal

- Input terminals for contacts: 5 & 6
- Input terminals for 24vdc: 4(-) & 5(+24v)

2.3.2 – EXTERNAL SET POINT (C038~E.S.P.)

NOTE: to enable external set point, set ESP = 1 (on menu C038)

- Potentiometer (10kOhm) input terminals: 7(-), 8(E), 10(+10v)
- 0 to +10vdc input terminals: 7(-), 8(+0 to 10v)
- 0(4) to 20mA input terminals: 7(-), 9(+0 to 20mA)

IMPORTANT – A minimum level for the output voltage can be selected when an external set point is used (to adapt the set point to give a true minimum vibration of the feeder), this is achieved by setting the internal set point “A” on the display. This must be done before switching on the external set point source, through the controller. (Should there be no requirement for a zero correction then “A” must be set to “0” before the external set point function is selected).

2.3.3 – STATUS RELAY (C040~r.b.)

Internal relay contact on terminals 14 & 15


Wire into either a 100AC or 24DC relay

- When r.b.=0 (relay closes if output power is present)
- When r.b.=1 (relay closes if incoming (main plant power) power to the controller is present & there are no error messages displayed)

2.3.4 – 2ND SET POINT (C038~2.)

2nd set point input terminals: 2 & 3

2.4 – RECOMMENDED METHOD FOR INSTALLING A FREQUENCY CONTROLLER

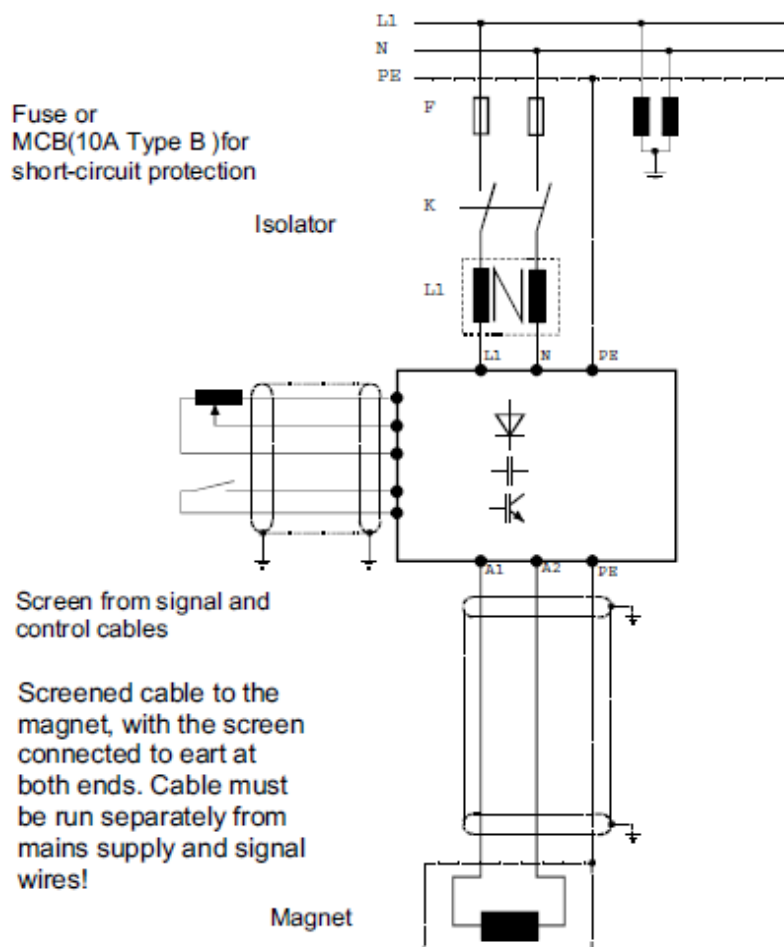

Transient suppression device

Recommended in industrial situations where there are frequently-switching heavy loads or there is a high predominance of thunderstorms.

Line reactor

Recommended for reducing mains distortion (PFC) and protecting the drive unit under harsh operating conditions. Reduces down-time and increases operating life.

CD30 Frequency converter drive
Power rating 2kVA

1.5 mm² power cables are recommended. These are rated for 21A providing that cables are not bunched.