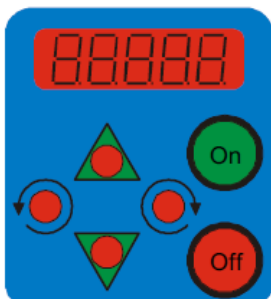





3 – CD30 IMPORTANT MENU SETTINGS

(Consult the Wright CD30 manual for more detail)

3.1 – BASIC DISPLAY NAVIGATION

Settings and Displays		Operating Displays	
		Increases value	 Normal running Set point in %
		Decreases value	 Enable OFF
		Back	 Stop using "0" button
		Programming mode or confirmation	 Switch on phase

Settings:

Adjustments are made through menu settings. The different parameters are called up by entering user codes.


All settings are entered by firstly pressing the P key followed by choosing the menu number with the arrow keys.

Setting characteristics

Pressing for a short time on the arrow keys increases/decreases the display by one unit. Pressing for a longer time increases/decreases the value in units of ten. Changes are saved on leaving the menu or if a key is not pressed for 60 seconds.


3.2 – C210, C143, C127, C117

- Hide Function menus (C117) – When set to 1 all parameter menus are not accessible, only the set point can be changed
- Hide Service menus (C127) – When set to 1 service menu C040 is accessible.
- Set (C127) to zero to hide the service menu.

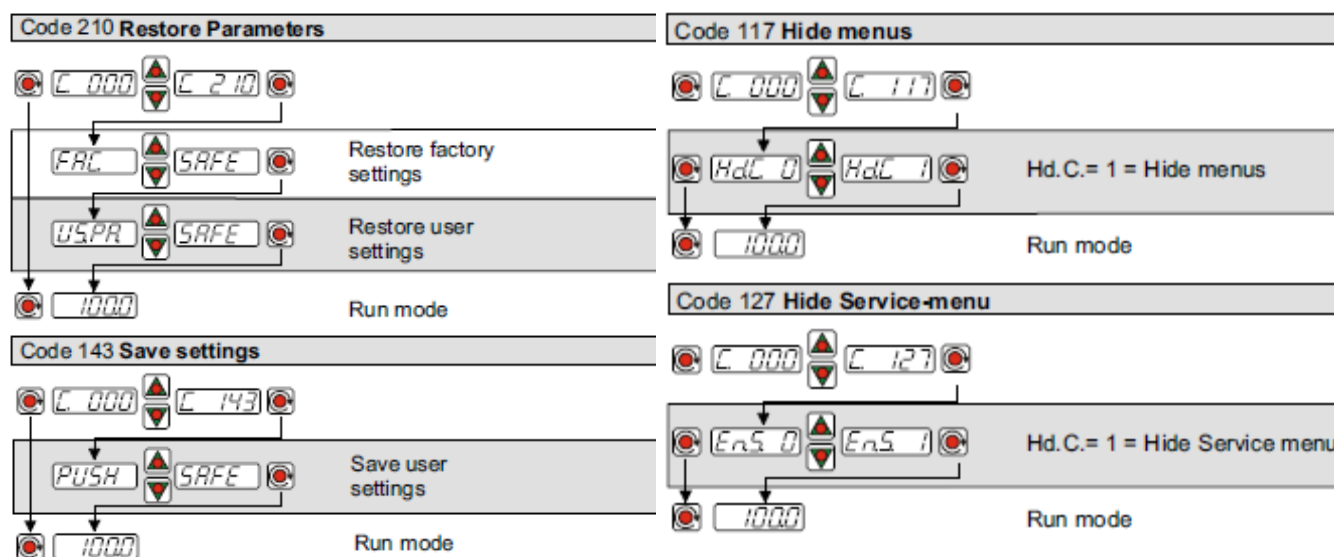

NOTE: C127 has a typo, when EnS=0 the service menu (C040) is hidden.

3.3 – C038 Function Settings

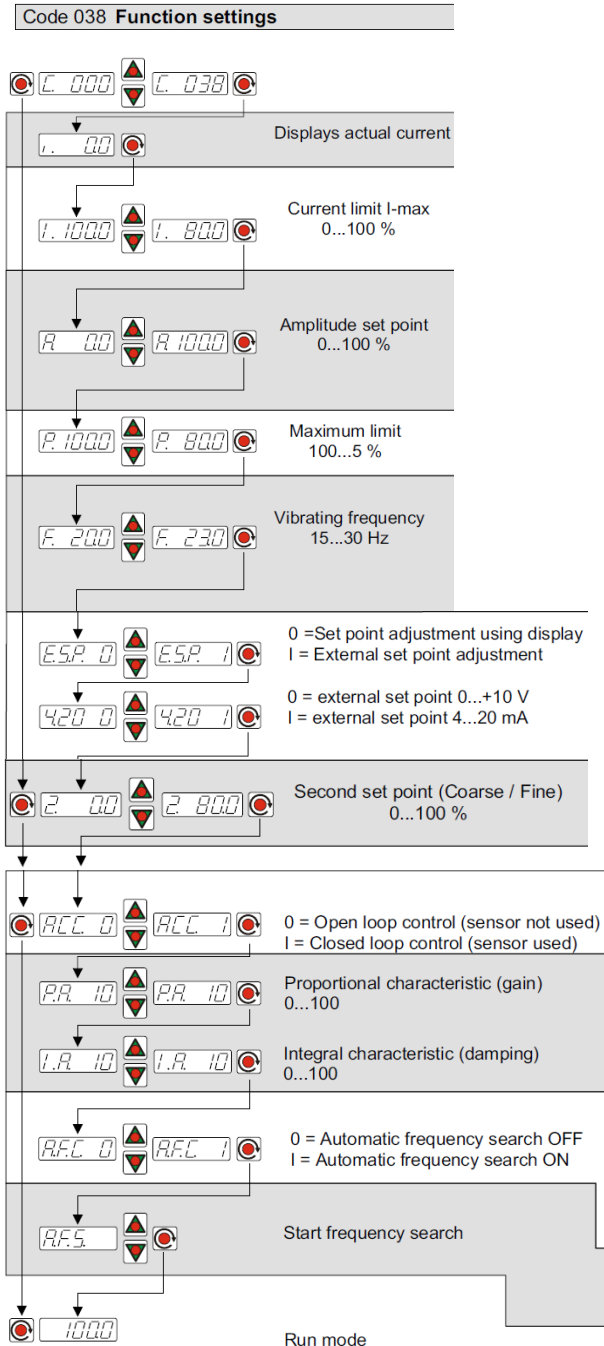

3.4 – C040 Service Settings

