


FRYER'S THERMOFLUID SYSTEM - FILLING INSTRUCTION

- **OCF6018-03 TORTILLA CHIP FRYER**
- **OHE3000-02 HEAT EXCANGER**
- **OMS3000-02 SUPPORT MODULE**
- **OPLCF60-001 PIPING KIT**

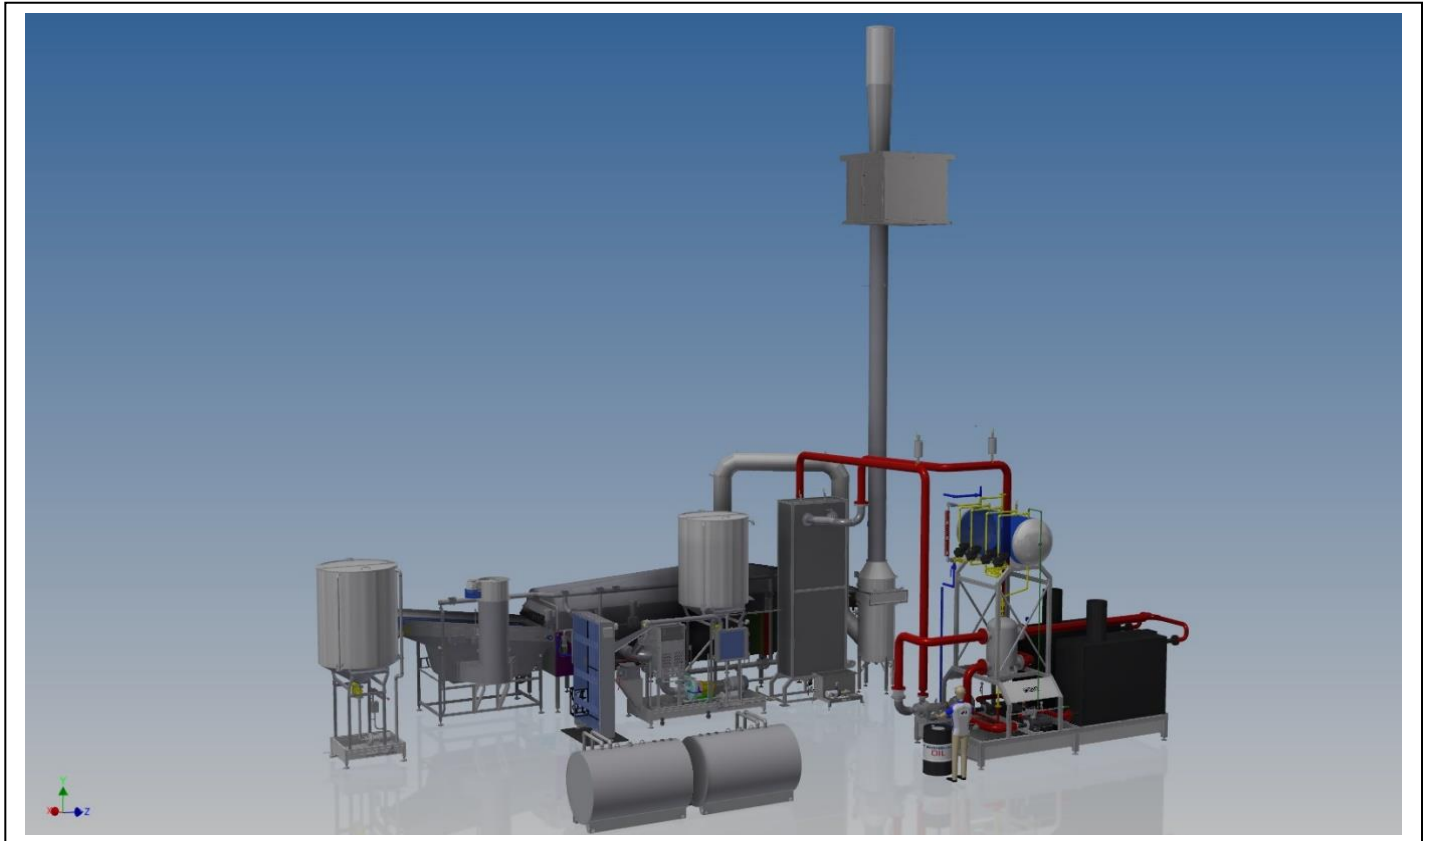

Use reference “**OCF6018-03 - P&ID 071824 - 201625 - SO116954 - FIESTA - ARTE SANO - 3000LBS CHIP FRYER**” for valve’s location.

NOTE:

Proceed only if circuit is already PRESSURE tested and ALL the safety devices checked and in good working condition.



ONLY a drum air operated piston pump must be use to fill the thermal fluid circuit, with a MAX. flow rate not exceeding 3.7Gal/min.



Lawrence part. # AP011-07


PUMP SPECIFICATIONS



WORKING PRESSURE	30 - 150 PSI
MAXIMUM AIR PRESSURE	150 PSI
AIR INLET CONNECTION	1/4" NPT (F)
PUMP OUTLET CONNECTION	3/4" NPT (F)
NOISE LEVEL	81 db



FOLLOW THESE INSTRUCTIONS CAREFULLY TO FILL UP THE THERMOFLUID SYSTEM.



NOTE: USE ONLY MULTITHERM OG-1 THERMOFLUID OIL

- 1) Open valves **V18, TV5a, TV5b, TV6a, TV6b, V22, EV3, V17, TV7, TV15, TV15a, V28:**


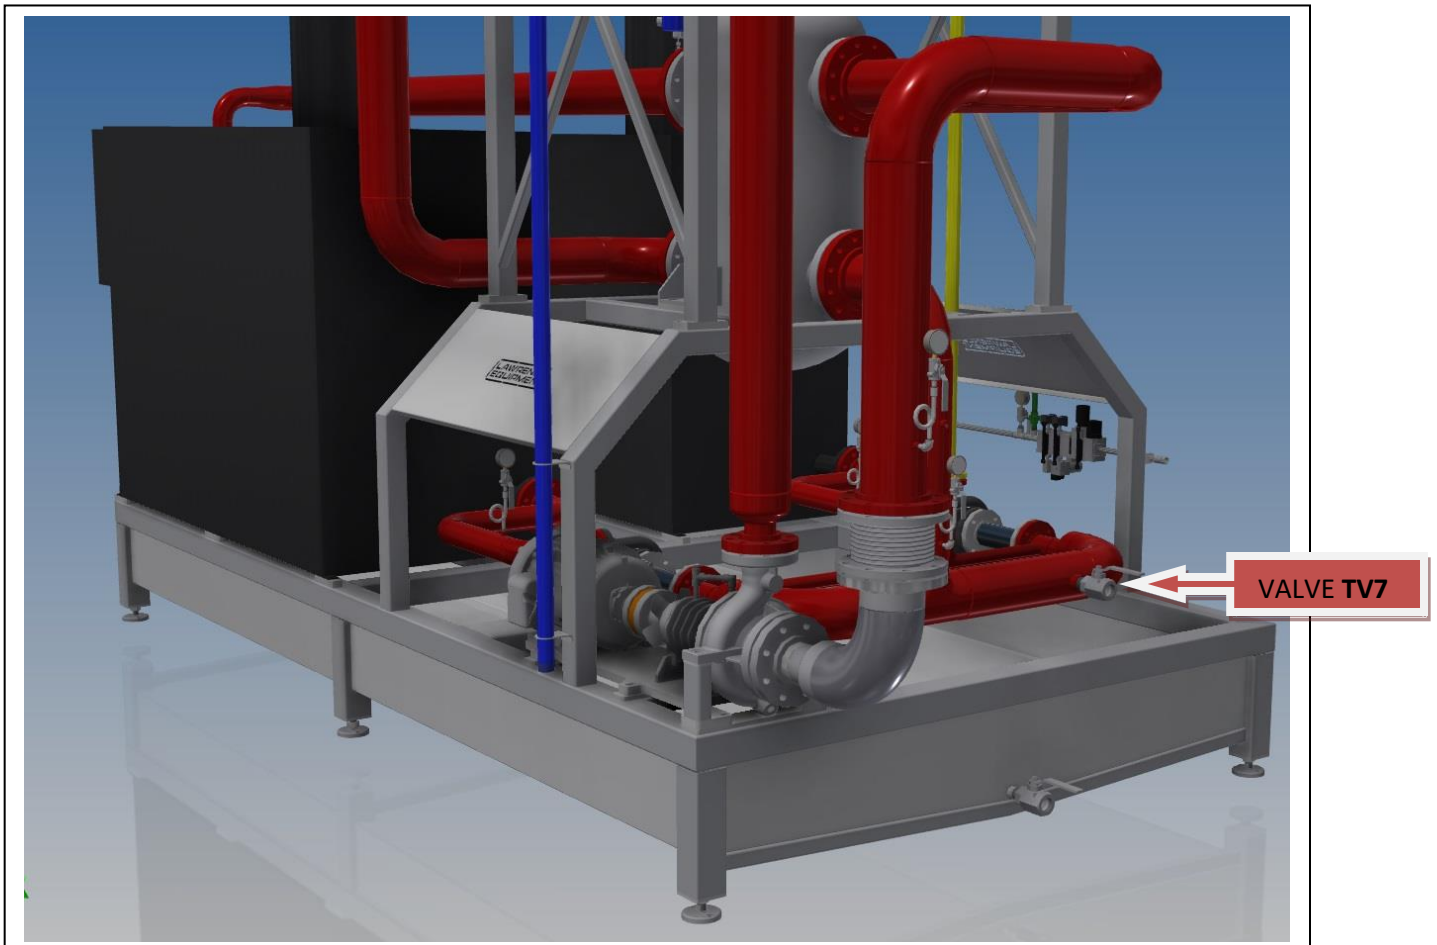


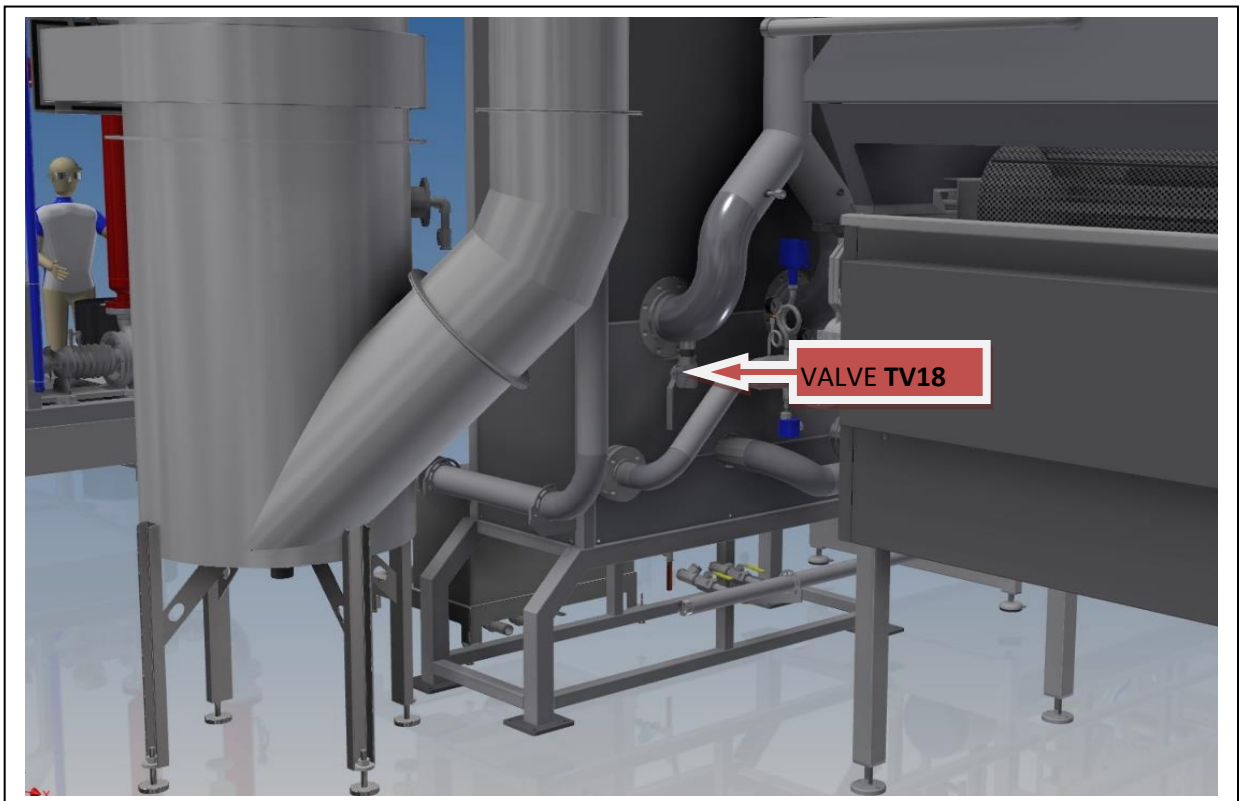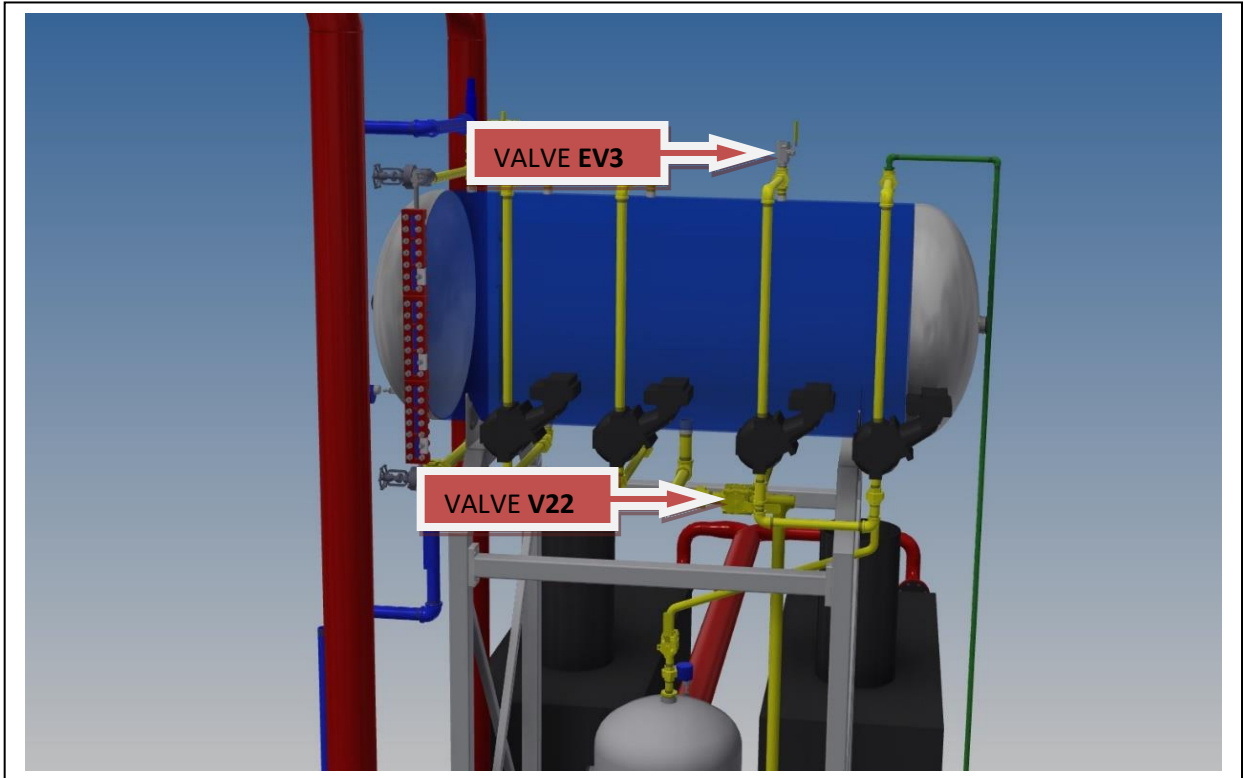

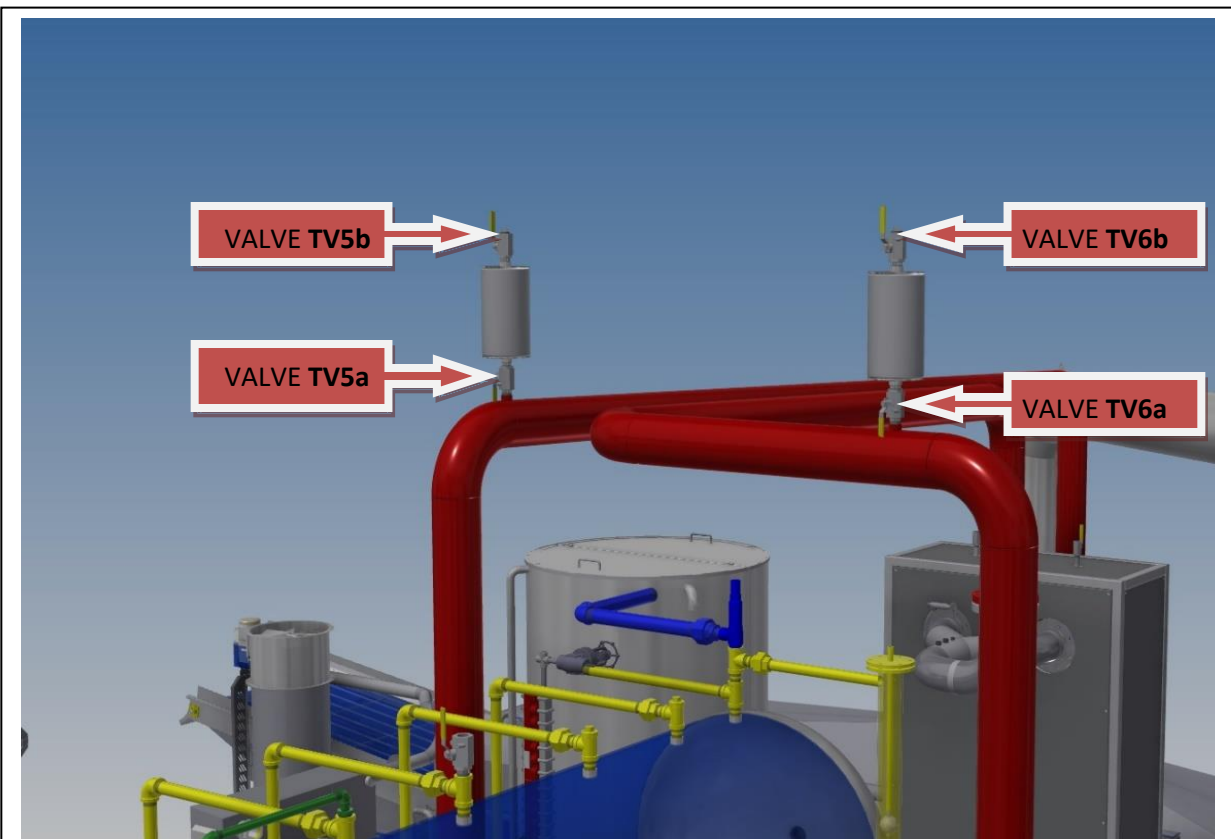
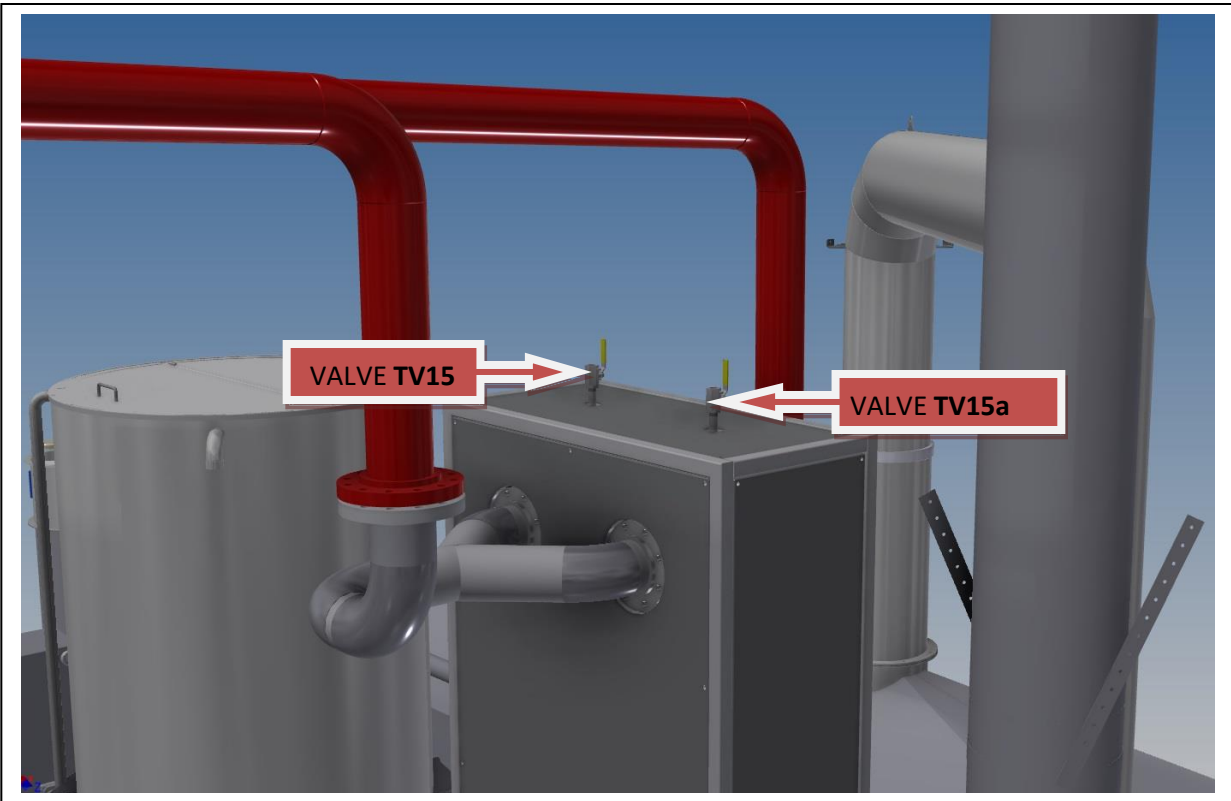


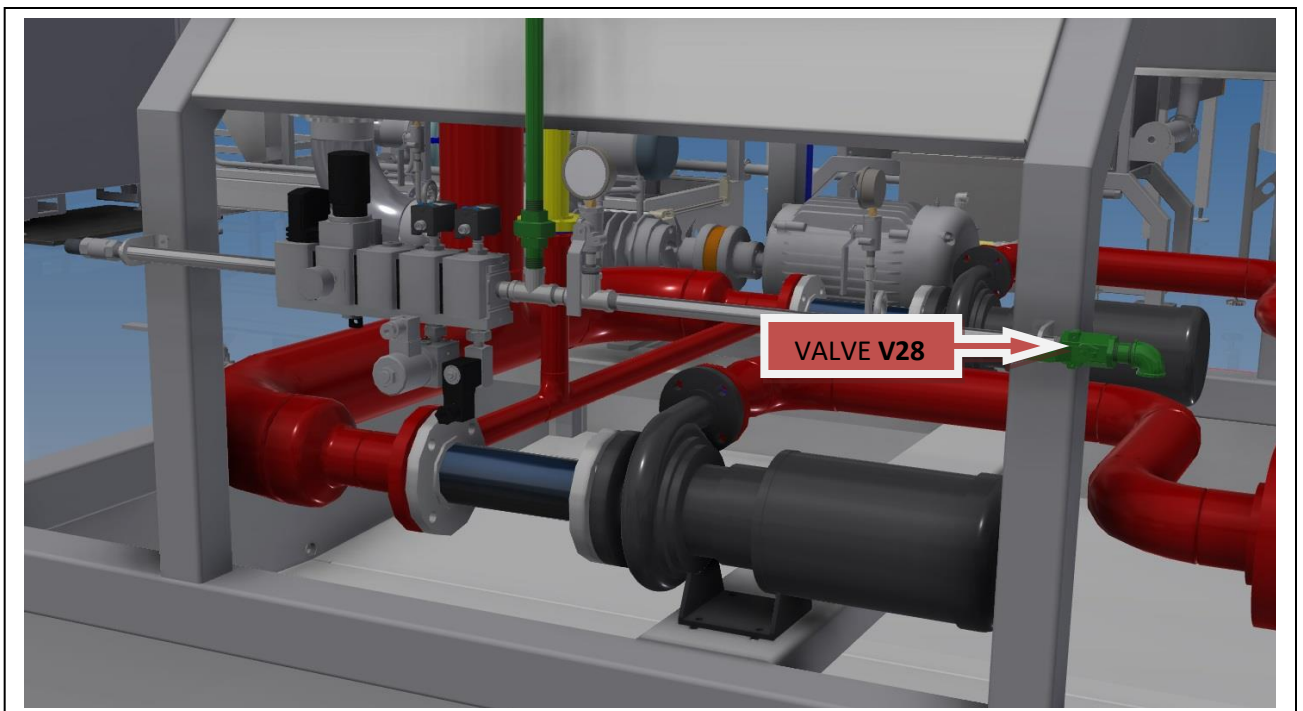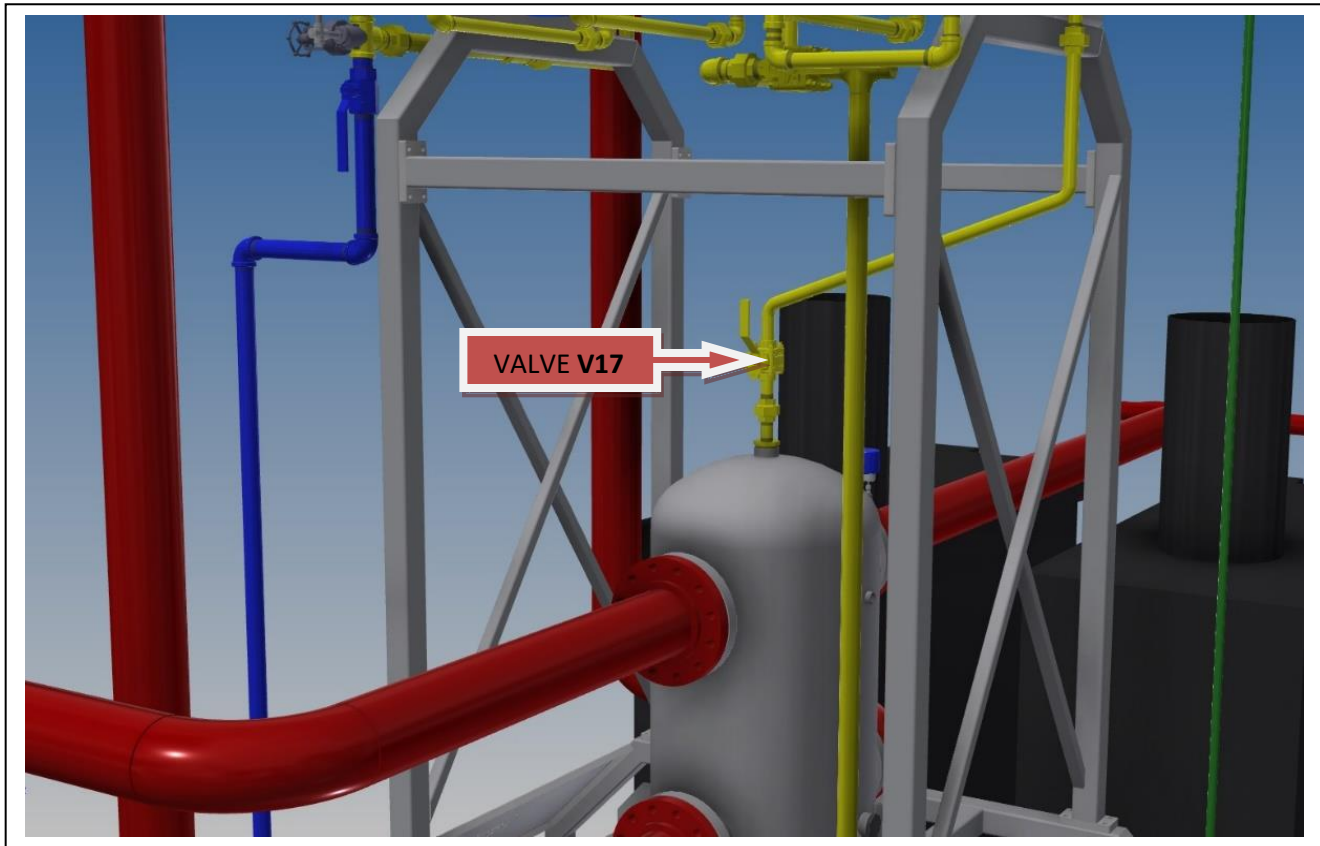



- 2) Be sure that the following valves are close: **V23, V24, V5**

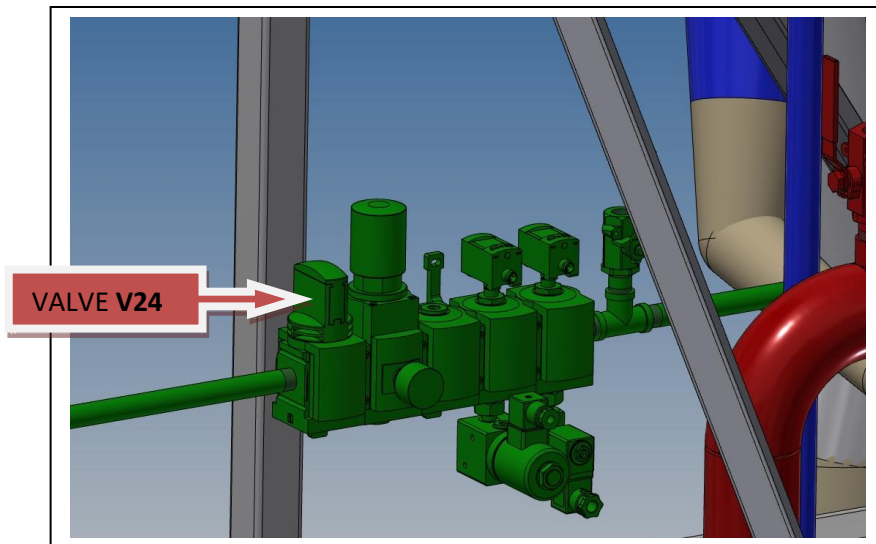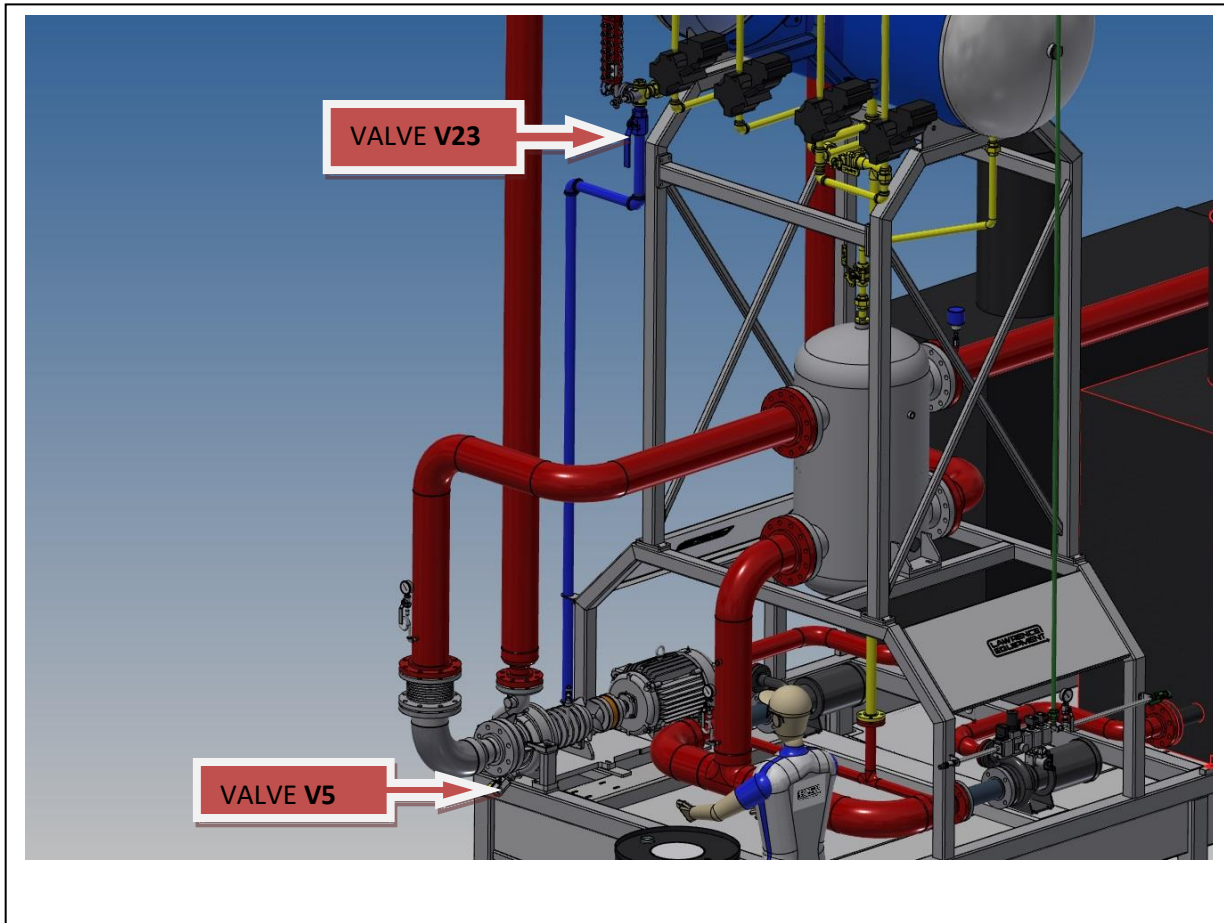


- 3) Connect the filling air piston pump to valve **V18** and start pumping oil VERY slowly in the circuit until oil overflow from valve **TV6**:

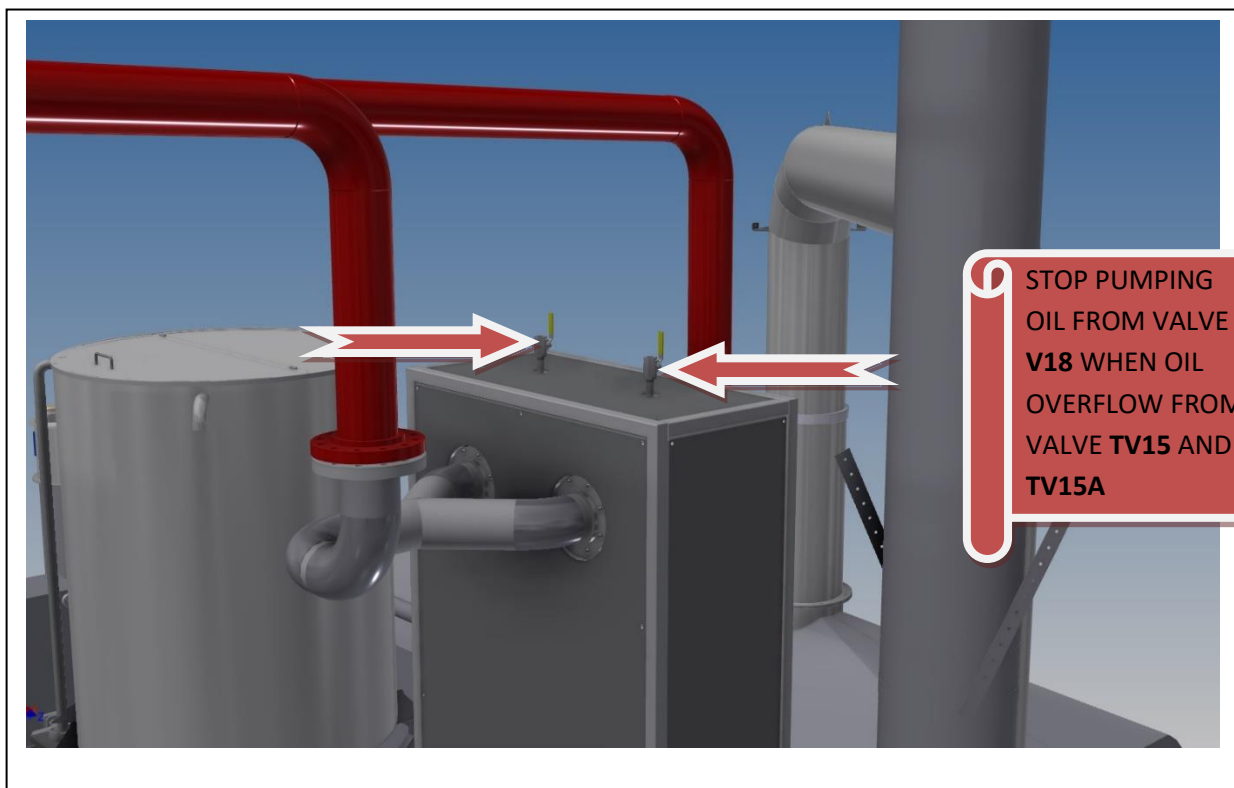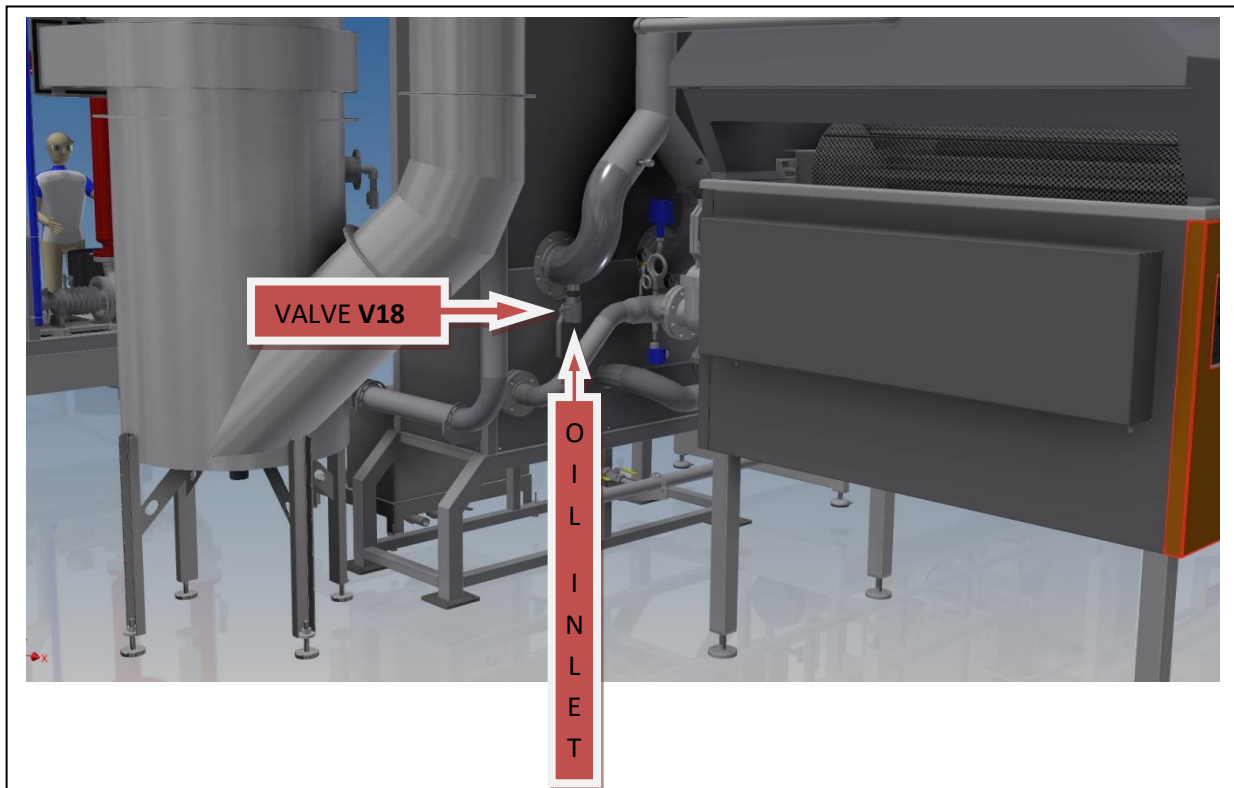


- 4) Close valve **V18**, valve **TV15** and **TV15a** and connect the air piston pump to valve **TV2**. Then start pump oil slowly until level reach $\frac{1}{4}$ of the expansion tank capacity. The level is indicated on the sight glass of the expansion tank by a white band, also, be sure oil level is just above the thermocouple probe and the line indicator on the level switch (NOTE, **do not overfill the expansion tank**):

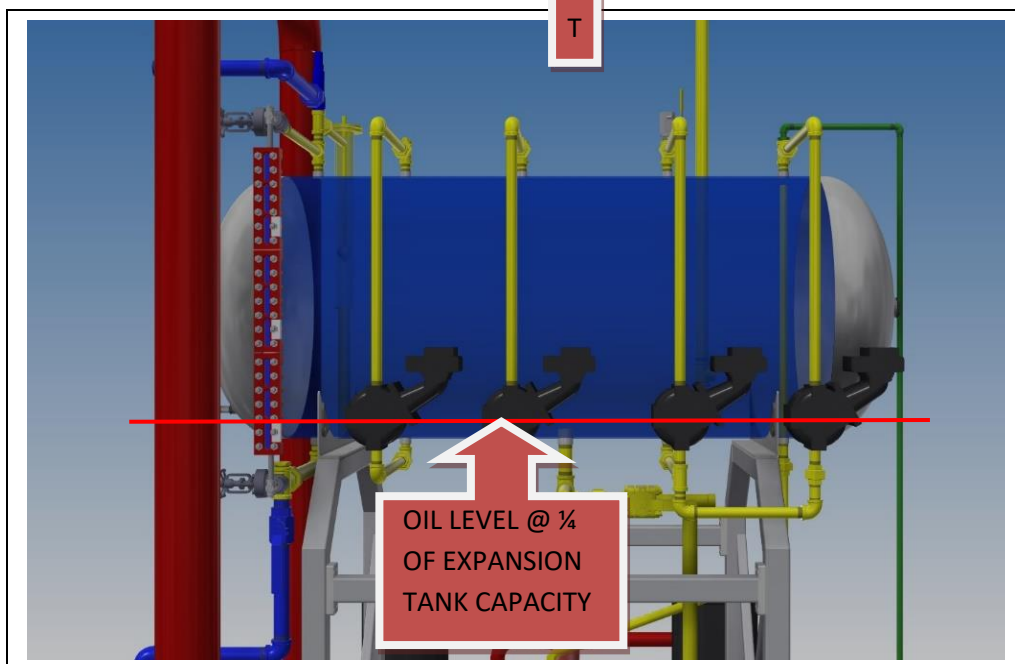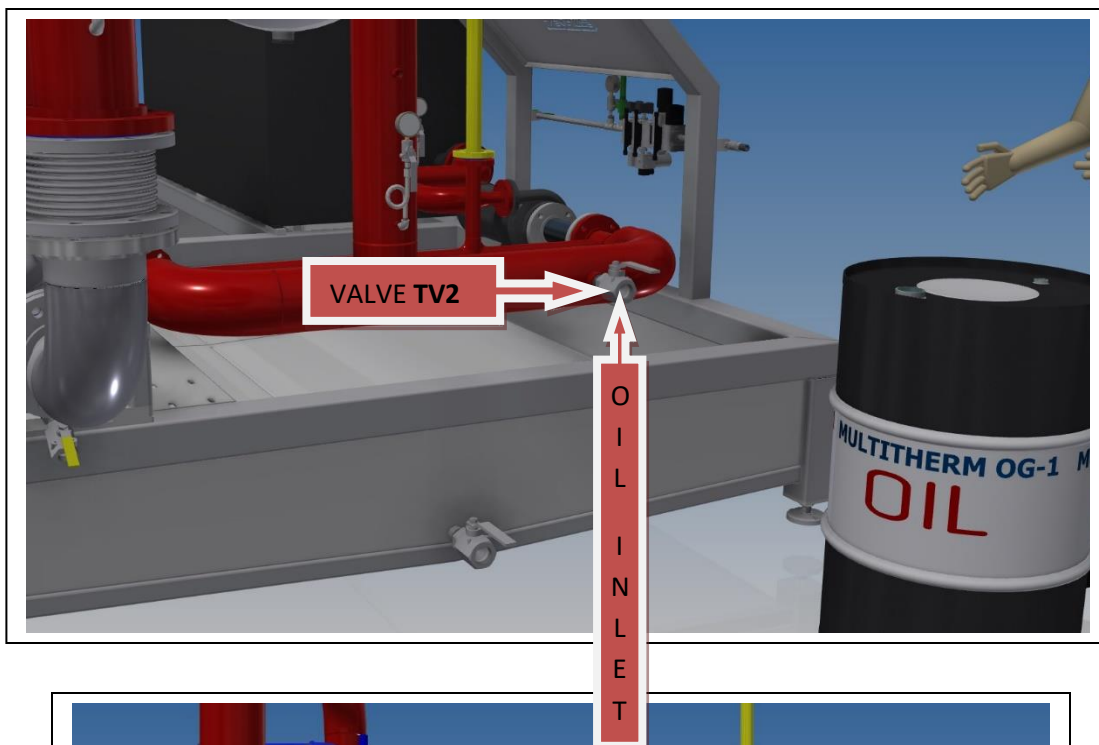



- 5) Close valve **V22**:

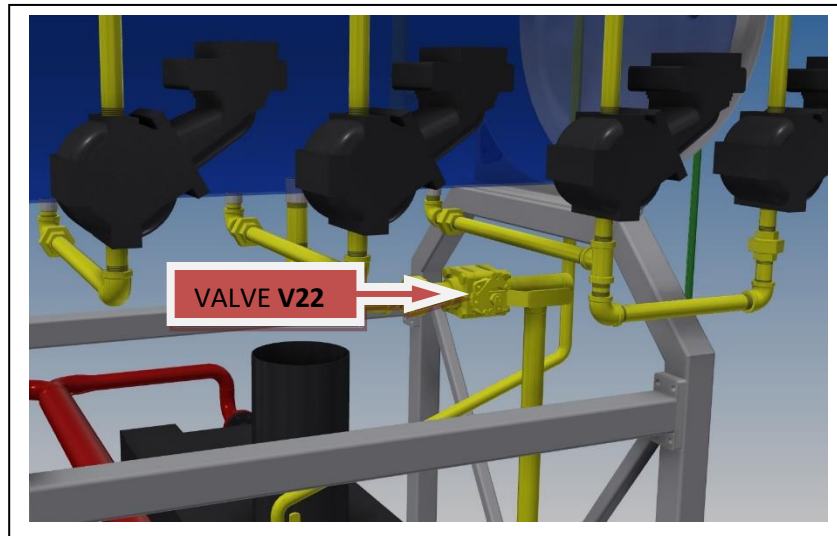


- 6) After valve **V22** is close, continue to pump oil slowly until oil overflow from the two top **TV5b** and **TV6b** valves. Keep pumping oil until no air bubbling is seen coming out from TV5b and TV6b:

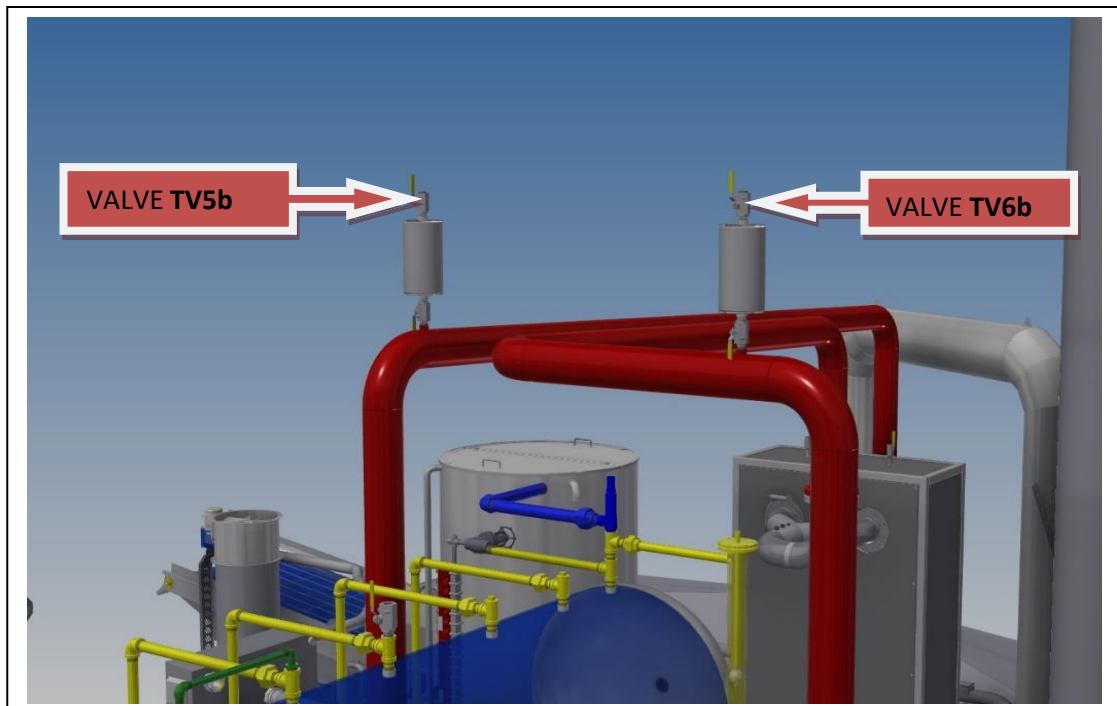


- 7) Stop pumping oil and close valve **TV2**, **TV5b** and **TV6b**:

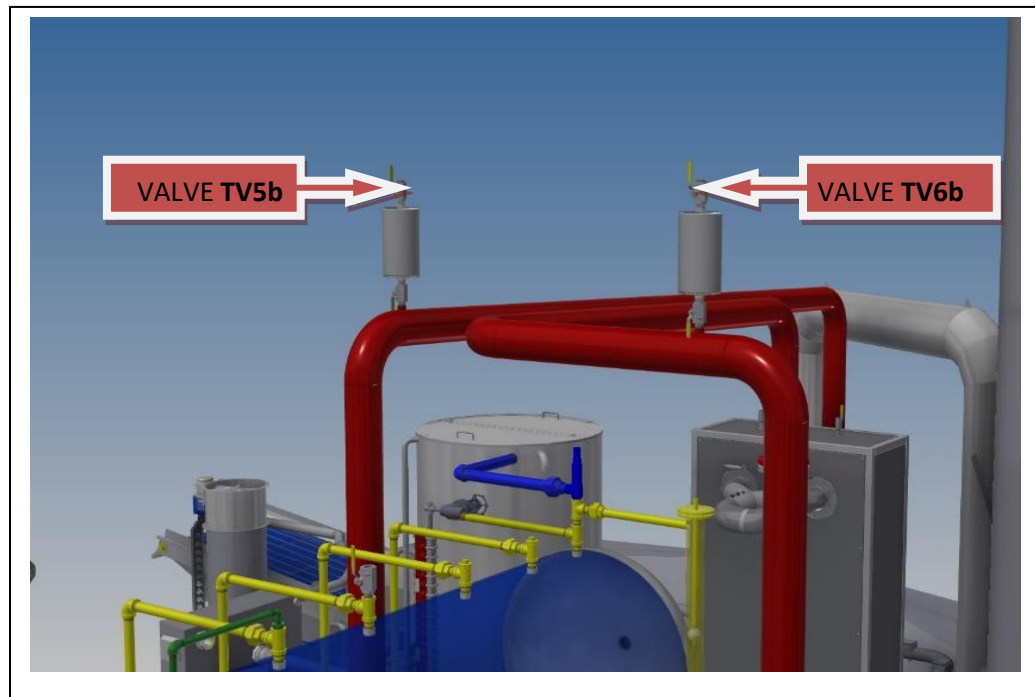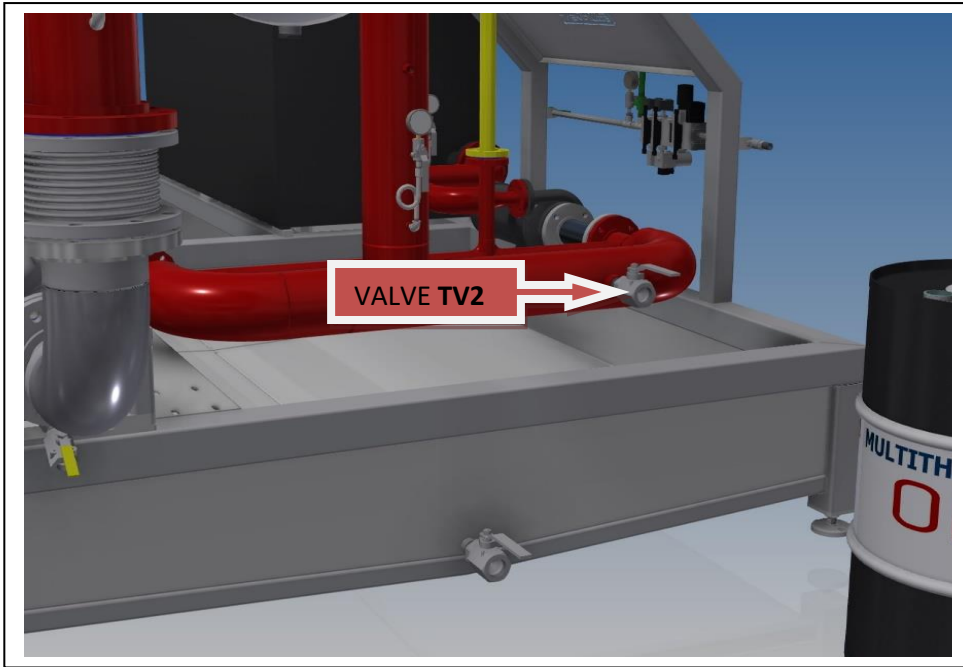



- 8) Start PUMP **PMT5**, **PMT4** and **PTM4a** and let the system running for 30mins min:

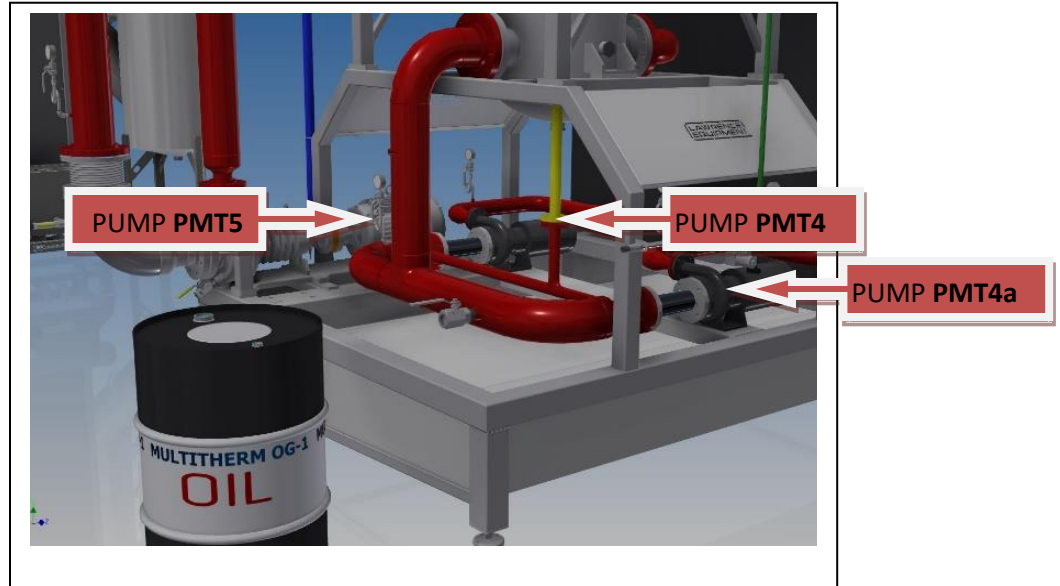


- 9) Stop all the PUMPS and open the two breathing valves **TV5b** and **TV6b** to purge the circuit from the air collected in the collecting tanks. Keep them open for 5mins and then close them again. Repeat operations 8 and 9 for at least 3 more times.

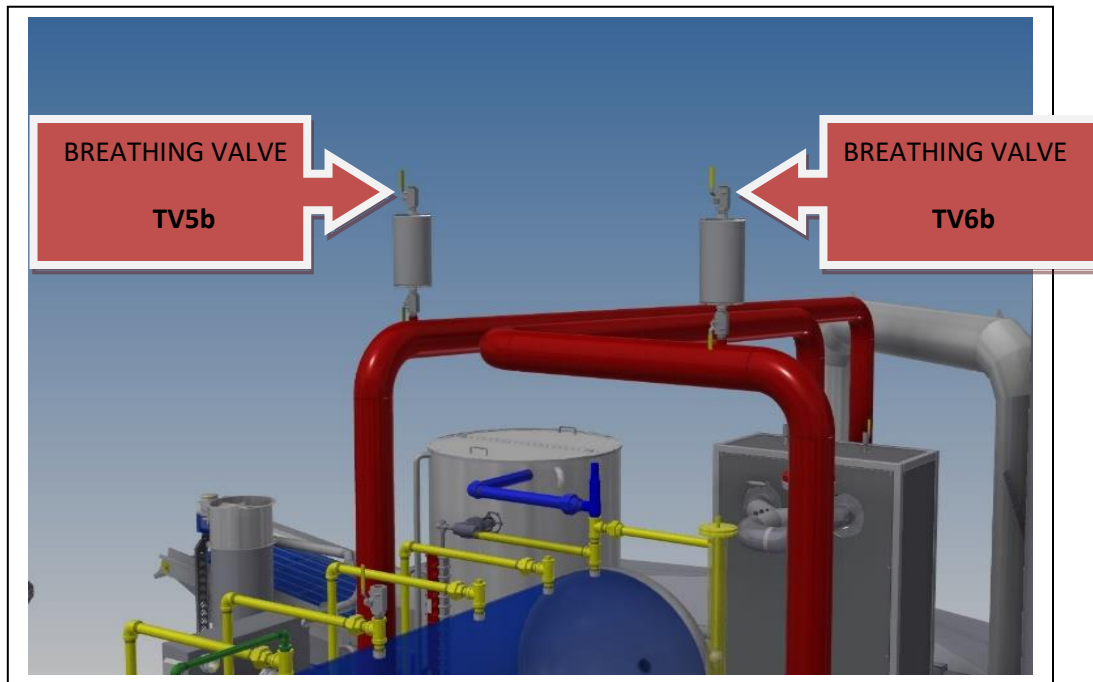


- 10) When all the air is breathe out from the circuit, close valve **EV3** and valve **V28**.

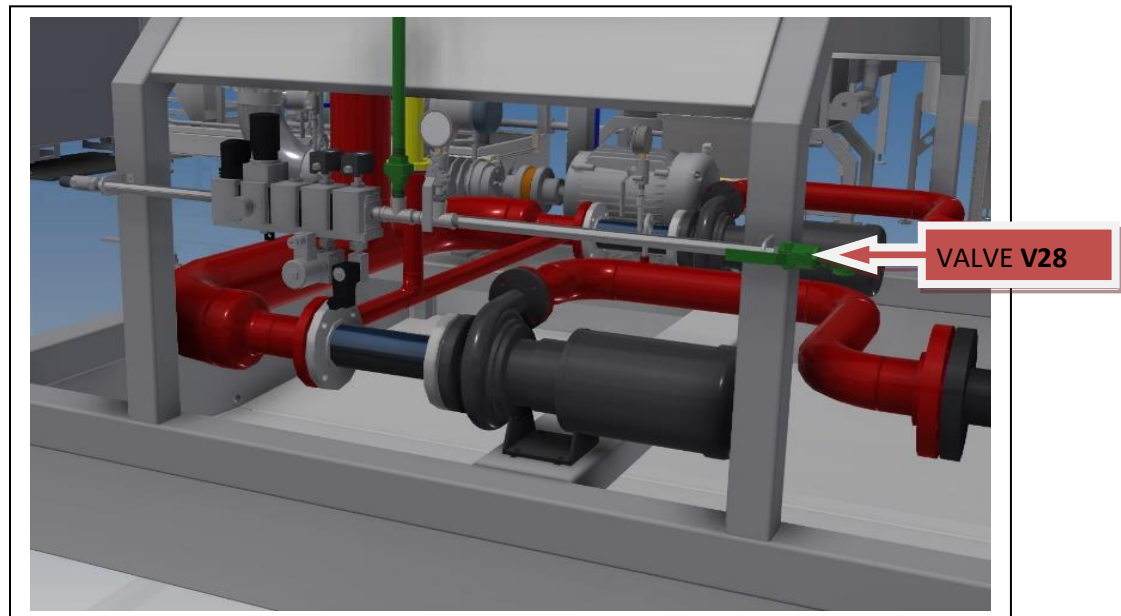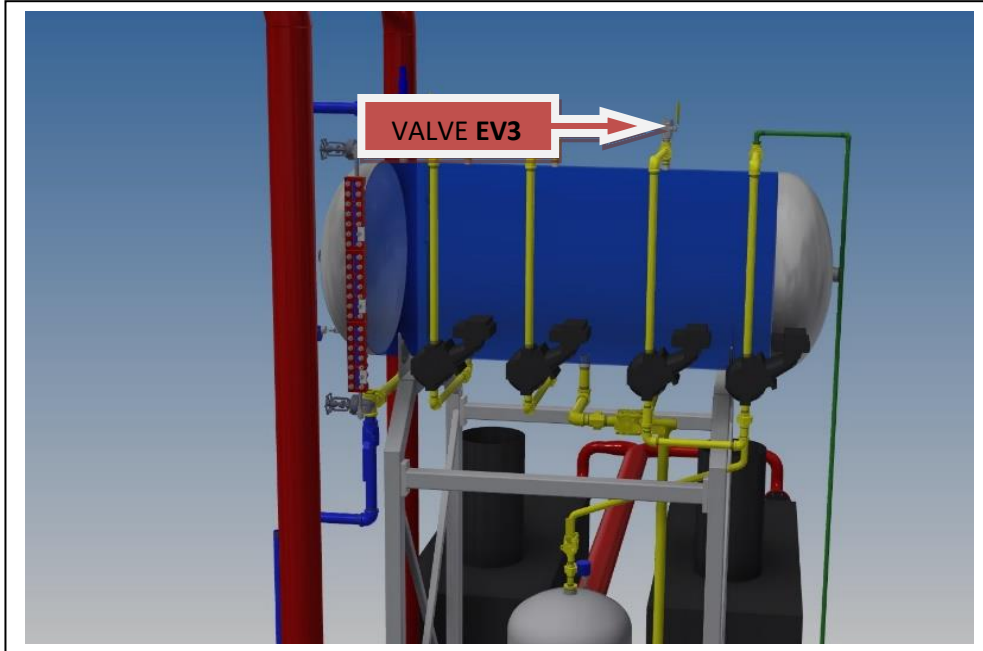

- 11) Adjust the NITROGEN pressure regulator on the NITROGEN cylinder to **40PSI** meanwhile opening the tank valve **PR1a**, and then the regulator on the FESTO unit to **20psi** meanwhile opening valve **V24**.

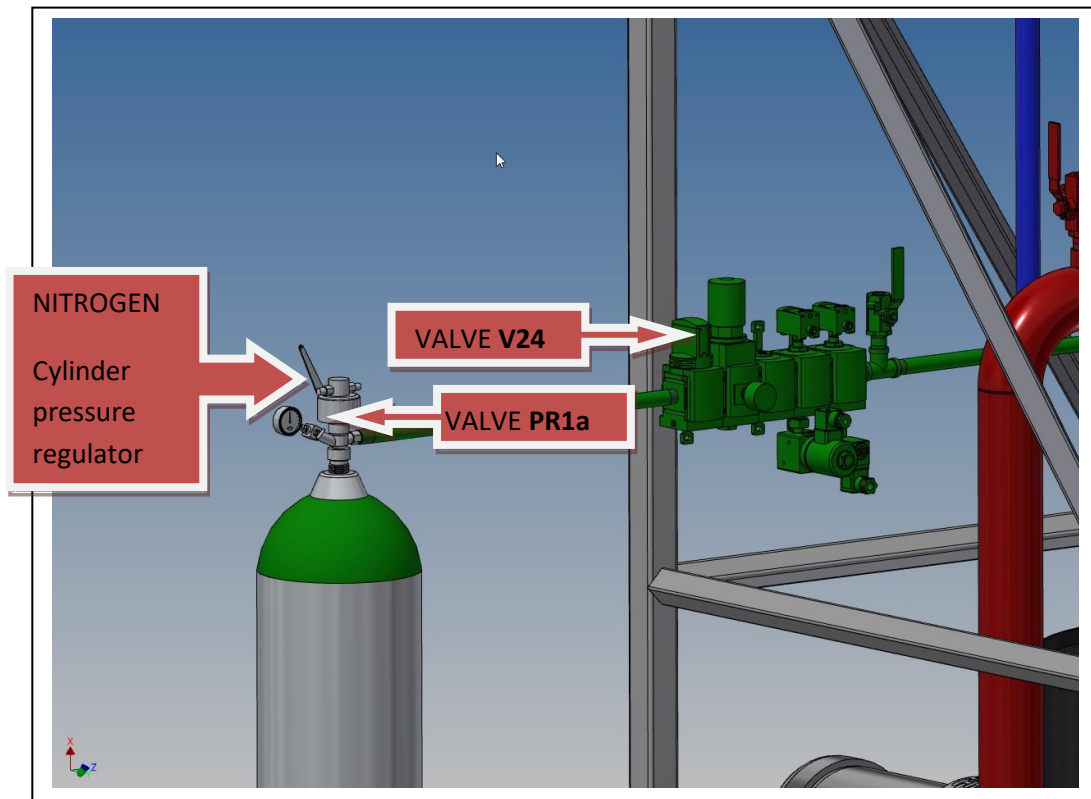

- 12) Open slowly valve **V22** to pressurize the circuit:

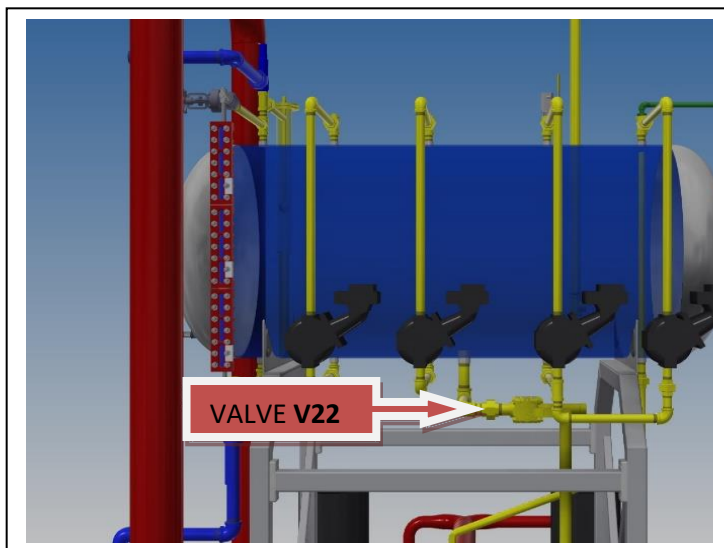

- 13) Check if oil level is still at $\frac{1}{4}$ of the expansion tank (low level switches LSL4 and LSL5 must be close). If level went down than some air is still present in the circuit. Go back to step #4.
- If the level remained at $\frac{1}{4}$ **then lock all the lockable valves with a lock (ref. valve chart):**



The system is now pressurized and ready for the next step,

“Heating up the circuit the first time”.

Please follow instructions on how to heat up the system the first time and during start up.