


MULTIHEAD TYPE COMPUTER WEIGHER

CCW-RV-2**W

INSTRUCTION MANUAL

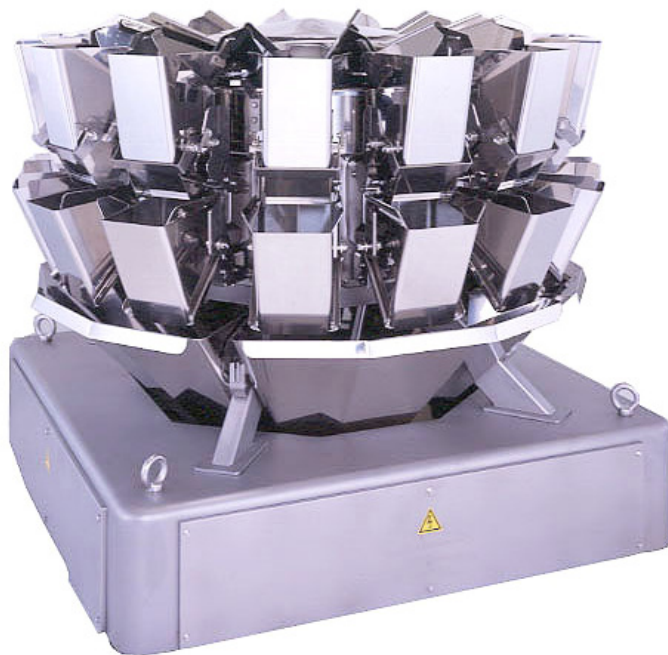

⚠ WARNING

- Do not carry out installation, operation, service, or maintenance until thoroughly understanding the contents of this manual.
- Keep this manual available at all times for installation, operation, service, and maintenance.

ISHIDA CO., LTD.

Cautionary Items on Software

Thank you for purchasing the product.

This product is equipped with a special software program to meet user's demands flexibly and promptly. The following contents are to ask the software users for their understandings and the precautions for use.

This software is divided into two main branches:

- (1) Application Program
- (2) OS (Operation System)

Actual operations (such as key input and print) are executed by following the established procedures on the Application Program (1), which is a proprietary program ISHIDA CO., LTD. designed.

The OS (2) has a role to perform the basic function (such as data management) when executing the Application Program. The OS, unlike the Application Program, does not have to be exclusive to each product; rather it can be commonly used to different products. For this reason, a commonly used OS is effective, and ISHIDA CO., LTD. use Windows Embedded Standard. The following points need to be noted:

1. Do not copy or transfer (use on other devices) Windows Embedded Standard.
2. Do not perform reverse engineering, reverse compiling, reverse assembling, or other translations on Windows Embedded Standard.
3. Windows Embedded Standard is protected by copyright. Users are licensed to use it, which does not mean that the copyright is transferred to users.
4. ISHIDA CO., LTD. are responsible for the all warranties including the warranty of merchantability and the warranty of fitness for special purpose in the use of Windows Embedded Standard. Microsoft Corporation is not liable to any responsibility.

In case that the above four contents are not understood/accepted or followed, ISHIDA CO., LTD. may have to ask to stop using the product.

The actual OS is built in the weigher. Therefore, the above four items are not to be infringed unless the product is disassembled.

*Windows is a registered trademark of Microsoft Corporation.

IMPORTANT INFORMATION



WARNING

- **When performing installation, maintenance or inspection of the device, read this manual thoroughly. Be aware of the possible danger of the device and perform operation by following the instructions in this manual.**

• SAFETY PRECAUTIONS

- This instruction manual specifies correct use of the device associated with cautionary statement in order for prevention of potential hazard.
- Read through Section 1, "1 SAFETY", thoroughly and carefully prior to use of the device. The Section 1 specifies precautions essential for prevention of potential hazard to operator and any other person located close to the device.
- Keep this instruction manual readily accessible for the operator and any other person required.
- Contact the distributor or the nearest Ishida Customer Support if you have any question or need further information on the device.

• INDEMNITY

ISHIDA CO., LTD. ACCEPTS NO RESPONSIBILITY FOR ANY DAMAGE AND/OR LOSS OF PROPERTY CAUSED BY THE FOLLOWINGS:

- USAGE OF THE DEVICE NOT IN ACCORDANCE WITH THIS MANUAL OR ASSOCIATED SPECIFICATION SHEET.
- USAGE OF THE DEVICE WITH ANY OTHER SOFTWARE PROGRAM THAN WE FORMALLY SUPPLIED FOR THE DEVICE.
- USAGE OF THE DEVICE WITH ANY OTHER PERIPHERAL DEVICE THAN THAT WHICH ISHIDA CO., LTD. GUARANTEES COMPATIBILITY WITH THE DEVICE.
- ANY OTHER MODIFICATION AND/OR REPAIR OF THE DEVICE THAN THAT WHICH ISHIDA CO., LTD. CONDUCTED.
- FORCE MAJEURE, INCLUDING BUT NOT LIMITED TO, ACTS OF GOD, FIRE, EARTHQUAKE, FLOOD OR ACCIDENT.
- FROM AN ACT BY A THIRD PARTY
- THE INTENTIONAL OR NEGLIGENT ACT BY CUSTOMERS
- IMPROPER USE BY CUSTOMERS
- USE UNDER ABNORMAL CONDITIONS

- **WARRANTY**

Ishida Co.,Ltd warrants to the customers that the device shall be free from defects in material and workmanship. THIS WARRANTY IS THE ONLY WARRANTY APPLICABLE TO THE DEVICE.

ISHIDA CO.,LTD'S LIABILITY FOR BREACH OF WARRANTY SHALL BE LIMITED SOLELY AND EXCLUSIVELY TO REPAIRING OR REPLACING, AT ISHIDA CO.,LTD'S OPTION, THE DEFECTIVE DEVICE.

THERE ARE NO OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WHICH ARE HEREBY DISCLAIMED. THE REMEDIES SET FOR BREACH OF WARRANTIES SET FORTH ABOVE ARE EXCLUSIVE REMEDIES AND ISHIDA CO.,LTD SHALL NOT BE RESPONSIBLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES.

- **COPYRIGHTS/CONFIDENTIALITY**

Ishida Co., Ltd. holds the copyright of this manual. Any disclosure to third parties or unauthorized copying of the information contained herein, directly or indirectly, in whole or in part, is not permitted without prior written approval from Ishida Co., Ltd.

- **MISCELLANEOUS**

Although this manual has been carefully edited, if there are any mistakes or if you have any questions, please check the machine type (model) and machine identification and contact your distributor or Ishida Customer Support.

The model and machine identification are indicated on the device plate attached to the device.

The information contained herein may be changed without prior notice.

		44 SANNO-CHO, SHOGGIN, SAKYO-KU KYOTO, 606-8392 JAPAN	
MODEL _____			
PROJECT No. _____			
SERIAL No. _____			
MFG. DATE _____			
POWER SINGLE	AC	V	A
3-PHASE	AC	V	A
FREQUENCY			Hz
ISHIDA CO.,LTD.			
MADE IN JAPAN			

Device Plate

OBJECTIVES AND ORGANIZATION OF THIS MANUAL

1. Purpose of this manual

This manual is designed to provide users with information about the operation, maintenance, inspection, and installation of the Ishida CCW-RV series.

2. How to use this manual and how this manual is organized

Chapters 1 through 4 contain basic information such as safety consideration, structure, and the operation of this device. From chapters 5 and on, more technical information is presented, such as detailed description of the device functions, including various data settings, and maintenance and inspection procedures. In order to acquire information which is necessary for your service, personnel involved in daily production using this device should read the early chapters, and personnel involved in management of the production line or maintenance of the device should read all chapters thoroughly.

The organization of this manual, the contents of each chapter, and the intended readers are described in the table below. All personnel involved in operations with the equipment should select the required information to make effective use of this manual.

Note

The definition for each intended reader described in the table below is as follows:

- | | |
|----------------------------|---|
| • Operator: | <p>Personnel who perform basic operations during daily production with the production line (i.e., operator level operations).</p> <p>Do not perform any work in this manual that is targeted to any personnel other than Operators.</p> |
| • System administrator: | <p>Personnel who, in addition to the operator level operations, perform registration for weighing and adjustment operations (i.e., administrator level operations).</p> <p>Do not perform any work in this manual that is targeted to maintenance engineers or Ishida service engineers.</p> |
| • Maintenance engineer: | <p>Personnel with specialized knowledge about the equipment who perform maintenance or inspection of the equipment (i.e. installation level operations).</p> <p>Do not perform any work in this manual that is targeted to Ishida service engineers.</p> |
| • Ishida Service engineer: | <p>Personnel who, in addition to the system administrator level operations, perform tuning when installing the equipment.</p> <p>Unless otherwise noted, there is no limitation in performing any operation described in this manual.</p> |

Chapter	Contents	Intention	Intended reader
1.SAFETY	- Warning labels and their attached locations - Precautions for the operation of the device - Proper use of the warning terms	To ensure that the safety maintenance and hazardous areas protocols are thoroughly understood by the personnel dealing with this device. Read this chapter before using the device.	- Owner of this device - All users
2.INTRODUCTION	- Usage, features, and specifications of the device - Descriptions of the terms used in this manual - Components of the device and operation outline	To understand the basic components, outline, usage, application range, and application limit of the device.	All users
3.OPERATING PANELS	- Description of the operation screen contents - General operation instruction for the operation screen	To understand and master the basic operation method and general operation of the operation screen.	All users
4.OPERATING PROCEDURES	- Outline of the production, preparation work, and actual procedures - Basic adjustment procedures during production	To understand and master the basic procedures for daily production and the basic adjustment procedures during production.	- Operators - System administrators
5.REGISTERING OF PRODUCTS	Screens for preset functions	To understand and master the procedures to set product data for weighing a new product.	System administrators
6.FUNCTIONS OF THE OPERATION SCREENS	Functions of each screen	To understand the functions and operating procedures of each operation screen, and understand and master the advanced operations.	- Operators - System administrators
7.USEFUL FUNCTIONS	Advanced operations	To understand and master the functions of the advanced operations.	- Operators - System managers
8.OPTIONAL FUNCTIONS	- Count set weighing - Parent and child weighing	To understand and master the optional functions.	System administrators
9.CLEANUP PROCEDURES	Cleaning procedures and cycle of the components	To understand installation, removal, and cleaning procedures of the components in order to prevent foreign matter from entering the product and to maintain the hygiene of the device.	- Operators - Maintenance engineers


Chapter	Contents	Intention	Intended reader
10. MAINTENANCE AND INSPECTION	• Daily inspection and periodical inspection • Adjustment of components	• To understand the inspection and adjustment procedures for the components in order to maintain the device in good condition and prevent loss of production.	• Operators • Maintenance engineers
11. CAUSES AND ACTIONS FOR ERRORS AND FAILURES	• Error display and action • Malfunction of device, cause and action	• To understand and master the handling method and action for the trouble experienced during operation, in order to enhance the operating efficiency of the device.	• System administrators • Maintenance engineers
12. INSTALLATION	• Installation conditions, transportation and lifting, and installation procedures	• To understand the appropriate installation environment, safe transport and relocation of the device, and secure installation procedures.	• Maintenance engineers • Ishida service engineers
13. APPENDIX	• Board location of the electrical unit • Overall wiring diagram and block wiring diagram	• To provide reference information for repairing the device or replacing parts.	• Maintenance engineers • Ishida service engineers
14. PERIODICAL INSPECTION TO PREVENT MIXING IN THE FOREIGN MATERIAL	• Inspection cycle of the components	• To prevent from mixing in the foreign material	• All users
END OF THE MANUAL	• Index	• To search necessary information with a keyword used in this manual.	• All users

3. Illustrations and notations used in this manual

- Illustrations of the equipment

The illustrations used to describe the operation procedures are drawn in the most general shapes.

The actual equipment may differ slightly from the illustrations.

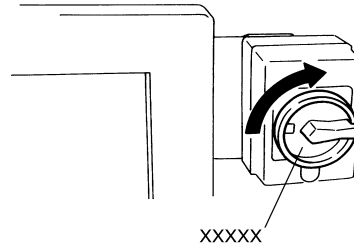

- Descriptions for key operations

Most operations of the equipment are performed by touching the virtual keys displayed on the operation screen of the remote control unit.

In this manual, the operations by touching these keys displayed on the screen are described as follows:

Example: Press the [XXX] key.

- Notations used in this manual

In this manual, the following notations are used in order to make understanding of the information easier.

Notation	Description
 DANGER	Is used for imminent hazardous conditions that could cause death or serious injury, if not prevented.
 WARNING	Is used for hazardous conditions that could cause death or serious injury, if not prevented.
 CAUTION	Is used for hazardous conditions that could cause light or moderate injury, or that could damage equipment or devices, if not prevented.
 NOTE	Is used for cautionary or important information to be noted or emphasized.
	Is used to indicate what you must not perform.
	Is used to indicate what you must perform.
 TIP	Is used to indicate reference information for operations or information which helps understanding of the device.

TABLE OF CONTENTS

1 SAFETY

1.1	Summary	1-1
1.2	Warning Terms and Meaning	1-2
1.3	General Precautions	1-3
1.4	Special Precautions	1-7
1.5	Warning Label	1-9
1.5.1	Warning Label Handling	1-9
1.5.2	Attached Locations of Warning Labels	1-9
1.6	Power Supply Shut Off and Indication	1-10

2 INTRODUCTION

2.1	Summary	2-1
2.2	Intended Use of the Device	2-2
2.3	Features of the Device	2-2
2.4	Specifications of the Device	2-2
2.4.1	Standard Specifications	2-2
2.4.2	Outside Dimension	2-2
2.4.3	Operation Environment	2-2
2.4.4	Audible Noise	2-3
2.5	Term Description	2-4
2.6	Components of the Device	2-6
2.7	Operation Outline	2-8

3 OPERATING PANELS

3.1	Summary	3-1
3.2	Items and Functions of Remote Control Unit	3-2
3.3	Operation Panel and Data Input	3-3
3.3.1	Operation Panel	3-3
3.3.2	Data Input	3-7
3.3.2.1	Inputting Figures	3-8
3.3.2.2	Inputting Alphanumeric Characters and Symbols	3-9

3.3.3 Correcting Confirmed Contents	3-10
---	------

4 OPERATION PROCEDURES

4.1 Summary	4-1
4.2 Emergency Stop and Restart	4-2
4.3 Outline of the Production	4-3
4.4 Production Procedures	4-4
4.4.1 Pre-start Inspection	4-4
4.4.2 Air Pressure Adjustment (WP specification)	4-5
4.4.3 Turning the Device Power Switch ON	4-6
4.4.4 Turning the Control Unit Power Switch ON	4-6
4.4.5 Start-up Assistant Function	4-7
4.4.6 Preset Selection	4-10
4.4.7 Zero Adjustment	4-12
4.4.8 Starting the Production	4-16
4.4.9 Stopping the Production	4-17
4.4.10 Discharging the Products	4-18
4.4.11 Turning the Device Power Switch OFF	4-19
4.5 Display During the Operation	4-20
4.5.1 Combination Screen	4-21
4.5.1.1 Select Display Pop-up Menu in Combination Screen	4-22
4.6 Temporary Stop and Restart	4-23
4.6.1 Temporary Stopping	4-23
4.6.2 Restarting	4-23
4.7 Outputting the Operational Status	4-24
4.7.1 Every Combination Output	4-24
4.7.2 Current Total Output	4-26
4.8 Loading the Printer Paper	4-28
4.9 Handling Drive Unit	4-30

5 REGISTERING OF PRODUCTS

5.1 Summary	5-1
5.2 Preset	5-2
5.2.1 Registration Details	5-2
5.2.2 Outline of the Registration	5-5
5.2.3 Preset Procedures	5-6
5.2.3.1 Quick Setting	5-6
5.2.3.2 Usual Setting	5-11
5.2.3.2.1 Setting the Product	5-11
5.2.3.2.2 Setting the Speed	5-15
5.2.3.2.3 Setting the Weight Value	5-16

5.3 Preset Management	5-18
------------------------------------	-------------

6 FUNCTIONS OF THE OPERATION SCREENS

6.1 Summary	6-1
6.2 Operation Keys and Operation Levels	6-2
6.3 Upper Setting Bar	6-9
6.3.1 Message Board	6-10
6.3.2 Start-Up Assistant	6-14
6.3.3 Language Selection	6-15
6.3.4 Operation Level Selection	6-16
6.3.4.1 Switching to Operator level	6-17
6.3.4.2 Switching to Site Engineer level	6-18
6.3.4.3 Switching to Installation level	6-19
6.3.5 Control Panel Screen	6-20
6.3.5.1 Screen Control Tab Screen	6-21
6.3.5.2 Password Set/LangSlct Set Tab Screen	6-23
6.3.5.3 Destination ID Tab Screen	6-24
6.3.5.4 USB Handling	6-26
6.3.6 Date & Time Setting Screen	6-27
6.3.7 Help Function	6-29
6.4 Main Menu	6-30
6.5 Zero Adjustment screen	6-32
6.6 Production screen	6-33
6.6.1 Combination Tab Screen	6-35
6.6.1.1 Select Display Pop-up Menu	6-36
6.6.2 Feeder Adjust Tab Screen	6-37
6.6.3 Timing Adjustment Tab Screen	6-37
6.6.4 Total Data Tab Screen	6-38
6.6.5 Weight Display Tab Screen	6-39
6.7 Drain screen	6-40
6.8 Full Open Lock Screen	6-42
6.8.1 Full Open Lock Operation	6-44
6.8.2 Feeder Adjust Tab Screen	6-45
6.9 Select Preset screen	6-46
6.9.1 Photo Display	6-46
6.9.2 List Display	6-47
6.10 Preset screen	6-48
6.10.1 Preset Basic Function	6-48
6.10.2 Finish Prdct Setting Index Screen	6-50
6.10.2.1 Product Tab Screen	6-51
6.10.2.1.1 Product Photo Taking Procedures	6-52
6.10.2.2 Machine Tab Screen	6-54
6.10.2.3 Item Tab Screen	6-56

6.10.2.4 Others Tab Screen	6-59
6.10.3 Feeder Adjustment Index Screen	6-60
6.10.4 Timing Adjustment Index Screen.	6-62
6.10.5 Weight Setting Index Screen.	6-63
6.10.5.1 Target Weight.	6-64
6.10.5.2 Upper Weight Limit.	6-64
6.10.5.3 Lower Weight Limit.	6-65
6.10.6 Simple Setting Screen	6-66
6.10.7 Preset Change Operation	6-67
6.10.8 Preset Paste	6-68
6.10.9 Take Over Preset	6-69
6.10.10Preset Output	6-70
6.11 Select Total Pop-up Menu	6-72
6.11.1 Current Total Screen	6-73
6.11.2 X-bar Chart Screen	6-76
6.11.3 Weigher's Transitional Data Screen	6-77
6.11.4 Per Head-Cmb. Participation Data Screen	6-78
6.11.5 Total Setting Screen	6-79
6.11.6 Operation Log Screen	6-80
6.12 Feeder Adjustment Screen	6-81
6.12.1 Switching Display in Feeder Adjust Screen.	6-86
6.12.2 AFD Ctroll Mode	6-88
6.12.3 AFD Range Setting	6-93
6.13 Timing Adjustment Screen	6-95
6.14 Machine Set Pop-up Menu.	6-97
6.14.1 Manual Adjustment Screen	6-98
6.14.1.1 Weighing Adjst Tab Screen	6-98
6.14.1.2 Combi. Calcltn Tab Screen	6-102
6.14.1.3 AFV Monitor Tab Screen	6-103
6.14.2 Self-diagnosis Screen	6-104
6.14.2.1 Device Check Tab Screen	6-105
6.14.2.2 In/Output Signal Tab Screen	6-106
6.14.2.3 Network Analyze Tab Screen.	6-107
6.14.2.4 Program Number Tab Screen	6-108
6.14.2.5 Test Drive Tab Screen	6-109
6.14.3 Display & Data Manager Screen	6-111
6.14.3.1 Layout Setting Tab Screen.	6-111
6.14.3.2 Preset Manager Tab Screen	6-112
6.14.3.2.1Selecting and Copying Preset.	6-113
6.14.3.2.2Copying All Preset.	6-115
6.14.3.2.3Selecting and Initializing Preset.	6-117
6.14.3.2.4Initializing All Preset	6-118
6.14.3.3 Machine Set Mngr Tab Screen	6-119
6.14.3.3.1Selecting and Copying Machine Setting Items	6-121
6.14.3.3.2Copying All Machine Setting Items	6-122
6.14.3.3.3Selecting and Initializing Machine Setting Items	6-124
6.14.3.3.4Initializing All Machine Setting Items	6-125
6.14.4 Various Parameter Setting Screen	6-126
6.14.4.1 Weigh Spec Set Tab Screen	6-127

6.14.4.2 Combination Set Tab Screen	6-128
6.14.4.3 Sectioning Set Tab Screen.	6-129
6.14.5 Weigher Setting Screen.	6-130
6.14.5.1 Active head Tab Screen.	6-130
6.14.5.2 AFD Setting Tab Screen	6-131
6.14.6 Peripheral Equipment Setting Screen	6-131
6.14.6.1 Pckr Intrlck Set Tab Screen	6-132
6.14.6.1.1Pckr Intrlck Set Index Screen	6-133
6.14.6.1.2RingShutter Index Screen	6-134
6.14.6.1.3DivertingTimingHppr Index Screen	6-136
6.14.6.1.4TimingHopper Index Screen	6-136
6.14.6.2 Infeedr Cntl Set Tab Screen.	6-137

7 USEFUL FUNCTIONS

7.1 Summary	7-1
7.2 New Product Registration by Using Registered Product Data.	7-2
7.2.1 Copying and Editing Registered Product Data	7-2
7.3 Reducing Product Change Time	7-5
7.3.1 Using Feeder Adjustment of Drain Function	7-5
7.3.2 Using Full Open Lock Function	7-7

8 OPTIONAL FUNCTIONS

8.1 Summary	8-1
8.2 Parent and Child Weighing	8-2
8.2.1 Types of Parent and Child Weighing	8-2
8.2.1.1 Parent and Child Mix Weighing	8-2
8.2.1.2 Bonus Adding	8-3
8.2.2 Setting Items of Parent and Child Weighing	8-3
8.2.3 Setting Procedures of Parent and Child Weighing	8-6
8.2.4 Production screen of Parent and Child Weighing	8-8
8.3 Count Set Weighing	8-9
8.3.1 Setting Items of Count Set Weighing.	8-9
8.3.2 Piece Weight Revision.	8-12
8.3.3 Setting Procedures of Count Set Weighing	8-13
8.3.4 Select Display Pop-up Menu (Count Set Weighing)	8-15
8.3.5 Output During Count Set Production	8-17

9 CLEANUP PROCEDURES

9.1 Summary	9-1
9.2 Washing and Sterilization	9-2

9.3	Washing and Sterilization Methods	9-4
9.4	Washing and Sterilizing of Components	9-7
9.4.1	Washing Removable Unit	9-7
9.4.1.1	Inlet Chute	9-8
9.4.1.2	Dispersion Table	9-8
9.4.1.3	Radial Trough	9-9
9.4.1.4	Pool Hopper and Weigh Hopper	9-9
9.4.1.5	Collection Chute	9-11
9.4.1.6	Discharge Chute	9-12
9.4.1.7	Timing Hopper	9-12
9.4.2	Cleaning the Unremovable Unit	9-13
9.4.2.1	Main Body, Dispersion Portion, and Drive Unit	9-14
9.4.2.2	Remote Control Unit	9-15

10 MAINTENANCE AND INSPECTION

10.1 Summary	10-1
10.2 Daily Inspection	10-2
10.2.1 Pre-start Inspection	10-2
10.2.1.1 Dispersion table	10-3
10.2.1.2 Radial trough	10-3
10.2.1.3 Confirming the dew-point checker of the air dryer (WP specification)	10-4
10.3 Periodical Inspection	10-5
10.3.1 Inspection of Span (Monthly)	10-5
10.3.2 Span Adjustment	10-8
10.3.3 Inspection of Open/Close for Hopper Gate (Monthly)	10-11
10.3.4 Inspection of Open/Close Roller for Hopper (Monthly)	10-12
10.3.5 Inspection of Amplitude Strength for Radial Feeder (Monthly)	10-12
10.3.6 Inspection for Cracks (Annually)	10-13
10.3.7 Inspection of Rubber Cover (Annually)	10-14
10.3.8 Replacement of Memory Backup Battery	10-15
10.3.9 Replacement of Fuses	10-15
10.3.10 Replacement of the Air Dryer Element (WP specification)	10-16
10.3.11 Replacement of the Air Dryer Module Set (WP specification)	10-17

11 CAUSES AND ACTIONS FOR ERRORS AND FAILURES

11.1 Summary	11-1
11.2 Error Display and Action	11-2
11.2.1 Pattern 1	11-3
11.2.2 Pattern 2	11-7
11.2.3 Pattern 3	11-9
11.2.4 Pattern 4	11-12
11.2.5 Pattern 5	11-13

11.2.6 Pattern 6	11-14
11.2.7 Pattern 7	11-14
11.2.8 Pattern 8	11-14
11.2.9 Pattern 9	11-15
11.2.10 Pattern 10	11-15
11.2.11 Error Clear and Action	11-15
11.3 Failure and Malfunction of the Weighing Machine	11-17
11.4 Troubleshooting	11-21

12 INSTALLATION

12.1 Summary	12-1
12.2 Installation Condition	12-2
12.3 Transportation and Lifting	12-3
12.3.1 Precaution for Transporting	12-3
12.3.2 Precaution for Lifting	12-4
12.3.3 Weight of Device, Center of Gravity, and Dimensions.	12-5
12.3.4 Lifting Procedure	12-6
12.4 Installation Procedure	12-7
12.4.1 Unpacking Procedure	12-8
12.4.2 Checking Weighing Machine	12-8
12.4.3 Carrying in and Installing the Weighing Machine.	12-8
12.4.4 Connecting Power Cable and Remote Control Unit	12-9
12.4.5 Installing Timing Hopper Frame	12-11
12.4.6 Connecting TH Signal Wire	12-11
12.4.7 Installing Timing Hopper	12-11
12.4.8 Installing Discharge Chute	12-12
12.4.9 Installing Collection Chute	12-12
12.4.10 Installing Radial Trough	12-12
12.4.11 Installing Dispersion Table	12-13
12.4.12 Installing Weigh Hopper	12-13
12.4.13 Installing Pool Hopper.	12-14
12.4.14 Connecting to Interlocking Device	12-14
12.5 Check and Adjustment After Installation	12-17
12.5.1 Checking Assembly Condition of Each Unit	12-18
12.5.2 Turning the Power ON.	12-19
12.5.3 Changing the Operation Level.	12-20
12.5.4 Zero Adjustment	12-21
12.5.5 Span Adjustment	12-23
12.5.6 Check Items at Installation	12-25

13 APPENDIX

13.1 Summary	13-1
---------------------------	-------------

13.2 Electrical Unit Layout Drawing	13-2
13.2.1 Layout Drawing for CCW-RV-214W-S/20, 30	13-2
13.2.2 Layout Drawing for CCW-RV-214W-S/15	13-3
13.2.3 Layout Drawing for CCW-RV-214W-S/50, 70	13-4
13.3 Electrical Unit Layout Drawing (CCW-RV-214W-S/05, 08)	13-5
13.4 Overall Block Diagram	13-6
13.5 Overall Block Diagram (CCW-RV-214W-S/05, 08)	13-7
13.6 Remote Control BOX Unit	13-8
13.6.1 RCU Board	13-9
13.6.2 PRN Board	13-11
13.6.3 TP-I/F Board (P-5661*)	13-11
13.6.4 RCU I/F Board (P-5662*)	13-12
13.7 Main Electrical Unit	13-13
13.7.1 HUB Board (P-5535*)	13-14
13.7.2 MPS Board (P-5436*)	13-15
13.7.3 FDRV Board (P-5578*)	13-15
13.7.4 FDC Board (P-5532*)	13-16
13.8 Main Electrical Unit (CCW-RV-214W-S/05, 08)	13-17
13.8.1 FDRV Board (P-5578*)	13-18
13.8.2 FDC Board (P-5532*)	13-18
13.9 Base Unit Feeder	13-19
13.9.1 Preamp Board (P-5435*)	13-19
13.10AFV Unit	13-20
13.10.1AFV Preamp Board (P-5488*)	13-20
13.11Relay Unit	13-21
13.11.1EXC Board (P-5426*)	13-22
13.11.2Relay Board (P-5506*)	13-22
13.12PS-0 Unit	13-24
13.13PS-2 Unit	13-25
13.14Weigh Drive Unit	13-26
13.14.1DUC Board (P-5428*)	13-26
13.14.2DDU Board (P-5439*)	13-28
13.14.3Cam Sensor Board (P-5207*)	13-28
13.15Weigh Drive Unit (CCW-RV-214W-S/05, 08)	13-29
13.15.1DUC Connector Board (P-5536*)	13-30
13.15.2Preamp Board (P-5527*)	13-30
13.15.3Photo Sensor Board (P-5207*)	13-31
13.16CAL Unit	13-31
13.16.1ADC Board (P-5576*)	13-32
13.16.2WCU Board (P-5561*)	13-33
13.16.3DMU Board (P-5562*)	13-34

13.17CAL Unit (CCW-RV-214W-S/05, 08)	13-35
13.17.1ADC Board (P-5576*)	13-36
13.17.2WCU Board (P-5561*)	13-37
13.17.3DMU Board (P-5562*)	13-38
13.17.4485 Board (P-5457*)	13-39
13.18PS FEEDER Unit.	13-40
13.18.1FPS Board (P-5580*)	13-41
13.19DUC Unit (CCW-RV-214W-S/05, 08)	13-42
13.19.1DUC Board (P-5524*)	13-43
13.19.2DUC Board (P-5579*)	13-44
13.20Connection Diagram	13-45
13.20.1TOTAL DIAGRAM	13-45
13.20.2BLOCK DIAGRAM	13-45
13.21Connection Diagram (CCW-RV-214W-S/05, 08)	13-46
13.21.1TOTAL DIAGRAM	13-46
13.21.2BLOCK DIAGRAM	13-46

14 PERIODICAL INSPECTION TO PREVENT MIXING IN THE FOREIGN MATERIAL

