

## 3 OPERATING PANELS

### 3.1 Summary

This chapter describes the remote control unit components and functions required for the device operations, and the basic operation method and display descriptions of the operation panel.



- **Thoroughly understand the contents of this chapter before operating the device.**

#### NOTE

- Refer to "4 OPERATION PROCEDURES" for the operation method.

#### <Contents>

- Description of the operation screen contents
- General operation instruction for the operation screen

#### <Purpose>


- To understand and master the basic operation method and general operation of the operation screen.

#### <Intended reader>

- All users

## 3.2 Items and Functions of Remote Control Unit

This section describes the component names and functions of the remote control unit, using the figure below.

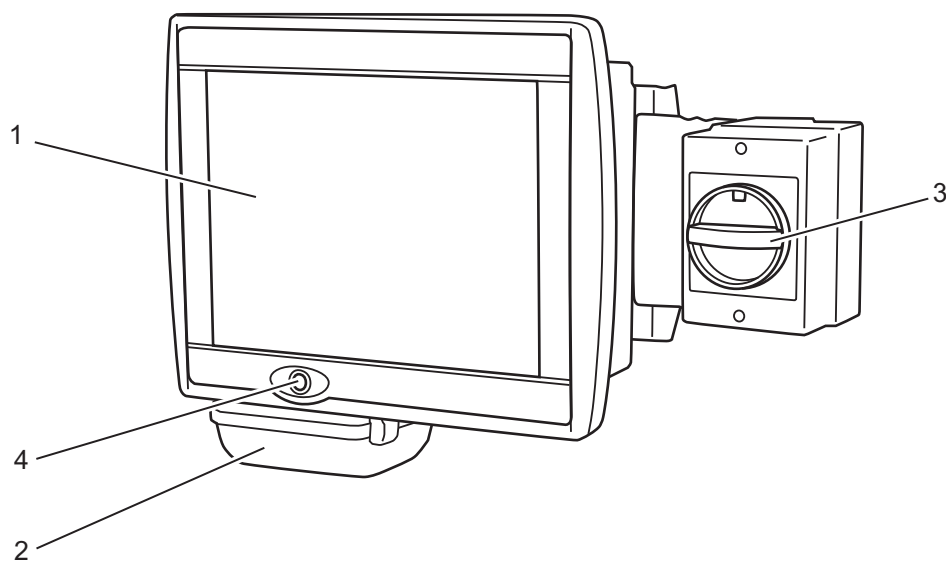

**Fig. 3-1**

**Table 3-1**

| No. | Name              | Function                                                                          |
|-----|-------------------|-----------------------------------------------------------------------------------|
| 1   | Operation Panel   | Used to perform setting and displaying of the menu.                               |
| 2   | Printer           | Prints out the production summary and the setting details of individual products. |
| 3   | Main power switch | Turns the main power supply to the device ON/OFF.                                 |
| 4   | Camera            | Takes photos of the products.                                                     |

### 3.3 Operation Panel and Data Input

The device is operated with the operation panel screens.  
The operation panel is a touch screen.

#### **CAUTION**

- Use fingers to press the operation panel. Using a pointed object such as a ball point pen may damage the operation panel.

#### 3.3.1 Operation Panel

This section describes the operation panel screens using the Main Menu screen that will be displayed when the power is turned on.

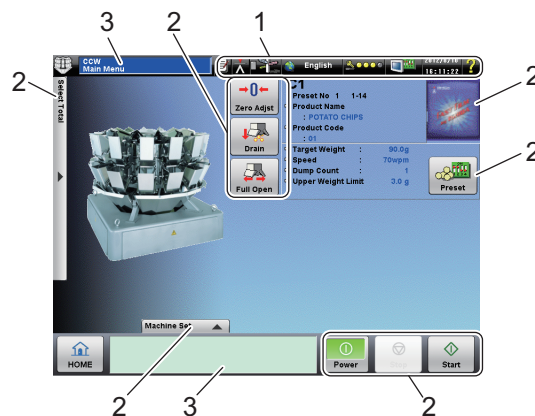


Fig. 3-2

Table 3-2

| No. | Name              | Function                                                                                                                     |
|-----|-------------------|------------------------------------------------------------------------------------------------------------------------------|
| 1   | Upper setting bar | Always displayed on the upper part of the screen.<br>It is used to set the operation environment of the panel.               |
| 2   | Menu key          | Displayed with a three-dimensional frame.<br>Pressing this part allows for switching of screens and operating of the device. |
| 3   | Status display    | Displayed with a flat frame.<br>This part displays current operation status and error details.                               |


#### **NOTE**

- The screen display above is an example. Menu keys and display areas differ depending on each menu and operation level.

**<Menu keys>**

The operation keys include the following along with the standard keys.


**Table 3-3**

| Key Type          | Display Example                                                                     | Function                                                                                                                                                                                                                                                                         |
|-------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Lamp key          |    | Each time this key is pressed, the lamp will light up or turn off.<br>This key function is effective while the lamp is on.                                                                                                                                                       |
| Content enter key |    | Each time this key is pressed, the keyboard or numeric keypad will be displayed.<br>Use the keyboard or numeric keypad to input letters and figures for setting (Refer to "3.3.2 Data Input").<br>The set letters and figures will be reflected on the key.                      |
| Drop-down key     |    | Each time this key is pressed, the selection item list will be displayed.<br>Press a key from the displayed list to select, and the list will be closed.<br>The selected item will be reflected.                                                                                 |
| Pop-up key        |  | Each time this key is pressed, the pop-up list will be displayed.<br>Press a key from the displayed list to select, and the list will be closed.<br>Shapes of the keys and pop-up lists differ depending on the keys.<br>Some keys will reflect the selection result on the key. |
| Radio button      |  | Selection items are displayed as buttons. Press one of the buttons to select.<br>The selected button will become pushed in and lit in blue.                                                                                                                                      |

**<Page display keys>**

When the operation screen extends to multiple pages, switch the pages by using the following operation keys.

**Table 3-4**
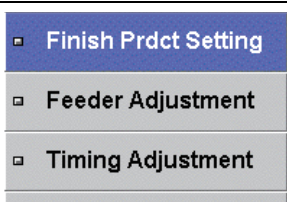
| Key Type | Display Example                                                                     | Function                                                                                                                                                                                     |
|----------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Index    |  | Displayed on the right side of the screen for the items such as preset. This is used when there are many screens.<br>When one of the keys is pressed, the relevant screen will be displayed. |
| Tab      |  | Displayed on the bottom of the screen.<br>This is used when there are only a few screens.<br>When one of the keys is pressed, the relevant screen will be displayed.                         |

### <Scrolling the screen>

When there are many display items in a menu, the hidden part can be displayed by scrolling the screen. In this case, the [scroll] key and [scroll] bar will be displayed.

The [scroll] key and [scroll] bar are displayed in the upper/lower or right/left direction depending on the displayed screen.



Fig. 3-3

Table 3-5

| No. | Name         | Function                                                                                                                                                                                                             |
|-----|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | [Scroll] key | Scrolls the screen in the direction indicated by the key, while pressed.                                                                                                                                             |
| 2   | [Scroll] bar | Scrolls the screen quickly by holding and moving vertically or horizontally. The length and location of the [Scroll] bar indicates the proportion and position of the viewable screen relative to the entire screen. |

<Hierarchic structure of the screen>

The screens with multiple pages have the following hierarchic structure.

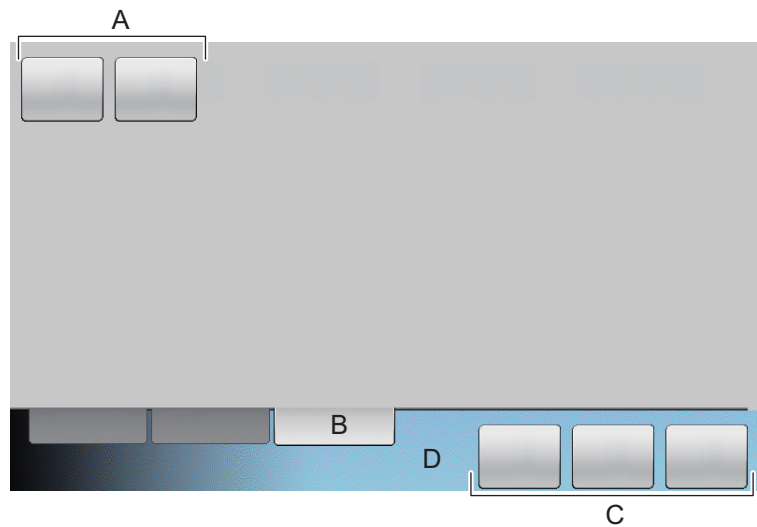


Fig. 3-4

Key A belongs to the tab B screen.  
Tab B as well as the other displayed tabs, and key C, belong to screen D.  
Therefore, the key C function applies to tab B and all other tab screens displayed.



Fig. 3-5

When [Output] key A' is pressed, data from tab B' will be output.  
When [Output] key C' is pressed, data from tab B' and all other tab screens displayed will be output.

### 3.3.2 Data Input

When inputting figures and product names, use the Numeric Keypad screen and Keyboard screen. The Numeric Keypad screen and Keyboard screen are displayed when data input is required. Use the Numeric Keypad screen to input figures and the Keyboard screen to input alphanumeric characters.

#### NOTE

- In this manual, the term "set" is used to describe the operations from inputting figures, letters, and symbols using the Numeric Keypad screen and Keyboard screen to saving the data to the device by pressing the [Return] key.
-

### 3.3.2.1 Inputting Figures

When inputting figures, the Numeric Keypad screen will be displayed.

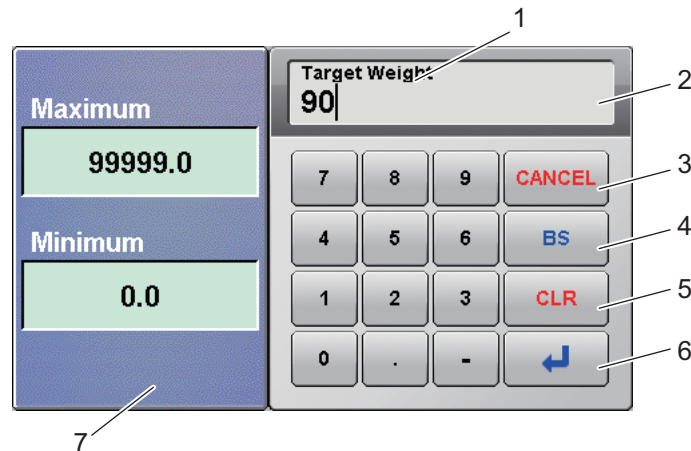


Fig. 3-6

Table 3-6

| No. | Name                     | Function                                                                                                                  |
|-----|--------------------------|---------------------------------------------------------------------------------------------------------------------------|
| 1   | Set item display area    | Displays the current input item.                                                                                          |
| 2   | Input display area       | Displays the input figures.                                                                                               |
| 3   | [CANCEL] key             | Cancels the input from the numeric keypad.<br>When pressed, the display returns to the previous screen without any input. |
| 4   | [BS] key                 | Deletes a single displayed figure.                                                                                        |
| 5   | [CLR] key                | Deletes the displayed figures all at once.                                                                                |
| 6   | [Return] key             | Confirms the input figures and returns to the original screen.                                                            |
| 7   | Entry guide display area | Displays the allowed setting range.                                                                                       |

For setting using the Numeric Keypad screen, follow the procedures below.

- Press the numeric keys.
  - The input figure is displayed in the input display area.
- Press the [Return] key.
  - The input figure will be confirmed.
  - The Numeric Keypad screen disappears, and the display returns to the previous screen.



### 3.3.2.2 Inputting Alphanumeric Characters and Symbols

When the alphanumeric characters and symbols are input, the Keyboard screen will be displayed.

#### <Keyboard>

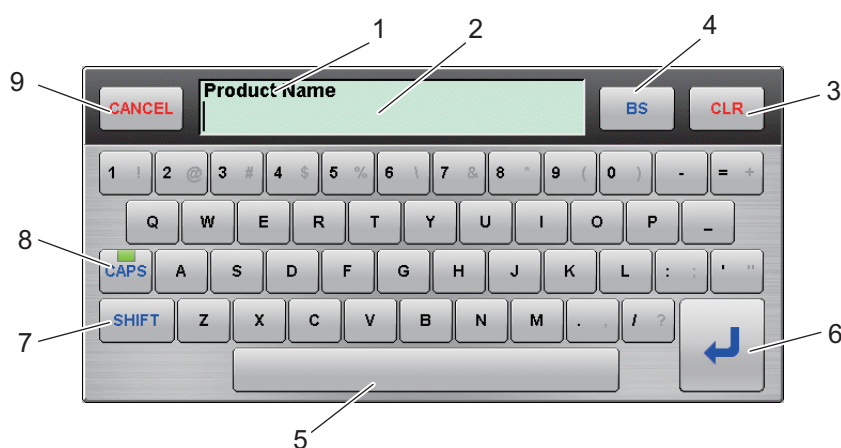


Fig. 3-7

Table 3-7

| No. | Name                  | Function                                                                                                               |
|-----|-----------------------|------------------------------------------------------------------------------------------------------------------------|
| 1   | Set item display area | Displays the current set item.                                                                                         |
| 2   | Input display area    | Displays the input alphanumeric characters and symbols.                                                                |
| 3   | [CLR] key             | Deletes the displayed alphanumeric characters and symbols all at once.                                                 |
| 4   | [BS] key              | Deletes a single displayed alphanumeric character or symbol.                                                           |
| 5   | [Space] key           | Inputs a single blank character.                                                                                       |
| 6   | [Return] key          | Confirms the input alphanumeric characters and symbols and returns to the original screen.                             |
| 7   | [SHIFT] key           | Switches two letters on the same key.<br>Alphanumeric characters and symbols that can be input are displayed in black. |
| 8   | [CAPS] key            | Switches the uppercase and lowercase.<br>When the [CAPS] key lamp is on, uppercase characters can be input.            |
| 9   | [CANCEL] key          | Cancels the input from the keyboard.<br>When pressed, the display returns to the previous screen without any input.    |

For setting using the Keyboard screen, follow the procedures below.

1. Press the alphanumeric keys and/or symbol keys.
  - The input alphanumeric characters are displayed in the input display area.
2. When inputting symbols, press the [SHIFT] key and then press keys to be enter.
3. Press the [Return] key.

- ▶ The input alphanumeric characters are confirmed.
- ▶ The Keyboard screen disappears, and the display returns to the previous screen.

### **3.3.3 Correcting Confirmed Contents**

When the confirmed figures, letters and symbols need to be corrected, repeat the input using the Numeric Keypad screen and Keyboard screen.