


1.8 Configuration Diagram





ATLAS - 2 0 4 R - C



C: Compact Type

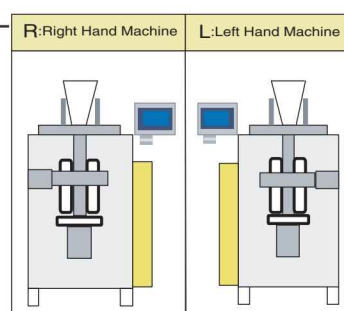

[Version of Electrical Unit]

- 1 : Version1 (M RCU)
- 2 : Version2 (Web RCU)
- 3 : Version3 (Web RCU + New AC Servo Motor & Driver)
- 4 : Version4 (Web RCU RV type)

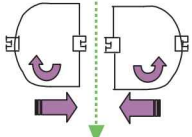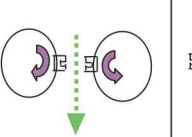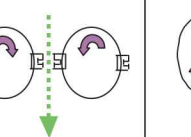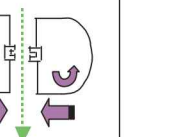Jaw Motion Type			
0	1	2	3
D Motion (Twin JAW)	Rotary Motion (with Anvil Knife) (Single JAW)	Rotary Motion (with Anvil Knife) (Twin JAW)	D Motion (Single JAW)
			

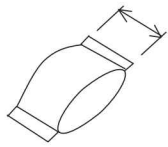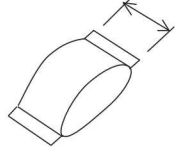Applicable Bag Size	
1	2
3 ~ 9 inch 75 ~ 230mm	4 ~ 13 inch 75 ~ 330mm
	


2 DAILY INSPECTIONS

2.1	End Seal Jaw Surface.	2-1
2.2	End Seal Jaw Knife Slot.	2-3
2.3	End Seal Jaw Knife Blade	2-4
2.4	Crumb Plate.	2-5
2.5	Pull Belt	2-6
2.6	Back seal Heater Band and Heater Block.	2-7
2.6.1	Back seal Heater Band.	2-7
2.6.2	Back seal Heater Block	2-8
2.7	Silicon Rubber and Teflon Tape	2-9


2 DAILY INSPECTIONS

2.1 End Seal Jaw Surface


1. Turn the main power OFF.

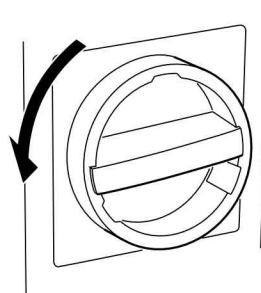


2. Open the front cover.

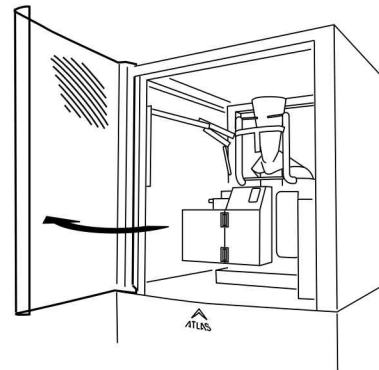

3. Pull the handle forward, and swing the back seal unit out.

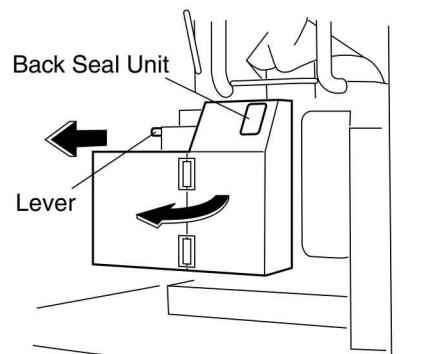


4. Remove 4 bolts and remove the crumb plate and the stripper plate.
5. Make sure that no film residue or product is adhering to the surface of the jaw.

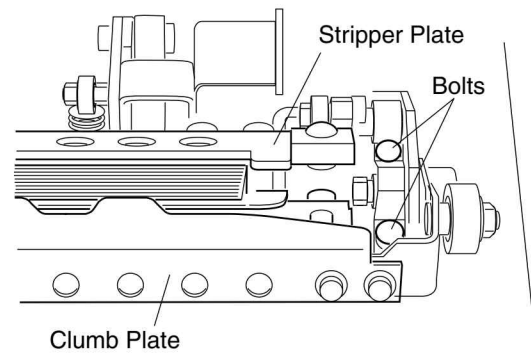

If residue or product is adhering to the surface of the jaw, use a wire brush to remove it.

 CAUTION

- **Do not touch the jaw with your hand. It is hot and you can get burned.**

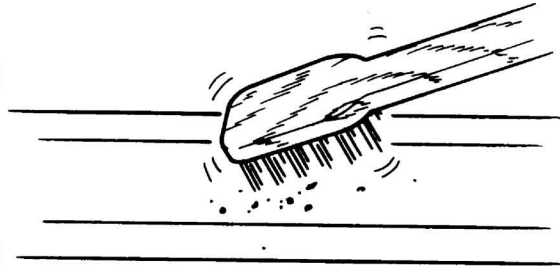

2.2 End Seal Jaw Knife Slot


CAUTION

- Do not touch the jaw with your hand. It is hot and you can get burned.


1. Proceed steps 1 to 4 of the section "2.1 End Seal Jaw Surface".
2. Remove two bolts and remove the knife blade.

WARNING

- Be careful when removing the knife blade. It is very sharp and hot.

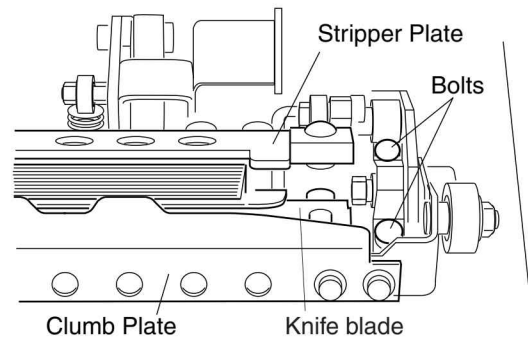

3. Clean out the knife slot, both front and rear.

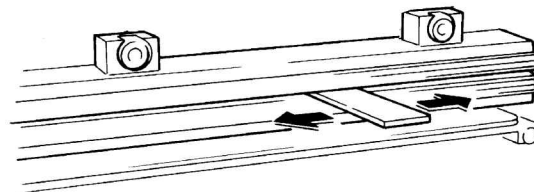

2.3 End Seal Jaw Knife Blade


CAUTION

- After operation, the end seal jaw knife blade is extremely hot. Be careful when inspecting.

1. Proceed steps 1 to 4 of the section "2.1 End Seal Jaw Surface".
2. Remove two bolts and remove the knife blade.

WARNING



- Be careful when removing the knife blade. It is very sharp and hot.

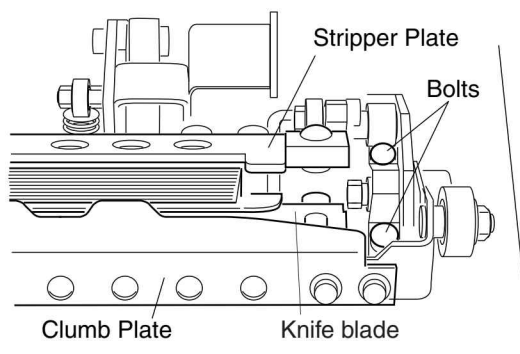

3. Check the surface of the knife blade. If it is dirty, remove the grime with a brush. If strange substance is adhering to the surface, scrape it off with a knife. If the knife blade is worn or damaged, replace it with a new one.

CAUTION

- Do not use a wire brush. The tip of the knife blade can get damaged.

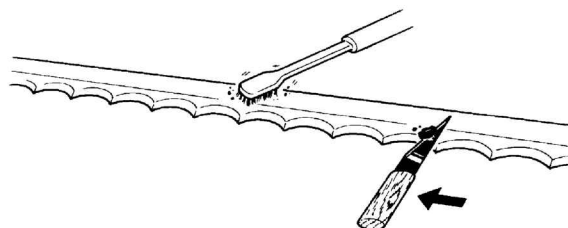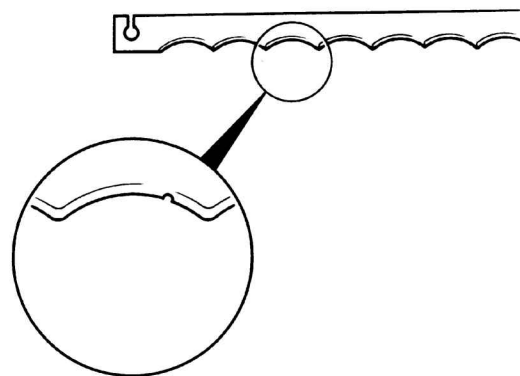

2.4 Crumb Plate



1. Proceed steps 1 to 3 of the section "2.1 End Seal Jaw Surface".
2. Compress the crumb plate and ensure the movement is free.
If not, check for broken springs.
If springs are broken, replace it.

Use following steps to replace the spring.

- (a) Loosen the fixing screws.
- (b) Replace the spring.


NOTE

- Similarly, confirm if the stripper plate moves smoothly.

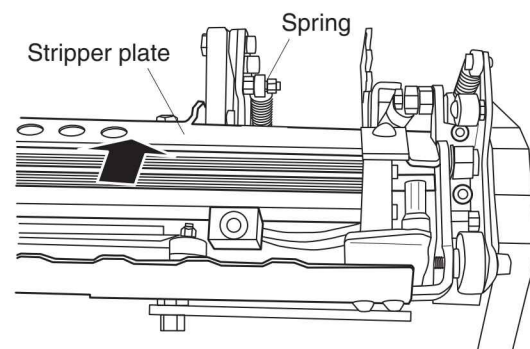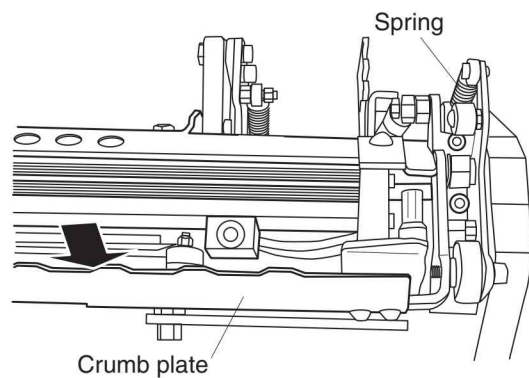

2.5 Pull Belt


1. Press the [Run/Lace] key.
 ▶The pull-down belts move outward.
2. Turn the main power OFF.
3. Open the front cover.
4. Pull the handle forward, and swing the backseal unit out.

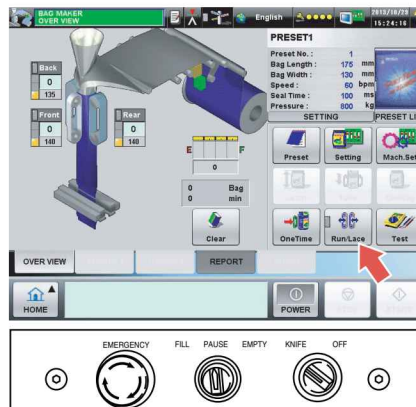

5. Move the former lever to the rear, and remove the former.

CAUTION


- Be careful when handling the former. It is heavy.

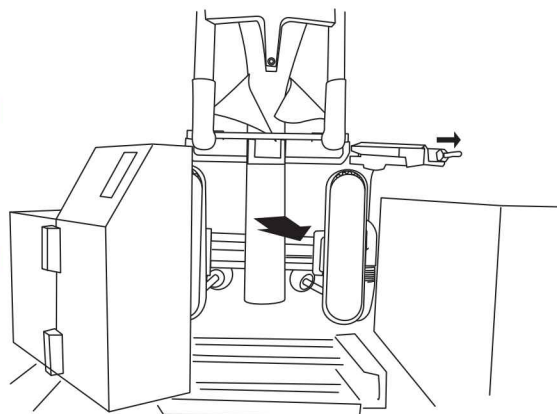

6. Check the surface of the pull belt. If it is dirty, remove the grime with a plastic brush or wet towel. If the belts are worn or split, replace them with new ones.
 (For details on how to replace the pull belts, see "4.3.2 Replacing the Pull Belt".)

CAUTION

- Do not use a detergent or cleanser to clean the pull belt. This can cause the pull belt to deteriorate.

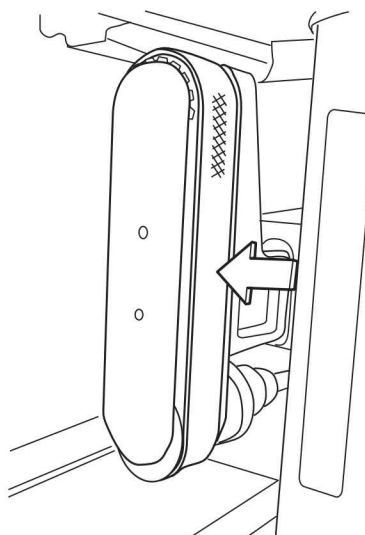

2.6 Back seal Heater Band and Heater Block


2.6.1 Back seal Heater Band

**CAUTION**


- After operation, the heater band is extremely hot. Be careful when inspecting.

1. Proceed steps 1 to 4 of the section "2.5 Pull Belt".

2. Open the back seal cover.

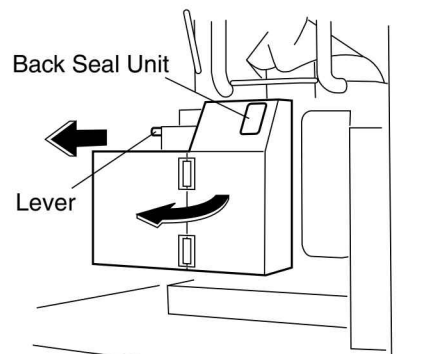

3. Check the surface of the heater band. If it is dirty, remove the grime with a brush. If the band is worn or damaged, replace it with a new one.
(For details on how to replace the heater band, see "4.2.1 Replacing the Heater Band".)

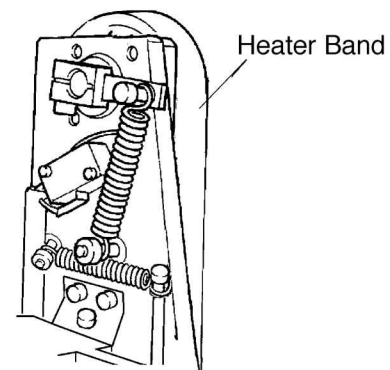

2.6.2 Back seal Heater Block




CAUTION

- After operation, the heater block is extremely hot. Be careful when inspecting.



1. Proceed steps 1 to 4 of the section "2.5 Pull Belt".

2. Open the back seal cover.

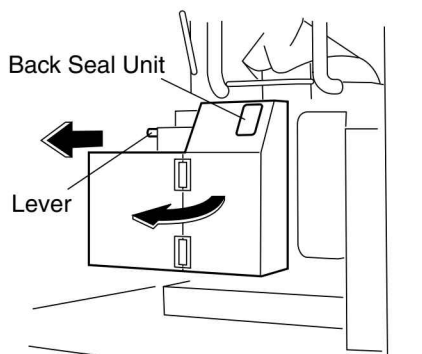


3. Lift the tension lever located on the back of the steel belt, and remove the heater belt.

4. Check the surface of the heater block. If it is dirty, scrape the grime off with a brush.

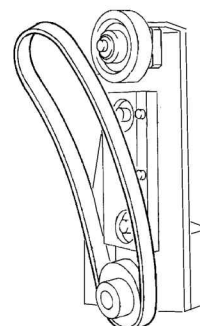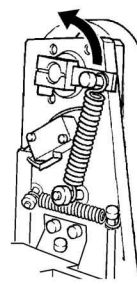

2.7 Silicon Rubber and Teflon Tape


1. Proceed steps 1 to 4 of the section "2.5 Pull Belt".
2. Open the back seal cover.

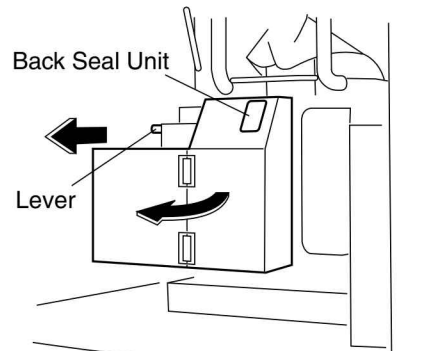

3. Check the condition of the Back Seal touching area surface.



- If the silicon rubber and teflon tape are conspicuously dirty with dark grime, split or otherwise damaged, replace them with new one.

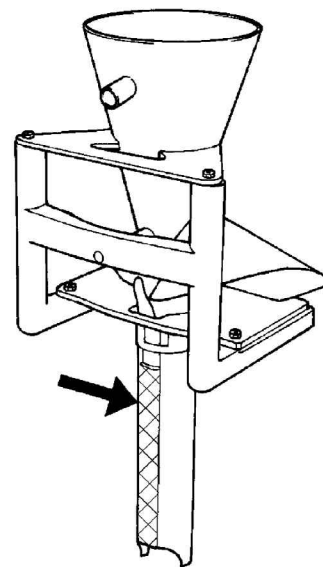

3 PERIODIC INSPECTIONS

3.1	Monthly Inspections	3-1
3.1.1	Pull Belt Unit.	3-1
3.2	3-Month Inspections	3-3
3.2.1	Lubrication	3-3
3.2.1.1	Jaw Unit	3-3
3.2.1.2	Central Lubrication (Linear Guides and Ball Screw) Gear Box.	3-4
3.2.1.3	Cam Followers	3-5
3.2.1.4	Shaker Unit Gear (Option)	3-7
3.3	6-Month Inspections	3-9
3.3.1	Vacuum System Air Filter	3-9
3.3.2	Lubrication	3-10
3.3.2.1	Film Tracking Linear Guides	3-10


3 PERIODIC INSPECTIONS

3.1 Monthly Inspections


3.1.1 Pull Belt Unit

1. Press the [Run/Lace] key.


► The pull-down belts move outward.

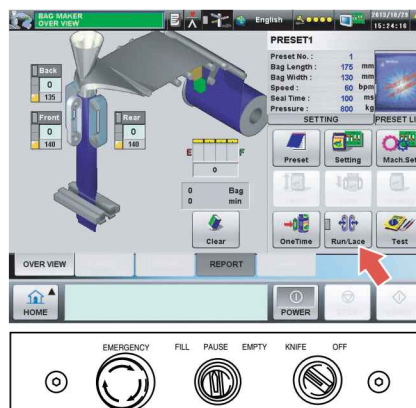


2. Turn the main power OFF.

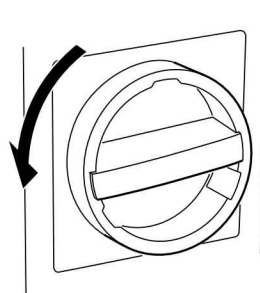

3. Open the front cover.

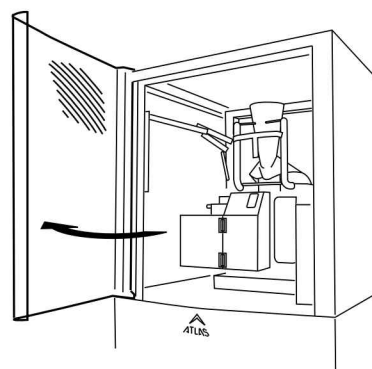


4. Pull the handle forward, and swing the back seal unit out.

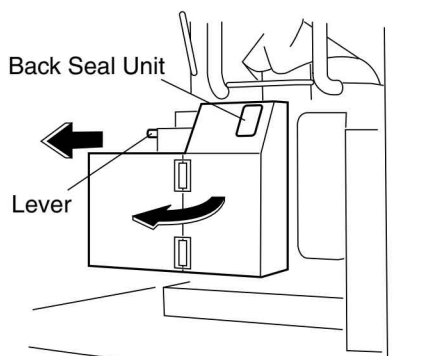


5. Remove the former, and make sure that the pull belt is free of grime, flaws, and splits.

**CAUTION**


- Be careful when handling the former. It is heavy.

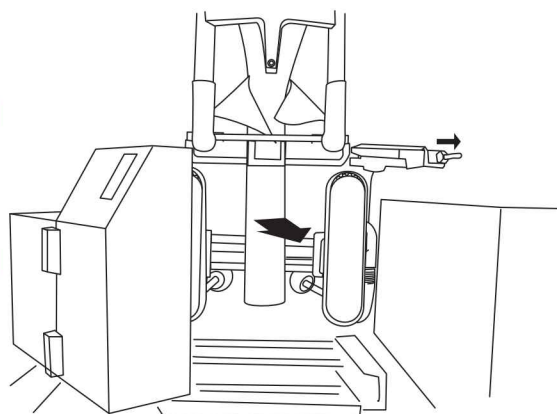

6. Press down on the center of the pull belt. Confirm that the belt deflects approximately 3 to 4 millimeters.

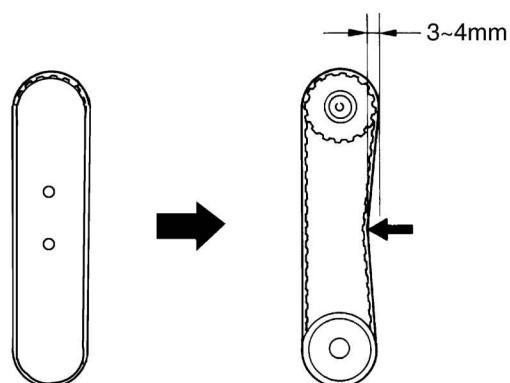

7. If adjustment is needed, loosen the nut at the reverse side of the pull belt unit and adjust the tension.

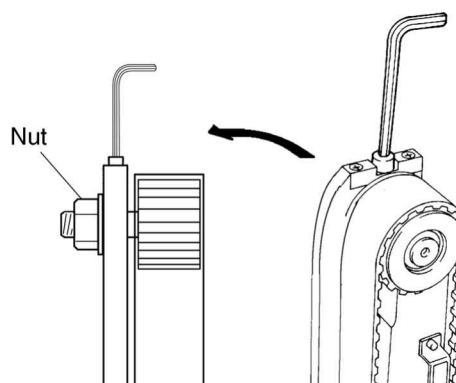

3.2 3-Month Inspections

3.2.1 Lubrication

CAUTION

- Lubricate periodically.

3.2.1.1 Jaw Unit

CAUTION

- Make sure that the product is lubricated every three months. Use Shell Alvania.

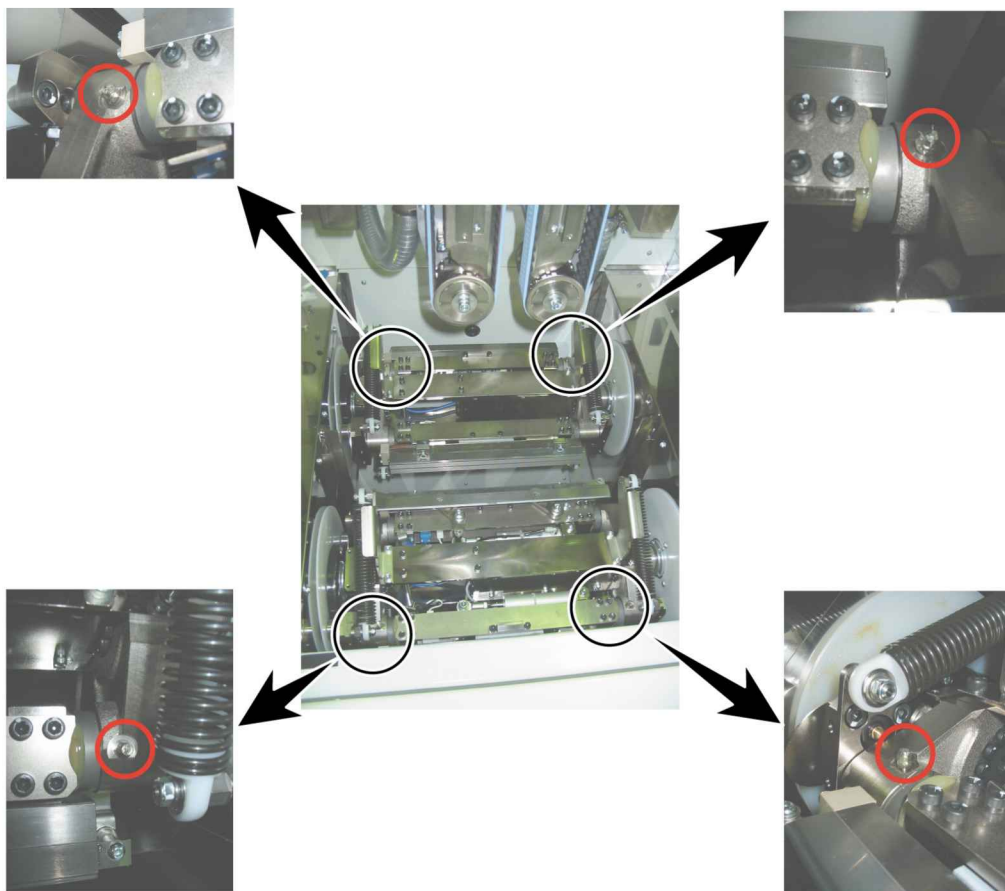


Fig. 3-1 JAW unit

1. Turn the main power OFF.

2. Open the front cover.
3. Pull the handle forward, and swing the back seal unit out.
4. Lubricate the 8 locations as follows.
 - Right and left locations at the next of the reverse of the metal plate
 - One location on the jaw arm
 - Each location for 4 jaw units (Total 8 locations)

NOTE

- Apply grease to the jaw base until the old (existing) grease begins to ooze from the clearance with the shaft.

5. Using a sharp-pointed object, make sure that the grease point ball moves.


3.2.1.2 Central Lubrication (Linear Guides and Ball Screw) Gear Box




CAUTION


- **Make sure that the product is lubricated every three months. Use Shell Alvania.**

1. Turn the main power OFF.
2. Open the cover of the rear side.

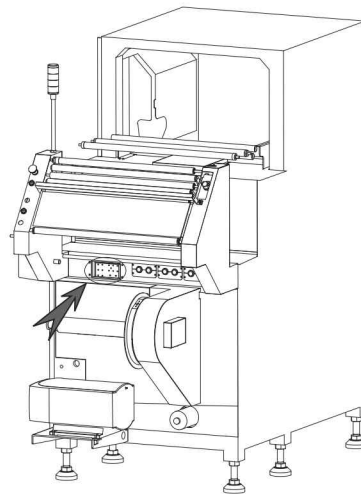

3. Lubricate central lubrication point.
4. Grease the linear guides.

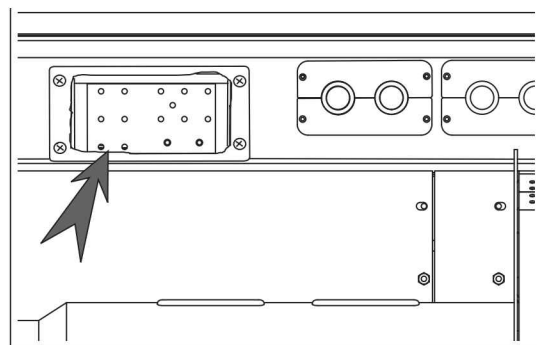

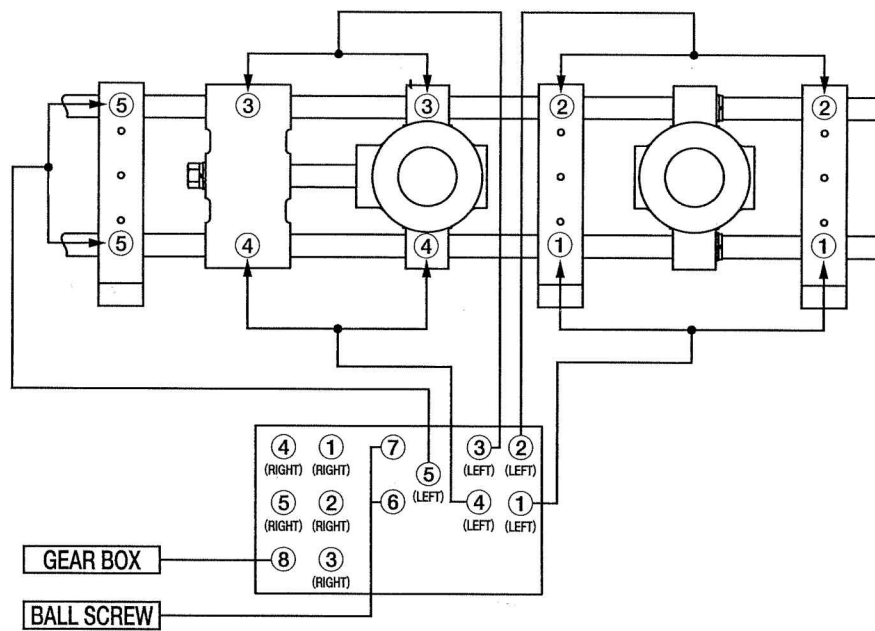

3.2.1.3 Cam Followers

This procedure describes how to lubricate the four cam followers found in the jaw area of the Atlas Bagmaker. Cam follower lubrication must be accomplished every **4,000,000 cycles** to prevent cam follower damage.

Tools Needed: Set of metric Allen wrenches and extension bar;
grease gun (96-9008-08 Hand Grease Pump) provided with Atlas Bagmaker;
use Shell Alvania Grease (64-5201-04 Grease)

