

CHAPTER

6

Error Messages and Countermeasures

6.1	Error Messages and Countermeasures	6-3
6.1.1	Power Error (DRV)	6-3
6.1.2	Zero Adjustment	6-4
6.1.3	Auto Zero Error	6-5
6.1.4	Span Error	6-6
6.1.5	PhotoSensor Unit Error (Weigh)	6-7
6.1.6	Feed Conveyor Error	6-8
6.1.7	Weigh Conveyor Error	6-10
6.1.8	Preset Data Error	6-12
6.1.9	Other Errors Display	6-14
6.1.10	Communication Error	6-15
6.1.11	Setting Error [Average Control]	6-17
6.1.12	Other Errors (Including Option)	6-19

6.1 Error Messages and Countermeasures

When error is triggered, the error message appears on the Error display. Here describes the cause and countermeasure for the possible errors in a table format.



The Instruction Manual also refers to countermeasures against errors, in “10.1 Error Messages and Countermeasures”. Refer also to the Instruction Manual.

6.1.1 Power Error (DRV)

■ Drive Unit (DRV) restarted



■ Rej. Unit (REJ) restarted



■ Scale Unit (ADC) restarted



■ IO Unit (IO) restarted






6.1.2 Zero Adjustment

■ Please adjust zero



■ Zero is out of std range

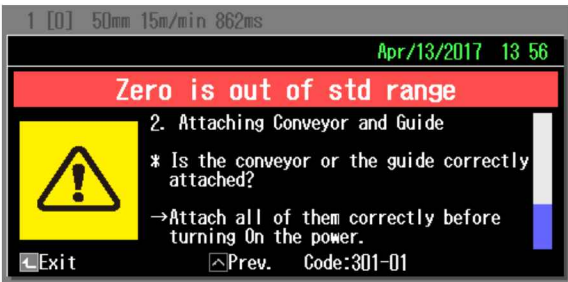
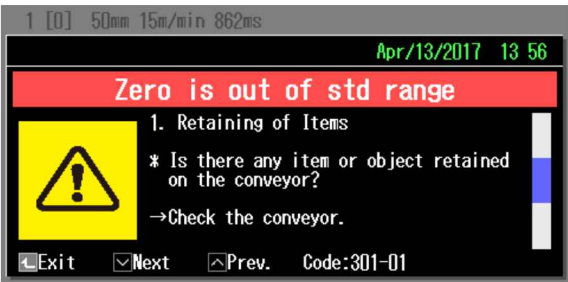
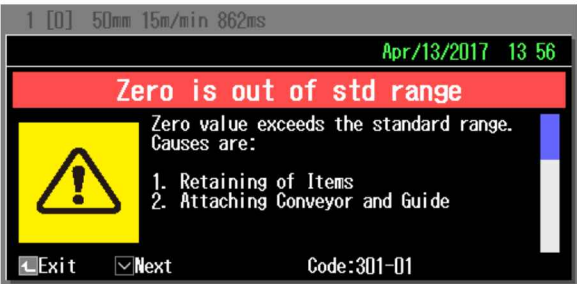


■ Error cause and countermeasure

Error Message	Cause	Countermeasure
Zero is out of std range	This is displayed when the weight data is outside the zero adjustment range during zero adjustment.	• Defects/replacement of load cell unit • Defects/replacement of DRV board (P-5614*)/MCU board (PK-270*)
	Something is on the weigh conveyor or contacts it.	Remove the cause if it exists.

6.1.3 Auto Zero Error

■ Auto Zero could not be updated

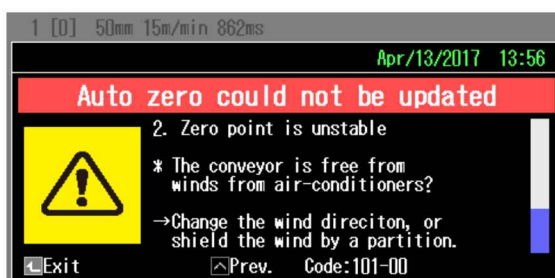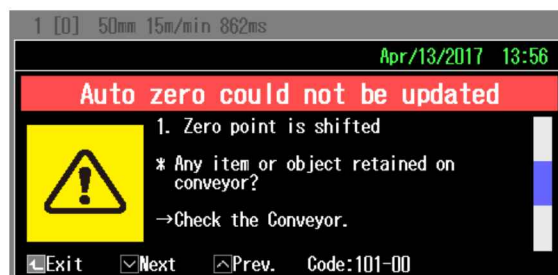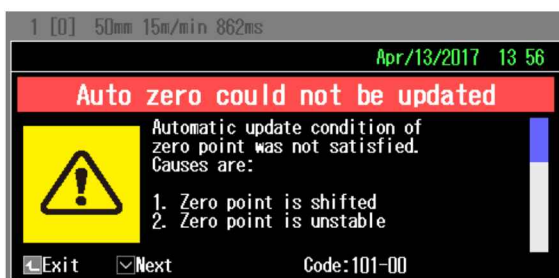


■ Error cause and countermeasure

Error Message	Cause	Countermeasure
Auto Zero could not be updated	This is displayed when the weight data is outside the zero adjustment range during zero adjustment.	• Defects/replacement of load cell unit • Defects/replacement of DRV board (P-5614*)/MCU board (PK-270*)
	Something is on the weigh conveyor or contacts it.	Remove the cause if it exists.

6.1.4 Span Error

■Span adj. result is out of std range

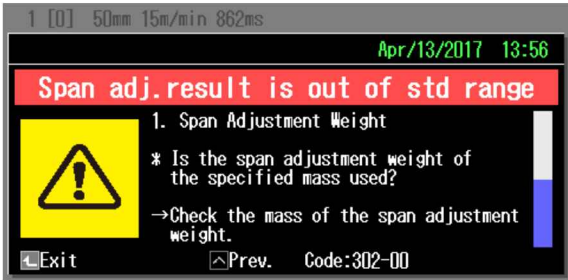

■Error cause and countermeasure




Error Message	Cause	Countermeasure
Span adj. result is out of std range	This error is displayed when the weight data is outside the span adjustment range during span adjustment.	▪ Malfunction/defects/replacement of load cell unit ▪ Defects/replacement of DRV board (P-5614*) /MCU board (PK-270*)
	The span adjustment weight is wrong.	Check whether the span adjustment weight is the same as the displayed weight.

■ Span Not Adjust.



6.1.5 PhotoSensor Unit Error (Weigh)

■ Photosensor (Weigh) being interrupted

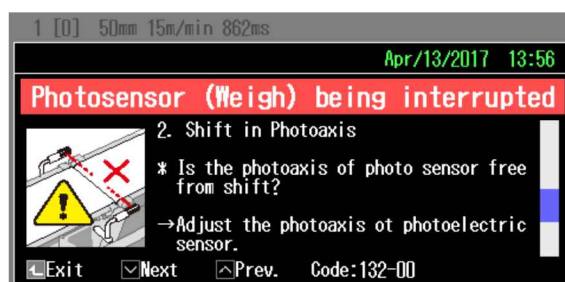
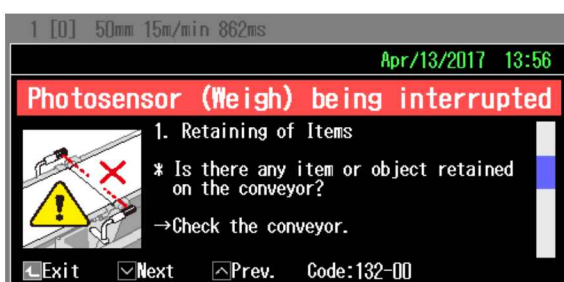
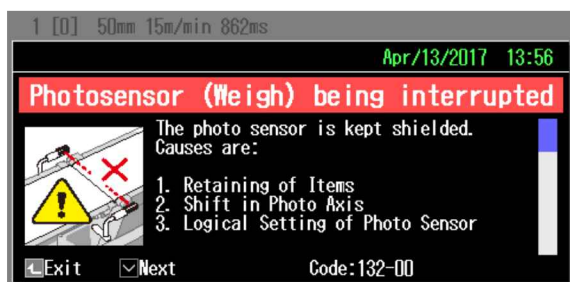


■ Error cause and countermeasure

Error Message	Cause	Countermeasure
Photosensor (Weigh) being interrupted	This error is displayed when the photo sensor unit between the infeed and weigh conveyors remains in a light shielding state for a certain period of time during operation.	• Replace photo sensor unit. • Replace ADC board. (Replace of load cell unit)
	The photo sensor unit direction is different between the light transmission side and light receiving side.	Adjust the direction of the photo sensor unit.
	Something is caught between the light transmission side and light receiving side of the photo sensor unit.	Inspect the space between the light transmission side and light receiving side of the photo sensor unit. Remove the object that has caused the error if it is found.

6.1.6 Feed Conveyor Error




1. Feed con. abnormality was detected

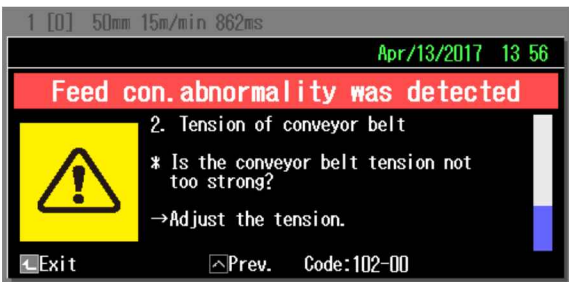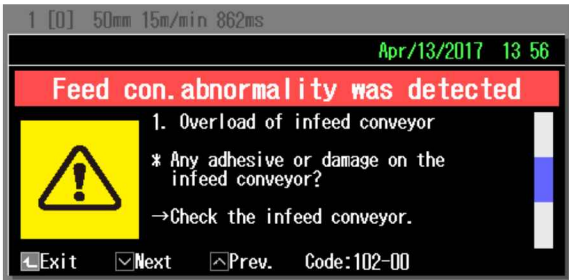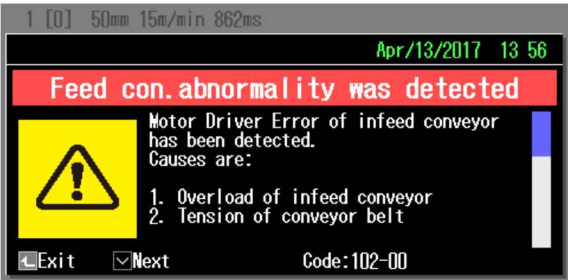

■Error cause and countermeasure

Error Message	Cause	Countermeasure
Feed con. abnormality was detected	This error is displayed when the rotation of the feed conveyor is not usual.	• Check if the motor touches the front/rear conveyors. • Replacement of motor/driver.
	• The feed conveyor is overloaded. • Belts tension is too tight.	• Turn off the power once, and then inspect the conveyor. • Check the belt's tension and whether a roller rotates smoothly.

2. If con. speed abnormality was detected

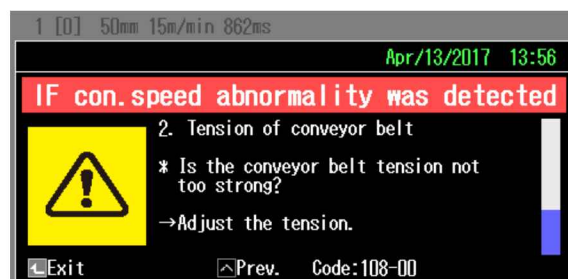
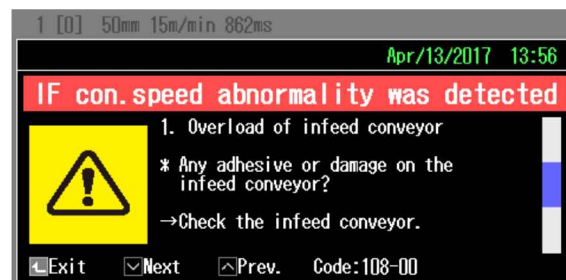
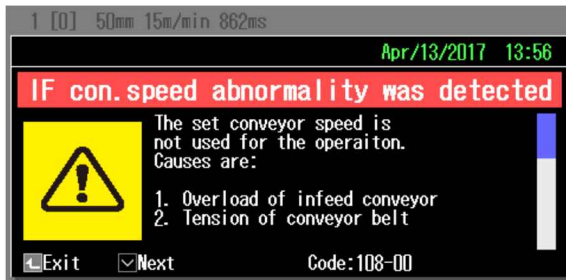


■Error cause and countermeasure

Error Message	Cause	Countermeasure
If con. speed abnormality was detected	This error is displayed when the rotation of the feed conveyor is not usual.	- Check if the motor touches the front/rear conveyors. - Replacement of motor/driver.
	- The feed conveyor is overloaded. - Belts tension is too tight.	- Turn off the power once, and then inspect the conveyor. - Check the belt's tension and whether a roller rotates smoothly.

6.1.7 Weigh Conveyor Error




1. Weigh con. abnormality was detected

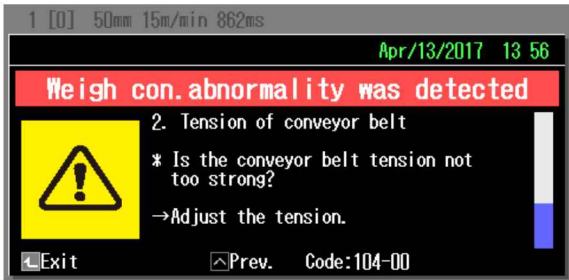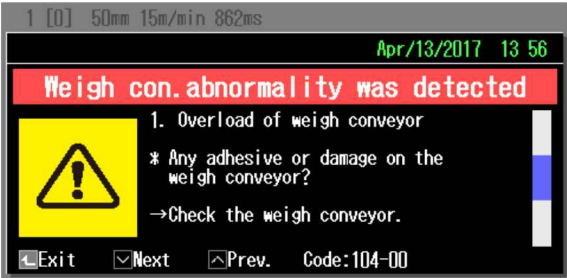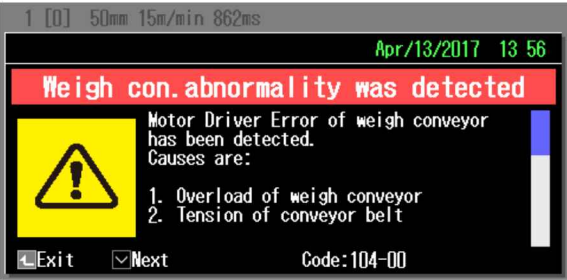

■Error cause and countermeasure

Error Message	Cause	Countermeasure
Weigh con. abnormality was detected	• This error is displayed when the rotation of the feed conveyor is not usual.	• Check if the motor touches the front/rear conveyors. • Replacement of motor/driver
	• The Weigh conveyor is overloaded • Belts tension is too large.	• Turn off the power once, and then inspect the conveyor. • Check the belt's tension and whether a roller rotates smoothly.

2. WT con. speed abnormality was detected

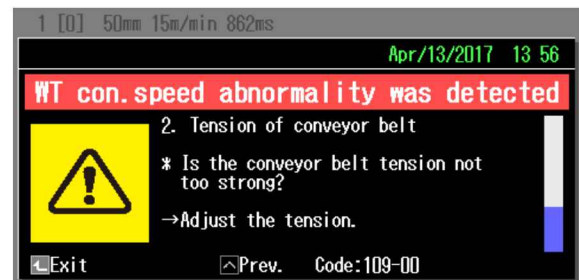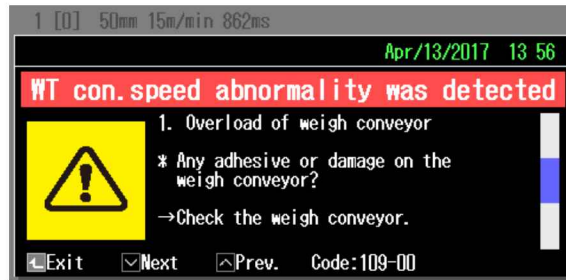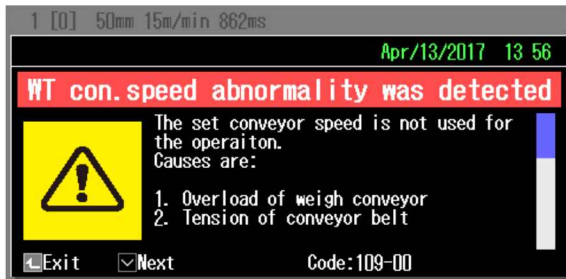

■Error cause and countermeasure

Error Message	Cause	Countermeasure
WT con. speed abnormality was detected	This error is displayed when the rotation of the feed conveyor is not usual.	- Check if the motor touches the front/rear conveyors. - Replacement of motor/driver
	- The Weigh conveyor is overloaded. - Belts tension is too tight	- Turn off the power once, and then inspect the conveyor. - Check the belt's tension and whether a roller rotates smoothly.

6.1.8 Preset Data Error


1. Value outside the range is set



■Error cause and countermeasure

Error Message	Cause	Countermeasure
Value outside the range is set	This error is displayed when the set weight is impossible to measure.	Check the set value (standard value + upper limit value + tare) again.
	Total of standard value + upper limit value + tare exceeds 110% of the weighing capacity.	

2. Value outside the range is set

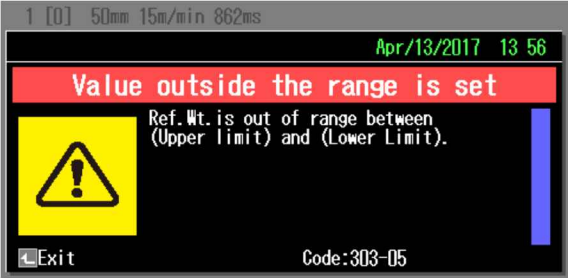

■Error cause and countermeasure

Error Message	Cause	Countermeasure
Value outside the range is set	This error is displayed when the set weight is impossible to measure.	Ensure the correct setting value (Upper or Lower limit value).
	The Ref. weight is set to out of the Upper/Lower limit.	

3. Value outside the range is set



■Error cause and countermeasure

Error Message	Cause	Countermeasure
Value outside the range is set	This error is displayed when the set weight is impossible to measure.	Check the set value (length of weighed object) and adjust the setting.
	Product length is out of range between Upper limit&Lower Limit.	




4. Value outside the range is set



■Error cause and countermeasure

Error Message	Cause	Countermeasure
Value outside the range is set	This error is displayed when the set weight is impossible to measure.	
	The filter time is set to 0 ms.	Check the set value (filter time) and adjust the setting.
	The filter cropping amount is set to 0.	Check the set value (filter cropping amount) and adjust the setting.

6.1.9 Other Errors Display

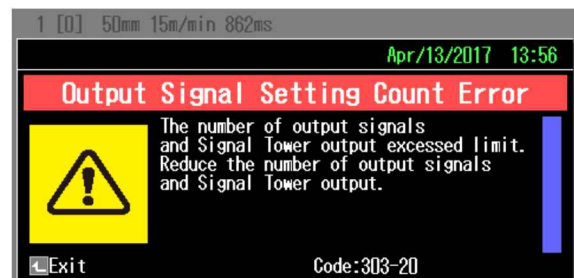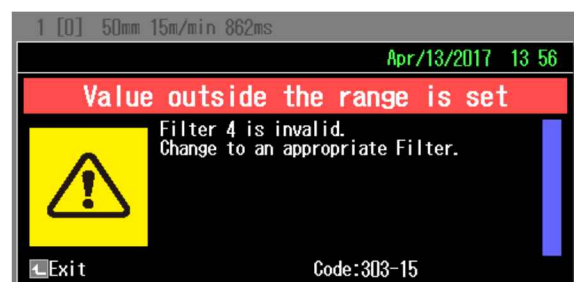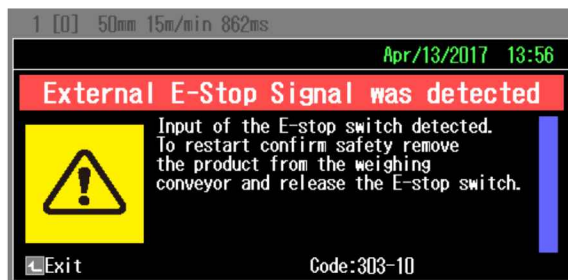

6.1.10 Communication Error

■ Communication error (MCU)



■ Communication error (DRV)



■ Communication error (ADC)





■ Communication error (REJ)



■ Communication error (IO)



■ System communications department error

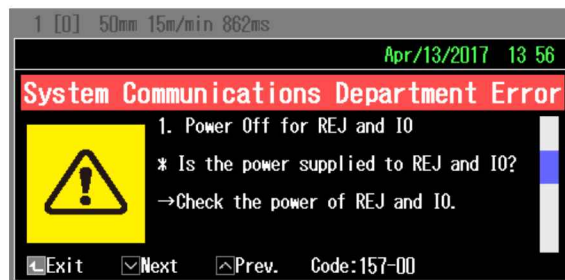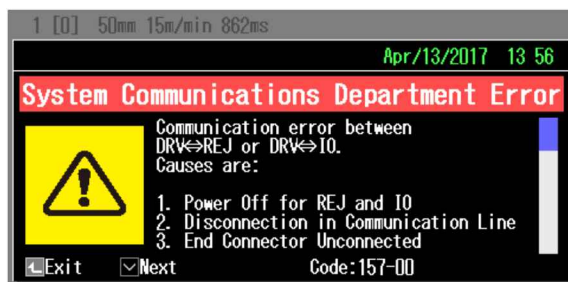

6.1.11 Setting Error [Average Control]


1. Value outside the range is set



■ Error cause and countermeasure

Error Message	Cause	Countermeasure
Value outside the range is set	This error is displayed when the set weight is impossible to measure.	
	Nominal value is set under the operation lower limit value.	Check the setting value (nominal value) again.

2. Value outside the range is set

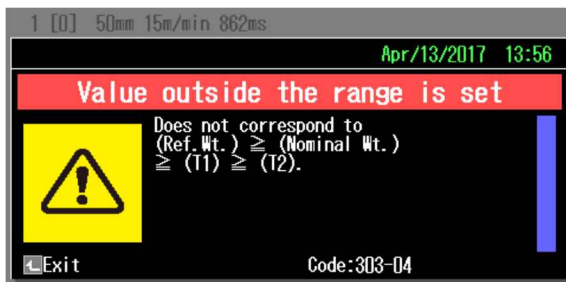

■ Error cause and countermeasure

Error Message	Cause	Countermeasure
Value outside the range is set	This error is displayed when the set weight is impossible to measure.	
	Standard value is not set to "Standard value Nominal value T1 T2".	Check the setting value (standard value) again.

3. Value outside the range is set




■ Error cause and countermeasure

Error Message	Cause	Countermeasure
Preset Data Error	This error is displayed when the set weight is impossible to measure.	
	Nominal value is set under the operation lower limit value.	Check the setting value (standard value) again.

*If "Operation lower limit value Valid" is set to "1 (Valid)" and "Average value control" is not set to "Standard", when "Standard value" is lower than "Operation lower limit value", it will cause a setting error and cannot start operation.

4. Value outside the range is set

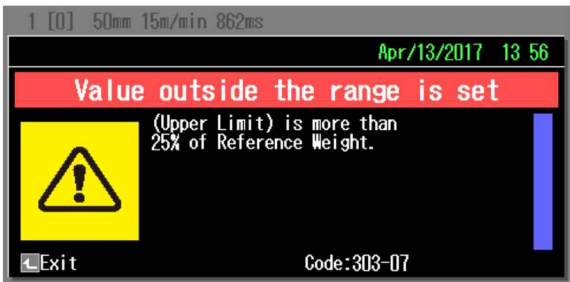

■ Error cause and countermeasure

Error Message	Cause	Countermeasure
Preset Data Error.	This error is displayed when the set weight is impossible to measure.	
	The upper limit setting value is more than 25% of the standard value.	Check the set value (upper limit value) and adjust the setting.

6.1.12 Other Errors (Including Option)

■ Model and weigh. sensor do not match




■ FBC error [FBC type]



Error Message	Cause	Countermeasure
FBC Error	This error is displayed when the machine could not communicate with FBC board.	Check the setting or connection.

■ Printer output is disabled (optional)

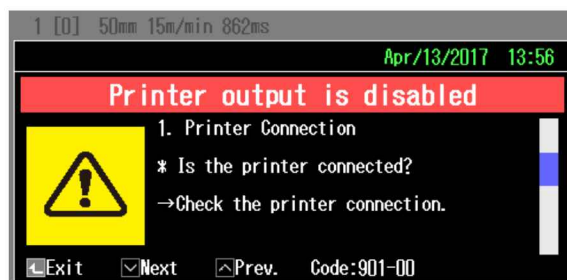

■ Emergency stop tripped (E-stop switch 1)






■ Air low stop error

(When setting of “Low Air Pressure Monitoring” to “on”)

This error is displayed when the air pressure is too low at the rejector.

■ Detected decrease in air pressure

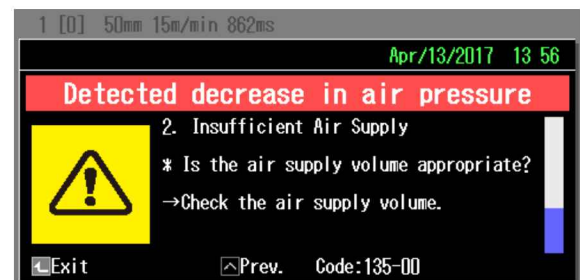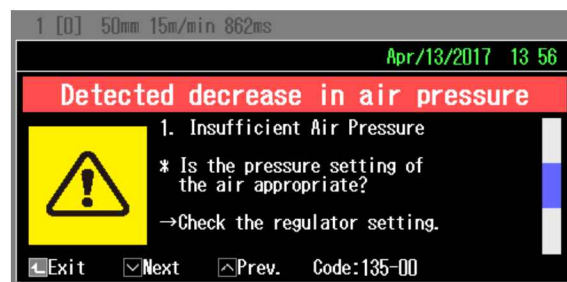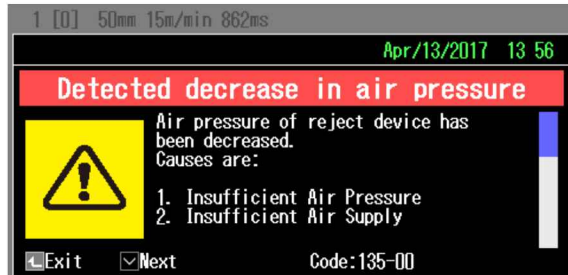


■ Error cause and countermeasure

(When setting of “Low Air Pressure Monitoring” to “on”)




When the Low Air Pressure Monitoring is provided as an optional, set the setting to “ON” and attach the pressure sensor to the air regulator. Otherwise, the error message will not be properly displayed.


■ Interlock Signal was input

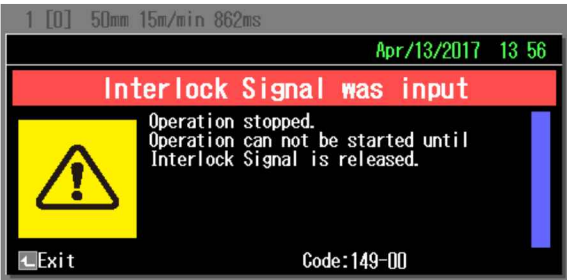



■ Load to weigher has been detected

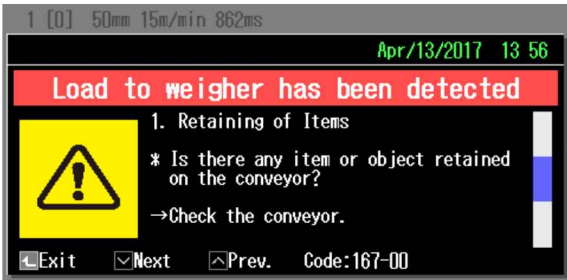

■ Too many input signals

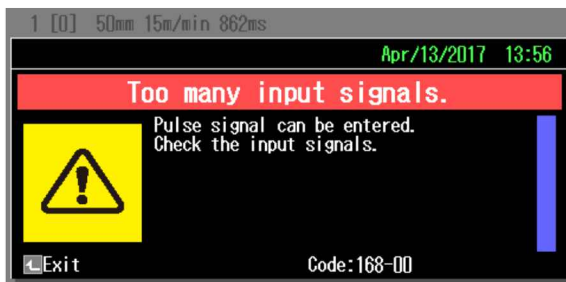

■ Board ID competition error

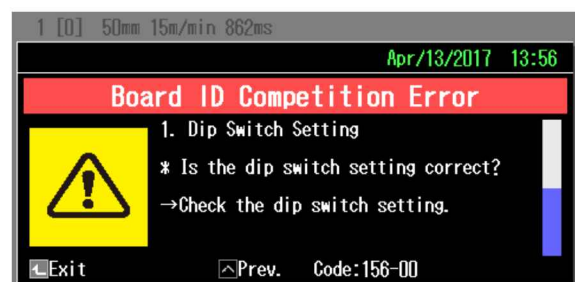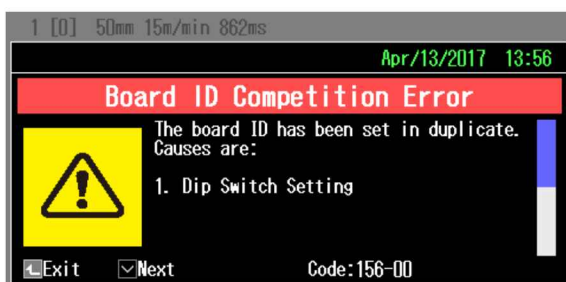

■ Preset switch error



■ Access Denied



■ Filter Span Error




■ Filter Table Error



■ Filter Setting Error



■ USB memory diagnosis

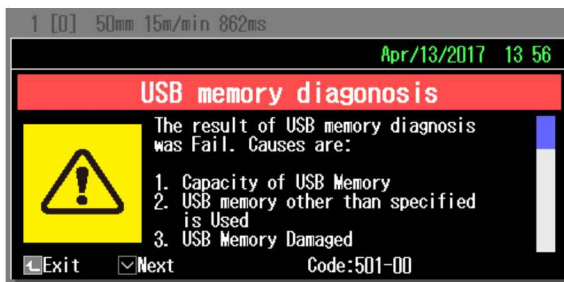


This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.

■ Barcode Overlapped Set Error



■ Barcode Receipt Failure

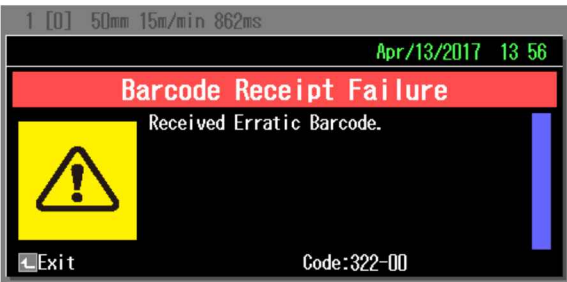

■ Labeler Sync. Error



■ X-Ray Inspector Error



■ i-F Send Buffer Overflow err. occurrd

