

Cam Follower Lubrication Procedure

1- CAM FOLLOWER LUBRICATION

Atlas Bagmaker Technical Procedure

Lubrication Procedure for the Atlas Cam Followers

This procedure describes how to lubricate the four cam followers found in the jaw area of the Atlas Bagmaker. Cam follower lubrication must be accomplished every **4,000,000** cycles to prevent cam follower damage.

Tools Needed: Set of metric Allen wrenches and extension bar;
grease gun (96-9008-08 Hand Grease Pump) provided with Atlas Bagmaker;
use Shell Alvania 64-5201-04 Grease 11 (in stock in Heat and Control, Lititz)




WARNING

Jaws of the Bagmaker may be very hot. Allow the jaws to cool before working in the jaw area. Use caution when working near the knife blade.

Step	Description
------	-------------

- | | |
|---|---|
| 1 | Follow all Lockout / Tagout Procedures |
| 2 | Remove the side panel next to the air gauge to access the pivot motor. (see Photo 1-1) |
| 3 | Disconnect the large pivot motor connector which will allow the rotation of the jaws by hand. (see Photo 1-2) |


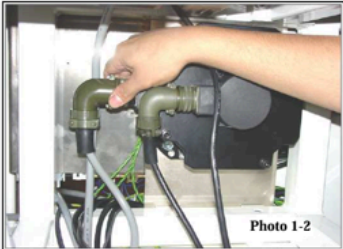


- | | |
|---|---|
| 4 | Locate the four brass cam follower lubrication nipples. (see photo 1-3 and 1-4) |
|---|---|



CAUTION

Use caution rotating jaws manually to avoid pinch points.

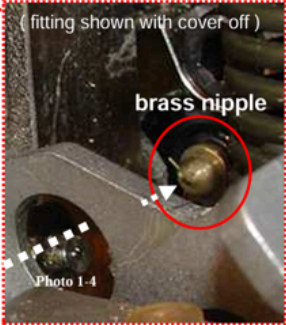
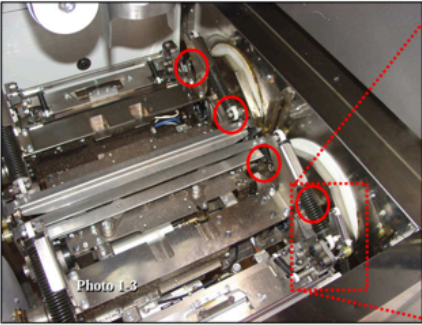


1- CAM FOLLOWER LUBRICATION


Atlas Bagmaker Technical Procedure

Step	Description
------	-------------



- | | |
|---|--|
| 5 | Remove the cam follower covers (clam shell type) by removing two 3mm Allen bolts and the four 5mm Allen bolts.
Note: Rotate the jaws 180° to locate the opposite set of bolts.
The 5mm bolts are firmly secured. Use an extension handle to loosen them. |
|---|--|

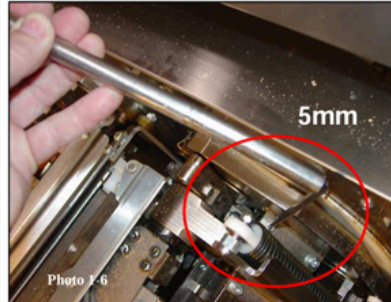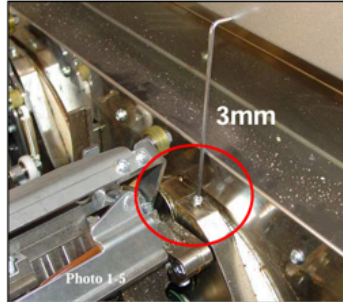

- | | |
|---|--|
| 6 | After removing the Allen bolts, use your hand to remove both clam shell covers. Completely clean the front and rear jaw clam shell covers. |
|---|--|

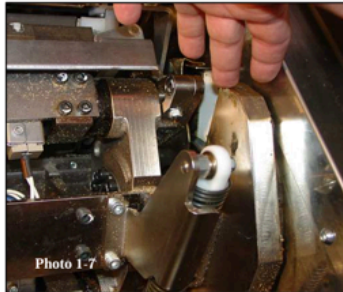

- | | |
|---|--|
| 7 | Once the covers have been cleaned and slid into position, replace the Allen bolts. |
| 8 | Place the Ishida grease gun into position and slide the nozzle over brass nipple. |
| 9 | Pump the grease gun 5 times. Rotate jaws 180° to lube second front nipple. |

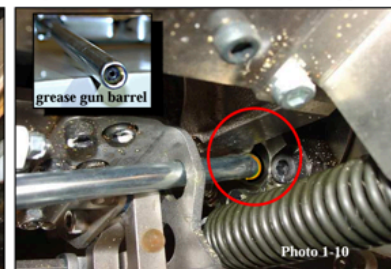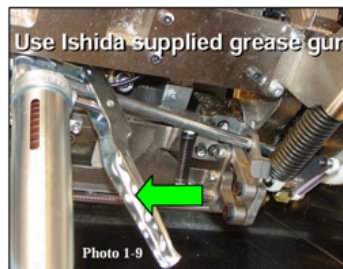

- | | |
|----|--|
| 10 | Repeat the procedure on the rear jaw cam followers top and bottom nipples. |
| 11 | Reconnect the motor and install the side panel. (see photos 1-1 and 1-2) |