



4.4.2 Dancer roller adjustment


1. Turn the main power supply ON.
2. Remove the Dancer Roller cover on the left side.

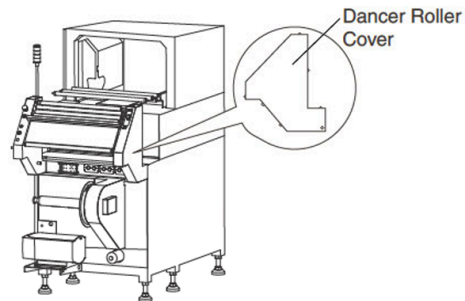

3. Press the operation level key  on a screen.
▶ The screen to select the operation level will appear.

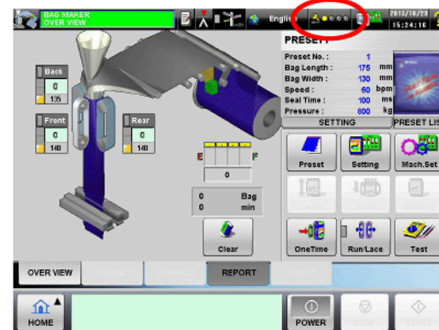

4. Select the Maintenance level.
▶ The keyboard to enter the password will appear.
5. Enter the password for the Maintenance level.
▶ The Operation Standby screen for the Maintenance level will appear.

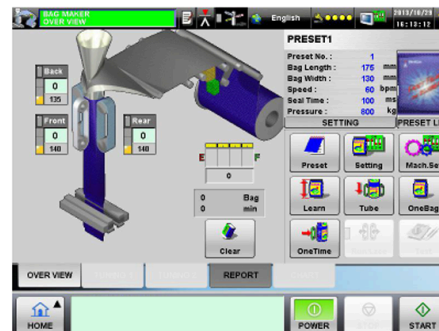


6. Press the  key.
▶ The MACHINE SETTING screen will appear.

7. Press the [SYSTEM SETUP] index.

►The keyboard to enter the password will appear.

8. Enter the password "3720".

►The SYSTEM SETUP screen will appear.

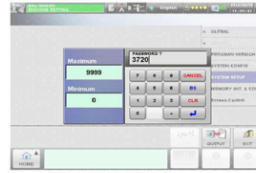


9. Confirm that the following values have been displayed for the load cell data on the screen:

If dancer roller is at lower limit: 520 (± 10)

If dancer roller is at upper limit: 4000-4400

NOTE

- If the specified values are not given, change the angle of the load cell for adjustment.

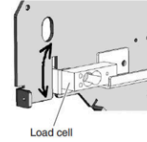

10. Loosen the fixing screws, then loosen the bolts from the inside to adjust the position.

11. Attach the dancer roller cover.