


Uploading Panasonic Drive Parameters Using Panaterm



UPLOADING PANASONIC DRIVE PARAMETERS USING PANATERM




Using the Panasonic laptop located in Kronk's cubical and a USB/mini USB cable, hook up the Mini USB to port X1 on the drive and the USB end to the laptop. Power up the drive and then Click the PANATERM icon to open the program.

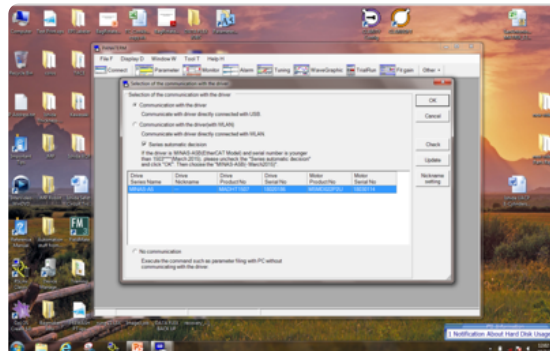


The radio button next to "Communication with the driver" should be selected automatically. If it isn't check cable connections and that the drive is powered up. Once the screen looks like it does above select **OK**.

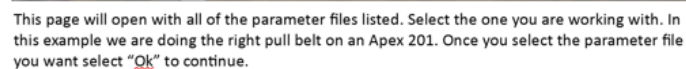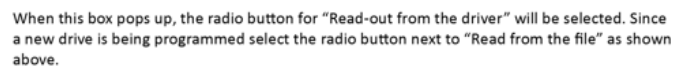


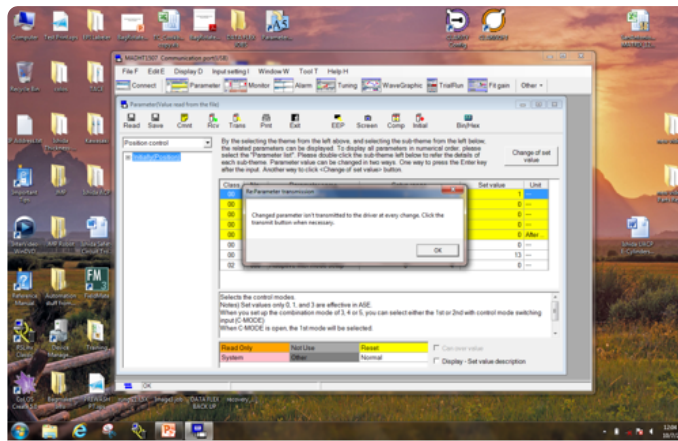


Just a warning box that tells you that you actually have to hit transmit to do anything. Select **OK**.

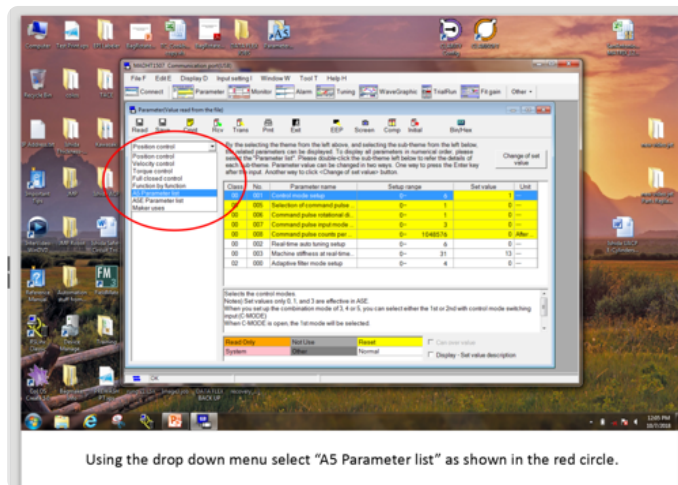


Using the drop down menu select "A5 Parameter list" as shown in the red circle.

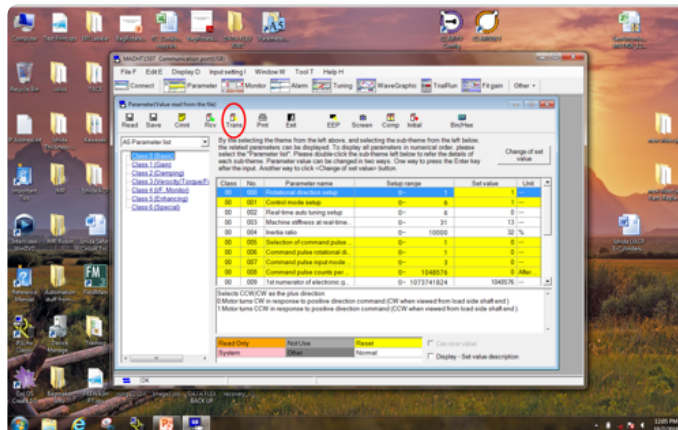

This page shows all the different parameter classes that we have to load in the new driver. At this point click on the "Trans" button (circled in red) to send the new parameters. You should see progress bars across the bottom of the window as it is loading the parameters. Usually takes about 3 seconds.

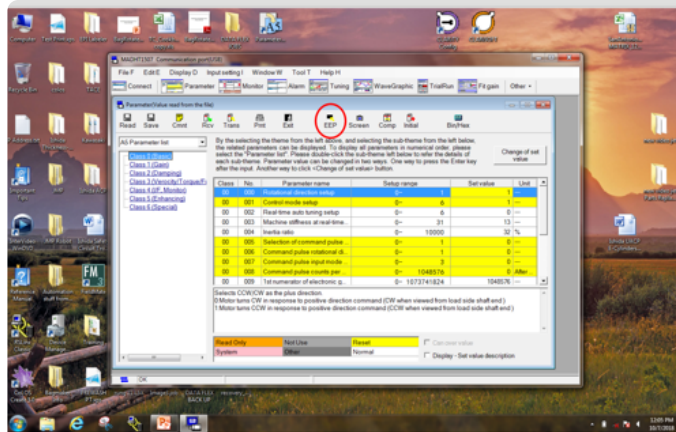

Once the parameters are loaded they will have to be written to the **EEPROM** just like the old drives. This is done by hitting the “EEP” button circled in red above.

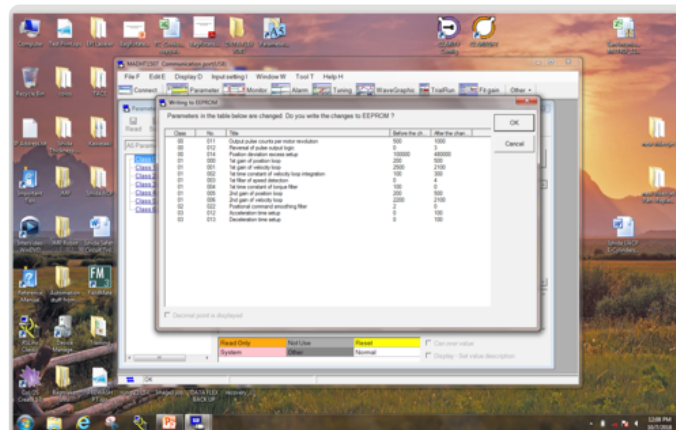

This screen acknowledges that you want to write the changes to **EEPROM** and shows the parameters that have changed. Depending on the drive you are programming the screen may show something different than what is listed above. Click **ok** to finish writing. Cycle power on drive then perform driver calibration (next page) and it should be ready to run.