

6 PRODUCTION

6.1 Summany

This chapter describes emergency stop procedures, an outline of operations, pre-operation preparation, production procedures, and the end production procedures.

6.2 Emergency Stop and Restart

Emergency Stop and restart procedures are described below.

CAUTION

- Do not power off the checkweigher & seal checker during production except when emergency stop is required.
The set data and statistical data may be cleared.
- Do not stop the system by opening the safety cover as the substitute method for emergency stop.

6.2.1 Emergency stop method by power switch

< Stop >

1. Turn off the main power switch.
 - ▶ The checkweigher & seal checker will stop production.
 - ▶ The operation panel display will go blank.

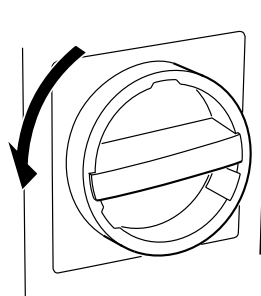


Fig.6-1 Main Power Switch

< Restart >

1. Clear the cause of the emergency stop.
2. Perform the production sequence as usual.
(See 6.3 Outline of Production Sequence)

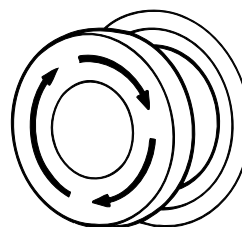


Fig.6-2 Emergency Stop Button

6.2.2 Emergency stop method by EMERGENCY STOP button

< Stop >

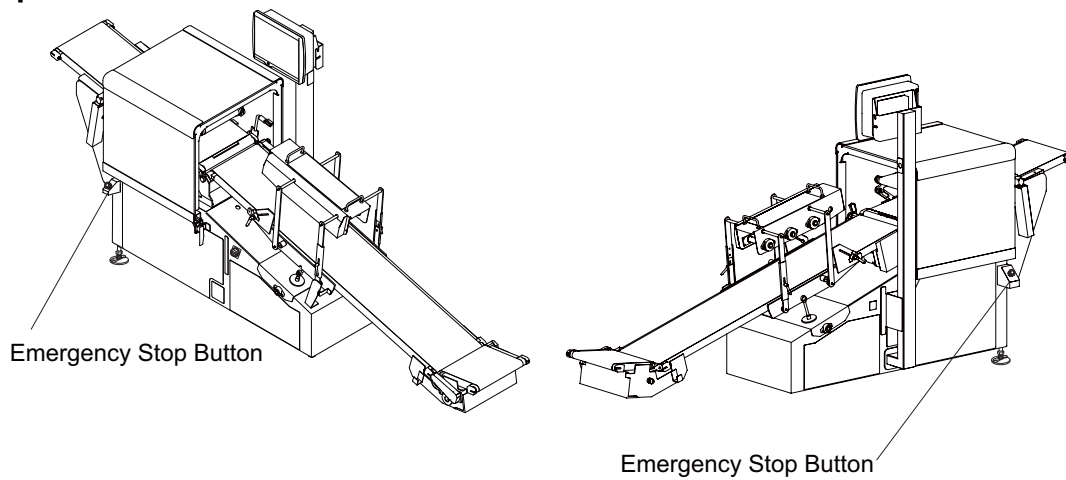


Fig.6-3 Emergency Stop button

1. Press the emergency stop button.
 - ▶ The MESSAGE screen will appear.
 - ▶ The system stops.

< Restart >

1. Remove the cause of emergency stop.
2. Turn the emergency stop button clockwise to release.
3. Restart operation in the normal procedure.


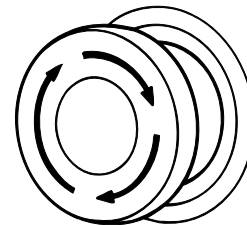


Fig.6-4 Emergency Stop Button

6.3 Outline of Production Sequence

An outline of production operation is shown below. Refer to Section 6.4 for details of pre-production procedures.

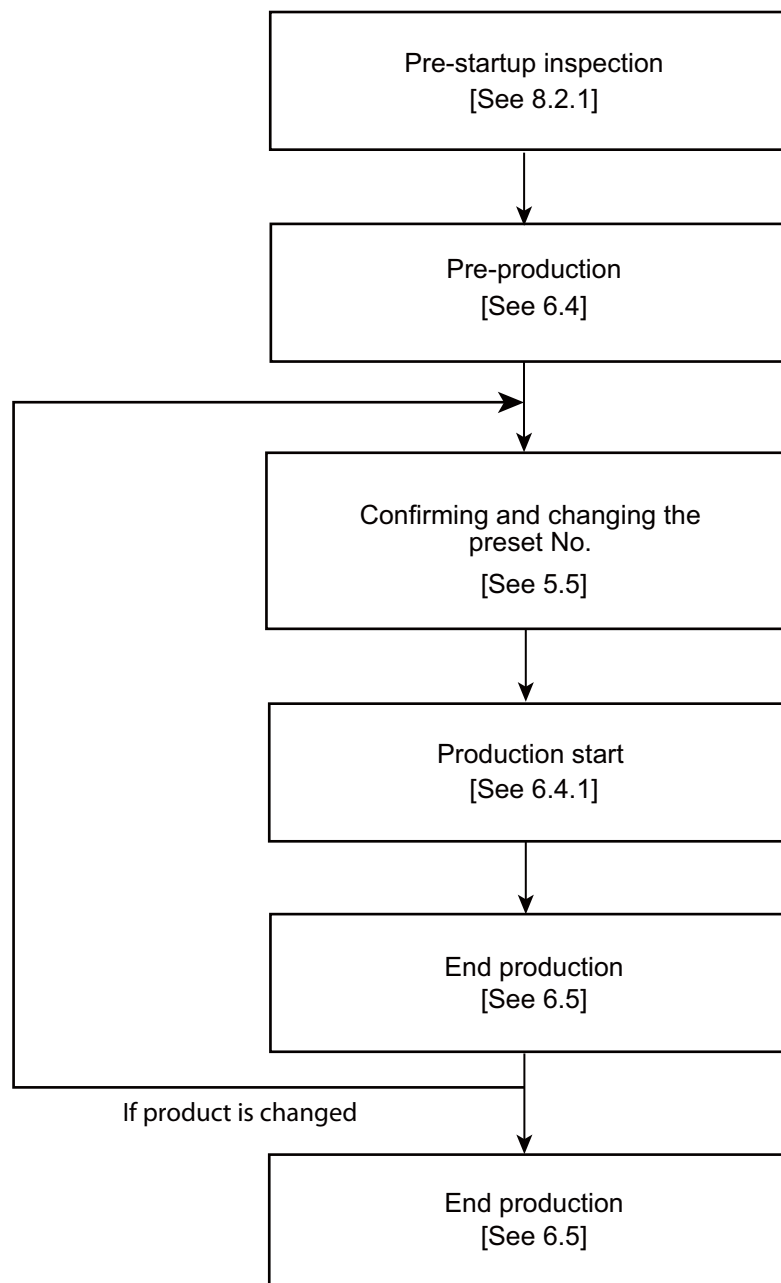

6.4 Pre-Production Procedure

Before starting production, perform the following procedure.
Operations can begin when this procedure is completed.

CAUTION

- Before performing the pre-production, check the checklist described in 8.2.1.

6.4.1 Production Procedure

WARNING

- Before starting production, check the safety of personnel around the equipment.
- While operating the equipment, do not touch any parts other than the operation panel.
Fingers may become caught in the moving parts.

1. Turn on the main power switch.

- ▶ The MAIN MENU screen appears.

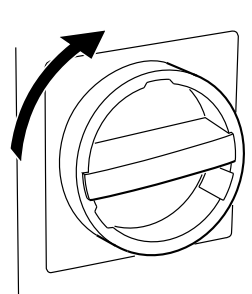


Fig.6-5 Main Power Switch ON

2. Press the [PRESET LIST] key on the MAIN MENU screen.

►The PRESET LIST screen appears.

3. Confirm and change the preset No.
[See 5.5 PRESET LIST screen]



CAUTION

Before turning ON the driving power of this system by pressing the POWER key, verify that there is no product or foreign object on the seal check conveyor.

If any product or foreign object is on the seal check conveyor, open the cover and remove the product or foreign object on the seal check conveyor.

If the POWER key on the operation panel screen is pressed to turn ON the driving power with any product or foreign object left on the check conveyor, zero position of the upper seal check conveyor cannot be recognized properly. This may cause decrease of inspection performance, malfunction, abnormal operation, failure, or run away.



Fig.6-6 MAIN MENU Screen

4. Push the POWER key on the Main Menu screen.

►The driving power turns ON.

5. Press the [START] key on the MAIN MENU screen.
6. Push the [YES] key as the confirm screen is displayed.

► Operation starts.

NOTE

- When turning on the power, the preset No. when the power was last turned off still remains.
To change the preset No, check it following step 3 before starting production, then perform the changing procedure using the PRESET LIST screen.
- If the verification window is not displayed at the procedures 5) and 7), any trouble has occurred.
Remove the error cause referring to (9.2 Error Message Handling), and repeat the procedure 4) or 6) again.



Fig.6-7 MAIN MENU Screen

6.5 End Production

1. Press the [STOP] key on the MAIN MENU screen.
 - ▶ Production stops.
2. Push the POWER key on the Main Menu screen.
 - ▶ The driving power turns OFF.



Fig.6-8 MAIN MENU Screen

3. Turn off the main power switch.
 - ▶ The operation panel display will go blank.

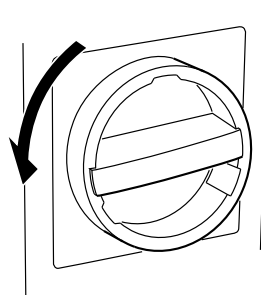


Fig.6-9 Main Power Switch OFF