


PARKER THERMAL LIQUID HEATER
GAS OR OIL FIRED
LOW NO_x UNITS PROVIDED WITH METAL FIBER
CYLINDRICAL BURNERS

INSTALLATION & OPERATIONAL
INSTRUCTION MANUAL



BOILER MANUFACTURER
PARKER BOILER CO.
5930 BANDINI BLVD.
LOS ANGELES, CA 90040
PH: 323-727-9800
FAX: 323-722-2848
WEB SITE: www.parkerboiler.com

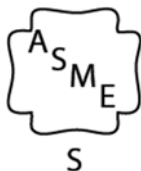

ASME CODE SECTION IV CERTIFIED

Gas fired models are listed as package Boiler Assemblies to UL 795 Issue: 2006
And Canadian Standard CAN1 3, 1-77,
Low NO_x Models – SCAQMD Certified to Rule 1146.2

When seeking information on the boiler, provide boiler Model Number, Sales Order Number and Serial Number.
As shown on Rating Label.

Boiler Model Number: G2304RL(HT) Sales Order: 968678 Serial Number: _____

National Board Number: _____

Installing Contractor: _____

Address: _____ Telephone: _____

BACK PAGE PURPOSELY LEFT BLANK

TABLE OF CONTENTS

SECTION 1: GENERAL

- 1.1. SAFETY WARNINGS
- 1.2. FACTORY SUPPORT & FIELD SERVICES
- 1.3. APPLICATIONS
- 1.4. CODES & CAUTIONS, UL REQUIREMENTS
- 1.5. BROCHURES / SPEC SHEETS
- 1.6. GENERAL BOILER PIPING SCHEMATIC
- 1.7. FLOW RATE AND PRESSURE DROP CHART
- 1.8. SHIPMENTS / RIGGING

SECTION 2: INSTALLATION

- 2.1. SELECTION OF A BOILER
- 2.2. INSTALLATION AND OPERATING PERMITS
- 2.3. BOILER ROOM AREA
- 2.4. BOILER BASE / ANCHORING
- 2.5. CLEARANCES
- 2.6. COMBUSTION AIR SUPPLY
- 2.7. COMBUSTION VENTS
- 2.8. CONTROL VALVE VENTS
- 2.9. SAFETY RELIEF VALVE
- 2.10. PIPING
- 2.11. UTILITIES
 - A. FUEL SUPPLY
 - B. NATURAL GAS
 - C. LIQUID PETROLEUM GAS
 - D. FUEL OIL
 - E. ELECTRICAL
- 2.12. WATER TREATMENT /
BULLETIN CWT-201

SECTION 3: BURNER SYSTEM OVERVIEW

- 3.1. BURNER TYPES
- 3.2. CYLINDICAL BURNERS / ISOMETRIC BURNER-FRONT WALL ASSEMBLY
- 3.3. PARKER LITE SEQUENCE INDICATON SYSTEM
- 3.4. SEQUENCE OF OPERATION
- 3.5. OPERATING INSTRUCTIONS
- 3.6. BURNER COTNROL SYSTEM
- 3.7. TEMPERATURE CONTROLS

SECTION 4: START UP

- 4.1 START-UP
- 4.2 MAINTENANCE TUNE –UP

SECTION 5: PARTS

- 5.1 CINCINNATI BLOWER
- 5.2 VFD
- 5.3 FLAME SAFEGUARD SYSTEM / SCANNER
- 5.4 SIEMENS & ASCO GAS VALVES, AIR RATIO CONTROL
- 5.5 PILOT VALVE
- 5.6 OPERATING/MODULATING CONTROL
- 5.7 WARRICK LEVEL CONTROLS
- 5.8 SAFETY RELIEF VALVE
- 5.9 ANTUNES AIR SWITCH
- 5.10 FIELD BAROMETRIC DAMPER
- 5.11 OTHER OPTIONAL CONTROLS
- 5.12 WIRING DIAGRAM
- 5.13 BILL OF MATERIALS
- 5.14 WARRANTY / REGISTRATION

SECTION 1: GENERAL

The Manufacturer is sincerely interested in cooperating with the planning of all Installations to fully comply with Code and to promote a safe and efficient installation. Refer to the Installation Drawings for more complete details. Consult the Manufacturer or Representative at any time for assistance. Refer to this manual for proper care of the boiler.

1.1 - SAFETY WARNINGS

WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

FOLLOW ALL INSTRUCTIONS

- Boiler must have proper combustion air and venting.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. **NEVER BYPASS A SAFETY CONTROL**
- WHAT TO DO IF YOU SMELL GAS
 - Do not try to light any appliance.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Close boiler room or building gas valve only if safe!
 - Immediately call your gas supplier from a remote phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- START UP & INSTALLATION
 - Start up, Installation, and service must be performed by a qualified installer, service agency or the gas supplier only.
 - Install boiler per these instructions.
 - Follow & fill out Start up Report and check sheet on all installations (Bulletin ISCS).
 - For Power Burner models, refer to Burner O&M Manuals for burner portion of Start-Up
 - Refer to Burner manufacturer's instructions.
- CANADIAN BOILERS
 - The equipment shall be installed in accordance with the current Installation Code for Gas Burning Appliances and Equipment, CGA B149, and applicable Provincial Regulations for the class; which should be followed in all cases. Authorities having jurisdiction should be consulted before installations are made.

1.2 – FACTORY SUPPORT & FIELD SERVICES

AREA SERVICE:

Consult the Parker Area Representative.
If not available, consult Factory.

PARKER BOILER CO.

5930 BANDINI BOULEVARD
LOS ANGELES, CALIFORNIA 90040
PHONE: 323-727-9800
FAX: 323-722-2848

E-MAIL:

WEB:

FOR FACTORY SERVICE:

Available from Los Angeles
Consult Factory for service
rates and charges.

sales@parkerboiler.com

www.parkerboiler.com

24 hours/day; 365 days/year

1.3 – APPLICATIONS

- The Parker Water Wall Series Boiler is a bent steel design used in recirculating closed hot water systems through a range of pressures and temperatures.
- “H” Models ASME Section IV Heating Boilers are certified for temperatures to 250°F.
- “S” Models ASME Section I Power Boilers can operate at temperatures to 350°F.
- Do not use on open systems.
- Flow is required during boiler operational periods.
- Return water temperatures should be kept above 130°F for sustained operation (Start up temperatures below this are acceptable). (140°F for oil fired boilers, 190°F for bio-fueled boilers)
- BURNER OPTIONS
 - Conventional Powerflame nozzle type burner for gas, oil or gas/oil firing.
 - Low NOx Metal Fiber burner cylindrical burner for gas firing.

1.4 - CODES & CAUTIONS

For a proper installation and in order to receive the best in operating life and efficiency from your Parker Hot Water Boiler, it is essential to follow the Manufacturer's Minimum Standards and all the Requirements of State and Local Codes. Before installing the Boiler carefully review these General Basic Installation Instructions, the specific Installation Instructions and the Installation Drawings as these instructions illustrate the Recommended Installation Procedure.

CAUTION: ALL INFORMATION ON THESE SHEETS IS IMPORTANT. Failure to give all factors proper consideration may result in an unsafe and inefficient installation. Manufacturer's Recommendations are a Minimum Standard for Satisfactory Installation. The installation must also follow all Safety Codes including the ASME Boiler and Controls Codes, National Fuel Gas Code (NFPA 54/ANSI Z223.1), National Electric Code (NFPA 70), Uniform Codes and other applicable National, State, Local and Servicing Gas Supplier Codes. Only trained and qualified personnel should install, startup, operate, adjust, repair or maintain this boiler equipment.

Parker Boilers are equipped with Code required safety controls, which will automatically shutdown boiler when unsafe conditions are sensed. Customer must provide adequate supervision when service interruption or freeze-up presents a problem. Boilers, tanks, pumps and piping in areas subject to freezing conditions must be drained or protected. All Hot Water System components including the expansion tank must be rated for a pressure at least equal to the Boiler Maximum Allowable Working Pressure. If a hot water storage tank is used, it must be equipped with a safety relief valve. A Combination Temperature and Pressure type is recommended for domestic or potable water supply heating.



THERMAL LIQUID HEATER LOW NO_x METAL FIBER BURNER

G---R(L)HT Models, Bent Steel Liquid Tube Furnace
672,000 - 2,500,000 BTUH Gas Fired

THE PARKER DESIGN

The Parker liquid tube design offers an extremely efficient, reliable heater built for the long term with ease of maintenance. The Parker design offers many advantages. Compare ours to the competition.

ADVANTAGES

- Sealed combustion chamber offers high efficiencies with low excess air levels.
- Less heat loss due to liquid furnace and sealed combustion chamber design.
- SCAQMD Certified for less than 20ppm NO_x
- Variable speed blower for electrical energy savings.
- LOW NO_x heavy duty Metal Fiber Burner.
- Flexible tubes, no thermal shock problems.
- Extra heavy boiler tubes 1-5/16" OD, minimum 0.12" (11GA) heavy thickness steel, built for long term service life.
- Double welded tube bundle. No rolled ferrell fit connections or gaskets. Tube bundle is baffled/designed to match system flow requirements.
- Factory set tube bundle pass baffling to match system flow.
- Units can go through a 35" door.
- Modular cabinet construction.
- Lighter weight. No refractory.

Low Cost Operation

The staggered tubing design provides a 10-pass self-baffled heating surface to increase efficiency.

PARKER BOILER CO.


5930 Bandini Boulevard
Los Angeles, CA 90040
Tel (323) 727-9800
Fax (323) 722-2848
www.parkerboiler.com

BROCHURE 207WW-L 1D0



**207WW Thermal
Liquid Heater**

**Temperatures to 600°F
Pressures to 125 PSI**

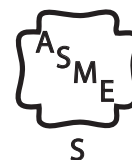

**SCAQMD
Certified to 1146.2**

Safety


Our ASME tube bundle is extremely flexible and offers a long life with a 25 year warranty against thermal shock. No Parker Boiler has ever been known to experience an internal explosion.

Heavy Insulated Cabinet

The cabinet is durably constructed with heavy steel, insulated with high temperature thermal fiber insulation to effectively reduce heat losses to a minimum.

Liquid tube
Furnace

Metal Fiber
Burner

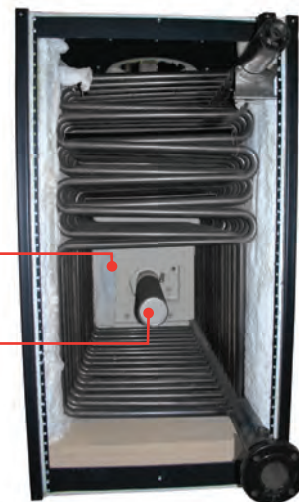

Codes / Approvals

All Parker Heater Boilers are manufactured in accordance with the ASME Power Boiler Code, registered with the National Board of Boiler and Pressure Vessel inspectors. The boiler burner and controls are prewired, factory tested and comply with ASME CSD-1.

"Never a Compromise for Quality or Safety"




PARKER BOILER THERMAL LIQUID WATER WALL HEATER

LOW NO_x FIRED

MODELS G672R(L)HT TO G3120R(L)HT

SPEC. SHEET
D-207WW-R(L)HT
1EO

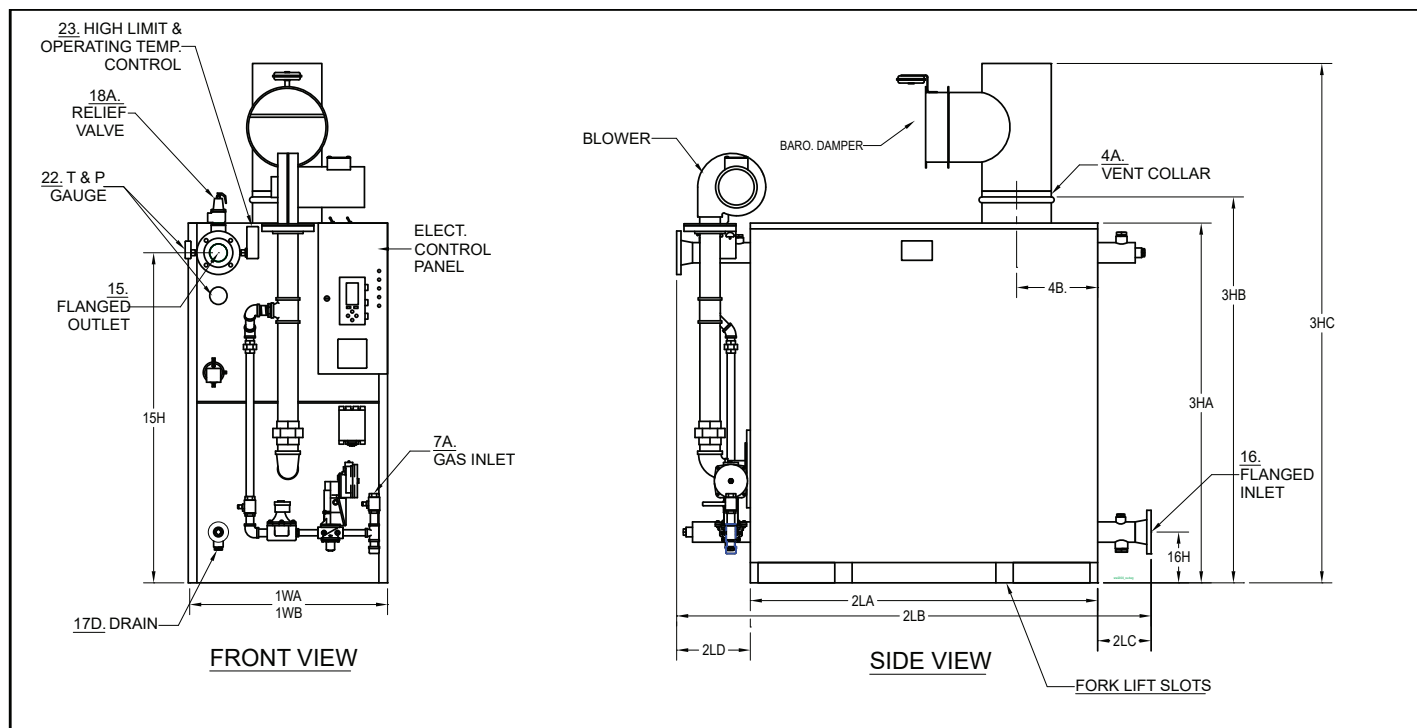

NO.	ITEM	MODEL NO.	G672R(L)HT	G1008R(L)HT	G1536R(L)	G2304R(L)HT	G2640R(L)HT
A	BTU Input	1000's BTU/HR.	672	1008	1536	2000	2500
B	BTU Output	1000's BTU/HR.	537	806	1228	1600	2000
C	Heating Surface	SQ. FT.	93	140	234	294	358
1WA	Width of Cabinet	IN.	35	35	35	35	35
1WB	Width Overall including controls (controls can be removed)	IN.	39	39	39	39	39
2LA	Length of Cabinet	IN.	32	47	68	83	101
2LB	Length Overall	IN.	54-1/2	67-1/2	90	106	123-1/2
2LC	Length of Back Beyond Cabinet	IN.	9-1/2	7-1/2	9	9	8-1/2
2LD	Length of Front Beyond Cabinet	IN.	13	13	13	14	14
3HA	Height of Cabinet	IN.	62	62	62	62	62
3HB	Height with Vent Collar	IN.	66-1/2	66-1/2	66-1/2	66-1/2	66-1/2
3HC	Height Overall Including Barometric Damper	IN.	81	84	90	92	96
4A.	Vent Collar Diameter	IN.	8	10	14	16	18
4B.	Vent Stack Location - From Rear of Boiler Cabinet	IN.	12	17-1/2	23	26	30
7A	Std. Nat. Gas Inlet Size, @ Inlet Supply Pressure; Min: 7" W.C.; Max: 14" W.C.	IN.	1	1	1-1/2	1-1/2	2
7B	Hi Pressure Natural Gas or LP Gas Inlet Size, Supply Pressure 1-5 PSI	IN.	1	1	1-1/2	1-1/2	1-1/2
15 & 16	Inlet & Outlet Size (CL. 150 Flanged)	IN.	3	3	3	3	3
15H	Outlet Height from Floor	IN.	57	57	57	57	57
16H	Inlet Height from Floor	IN.	8-3/4	8-3/4	8-3/4	8-3/4	8-3/4
17D	Drain Line Size Required	IN.	1	1	1	1	1
18AHP	Safety Relief Valve Size - 125 PSI	OUTLET IN.	1-1/2	1-1/2	1-1/2	1-1/2	1-1/2
20A	POWER SPECIFICATIONS	VOLTAGE/PH	115V/1PH				230V/3PH
20B	Controls (115V-1Ph-60Hz)	AMPS	5 AMPS				
21	Blower HP	HP	1/2	1/2	1	1	2
	Liquid Capacity	GAL.	16	22	35	43	56
	Net Weight of Heater	LBS.	1440	1685	2350	2800	3600
	Crated Shipping Weight of Heater- Approximate	LBS.	1640	1935	2650	3130	4000

Recommended Clearances 48" around all sides. Electrical Panel 30"; 3Ph (36") ; Additional space may be required by Local Codes.

Notes: Due to continuous improvement, specifications are subject to change without notice.

D-207WW-R(L)HT.DWG



"Never a Compromise for Quality or Safety"

PARKER BOILER CO.
5930 Bandini Boulevard
Los Angeles, CA 90040
Tel (323) 727-9800
Fax (323) 722-2848
www.parkerboiler.com
BROCHURE 207WW-L 1DO

1.6 – SHIPMENTS / RIGGING

NOTICE ON SHIPMENTS AND RIGGING

I. SHIPMENTS:

Most Parker Water Wall Boilers will ship in a crate with a barometric damper and tee. Other components may ship loose with the order.

ACCEPTANCE OF SHIPMENTS:

Upon arrival, carefully inspect all shipments for apparent shortages and damage. Check and compare actual goods received with delivery receipt. If any goods are missing or damaged, be sure this is noted on delivery receipt before accepting shipment and signing delivery receipt. Then, file immediate claim with carrier for amount of loss or damage. Protect all vessel's pipe, components, pumps, etc from freezing conditions.

CONCEALED DAMAGE:

Should any damage not be discovered until after the goods are unpacked, immediately report this to the delivery carrier. The carrier will make an inspection and will prepare a "Loss and Damage Claim Form" covering the damage.

FOR YOUR PROTECTION, EXAMINE THE GOODS:

Our liability on shipments ceases when we obtain a signed Bill of Lading from the carrier indicating shipment has been received by them in proper condition for transportation. All shipments made by this Company are F.O.B. Factory, and we are in no way responsible for delivery of goods by the carrier. We will assist any customer in collecting claims against the carrier for loss or damage to shipments; however, for us to be of assistance, the customer must have inspected the shipment and received an acknowledgement of the loss or damage from the carrier.

GOODS RETURNED WITHOUT PERMISSION WILL NOT BE ACCEPTED FOR CREDIT:

Before returning any goods to the Manufacturer for credit, it is important to obtain approval and use the "Return Material Card" for proper identification. Card should be attached to goods being returned.

RIGGING

Forklift receivers are provided on boiler base. These should be used for moving boilers. Move boiler from base NOT tubes or headers. Only qualified riggers should be used to place the boiler on the foundation. Slings, blocks and all rigging equipment must be carefully placed to avoid damaging or loosening piping, wiring and other parts of the boiler. The system should be securely bolted to the foundation and shimmed if required.