

INSTALLATION PROCEDURES

INSTALLING THE BEL 505 & 505 'S'

Unpack the machine and remove any packing material from the interior or supports from underneath used to protect components during shipping.

Install the legs at each of the three positions on the machine frame with one nut and washer for each leg underneath the frame and another nut and washer on the inside. If the 505 or 505S is to be mounted on [and supported from] the case sealer with mounting options 70-378 or 70-395, refer to the instructions included with them.

LEVELLING THE MACHINE


If standing directly on the floor, the base of the frame should be made level to ensure personnel safety, provide optimum performance and avoid frame stress.

Please note that the standard BEL 505 & 505 'S' are intended to operate in a horizontal position. Attempting to tilt the 505 or 505 'S' toward the operator will cause excessive wear in the case width adjustment mechanism and may cause it to bind or damage the width adjustment screw. A width adjustment equalizer option 70-380 is on BEL 505's that are used with side-tilt mounted systems.

[Another possibility for a side-tilt system is the BEL Model 507 Tilt Packing Station. It is designed to tilt towards the operator for case erecting and loading and then back to the horizontal position for feeding into a sealer or onto a conveyor.]

ALIGNING THE MACHINE

The machine should be securely mounted to adjoining equipment to prevent the machine moving as it operates. If being directly connected to a BEL case sealer, it is important that the centers of both machines be in line for ease of case transfer between machines. When a BEL 505 is provided together with a BEL sealer a jig is provided to further assist aligning the machines. The BEL 505 should be level with, or slightly higher than, the case sealer conveyor.

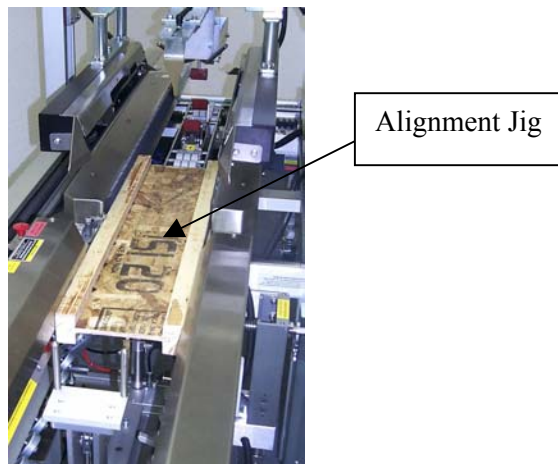

AIR CONNECTION

**SAFETY CAUTION**

**Make sure that the red emergency stop button is pushed down (off)
before connecting an air supply to the machine.**

The air may come from either a separate source or by tapping off the supply of an adjoining case sealer. The supply must be clean factory air and must be lubricated by the unit on the machine.

Air pressure should be set to 80 psi. for most applications with a minimum setting of 65 psi. and maximum of 100 psi.