

OPERATION & ADJUSTMENT PROCEDURES



SAFETY CAUTION





Switch off or disconnect the air supply to the machine before making any changes or adjustments.

MACHINE SET-UP ADJUSTMENTS

Setting up the BEL 505 & 505 'S' to fold a particular box size is accomplished with two main adjustments for case width and length. There is a third adjustment to reposition the major flap folder plates that, after initial setup, will need to be changed only where there is a large difference between cases widths.

CASE WIDTH

1. Loosen the hand knobs at the end of the BEL 505 or 505 'S'.
2. Attach the hand crank supplied with the machine on the square shaft that extends from either side of the frame. Adjust the frame to be wider than the case.
3. Open a case from the flat blank and insert it into the machine.
4. Crank in the width adjustment until the red case hold-down rollers are lightly gripping the sides of the case. It should be easy to insert and remove the case without forcing but it must maintain contact on the white "body" switch roller until the case leaves the machine.
5. Re-tighten the hand knobs.

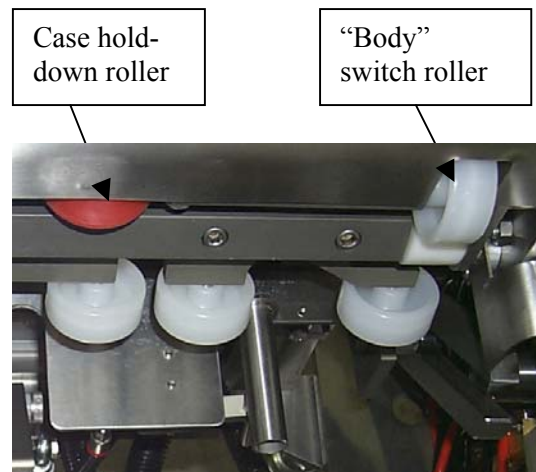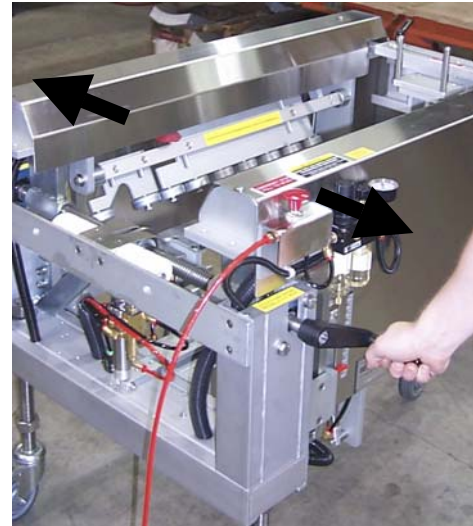

CASE LENGTH

1. Remove the case and loosen the clamp at the base of the front minor flap folding “tower”



2. Reinsert the case into the machine and position it $\frac{1}{2}$ ” back from the minor flap folder at the exit end of the machine. Push the tower forwards until it just contacts the back of the case. Remove the case and tighten the tower clamp




MAJOR FLAP FOLDER ROLLER PLATES

The major flap folding plates and wheels may need to be extended to provide additional support for wide heavy cases or retracted for narrow ones.

Important Note Regarding Major Folder Plates Adjustment: Sliding the plates in towards the machine centre increases the case bottom support but limits the minimum width adjustment when the major flap folder wheels hit the minor folder tower. Also, extended folder plates in the down position will wedge against the bottom control valve / flap opener bracket as the machine is adjusted for minimum width. If forced, either of these conditions can damage machine components.

There are two major folder plates on each side of the machine, one small and one large that are adjusted independently.

1. Loosen the four socket-head cap screws on each side that hold the folder rollers in place. Slide the front [large] folder to the desired position and retighten the screws.

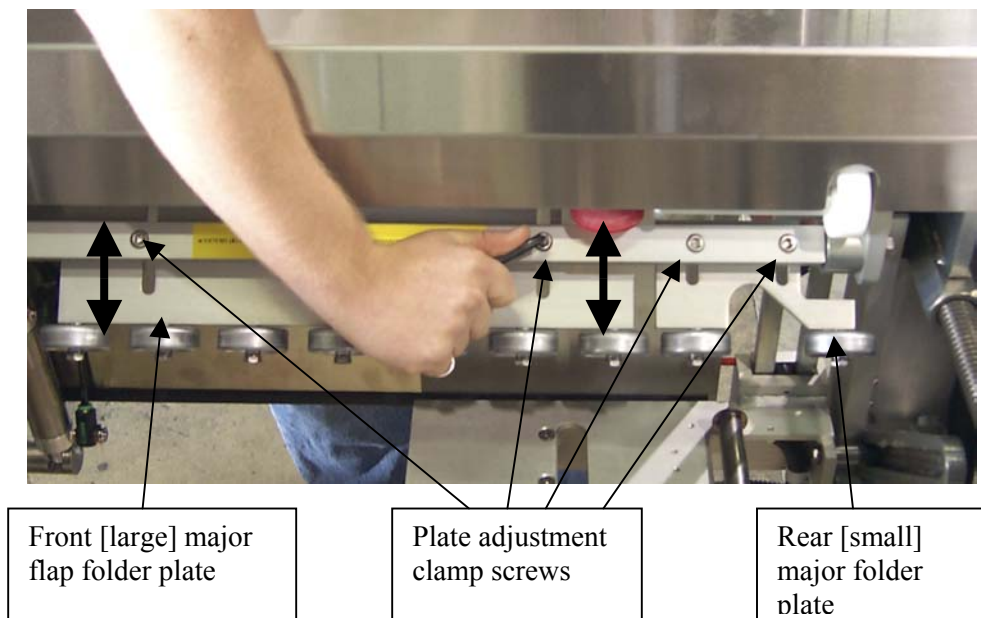

2. Adjust the rear [small] major folder plate. Make sure that the plate will not contact the “floor” switch valve arm as it moves through its arc. For wide cases, the small folder plate will not be able to be extended as far as the large plate and has a separate adjustment for this reason.

