

**Additional Note:** For wide cases on 18" & 20" maximum width 505 versions, optional roller wheels are mounted on extensions from the folding plates to place them closer to the centre of the box for better folding performance and product support. Extensions may need to be removed for narrow cases run on the same machine to avoid interference with other machine components. If your application requires these extensions and they are not provided with your machine, contact BELCOR for information and parts.

## MACHINE OPERATION



### **SAFETY CAUTION**



**Make sure that the main on/off valve at the air connection is shut off and that the red emergency stop button is pushed down before connecting an air supply to the machine.**

#### STARTING THE MACHINE

Prior to starting, hand swing all moving parts to check adjustment and for any mechanical interference. Turn on main supply valve, keeping hands clear of moving parts.


#### ERECTING A CASE

1. Open a case so that it is fairly square.
2. Place the open bottom into the BEL 505 or 505 'S', pushing the case all the way down to the floor switches
3. The machine will first fold the front and rear end minor flaps, then the two side major flaps. The case is held in place and is ready to fill, if desired
4. When filled, or if the case is just erected for filling downstream, push it out of the packing station to the next operation.
5. As the end of the case breaks contact with the "body" switch, the 505 will automatically reset ready for the next case.




**MACHINE OPERATING CYCLE**

1. The bottom edges of the major flaps depress the actuators of the two “floor” switch valves and the side of the case depresses the wheeled “body” switch valve. All three switches must be actuated for the machine cycle to start.

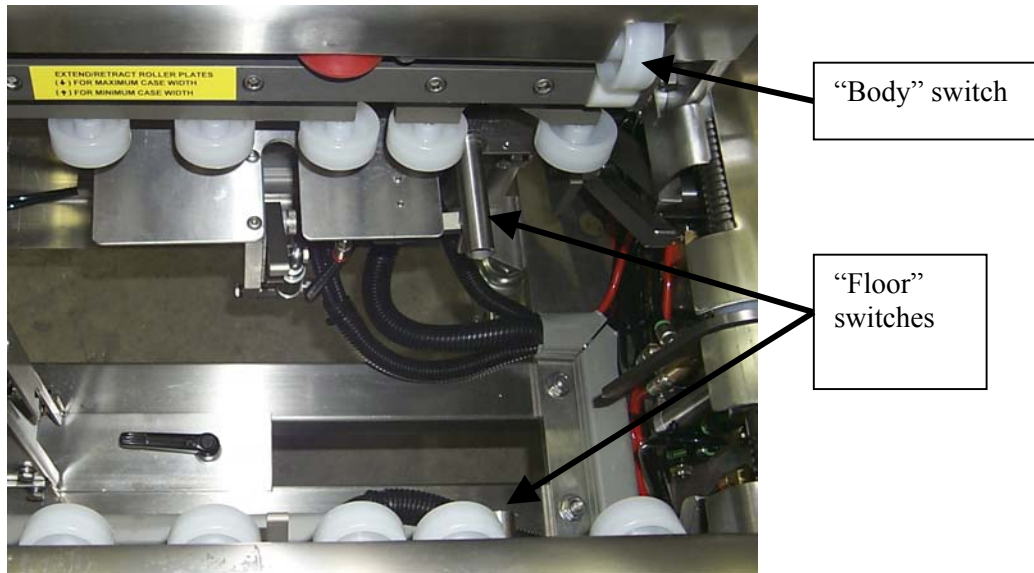


2. The two small levers of the major (side) flap openers momentarily open the bottom major flaps wider to clear the minor (end) flaps.

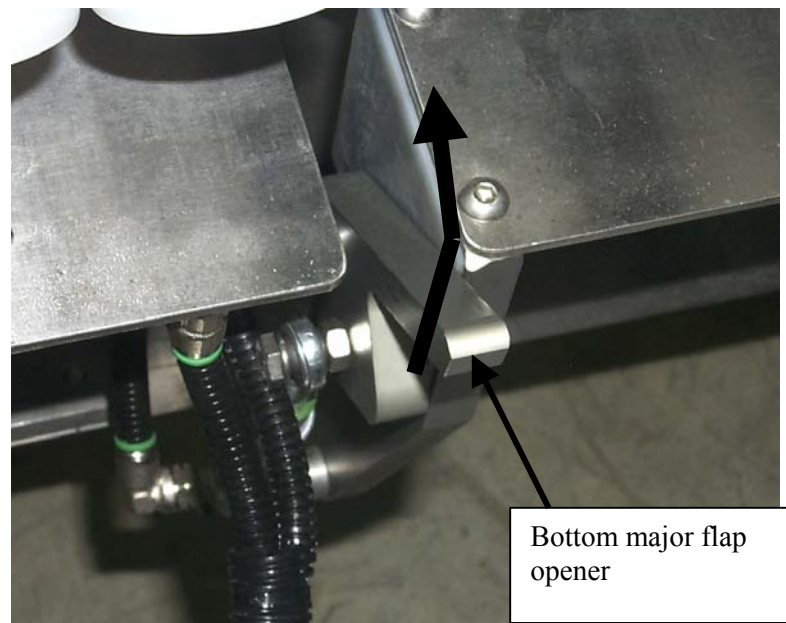


3. The minor flap folders fold up both end flaps of the box bottom and retract.

Front [tower] Minor Flap Folder

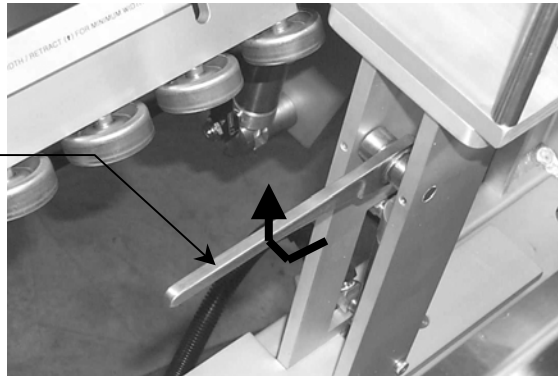


Front Minor Flap Folder

Rear Minor Flap Folder  
[Machine out-feed end]

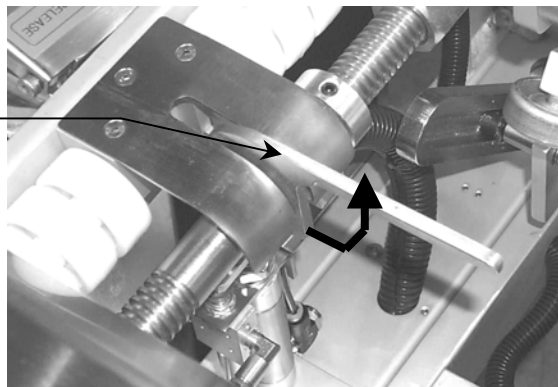

Rear Minor Flap Folder

4. The major flap folders then fold up both side flaps of the bottom and stay in position to support the box for packing.

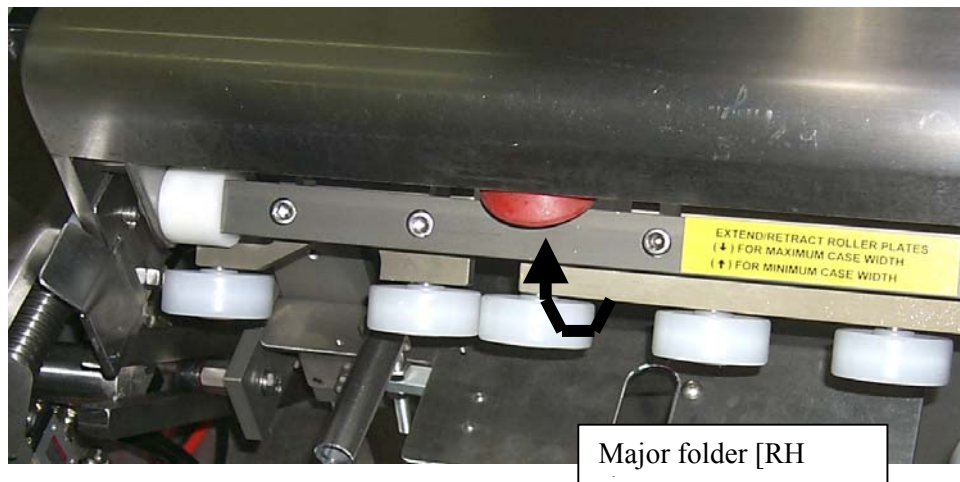

Major folder [RH]

5. Pushing the box out of the machine breaks contact with the body switch inside the packing station. The machine then resets, ready for the next case.