

CHAPTER

7

Appendix



7.1	Installation Procedure for MCU Program (only replaced to new board)	7-3
7.1.1	Delete MCU Data Memory	7-3
7.1.2	Program Installation for MCU Board and System Initiallization	7-4
7.2	Program Installing Procedures for MCU, ADC, DRV, REJ, IO	7-16
7.2.1	Program Installing Procedures with USB Memory	7-16
7.2.1.1	Installation of MCU, ADC, DRV and REJ Programs at the Same Time	7-16
7.2.1.2	Install the Program to the Weigh Unit [ADC board]	7-19
7.2.1.3	Rejector [REJ]	7-20
7.2.2	Error Screen Displayed at Program Install	7-22
7.3	License Confirmation	7-24
7.3.1	License Attestation	7-24
7.3.2	Show License	7-28
7.3.3	License Code History	7-28
7.4	Detailed Information on Communication Unit (with the entire license attested)	7-29
7.4.1	Communication Unit Setting COM1 Communication Unit Setting	7-29
7.4.2	Communication Unit Setting COM2	7-29
7.4.3	Port 2000 Setting	7-30
7.4.4	Port 2026 Setting	7-30
7.4.5	Ethernet Settings	7-31
7.5	Optional Settings	7-31
7.5.1	Ethernet (Port 2000)	7-31
7.5.1.1	i-STATION LINK/LINK2 Settings	7-31
7.5.2	Standard Communication Specification (host server)	7-32
7.5.3	Setting Information of RS-232C	7-34
7.5.4	Setting Information of Standard Preset Communication Specification	7-35

7.1 Installation Procedure for MCU Program (only replaced to new board)

- NOTE**
- This procedure of program installation is for replaced to new MCU borad only.
 - Prepare USB memory and MCU/ADC/DRV programs.
 - Do not install the program of PKG:P3000*(MCU:N5020*) to the MCU board (PK-2700).

7.1.1 Delete MCU Data Memory

1. Attach the MCU board (PK-270*) on the electrical control unit.
2. For safety, to "OFF" the battery jumper switch of MCU board (PK-270*)

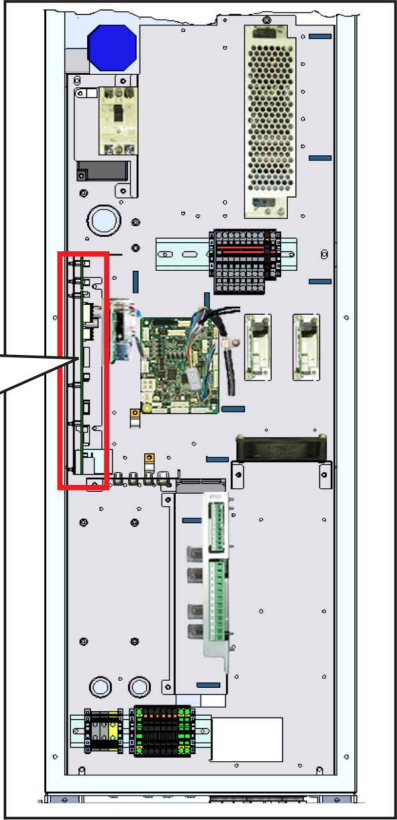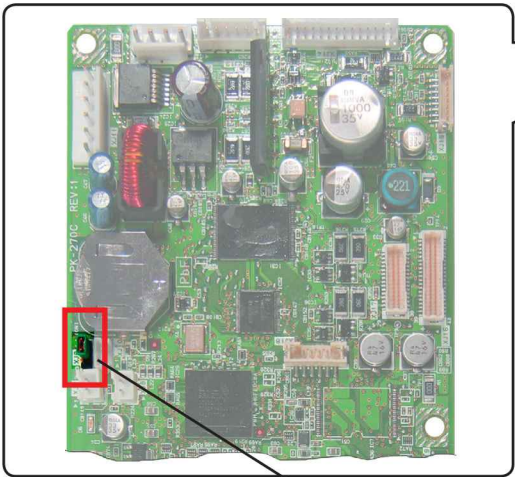

- The data memory can be deleted by disconnecting the battery power.

3. Switch the battery jumper to "OFF", and leave for 3 or 4 minutes.
4. Return the battery jumper switch to "ON".

BATSW			ON
	OFF	ON	Default


7.1.2 Program Installation for MCU Board and System Initiallization

NOTE Do not turn OFF the power switch during the program download.


- 1. Insert USB memory to the USB slot on the op-eration panel.
- 2. Turn ON the power switch.
- 3. Buzzer sounds after power ON, this is not fault. Then, FPGA Download screen is appear and download starts automatically.



Buzzer sounds after power ON
The buzzer sounds until the program in-
stallation completes. It is recommended
to disconnect the XJ53 connector (buzzer
signal line) on the key board before the
installation work. After installation, be
sure to connect the connector.

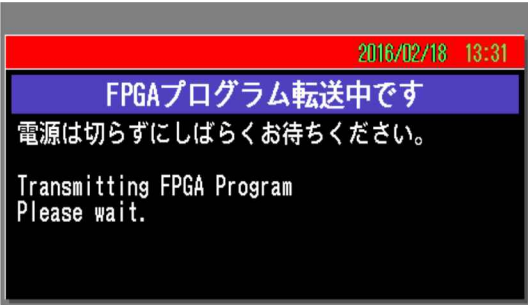

- 4. Turn OFF the power switch after finished the download.

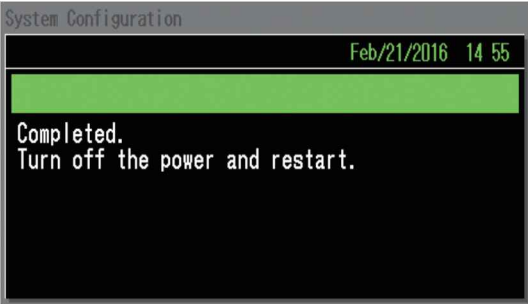


5. Turn ON the power switch again.

- [Select Language] menu appears, so select "English" and press the .



- [Program Update Selection] menu will appear.

6. Confirm the program number and press the .

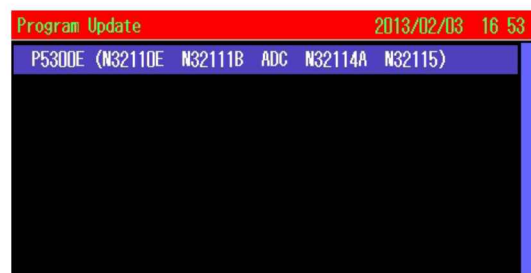

- [Program Update Selection] menu will appear.

7. For the parameters of MCU, DRV, ADC, REJ and IO, select On and press the .




8. Point the cursor to [Program Update Start], and press .




- Confirmation screen appears.

9. Press the  if execute.

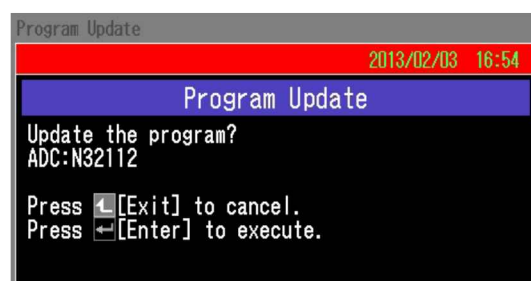

10. The download menu appears, and start download MCU, ADC, DRV, REJ and IO.

- It takes approx 10 minutes for downloading the programs.

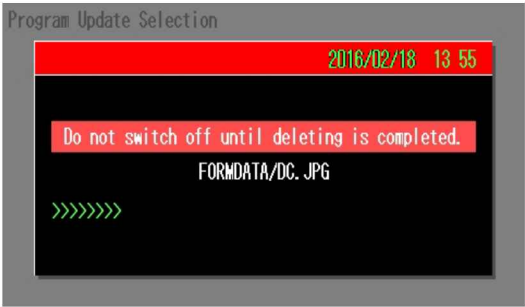

- Program download is completed, Completed message appears.

11. Press the .




- The message "All settings need initializing." message will be displayed.

12. Press the .




- System initialization menu appears.

13. Select the project No. item and press the .

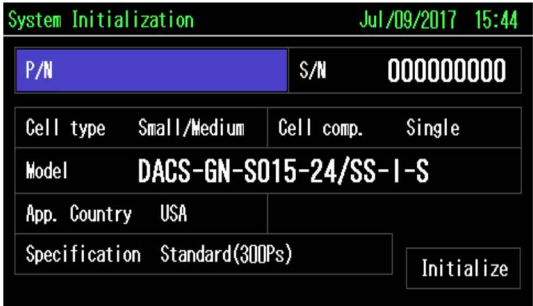

14. The P/No. item will be displayed in blue, then press the .

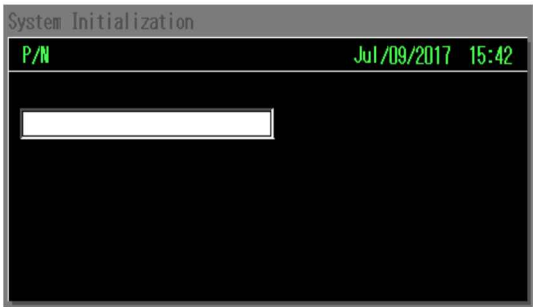

- Screen to input project No. (P/N) will appear.

15. Input the Project No. on the name plate of check weigher with the ten-key pad.

- The input area of the Project No. is displayed, then press the .




System Initialization Jul/09/2017 15:43

P/N

123456789

16. The Project No. is displayed.

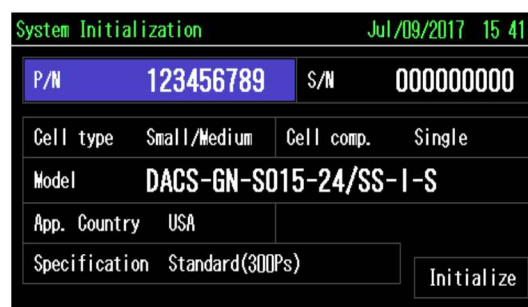

System Initialization Jul/09/2017 15:41

P/N	123456789	S/N	000000000
Cell type	Small/Medium	Cell comp.	Single
Model	DACS-GN-S015-24/SS-I-S		
App. Country	USA		
Specification	Standard(300Ps)		
			Initialize

17. Press the  to display the serial No. (S/N) item in blue.



System Initialization Jul/09/2017 15:44

P/N	123456789	S/N	000000000
Cell type	Small/Medium	Cell comp.	Single
Model	DACS-GN-S015-24/SS-I-S		
App. Country	USA		
Specification	Standard(300Ps)		
			Initialize

NOTE

- Correct P/N should be in 9 digits.
- Incorrect P/N (or Job No.) may prevent accessibility of correct information of check-weigher. Ensure to Input correct P/N (or Job No.). (that imprinted on the name plate of check weigher).

18. Press the . Screen to input Serial No. (S/N) will appear.

- Input the Serial No. on the name plate of check weigher with the ten-key pad.



System Initialization Jul/09/2017 15:44

S/N

0

19. The input area of S/N is displayed.

- Press the .



- The S/N is displayed.



20 Press the .

- Setting screen for Cell type appears.



21. Press the .

- Selection screen for Cell type appears.



Since the model of this check weigher is G-S015/S060, select "0: Small/Medium".

22. The Cell type used here is "Small/Medium" digital load cell. Select , and press .

- The Cell type is set to "Small/Medium".



23. Press the .

- "Cell comp." turns to blue.

24. Press the .

- Cell composition screen will appear.

25. Since the cell composition of this checkweigher is single digital load cell, select , [0 Single] and press .

- The cell composition is set to "Single".



For the long-product specification and the twin specification in which the infeed unit mounts the weigh cell unit, select "1: Twin".

For standard type, proceed next step 26.

System Initialization		Jul/09/2017 16:04	
P/N	123456789	S/N	001234567
Cell type	Small/Medium	Cell comp.	Single
Model	DACS-GN-S015-24/SS-I-S		
App. Country	USA		
Specification	Standard(300Ps)		
			Initialize

System Initialization		Jul/09/2017 16:05	
Cell comp.			
0	Single		
1	Twin		

System Initialization		Jul/09/2017 16:04	
P/N	123456789	S/N	001234567
Cell type	Small/Medium	Cell comp.	Single
Model	DACS-GN-S015-24/SS-I-S		
App. Country	USA		
Specification	Standard(300Ps)		
			Initialize

■ For Twin cell model (optional):

A26. Since the cell composition of this checkweigher is twin digital load cell, select "1 Twin", and press .

- The cell composition is set to "Twin".


System Initialization		Jul/09/2017 16:05	
Cell comp.			
0	Single		
1	Twin		



System Initialization		Jul/09/2017 16:06	
P/N	123456789	S/N	001234567
Cell type	Small/Medium	Cell comp.	Twin
Model	DACS-GN-S015-24/SS-24-S		
App. Country	USA		
Specification	Standard(300Ps)		
			Initialize

26. Press  to display the next setting item with yellow.

- The Weigher value on the model setting screen turns in yellow.

System Initialization		Jul/09/2017 16:06	
P/N	123456789	S/N	001234567
Cell type	Small/Medium	Cell comp.	Single
Model	DACS-GN-S015-24/SS-I-S		
App. Country	USA		
Specification	Standard(300Ps)		
			Initialize

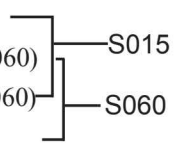27. Press the  .
 - Selection screen for Weigher appears.
28. Select Weigher from the following two options;
"0:015" or "1:060". Here, select   ,
and press  .
 - On the Model setting screen, "015" turns in yellow. ("060" can be displayed instead.)
29. Press  to display the next setting item
with yellow.
 - "2" on the Model setting screen turns in yellow.
30. Press the  .
 - Selection screen for Weigh Conveyor Width appears.
31. Select the weigh conveyor width from the followings:
"1": 100mm to 199mm (015)
"2": 200mm to 299mm (015, 060)
"3": 300mm to 399mm (015, 060)
"4": 400mm to 499mm (060)

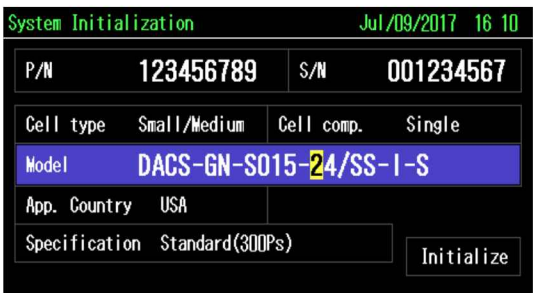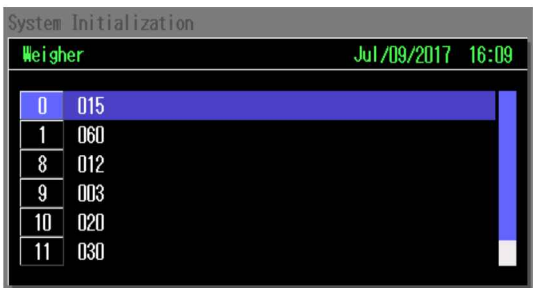Here select   , and press  .
 - "1" on the Model setting screen turns in yellow. ("1" to "4" can be displayed instead)
32. Press  to display the next setting item
with yellow.
 - "2" on the Model setting screen turns in yellow.
33. Press  .
 - Selection screen for Weigh conveyor length appears.



34. Select the weigh conveyor length from the followings:

- | | |
|-------------------|------|
| 1: 100mm to 199mm | S015 |
| 2: 200mm to 299mm | |
| 3: 300mm to 399mm | |
| 4: 400mm to 499mm | S060 |
| 5: 500mm to 599mm | |
| 6: 600mm to 699mm | |

Here select **4 400mm ~ 499mm**, and press



- "4" on the Model setting screen turns in yellow.
("1" to "6" can be displayed instead)

35. Press to display the next setting item with yellow.

- "SS" on the Model setting screen turn in yellow.

36. Press .

- Selection screen for Protection grade appears.





37. Select the protection grade from the following two options; "0: SS", or "1: CR". Here, select

0 SS and press .

- "SS" on the Model setting screen turns in yellow. ("1: CR", "2: WP" can be displayed instead)


38. Press to display the next setting item with yellow.

- "I" on the Model setting screen turn in yellow.

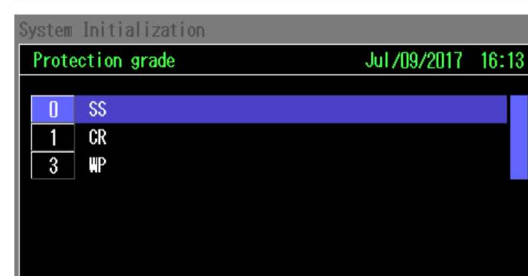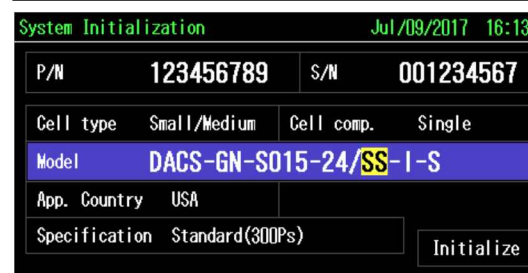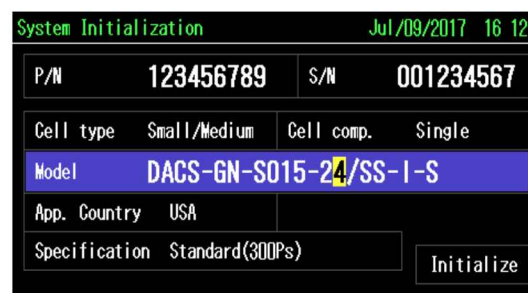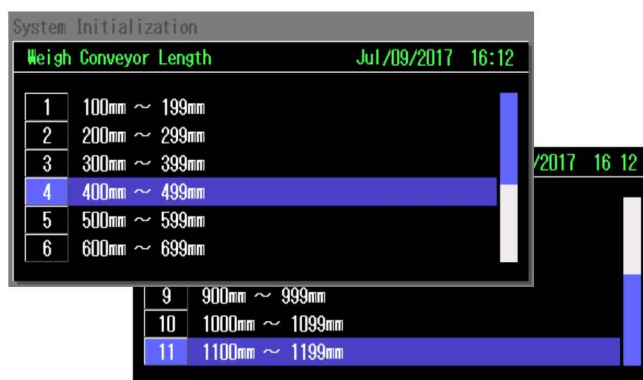

39. Press .

- Selection screen for Metal Detector interlocking option appears.

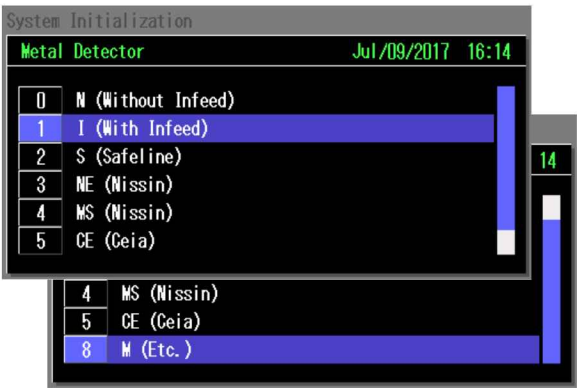

40. Select the metal detector interlocking option from the following:

- "0": N (Without feed conveyor)
- "1": I (With feed conveyor)
- "2": S (Safe line)
- "3": NE (Nisshin)
- "4": SQ (Square)
- "5": CE (Ceia)
- "8": M (Etc. [separate type])

Here, select "1", and press .



41. Press  to display the next setting item with yellow.

- "S" on the Model setting screen turns in yellow.



42. Press .

- Selection screen for Display & interface appears.



43. Select the display & interface from the following:

- "0": S (Standard)
- "1": H (High grade)

Here select "0", and press .



- "S" on the Model setting screen turns in yellow. ("1: High grade" can be displayed instead)

44. Press  to display the next setting item with blue.

- The following part on the System Initialization screen turns in blue.

App. Country Japan



45. Press .

- Selection screen for Applicable Country appears.

46. Select the applicable country from the followings: (2013/09)

- 0: Japan
- 4: USA
- 5: India
- 10: Other

Here select "4: USA", and press .



For the countries in the Asia/Oceania, select "0:Japan" for the applicable country code. Select English display by "Language selection".

47. Press  to display the next setting item with blue.

48. Press .

- A selection screen for the preset numbers is displayed.
- 0: Standard (preset number:100)
- 1: Rank selection/Multi-reject (preset number: 300) here, select [0: Standard (preset number:100) and press  key.

49. Press  to display the next setting item with blue.


- On the System Initialization screen, the  turns in blue.

50. Press .

- Confirmation screen for System Initialization appears.


51. When not initializing, press .

- The screen returns to the System Initialization before, without initialization.

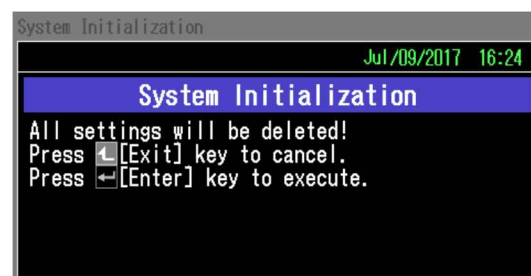

52. Press .

- Initialization will be performed.
- Here the detailed information for each parameter is set, and all the data is unitized to the initial value.

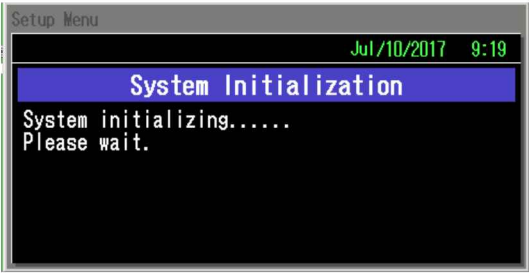

53. When the initialization is completed, a message "Completed. Turn off the power and restart." appears.




54 Turn off the power switch and turn on again.




55 After one or 40 sec, ISHIDA logo appears.



56 "Zero Adjustment" screen will displayed. Press  according to the message to perform zero adjustment.

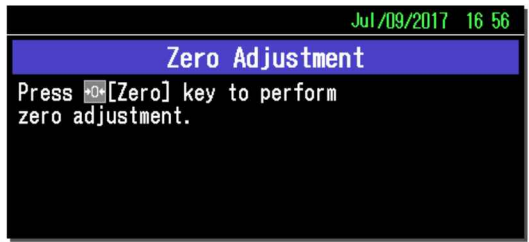

57. Operation standby screen is displayed.
Software installation to the MCU board and system initialization is complete.



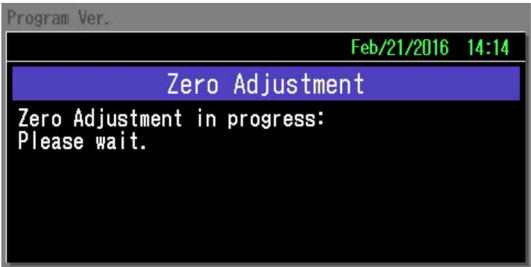


NOTE

After completing the software installation to the MCU board and system initialization, Refer to "5.1.12 Program Version Information", Ensure to check in the [Program Ver. screen] that data for "Project No. (Job. No.), S/N, Model" / "MCU software NO." is entered correctly.

58. Point the cursor to [Program Version Information], and press .

The [Program Version Information] screen is displayed, enabling to check P/N, S/N, Model, and PKG. of the machine.

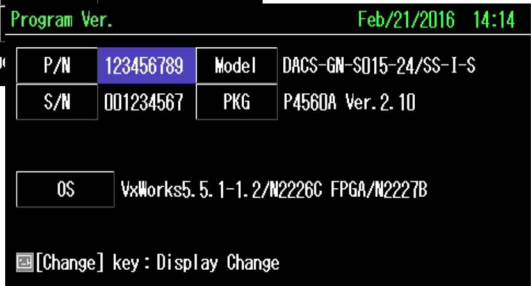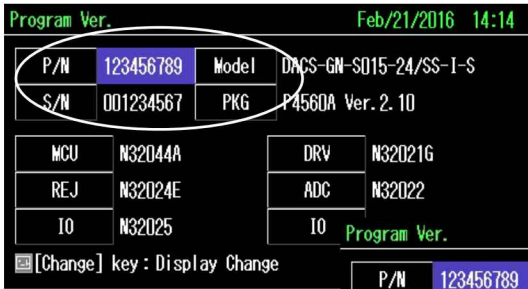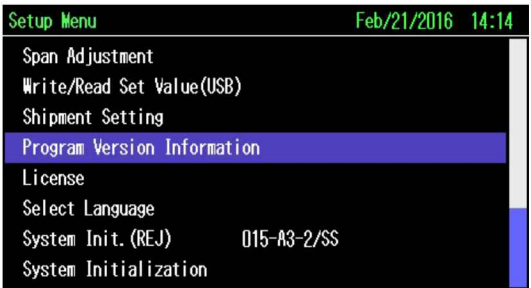

7.2 Program Installing Procedures for MCU, ADC, DRV, REJ, IO

- NOTE

- Before installing the program, check the version of the program whether it is possible toexchange with the previous program. Before the system initialization, save the common setting or preset setting by "Setting Value Save" to the USB memory to backup the system.
 - When the MCU board is replaced to a new one, perform the operation described in "7.1 Installation Procedure for MCU Program (Only replaced to new board).
 - The USB memory to use at the program install should be those recommended by Ishida as follows: (USB memory: Part no. 131-6678-05 [Sanwa supply: UFD-A1G2BK])

7.2.1 Program Installing Procedures with USB Memory

Here explains the program installing procedures of display unit [MCU], scale unit (cell [GN-S]), [ADC], drive unit [DRV], rejector unit [REJ], programs via the USB memory.

7.2.1.1 Installation of MCU, ADC, DRV and REJ Programs at the Same Time

- 1. Insert USB memory contains the MCU, ADC, DRV, REJ program.
- 2. Turn the main power ON.

TIP

Although it is possible to conduct the program installation above the setting Level 2, this section explains the program installation at the Level 3.



- 3. Point the cursor to the [Program Update Start], and press

Program Update			2013/02/03 16:54
Display Unit	(MCU : N32110E)		Off
Drive Unit	(DRV : N32111B)		Off
Scale Unit(Cell [GN-Sxxx])	(ADC : N32112)		On
Scale Unit(FB [GN-Fxxx])	(ADC : N32113)		Off
Rejecter Unit	(REJ : N32114A)		Off
Input Output Unit	(IO : N32115)		Off
Program Update Start			

- 4. The program number is displayed. then press

Program Update			2013/02/03 16:53
P5300E (N32110E N32111B ADC N32114A N32115)			

This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.

5. For the parameters of display unit (MCU), scale unit (ADC), and rejector unit (REJ) select On and press the  .
(Set only the part to update to "On".)

- Point the cursor to the [Program Update Start], and press  .

Program Update			2013/02/03 16:55
Display Unit	(MCU : N32110E)	On	
Drive Unit	(DRV : N32111B)	On	
Scale Unit(Cell [GN-Sxxx])	(ADC : N32112)	On	
Scale Unit(FB [GN-Fxxx])	(ADC : N32113)	Off	
Rejecter Unit	(REJ : N32114A)	On	
Input Output Unit	(IO : N32115)	On	
Program Update Start			

Program Update			2013/02/03 16:55
Display Unit	(MCU : N32110E)	On	
Drive Unit	(DRV : N32111B)	On	
Scale Unit(Cell [GN-Sxxx])	(ADC : N32112)	On	
Scale Unit(FB [GN-Fxxx])	(ADC : N32113)	Off	
Rejecter Unit	(REJ : N32114A)	On	
Input Output Unit	(IO : N32115)	On	
Program Update Start			

NOTE For the GN-S model, select "Off" for scale unit (FB [GN-Fxxx]) (ADC) and "On" for [scale unit (cell [GN-sxxx])](ADC).

- Confirmation screen will appear.
 - Press the  if execute.
6. Program updating screen will appear.
- It takes approx 5 minutes to install MCU program.
7. When normally completed, the Updating program screen for the next drive part (DRV) will appear.
- It takes approx 3 minutes to install DRV program.

Program Update			2013/02/03 16:55
Program Update			
Update the program?			
MCU:N32110E DRV:N32111B ADC:N32112			
REJ:N32114A IO:N32115			
Press  [Exit] to cancel.			
Press  [Enter] to execute.			


Program Update Selection			2016/02/18 13 55
Do not switch off until deleting is completed.			
FORMDATA/DC. JPG			
>>>>>>>			

Program Update Selection			2016/02/18 14:00
Program Update			
Updating program. Please wait.			
DRV 25 %			

Program Update Selection			2016/02/18 14 01
Program Update			
Updating program. Please wait.			
DRV 60 %			


Program Update Selection			2016/02/18 14 02
Program Update			
Updating program. Please wait.			
DRV 100 %			

- The program updating progress for ADC appears, which continues for approximately 3 minutes.

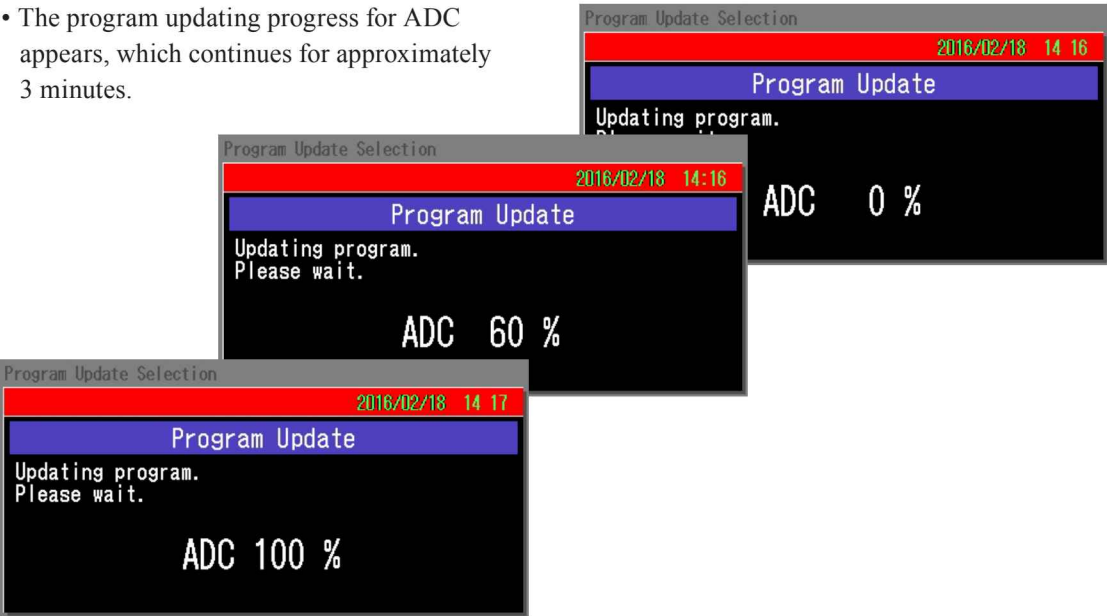


8. When normally completed, the "Updating program" screen for the next drive part (REJ) will appear.

- It takes approx 1 minutes to install REJ program.

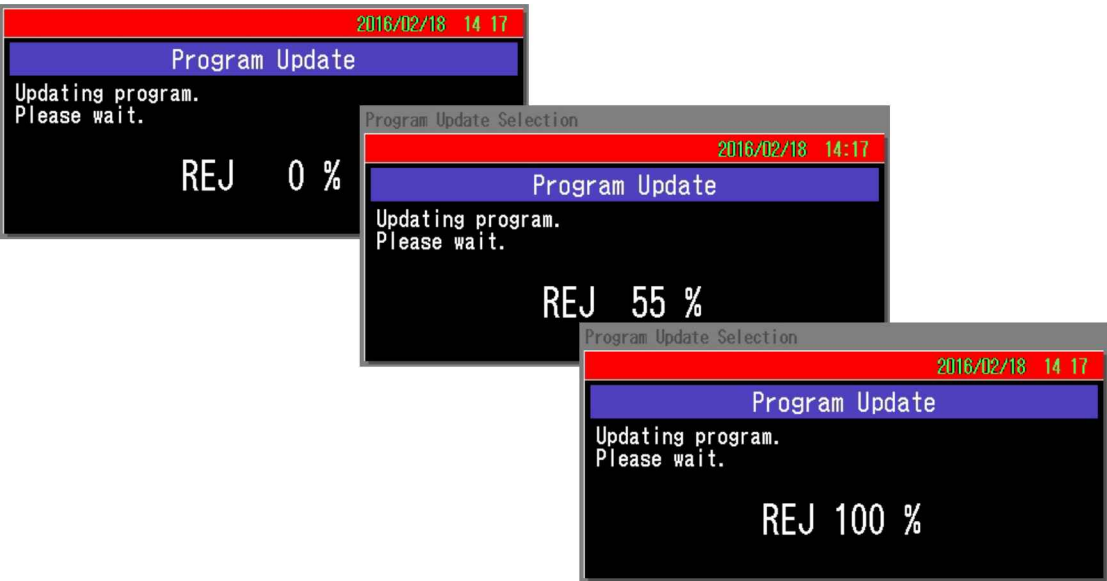

9. When the update is complete, the screen saying, "Completed. turn the power OFF and restart." will appear. Follow the guidance on the screen.

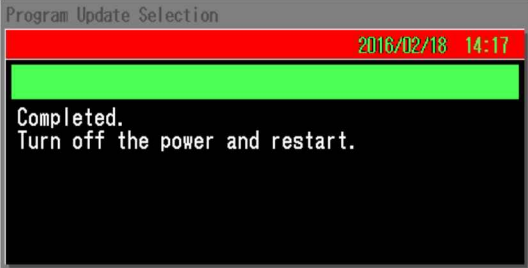

10. Turn the power OFF, and remove the USB memory from the USB slot.

7.2.1.2 Install the Program to the Weigh Unit [ADC board]

1. Insert the USB memory contains ADC program to the USB slot.

2. Turn on the main power switch.



3. Point the cursor to the [Program Update Start], and press .

Program Update			2013/02/03 16:54
Display Unit	(MCU : N32110E)	Off	
Drive Unit	(DRV : N32111B)	Off	
Scale Unit(Cell [GN-Sxxx])	(ADC : N32112)	On	
Scale Unit(FB [GN-Fxxx])	(ADC : N32113)	Off	
Rejecter Unit	(REJ : N32114A)	Off	
Input Output Unit	(IO : N32115)	Off	
Program Update Start			

- Program updating screen will appear.

4. The program number is displayed. then press .

Program Update Selection			2016/02/18 13:32
P5100D (N32080C	N32071H	ADC	N32024U N32025A)

- [Program updating screen] will appear.

5. Scale unit (ADC) select On and press the .

Program Update Selection			2016/02/18 14 21
Display unit	(MCU : N32044A)	Off	
Drive unit	(DRV : N32021G)	Off	
Scale unit(Cell [GN-Sxxx])	(ADC : N32022A)	On	
Scale unit(FB [GN-Fxxx])	(ADC : N32023A)	Off	
Rejecter unit	(REJ : N32024E)	Off	
Input Output unit	(IO : N32025)	Off	
Program Update Start			

6. Point the cursor to the [Program Update Start], and press .

Program Update Selection			2016/02/18 14 21
Display unit	(MCU : N32044A)	Off	
Drive unit	(DRV : N32021G)	Off	
Scale unit(Cell [GN-Sxxx])	(ADC : N32022A)	On	
Scale unit(FB [GN-Fxxx])	(ADC : N32023A)	Off	
Rejecter unit	(REJ : N32024E)	Off	
Input Output unit	(IO : N32025)	Off	
Program Update Start			

NOTE

For the GN-S model, select "On" for [Cell: GN-Sxxx] (ADC) and "Off" for [FB: GN-Fxxx] (ADC).

7. Confirmation screen will appear.


- Press  to execute.

Program Update Selection			2016/02/18 14 21
Program Update			
Update the program?			
ADC: N32022A			
Press  [Exit] to cancel.			
Press  [Enter] to execute.			


This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.

8. Program updating screen will appear.

- ADC program updating takes about 3 minutes.

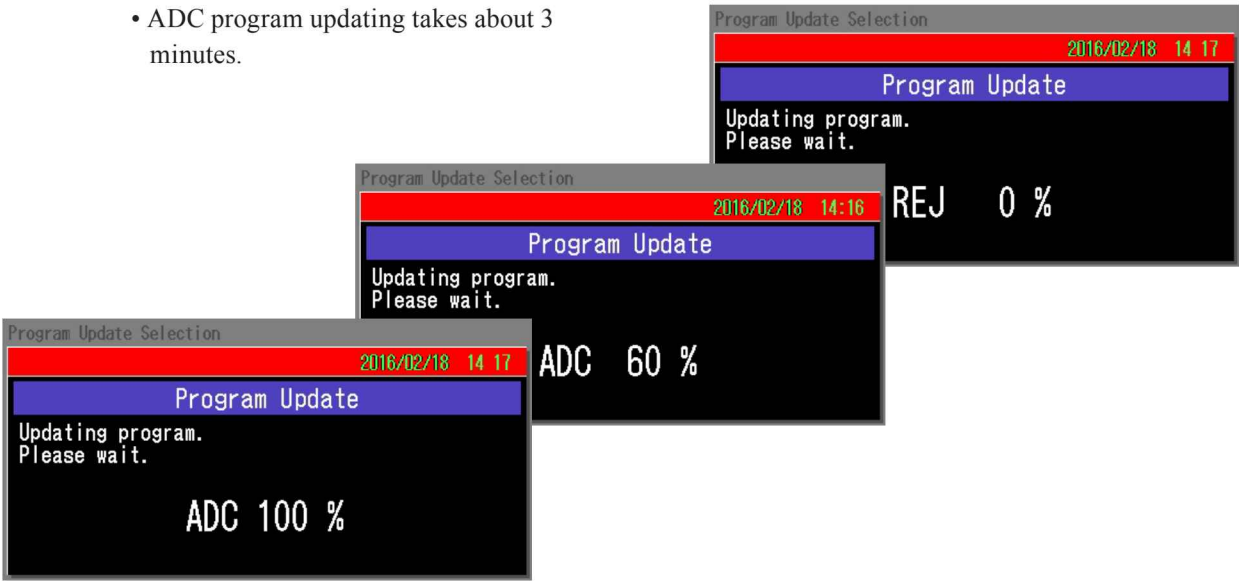

9. When the update is complete, the screen saying, "Completed. turn the power OFF and restart." will appear. Follow the guidance on the screen.

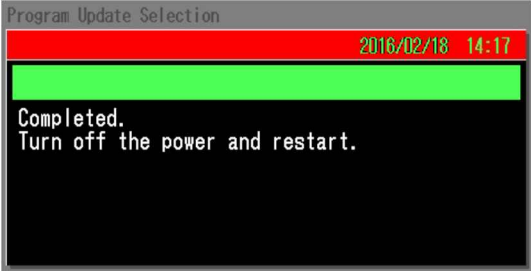

10. Turn the power OFF, and remove the USB memory from the USB slot.

7.2.1.3 Rejector [REJ]

1. Insert the USB memory contains REJ program to the USB slot.
2. Turn the main power ON.
3. Point the cursor to the [Program Update Start], and press .



4. Program updating screen will appear.

- Check the detail of the program number, and press the .

- Confirmation screen appears.

5. Rejecter unit (REJ) select On and press the .






6. Point the cursor to the [Program Update Start], and press .

7. Confirmation screen will appear.

- Press  to execute.

8. When the update is complete, REJ program updating screen will appear.

- It takes approx 1 minutes to install REJ program.

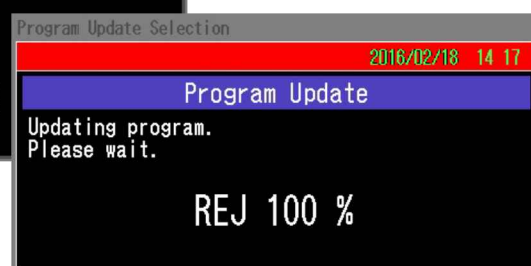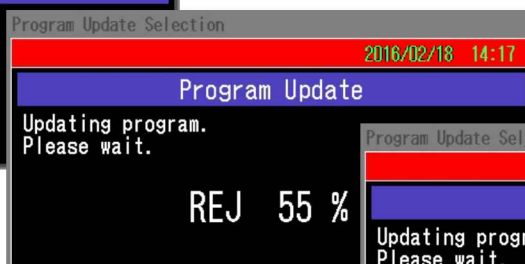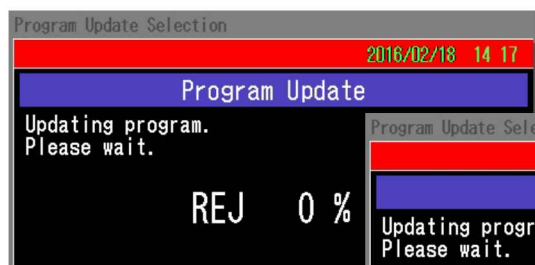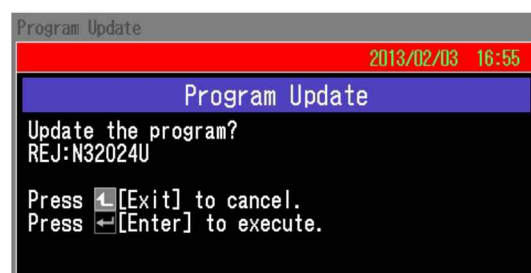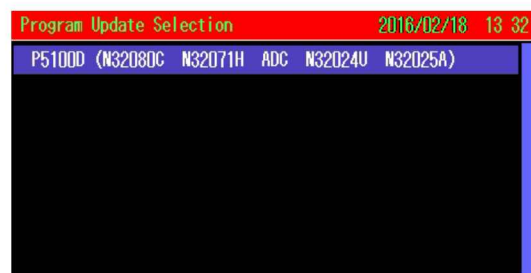


- 9. When the update is complete, the screen saying, "Completed. turn the power OFF and restart." will appear. Follow the guidance on the screen.
- 10. Turn the power OFF, and remove the USB memory from the USB slot.





7.2.2 Error Screen Displayed at Program Install

NOTE When "Program Load Error. Turn off the power and restart" message screen is displayed, perform the steps of program installation. If the same error occurs repeatedly when trying installation for several times, repack MCU board (PK-270*) and the boards to install the program,

■ Program Load Error

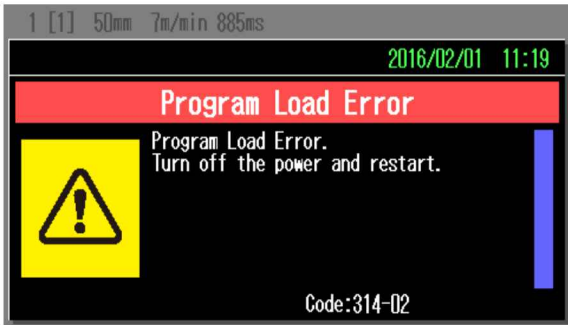


■ Program Load Error (MCU)

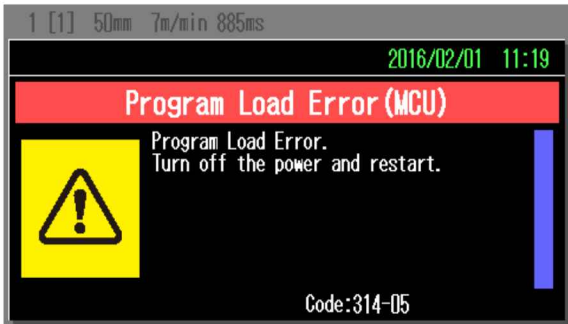
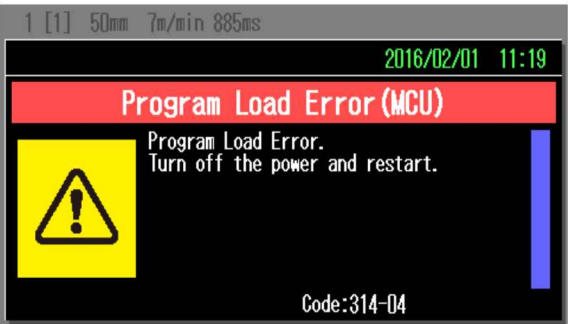


This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.



■ Program Load Error (DRV)

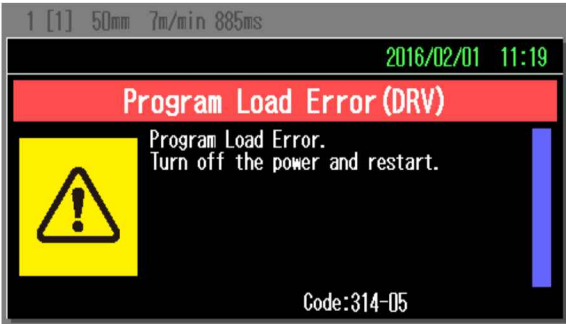



■ Program Load Error (ADC)

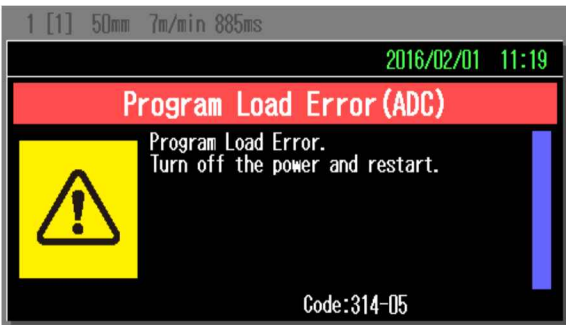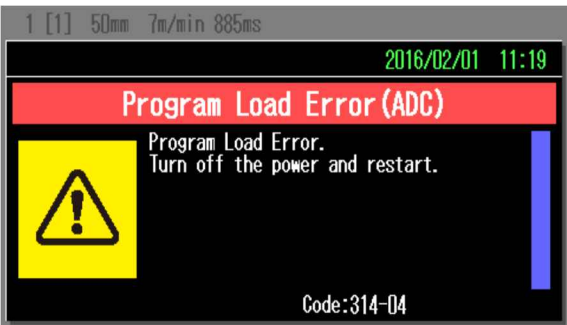

■ Program Load Error (REJ)

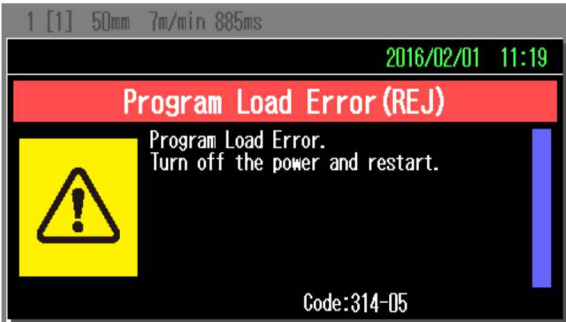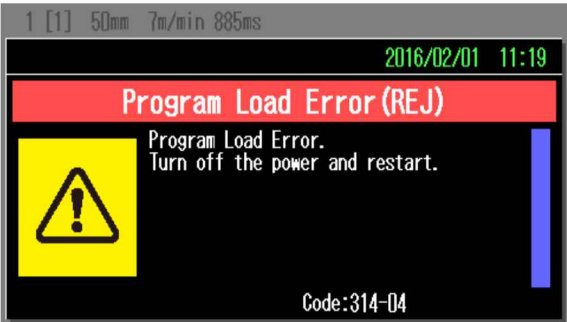

■ Program Load Error (IO)

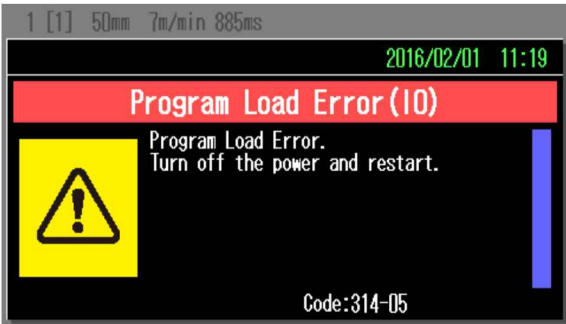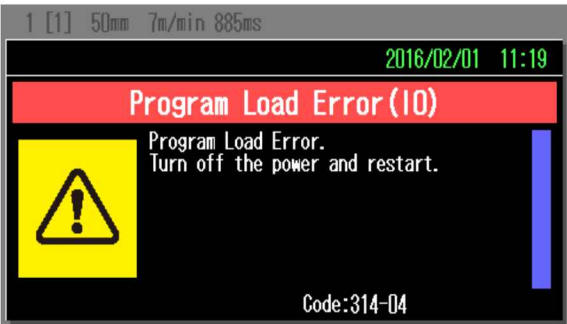

7.3 License Confirmation

Optional devices are available only after purchasing and attesting the license.
Here describes the procedure for the attestation, temporal attestation and initialization of the license.


NOTE For setting the communication unit with the various optional devices, the license must be purchased and attested. Otherwise the communication unit setting detailed screen is not displayed. (Temporarily attestation enables the setting of communication detailed setting as a test.)

7.3.1 License Attestation

1. Point the cursor to the [Licence], and press




- The License menu will appear.

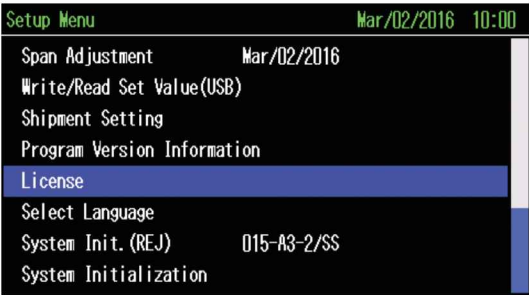

2. Point the cursor to the [Licence], and press



- The License menu will appear.


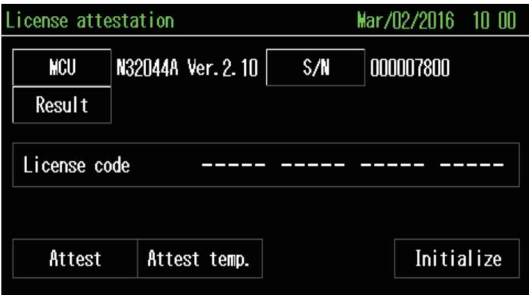


■ Activation


1. Press  on the License attestation menu.

Point the cursor to (20-16) of the license code and press .

- Numerical entry screen for the license code (20-16) will appear.


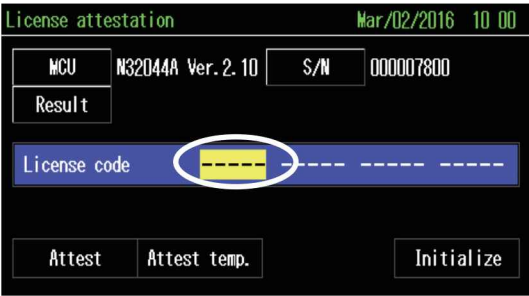
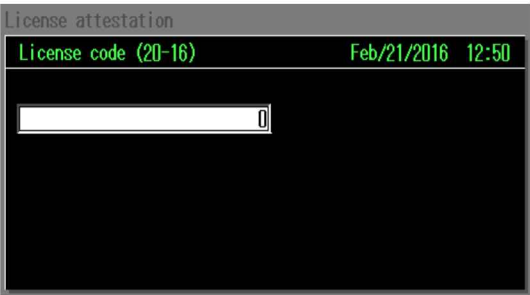


2. Enter five-digit number of the license code (20-16) using the numerical keypad and press



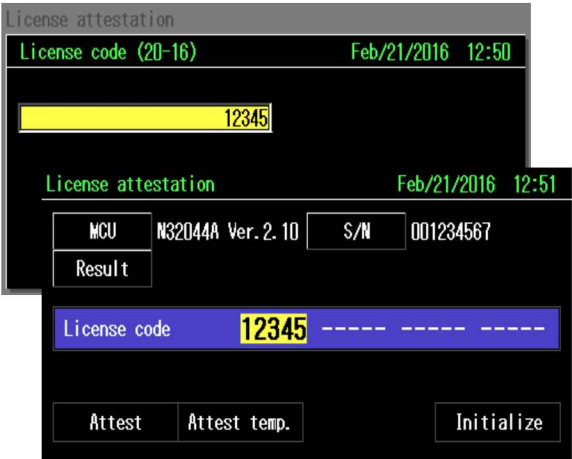


This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.

3. Press  on the License attestation menu.
- Point the cursor to the license code (15-11) and press .
- Numerical entry screen of the license code (15-11) will appear.

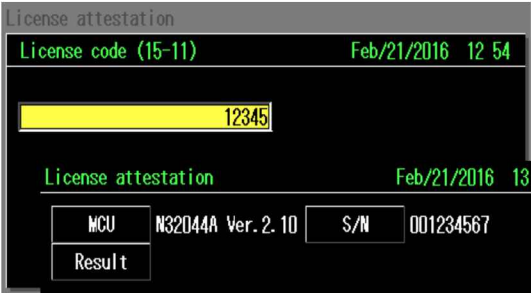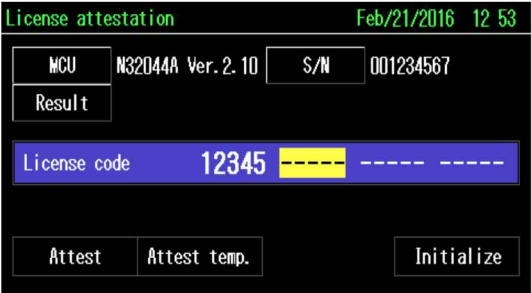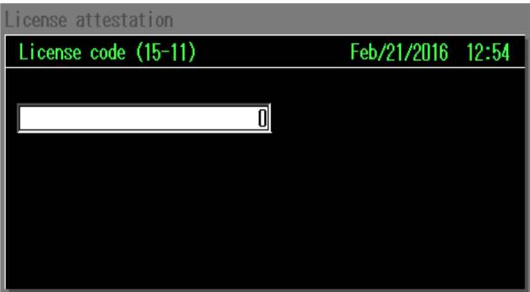


4. Enter five-digit number of the license code (15-11) using the numerical keypad, and press .
5. On the license attestation menu, press .
- Then point the cursor to the license code (10-6) and press .
- Numerical entry screen for the license code (10-6) will appear.

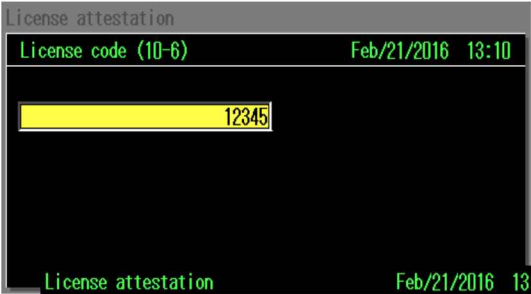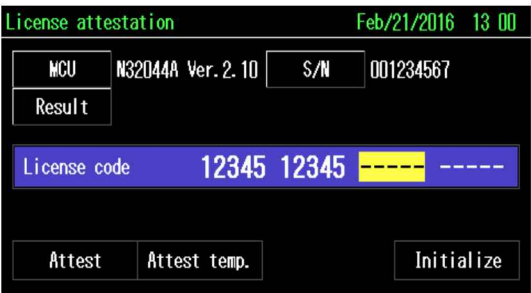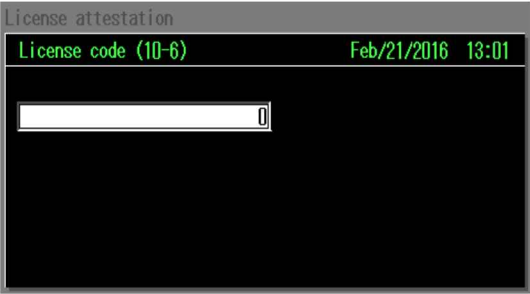

6. Enter five-digit number of the license code (10-6) using the numerical keypad. Press .

7. In the license attestation menu, press  .
- Point the cursor to the license code (5-1) and press  .
- Numerical entry screen for the license code (5-1) will appear.

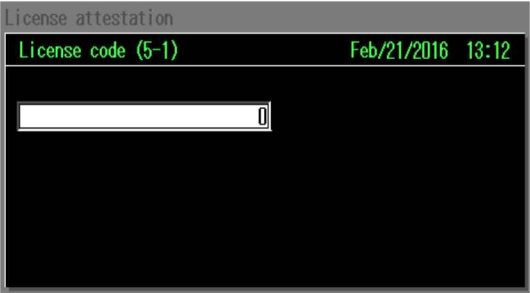


8. Enter five-digit number of the license code (5-1) using the numerical keypad. Press  .






9. In the license attestation menu, press  .
- Then point the cursor to [Attest] and press  .

10. Authorizing software license message will appear. Press  to execute.

- If the license code is not correct "Error" will appear on the result.

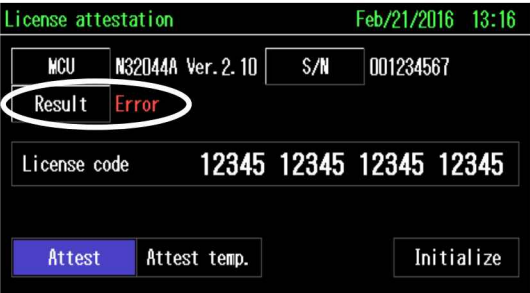

- If the license code is correct "Verified" will appear.

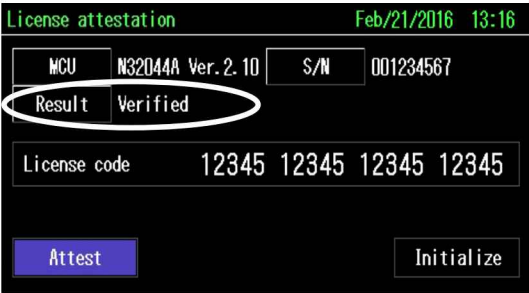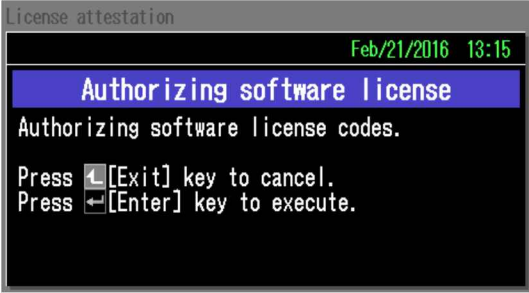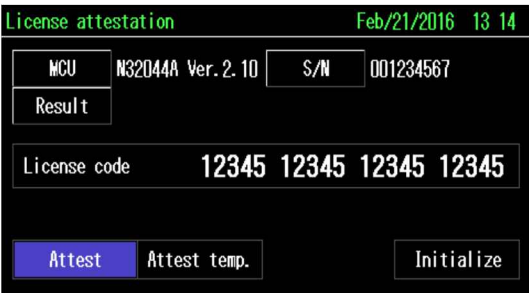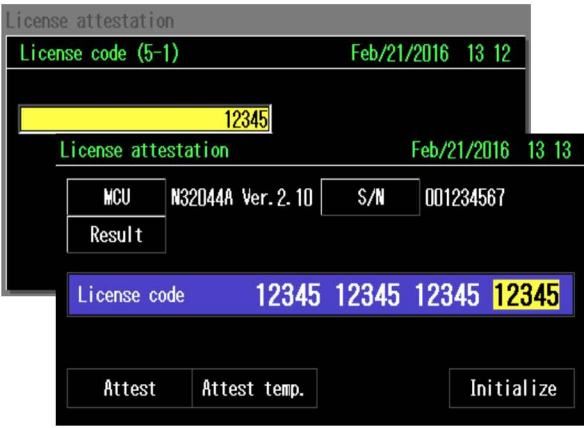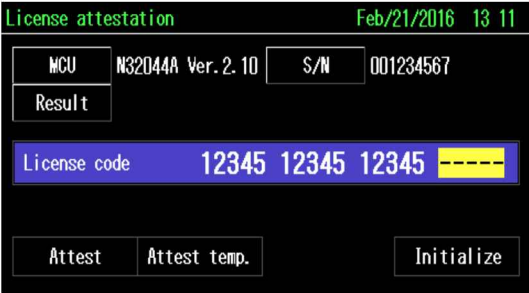

NOTE When "Error" is displayed, initialize the license attestation and perform the license attestation again.

■ Temporal Attestation

1. On the Pre-authorizing software license menu, press . Point the cursor to [Attest temp.], and press the .

2. A confirmation screen to initialize the software license will appear. Press  to execute.

- The pre-authorizing license screen appears with the Result of "Verified temporarily (limit 7 days)".


TIP

In the temporal attestation, interlock with various optional devices can be confirmed as a trial. After the trial, purchase the official license for the full-scale license attestation.

■ Initialize

Perform initialization of the license attestation in such events as attestation errors, switching from the temporal license attestation to the official license, or deleting the license attestation.

1. In the license attestation menu, press . Point the cursor to [Initialize], and press .

2. A confirmation screen to initialize the software license will appear. Press  to execute.

- Areas next to [Result] and the [License code] on the license attestation menu will be shown as blank.

License attestation Mar/02/2016 10:01

MCU	N32044A Ver.2.10	S/N	000007800
Result			
License code -----			
Attest	Attest temp.	Initialize	

License attestation Mar/02/2016 10:01

Pre-authorizing software license

Pre-authorizing software license codes.

Press  [Exit] key to cancel.
Press  [Enter] key to execute.

License attestation Mar/02/2016 10:01

MCU	N32044A Ver.2.10	S/N	000007800
Result	Verified temporarily (limit 7 days)		
License code -----			
Attest	Attest temp.	Initialize	

License attestation Mar/02/2016 10:01

MCU	N32044A Ver.2.10	S/N	000007800
Result	Verified temporarily (limit 7 days)		
License code -----			
Attest	Attest temp.	Initialize	

License attestation Mar/02/2016 10:03

Initialize software license

Initializing all software license codes.
All optional features will be disabled.

Press  [Exit] key to cancel.
Press  [Enter] key to execute.

License attestation Mar/02/2016 10:03


MCU	N32044A Ver.2.10	S/N	000007800
Result			
License code -----			
Attest	Attest temp.	Initialize	

7.3.2 Show License

1. Point the cursor to the [Licence], and

press .



- The License menu will appear.

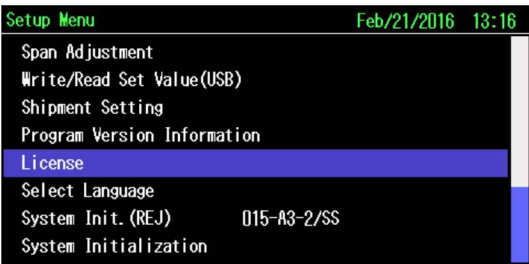

2. Point the cursor to the [Show licence], and

press .

- Show licence menu will appear. The option setting shows "Verified". For temporal verification, "Verified temporarily (limit 7 days)" will appear.

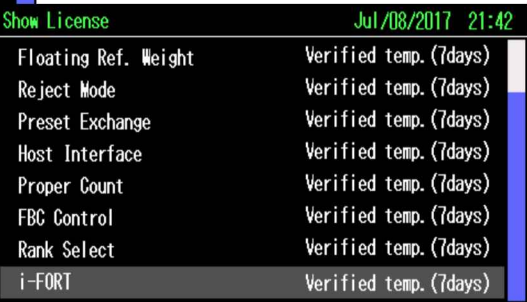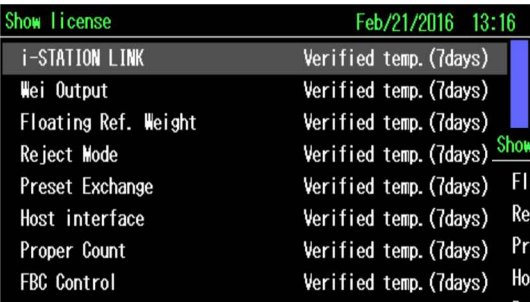


7.3.3 License Code History

1. Point the cursor to the [License code history],

and press .

- License code history menu will appear.

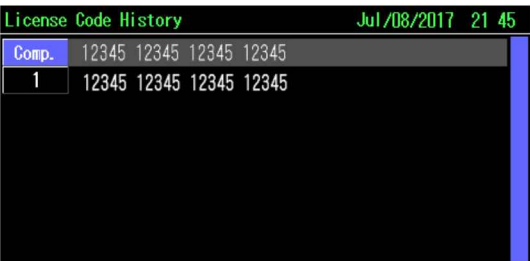

7.4 Detailed Information on Communication Unit (with the entire license attested)



For setting the communication unit with the various optional devices, the license must be purchased and attested. Otherwise the communication unit setting detailed screen is not displayed. (Temporarily attestation enables the setting of communication detailed setting as a test.)

7.4.1 Communication Unit Setting COM1 Communication Unit Setting

1) [Communication Unit Setting] menu

Communication Unit Setting		Feb/21/2016 17:23
COM1	Non	
COM2	Non	
Port 2000	Non	
Port 2026	Off	
Ethernet		

2) [Communication Unit Setting] - [COM1] selection menu

Communication1 Unit Setting		Feb/21/2016 17:23
Target	Non	
Speed	9600 bps	
Data Bit Length	8 bit	
Stop Bit Length	1 bit	
Parity	Off	

3) [Communication Unit Setting] - [Target] selection menu

Communication1 Unit Setting		Feb/21/2016 17:24
Target	Non	
0	Non	
1	Wei Output(NOMAL)	
2	Wei Output(SPECIAL)	
3	Wei Output(BCD 5)	
4	Preset Change(7bit)	
5	Preset Change(8bit)	

Communication1 Unit Setting		Feb/21/2016 17:25
Target	Non	
6	Remote Display Unit(Old Tel)	
7	Non: Fbc Indirect Wei	
9	Preset Exchange	
11	Labeler Sync.	
12	RS-232C Host Com.	
13	Wei Output(V/W Compatibility)	

Communication1 Unit Setting		Feb/21/2016 17:25
Target	Non	
9	Preset Exchange	
11	Labeler Sync.	
12	RS-232C Host Com.	
13	Wei Output(V/W Compatibility)	
14	Wei Output(WN 5 Digits)	
15	Wei Output(WN 6 Digits)	

7.4.2 Communication Unit Setting COM2

1) [Communication Unit Setting] menu


Communication Unit Setting		Feb/21/2016 17:26
COM1	Non	
COM2	Non	
Port 2000	Non	
Port 2026	Off	
Ethernet		

2) [Communication Unit Setting] - [COM2] selection menu

Communication2 Unit Setting		Feb/21/2016 17:26
Target	Non	
Speed	19200 bps	
Data Bit Length	8 bit	
Stop Bit Length	1 bit	
Parity	Off	


7 Appendix

3) [Communication Unit Setting COM2] - [Target] selection menu

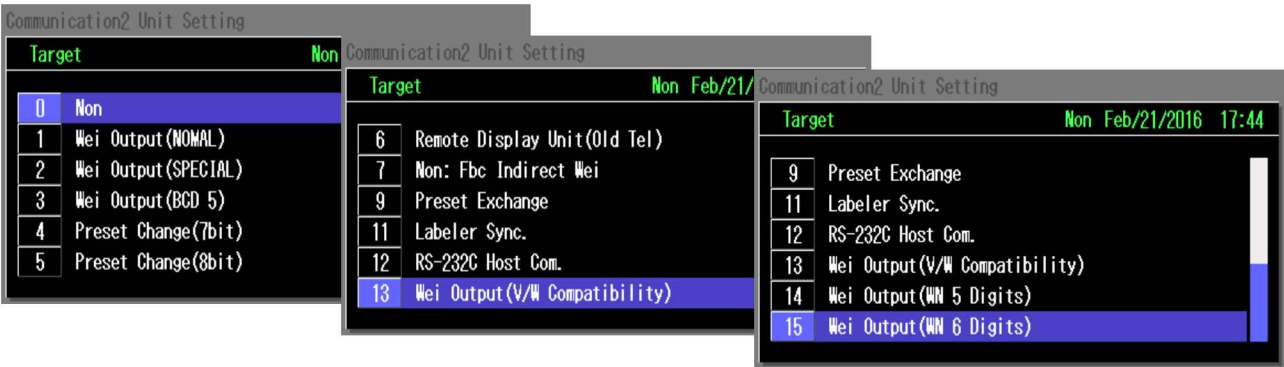


7.4.3 Port 2000 Setting

1) [Communication Unit Setting] menu

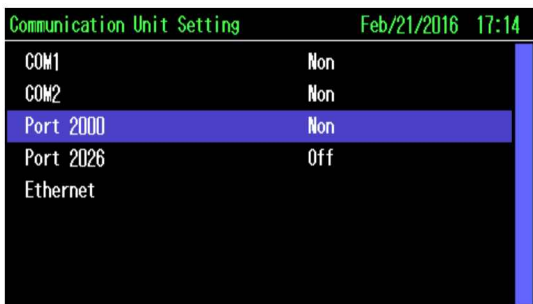


2) [Port 2000] - [Communication Unit Setting] selection menu

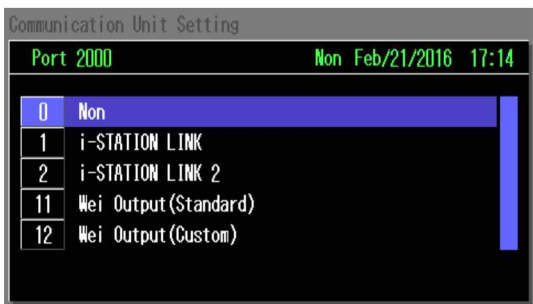


7.4.4 Port 2026 Setting


1) [Communication Unit Setting] menu

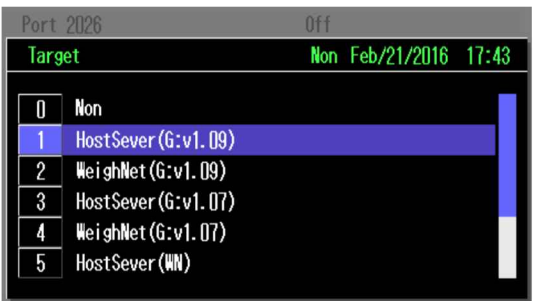


2) [Port 2026] menu

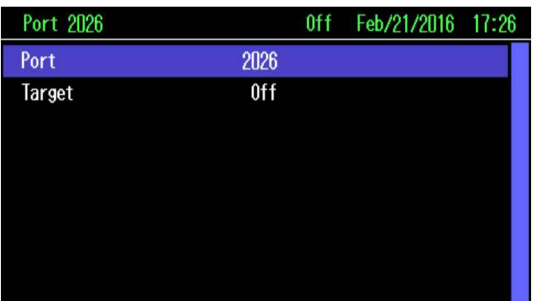

3) [Target] menu

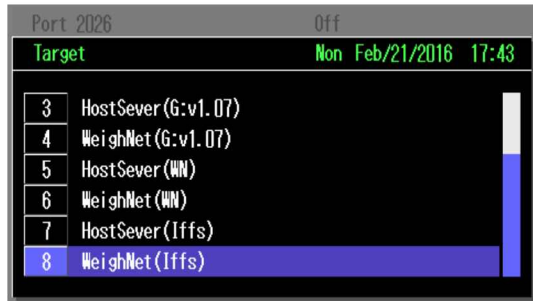

4) [Target] menu

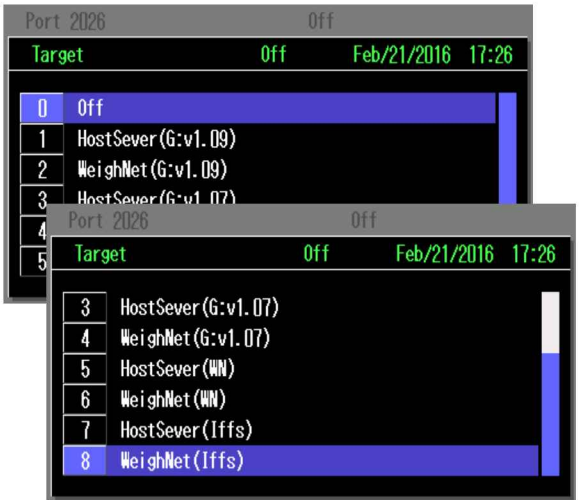

7.4.5 Ethernet Settings

1) [Communication Unit Setting] - [Setup] menu

Communication Unit Setting		Feb/21/2016 17:26
COM1	Non	
COM2	Non	
Port 2000	Non	
Port 2026	Off	
Ethernet		

2) [Communication Unit Setting] - [Ethernet] menu

Ethernet Setting		Feb/21/2016 17:26
Host Name	host	
IP Address	192.168.0.21	
Subnet mask	255.255.255.0	
DNS server	0.0.0.0	
Default gateway	192.068.0.254	
User Name	vxworks	
Password	vxworks	

7.5 Optional Settings

7.5.1 Ethernet (Port 2000)

For the standard specification of Ethernet (Port 2000), the communication specification can be selected from the following options: None, i-STATION LINK/LIN2, Wei Output (NORMAL), Wei Output (SPECIAL).



To set "i-STATION LINK/LINK2, Wei Output (NORMAL/SPECIAL)", purchase and attestation of the license is necessary. Otherwise the detailed screen of Communication Unit Setting will not be displayed. (In the temporal license attestation, the detailed setting for the communication unit can be set as a trial.)

7.5.1.1 i-STATION LINK/LINK2 Settings

1) [Communication Unit Setting] menu

Communication Unit Setting		Feb/21/2016 17:23
COM1	Non	
COM2	Non	
Port 2000	Non	
Port 2026	Off	
Ethernet		

2) [Communication Unit Setting] - [Port 2000] selection menu

Communication Unit Setting		Feb/21/2016 17:14
COM1	Non	
COM2	Non	
Port 2000	Non	
Port 2026	Off	
Ethernet		

3) [Port 2000] menu

Communication Unit Setting		Non Feb/21/2016 17:14
Port 2000	Non	
0	Non	
1	i-STATION LINK	
2	i-STATION LINK 2	
11	Wei Output (Standard)	
12	Wei Output (Custom)	

4) [i-STATION LINK] menu

Communication Unit Setting		Non Feb/21/2016 17:25
Target	Non	
0	Non	
1	Wei Output (NORMAL)	
2	Wei Output (SPECIAL)	
3	Wei Output (BCD 5)	
4	Preset Change (7bit)	
5	Preset Change (8bit)	

This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.

5) [i-station Link 2] menu

Communication Unit Setting		Non Feb/21/2016 17:14
0	Non	
1	i-STATION LINK	
2	i-STATION LINK 2	
11	Wei Output (Standard)	
12	Wei Output (Custom)	

6) [Port 2000] - [i-STATION LINK2] menu

Communication Unit Setting		Feb/21/2016 17:14
COM1	Non	
COM2	Non	
Port 2000	i-STATION LINK 2	
Port 2026	Off	
Ethernet		

■ Default setting of [Ethernet Common] in [Communication Unit Setting] menu

Ethernet Setting		Feb/21/2016 17:26
Host Name	host	(Fixed, cannot change)
IP Address	192.168.0.21	
Subnet mask	255.255.255.0	
DNS server	0.0.0.0	
Default gateway	192.068.0.254	
User Name	vxworks	(Fixed, cannot change)
Password	vxworks	(Fixed, cannot change)

- The above setting is default. Change according to the customer's communication environment.

7.5.2 Standard Communication Specification (host server)

For the standard specification of Ethernet (Port2026), the communication specification can be selected from the following options:None, HostServer (G: v1.09), WeighNet (G: v1.09), HostServer (G: v1.07), WeighNet (G: v1.07), HostServer (WN), WeighNet (WN), HostServer (Iffs), and WeighNet (Iffs).



To set the host interlock operation, the license needs to be purchased and attested. Otherwise the detailed screen of Communication Unit Setting will not be displayed. (In the temporal license attestation, the detailed setting for the communication unit can be set as a trial.)

To set "Ethernet weight output", purchase and attestation of the license is necessary. Otherwise the detailed screen of Communication Unit Setting will not be displayed. (In the temporal license attestation, the detailed setting for the communication unit can be set as a trial.)

1) [Communication Unit Setting] menu

Communication Unit Setting		Feb/21/2016 17:26
COM1	Non	
COM2	Non	
Port 2000	Non	
Port 2026	Off	
Ethernet		

2) [Communication Unit Setting] - [Port2026] selection menu

Port 2026		Off Feb/21/2016 17:26
Port	2026	
Target	Off	

3) [Port 2026 setting] - [Target] setting menu

Port 2026		Off	Feb/21/2016 17:26
Port	2026		
Target	Off		

4) [Port 2026 setting] - [Target] setting menu

Port 2026		Off	Feb/21/2016 17:26
Target	Off		
0	Off		
1	HostSever (G:v1.09)		
2	WeighNet (G:v1.09)		
Port 2026		Off	Feb/21/2016 17:26
Target	Off		
3	HostSever (G:v1.07)		
4	WeighNet (G:v1.07)		
5	HostSever (WN)		
6	WeighNet (WN)		
7	HostSever (Iffs)		
8	WeighNet (Iffs)		

5) [HostServer] - [Target] selection menu

Port 2026		Off	Feb/21/2016 17:14
Target	Off		
0	Off		
1	HostSever (G:v1.09)		
2	WeighNet (G:v1.09)		
3	HostSever (G:v1.07)		
4	WeighNet (G:v1.07)		
5	HostSever (WN)		

6) [WeighNet] - [Target] selection menu

Port 2026		Off	Feb/21/2016 17:14
Target	Off		
0	Off		
1	HostSever (G:v1.09)		
2	WeighNet (G:v1.09)		
3	HostSever (G:v1.07)		
4	WeighNet (G:v1.07)		
5	HostSever (WN)		

7) [HostServer(IFFS)] - [Target] menu

Port 2026		Off	Feb/21/2016 17:14
Target	Off		
3	HostSever (G:v1.07)		
4	WeighNet (G:v1.07)		
5	HostSever (WN)		
6	WeighNet (WN)		
7	HostSever (Iffs)		
8	WeighNet (Iffs)		

■ Default setting of [Ethernet Common] in [Communication Unit Setting] menu

Ethernet Setting		Feb/21/2016 17:26
Host Name	host	(Fixed, cannot change)
IP Address	192.168.0.21	
Subnet mask	255.255.255.0	
DNS server	0.0.0.0	
Default gateway	192.068.0.254	
User Name	vxworks	(Fixed, cannot change)
Password	vxworks	(Fixed, cannot change)

- The above setting is default. Change according to the customer's communication environment.

7.5.3 Setting Information of RS-232C

For the standard specification of RS-232C, the communication specification can be selected from the following options: None, Wei Output (NORMAL), Wei Output (SPECIAL), Wei Output (BCD 5 digits), Preset Change (7bitBCD), Preset Change (8bitBCD), Remote Display Unit (old protocol), FBC Indirect Wei Output, FBC Direct, Preset Communication, RS-232C Host Interlock, Wei Output (V/W compatible), Wei Output (V/W compatible Weight 5 digits), and Wei Output (V/W compatible Weight 6 digits).



- The use of RS-232C (COM1, COM2) requires additional hardware.
- To set the followings, the license needs to be purchased and attested, otherwise the detailed screen of Communication Unit Setting will not be displayed (In the temporal license attestation, the detailed setting for the communication unit can be set as a trial):Wei Output (NORMAL), Wei Output (SPECIAL), Wei Output (BCD 5 digits), Preset Change (7 bit BCD), Preset Change (8 bit BCD), Remote Display Unit (old protocol), FBC Indirect Wei Output, FBC Direct, Preset Communication, RS-232C Host Interlock, Wei Output (V/W compatible), Wei Output (V/W compatible Weight 5 digits), and Wei Output (V/W compatible Weight 6 digits).

1) [Communication Unit Setting] menu

Communication Unit Setting		Feb/21/2016 17:23
COM1	Non	
COM2	Non	
Port 2000	Non	
Port 2026	Off	
Ethernet		

2) [Communication Unit Setting] - [COM1] selection menu

Communication Unit Setting		Feb/21/2016 17:23
Target	Non	
Speed	9600 bps	
Data Bit Length	8 bit	
Stop Bit Length	1 bit	
Parity	Off	

3) [COM1] -[Target] menu

Communication Unit Setting		Non Feb/21/2016 17:24
0	Non	
1	Wei Output(NOMAL)	
2	Wei Output(SPECIAL)	
3	Wei Output(BCD 5)	
4	Preset Change(7bit)	
5	Preset Change(8bit)	

Communication Unit Setting		Non Feb/21/2016 17:25
6	Remote Display Unit(Old Tel)	
7	Non: Fbc Indirect Wei	
9	Preset Exchange	
11	Labeler Sync.	
12	RS-232C Host Com.	
13	Wei Output(V/W Compatibil	

Communication Unit Setting		Non Feb/21/2016 17:25
9	Preset Exchange	
11	Labeler Sync.	
12	RS-232C Host Com.	
13	Wei Output(V/W Compatibility)	
14	Wei Output(WN 5 Digits)	
15	Wei Output(WN 6 Digits)	

4) Target (Wei Output (NORMAL)) menu

Communication Unit Setting		Non Feb/21/2016 17:25
0	Non	
1	Wei Output(NOMAL)	
2	Wei Output(SPECIAL)	
3	Wei Output(BCD 5)	
4	Preset Change(7bit)	
5	Preset Change(8bit)	

5) A setting screen appears for the setting of various parameters as transfer speed of communication target (Wei Output (NORMAL)), data length, stop bit, and parity.

Communication Unit Setting		Feb/21/2016 17:25
Target	Wei Output (NORMAL)	
Speed	19200 bps	
Data Bit Length	8 bit	
Stop Bit Length	1 bit	
Parity	Off	



To select [FBC Indirect Weight Output], [FBC Direct Weight Output], the [System Configuration] - [FBC] should be set to "On". (To use FBC, an additional hardware is needed.)

7.5.4 Setting Information of Standard Preset Communication Specification



Set this information for preset communication with CCW, IX or other Ishida vertical package machines.

1) [Communication Unit Setting] menu

Communication Unit Setting		Feb/21/2016 17:23
COM1	Non	
COM2	Non	
Port 2000	Non	
Port 2026	Off	
Ethernet		

2) [Communication Unit Setting] - [COM1] selection menu

Communication Unit Setting		Feb/21/2016 17:23
Target	Non	
Speed	9600 bps	
Data Bit Length	8 bit	
Stop Bit Length	1 bit	
Parity	Off	

3) [COM1] - [Target] menu

Communication Unit Setting		Feb/21/2016 17:24
Target	Non	
0	Non	
1	Wei Output (NORMAL)	
2	Wei Output (SPECIAL)	
3	Wei Output (BCD 5)	
4	Preset Change (7bit)	
5	Preset Change (8bit)	

Communication Unit Setting		Feb/21/2016 17:25
Target	Non	
6	Remote Display Unit (Old Tel)	
7	Non: Fbc Indirect Wei	
9	Preset Exchange	
11	Labeler Sync.	
12	RS-232C Host Com.	
13	Wei Output (V/W Compatibility)	

Communication Unit Setting		Feb/21/2016 17:25
Target	Non	
9	Preset Exchange	
11	Labeler Sync.	
12	RS-232C Host Com.	
13	Wei Output (V/W Compatibility)	
14	Wei Output (WN 5 Digits)	
15	Wei Output (WN 6 Digits)	

This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.

7 Appendix

4) Target [Preset Exchange] menu

Target		Non	Feb/21/2016	17:25
6	Remote Display Unit(Old Tel)			
7	Non: Fbc Indirect Wei			
9	Preset Exchange			
11	Labeler Sync.			
12	RS-232C Host Com.			
13	Wei Output(V/W Compatibility)			

5) Target [Preset Exchange] -[Communication 1 Unit Setting] menu

Communication1 Unit Setting		Feb/21/2016	17:23
Target	Non		
Speed	9600 bps		
Data Bit Length	8 bit		
Stop Bit Length	1 bit		
Parity	Off		