


CHAPTER

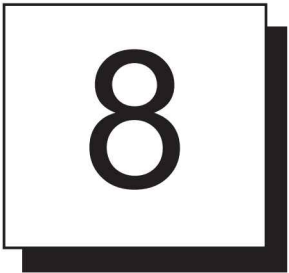


Wiring Diagram

8.1	Main Unit Block Wiring Diagram	8-3
8.1.1	DACS-GN-S015 (Standard Type)	8-3
8.1.2	DACS-GN-S015 (Standard Type + IO Unit)	8-4
8.1.3	DACS-GN-S060 (Standard Type)	8-5
8.1.4	DACS-GN-S060 (Standard Type + IO Unit)	8-6
8.2	Rejector Electrical Wiring Diagram (Optional)	8-7
8.2.1	RE-015-A3- □ /SS-M-B	8-7
8.2.2	RE-015-A3- □ /CR-M-B	8-8
8.2.3	RE-060-A3- □ /SS,CR-M-B	8-9
8.2.4	RE-015-J2,3,P2- □ /SS,CR-A-B	8-10
8.2.5	RE-015-J2,3,P2-4/SS,CR-A-B	8-10
8.2.6	RE-015-DB2- □ /SS-A-B	8-11
8.2.7	RE-060-DB2- □ /SS,CR-A-B	8-11

8.1 Main Unit Block Wiring Diagram


8.1.1 DACS-GN-S015 (Standard Type)

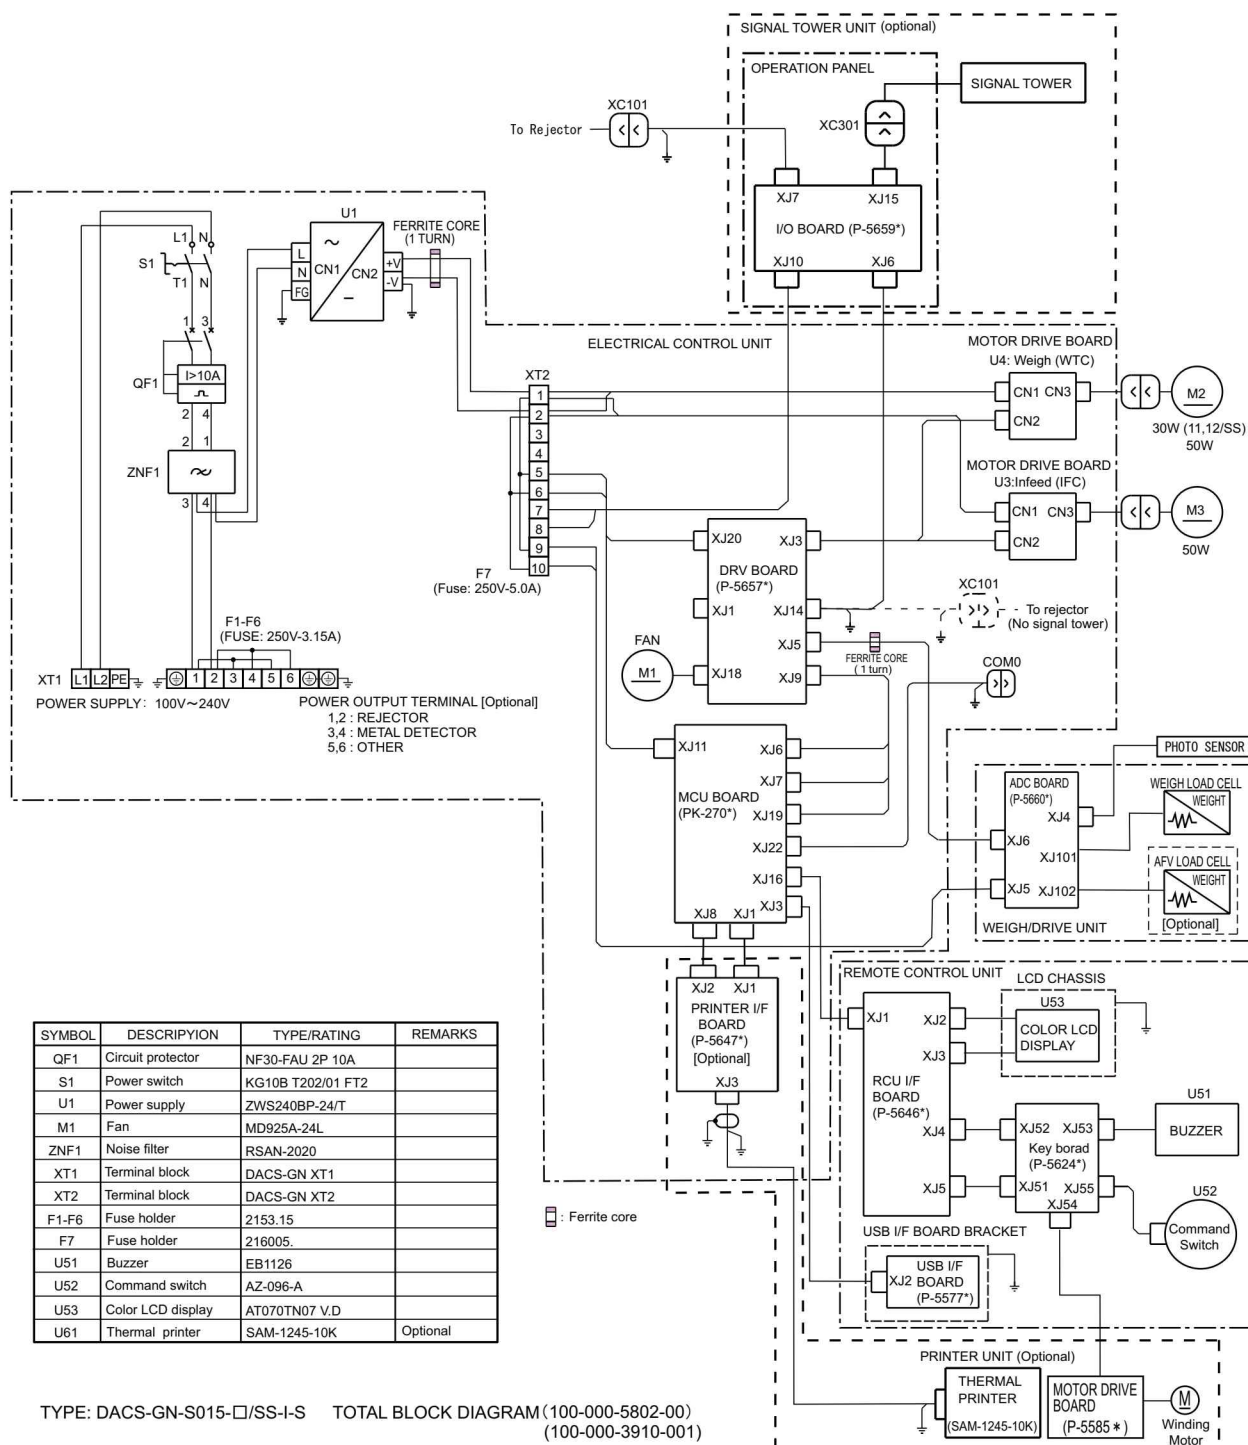

This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.

8 Wiring Diagram

8.1.2 DACS-GN-S015 (Standard Type + IO Unit)

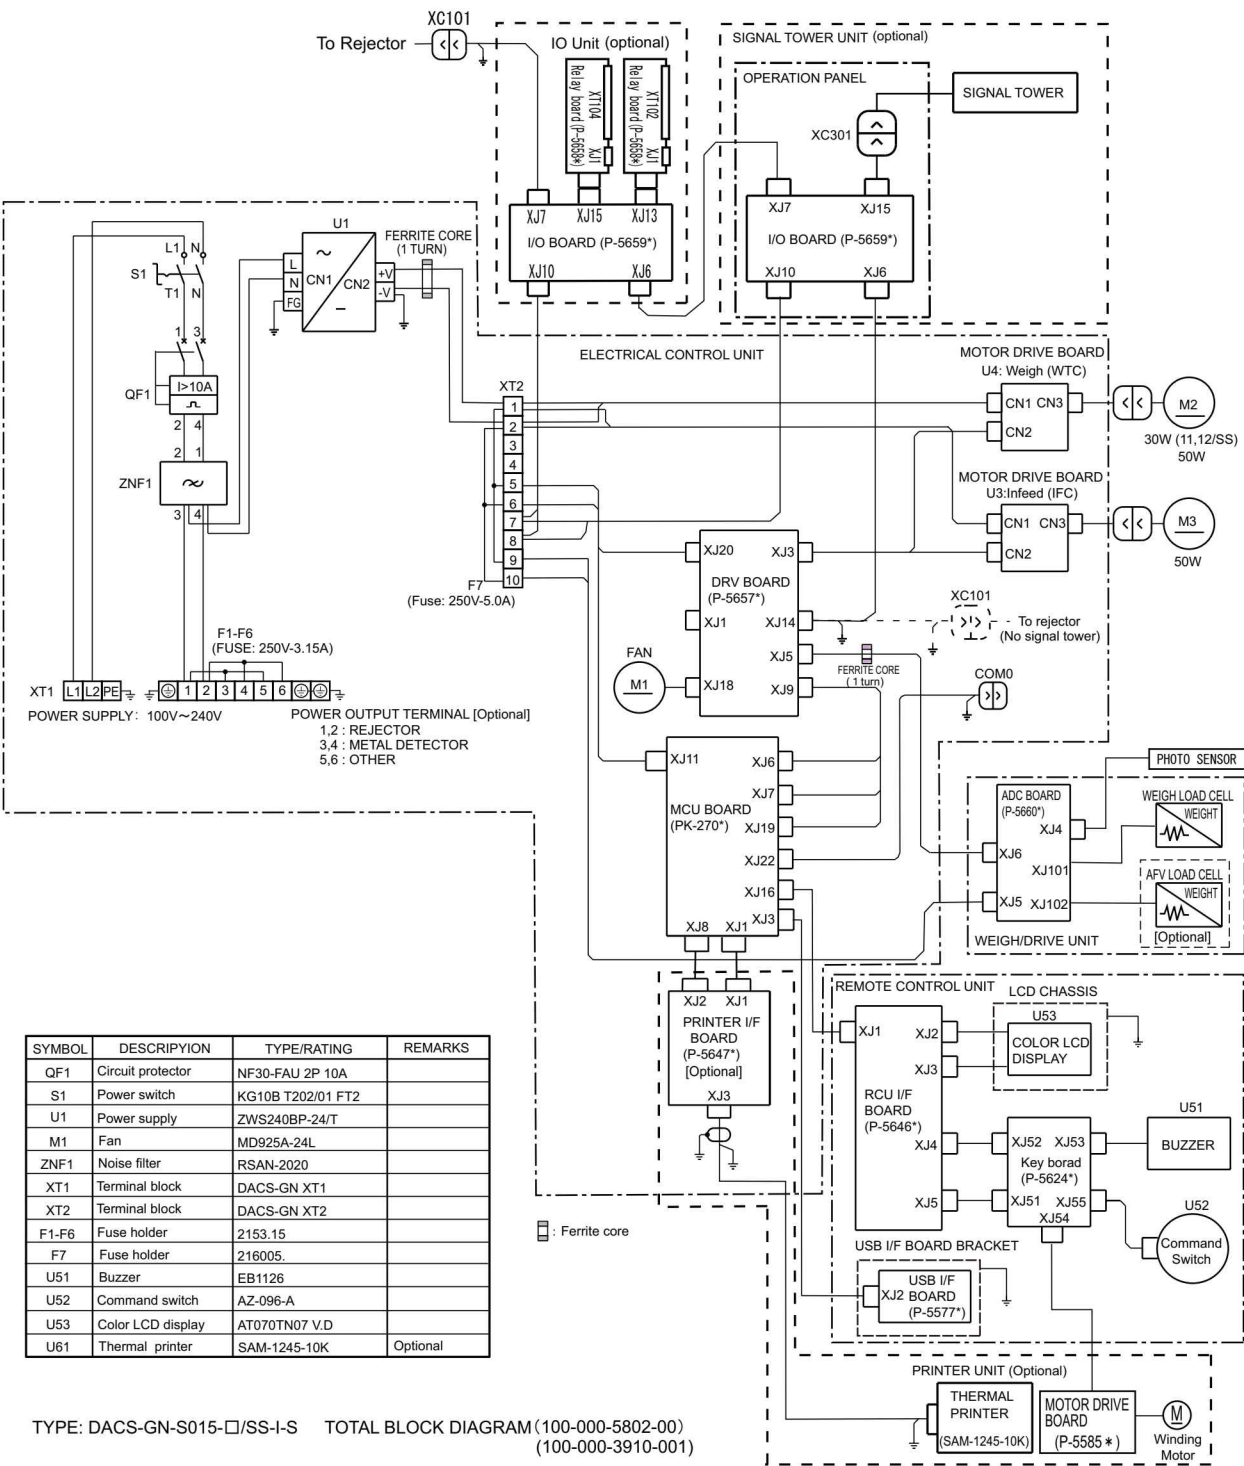


TYPE: DACS-GN-S015-□/CR-I-S TOTAL BLOCK DIAGRAM (100-000-1355-00)
:DACS-GN-S060-□/SS-I-S (100-000-3910-001)
:DACS-GN-S060-□/CR-I-S




This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.

8.1.4 DACS-GN-S060 (Standard Type + IO Unit)

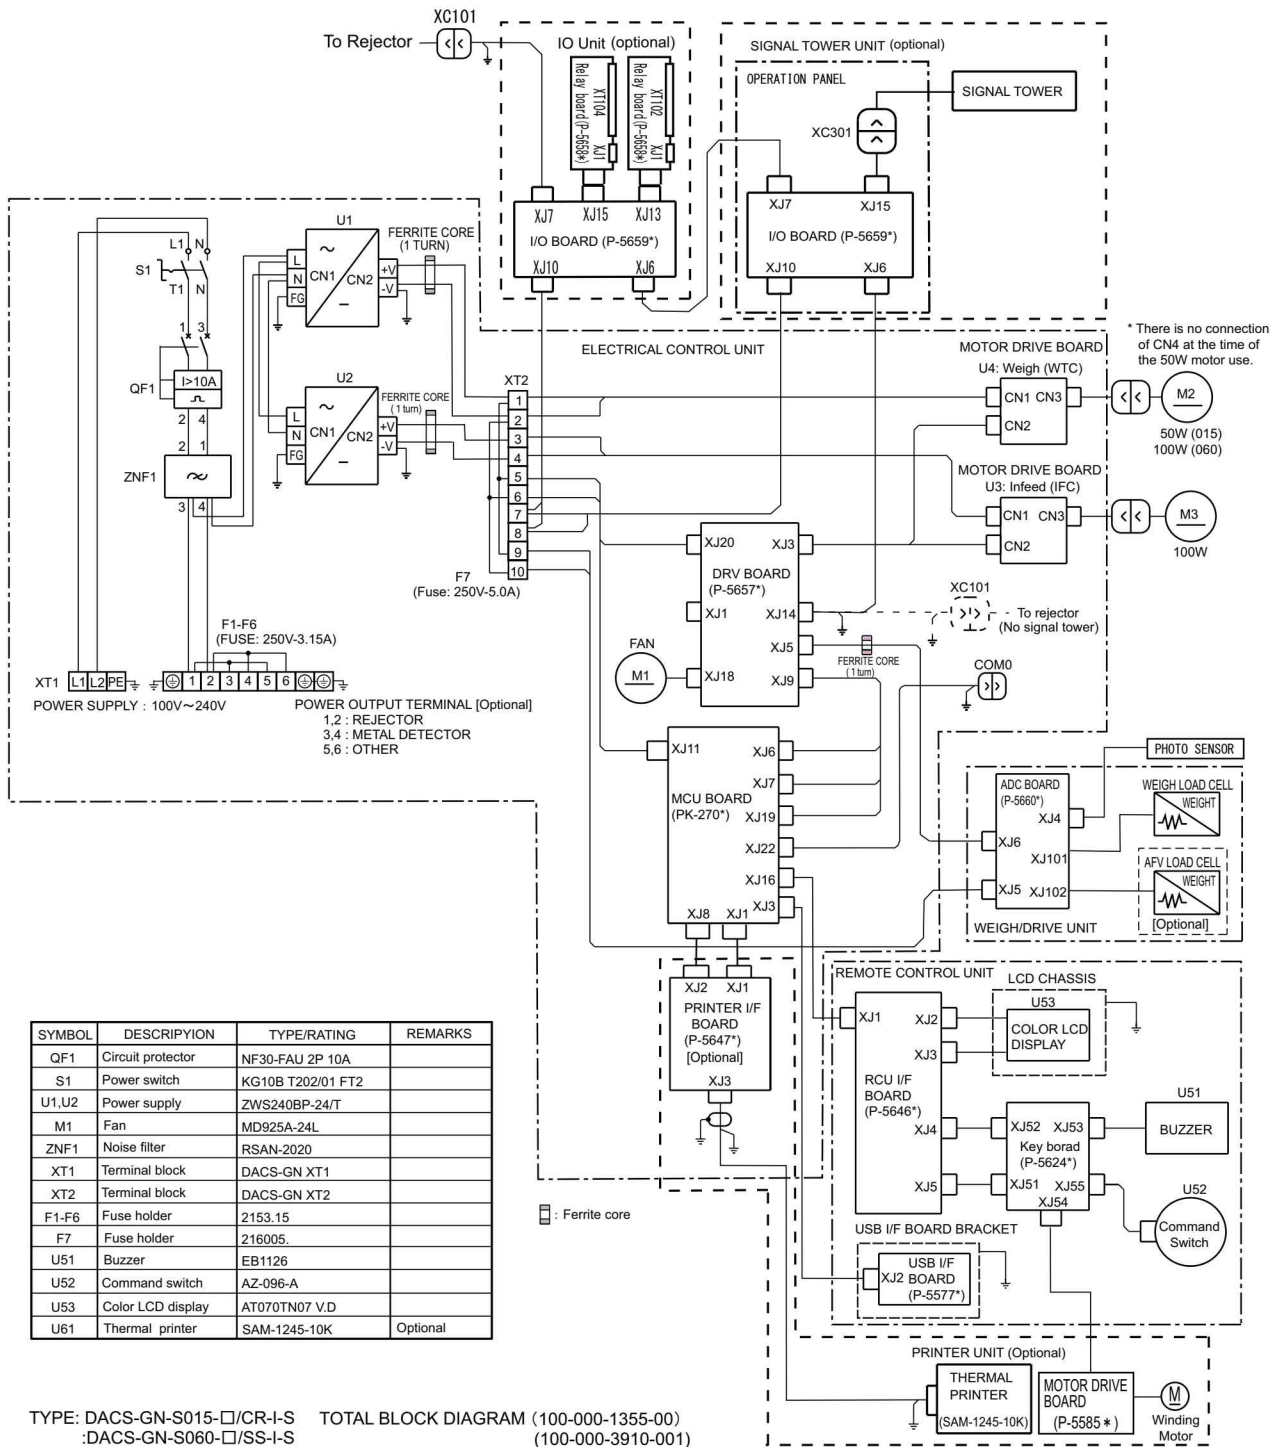


8.2 Rejector Electrical Wiring Diagram (Optional)


8.2.1 RE-015-A3-□/SS-M-B

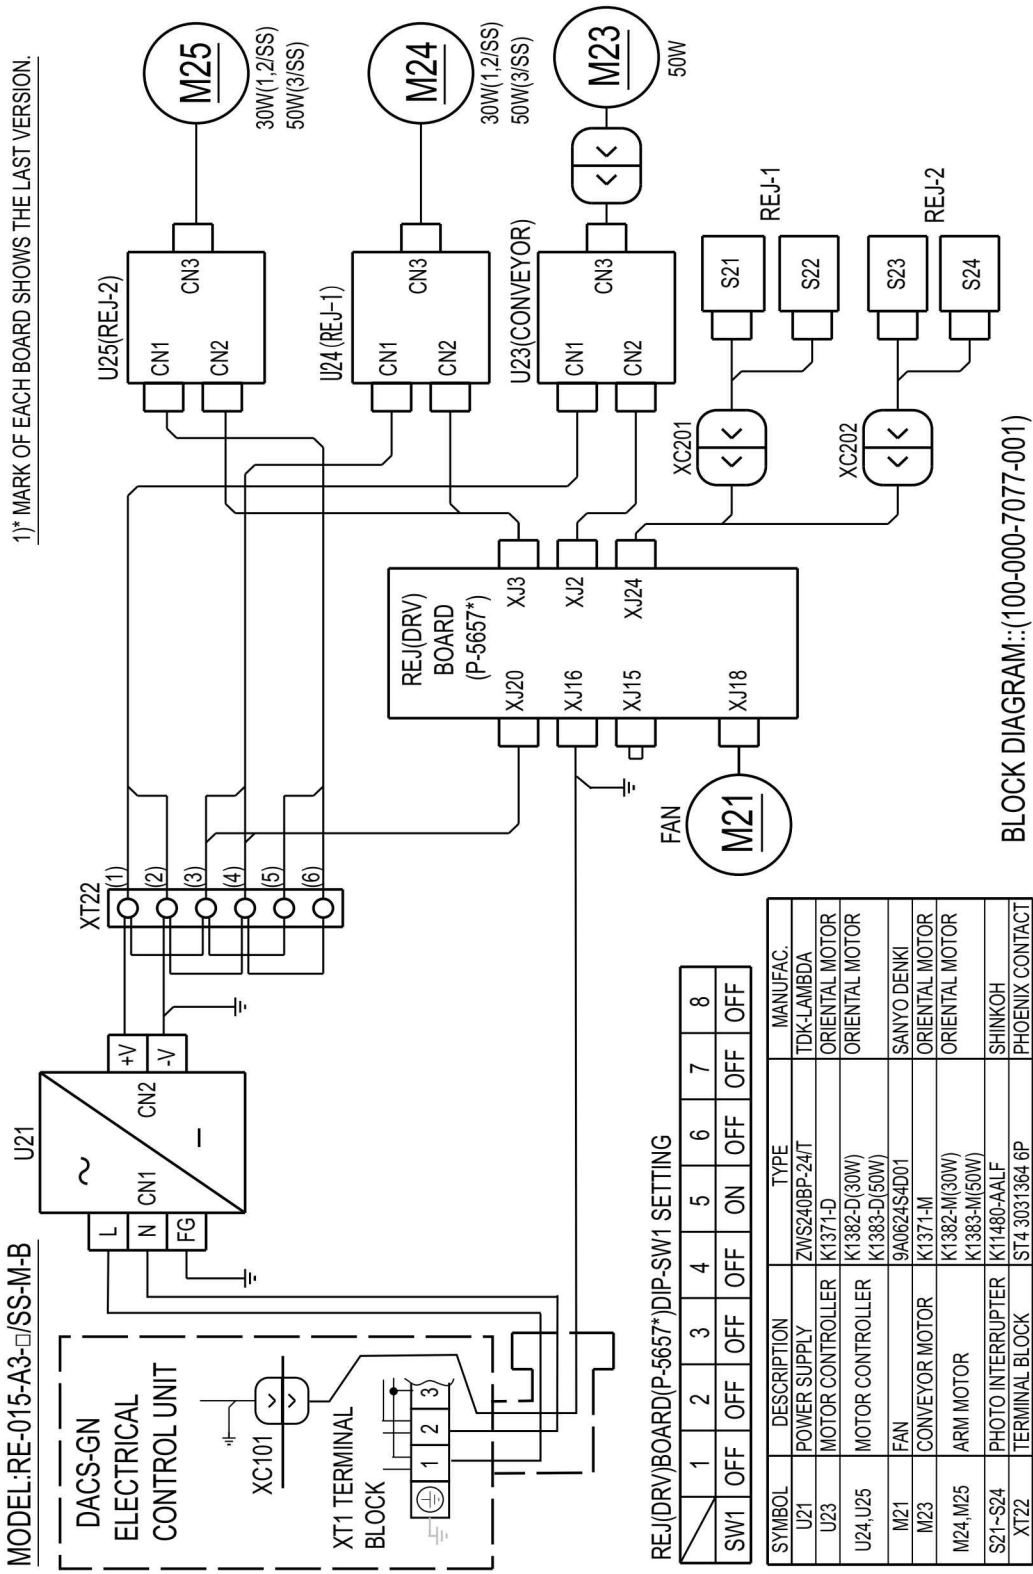

8.2.2 RE-015-A3-□/CR-M-B

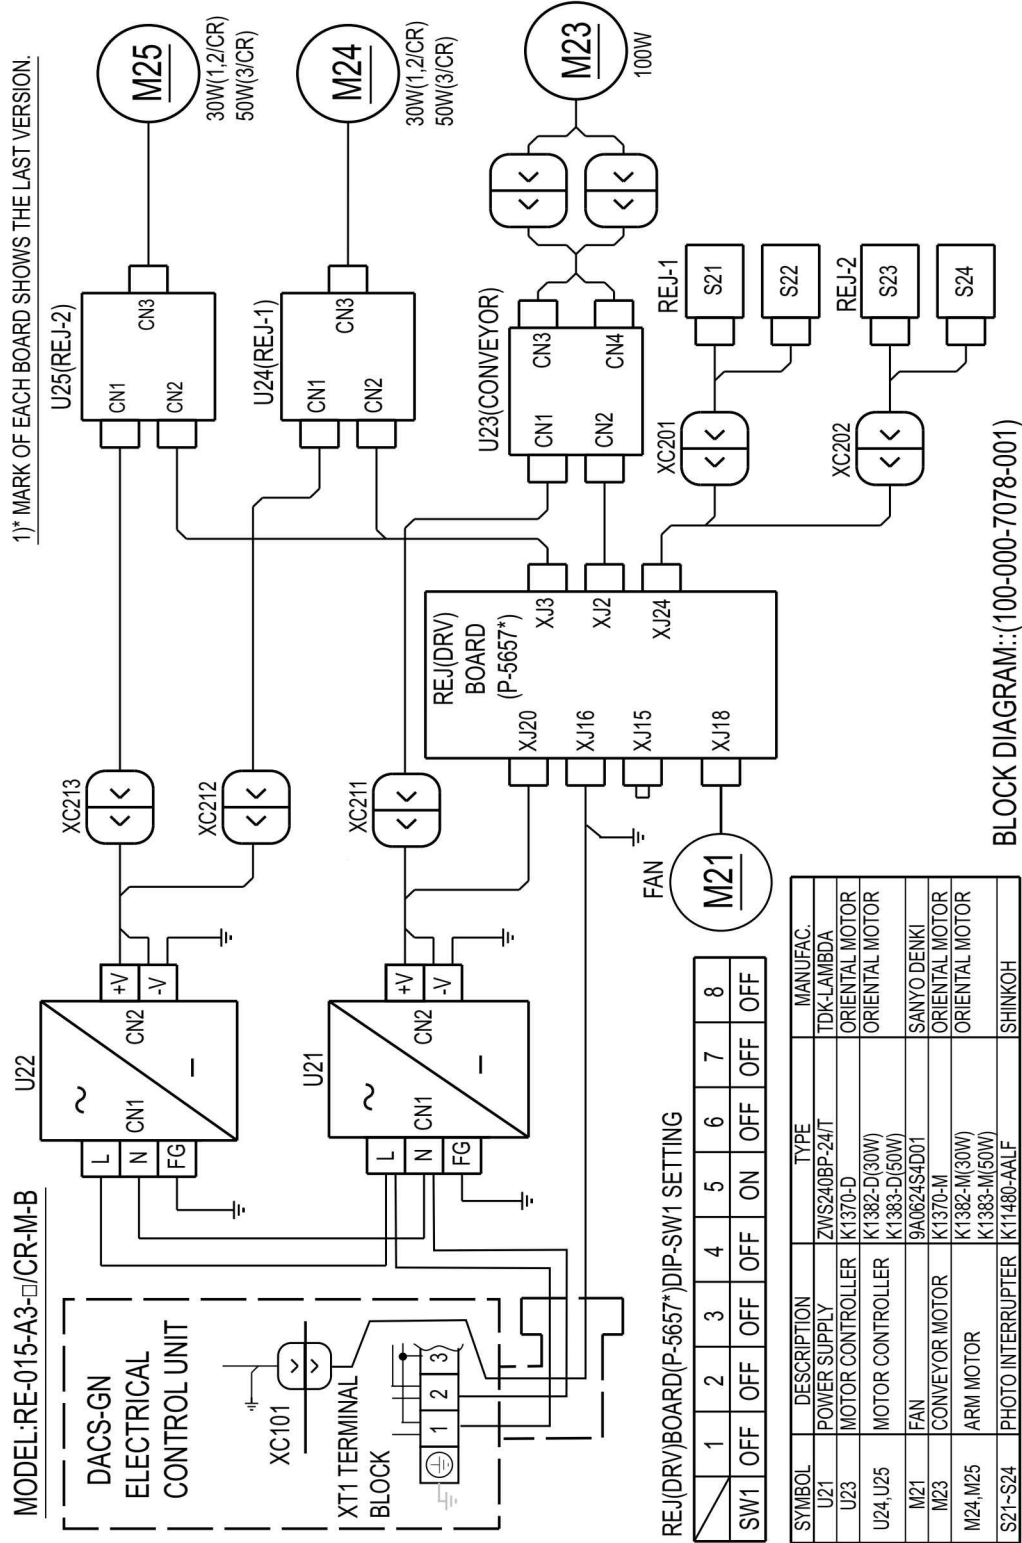


8.2.3 RE-060-A3-□/SS,CR-M-B

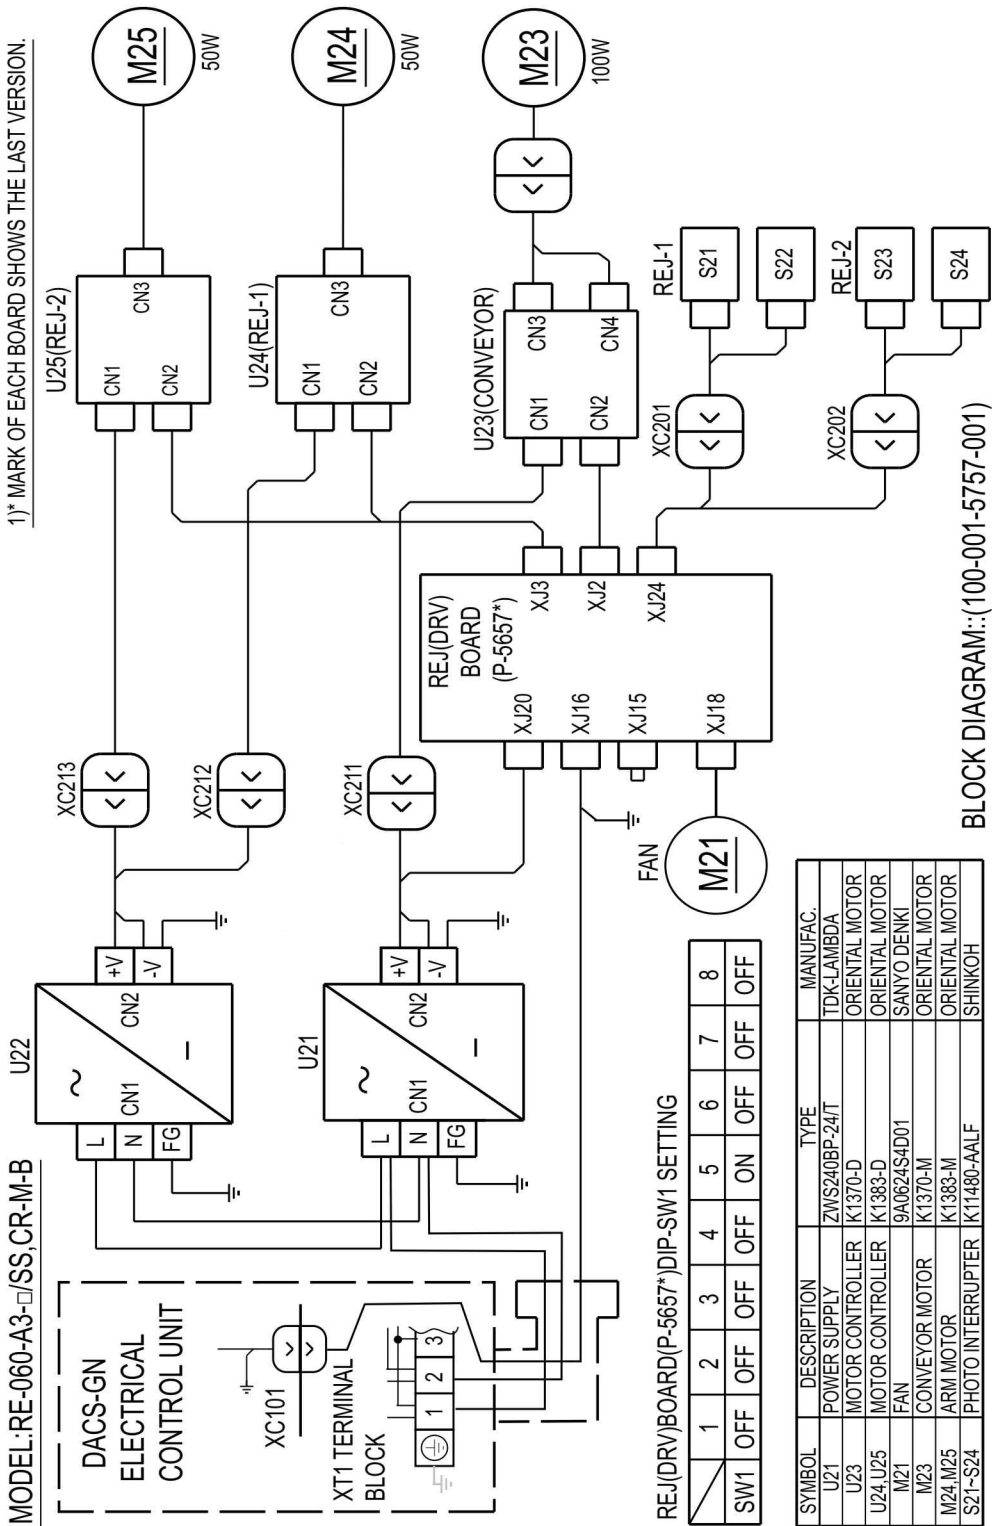


This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.

8 Wiring Diagram

8.2.4 RE-015-J2,3,P2-□/SS,CR-A-B

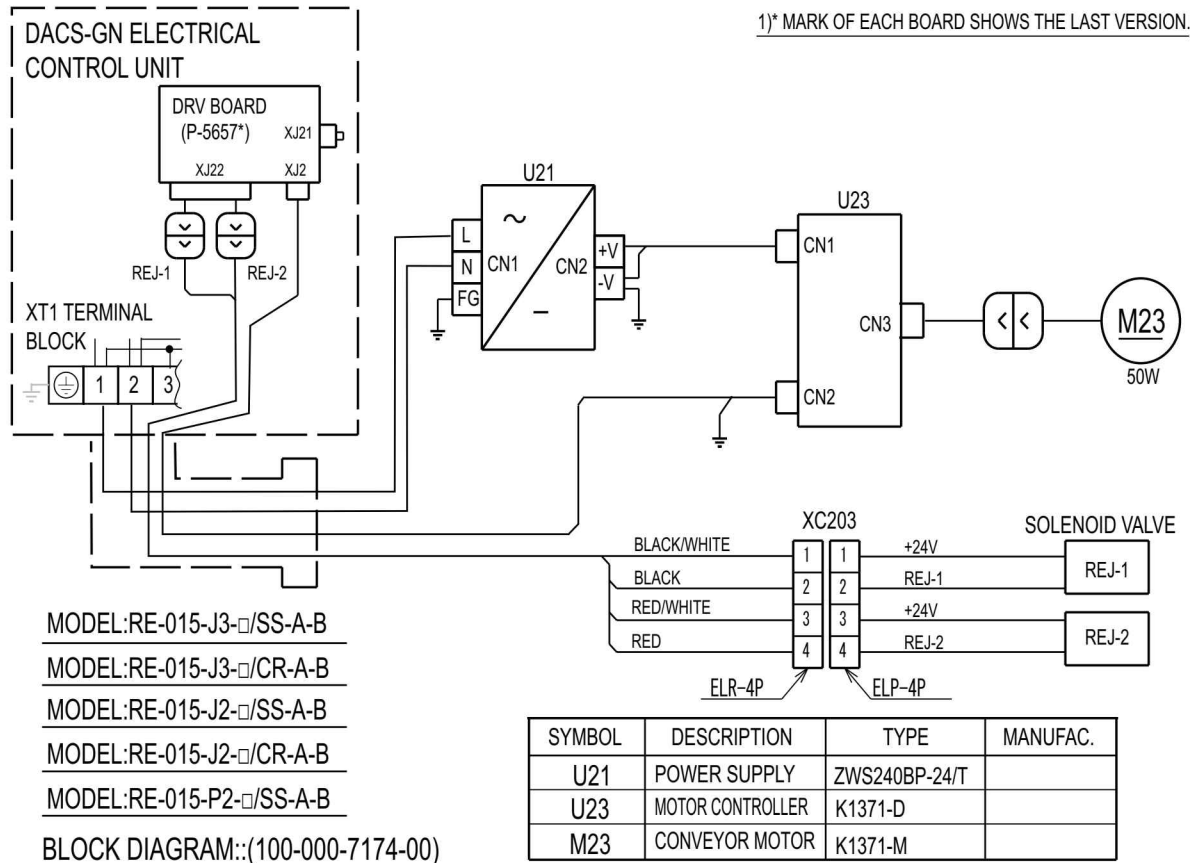


8.2.5 RE-015-J2,3,P2-4/SS,CR-A-B

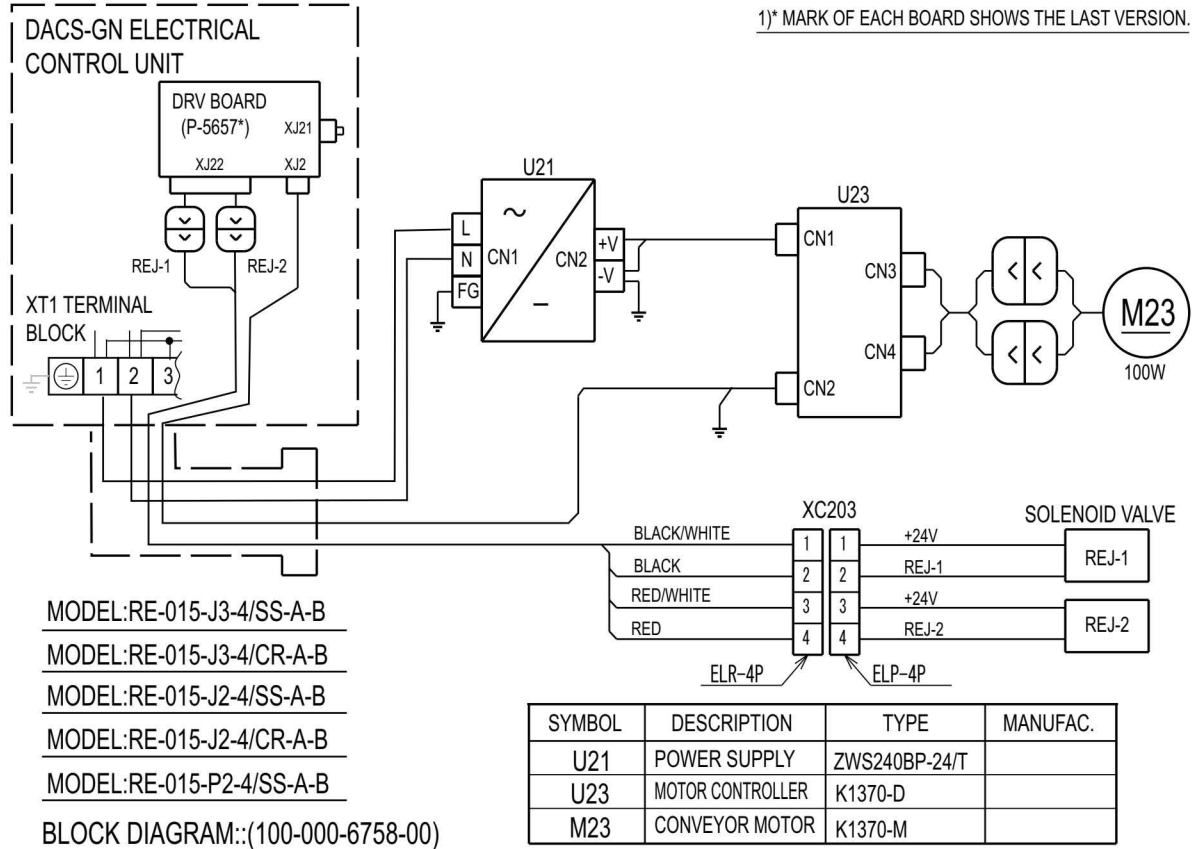

8.2.6 RE-015-DB2-□/SS-A-B

MODEL:RE-015-DB2-□/SS-A-B

1)* MARK OF EACH BOARD SHOWS THE LAST VERSION.

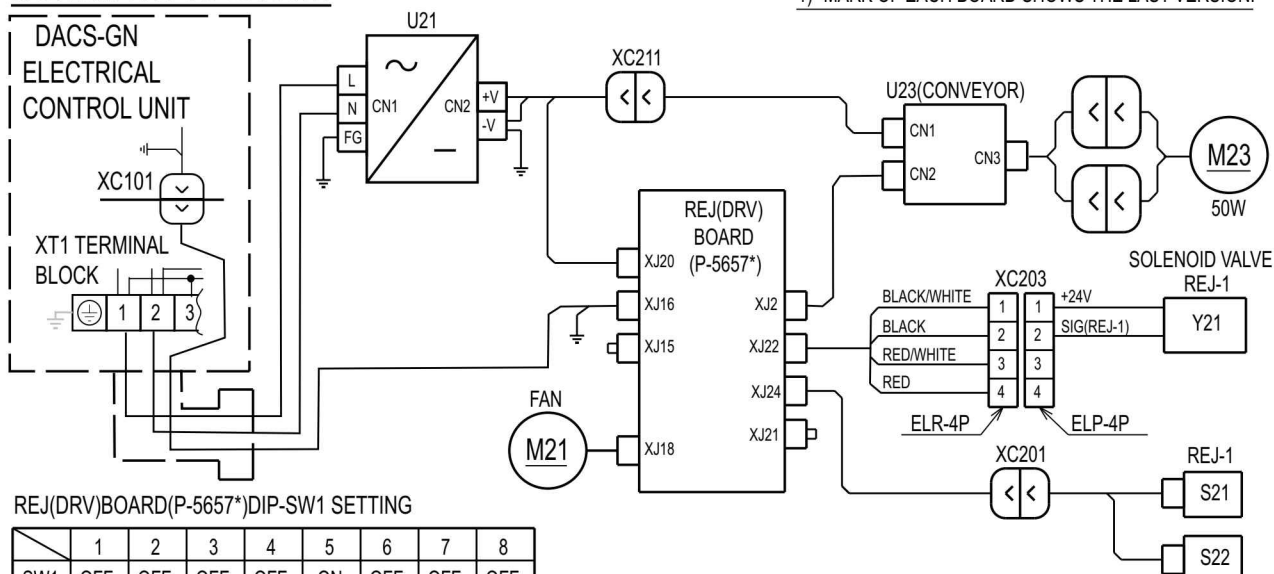


SYMBOL	DESCRIPTION	TYPE	MANUFAC.
U21	POWER SUPPLY	ZWS240BP-24/T	TDK-LAMBDA
U23	MOTOR CONTROLLER	K1371-D	ORIENTAL MOTOR
M21	FAN	9A0624S4D01	SANYO DENKI
M23	CONVEYOR MOTOR	K1371-M	ORIENTAL MOTOR
S21,S22	PHOTO INTERRUPTER	K11480-AALF	SHINKOH
Y21	SOLENOID VALVE	DC24V	

BLOCK DIAGRAM:::(100-003-1251-00)

8.2.7 RE-060-DB2-□/SS,CR-A-B

MODEL:RE-060-DB2-□/SS,CR-A-B

1)* MARK OF EACH BOARD SHOWS THE LAST VERSION.

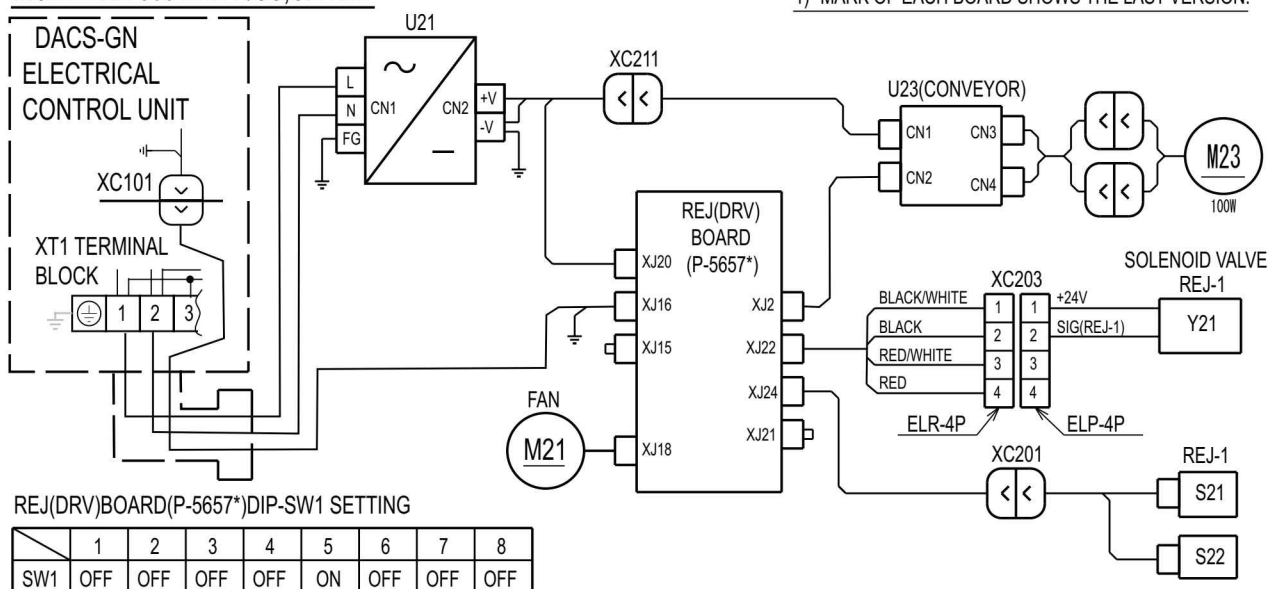

SYMBOL	DESCRIPTION	TYPE	MANUFAC.
U21	POWER SUPPLY	ZWS240BP-24/T	TDK-LAMBDA
U23	MOTOR CONTROLLER	K1370-D	ORIENTAL MOTOR
M21	FAN	9A0624S4D01	SANYO DENKI
M23	CONVEYOR MOTOR	K1370-M(SS TYPE) K1381-M(CR TYPE)	ORIENTAL MOTOR
S21,S22	PHOTO INTERRUPTER	K11480-AALF	SHINKOH
Y21	SOLENOID VALVE	DC24V	

BLOCK DIAGRAM:::(100-004-5269-00)

CHAPTER


9

Rejector

9.1	Rejector Overview	9-3
9.1.1	Rejector Field Code	9-3
9.1.2	Types of Rejector Device	9-4
9.2	Installation of Rejector Device	9-6
9.2.1	Air Jet Type	9-6
9.2.2	Arm Type	9-8
9.2.3	Drop Belt Type	9-14
9.2.4	REJ (DRV) Board (P-5657*)	9-17
9.3	Rejection Conveyor (SS Type)	9-20
9.3.1	How to Detach and Attach Rejection Conveyor	9-20
9.3.2	Tension and Meandering Adjustments of Rejection Conveyor Belt	9-21
9.4	Rejection Conveyor (CR Type)	9-22
9.4.1	How to Detach and Attach Rejection Conveyor	9-22
9.4.2	Replacing Rejection Conveyor Belt	9-23
9.5	Rejection Conveyor Drive Unit	9-25
9.5.1	Rejection Conveyor Drive Unit (Air jet type)	9-25
9.5.2	Rejection Conveyor Drive Unit (Arm type)	9-25
9.5.3	Rejection Conveyor Drive Unit (Drop belt type)	9-26
9.5.4	Rejector Manual Test	9-27
9.6	Error Displays and Countermeasures (Rejector / Standard Type)	9-28
9.6.1	Rejecting Error (Non-complete)	9-28
9.6.2	Air Low Stop	9-29
9.6.3	Rejection Conveyor Error	9-30
9.6.4	Other Errors (Rejector)	9-32

9.1 Rejector Overview

9.1.1 Rejector Field Code

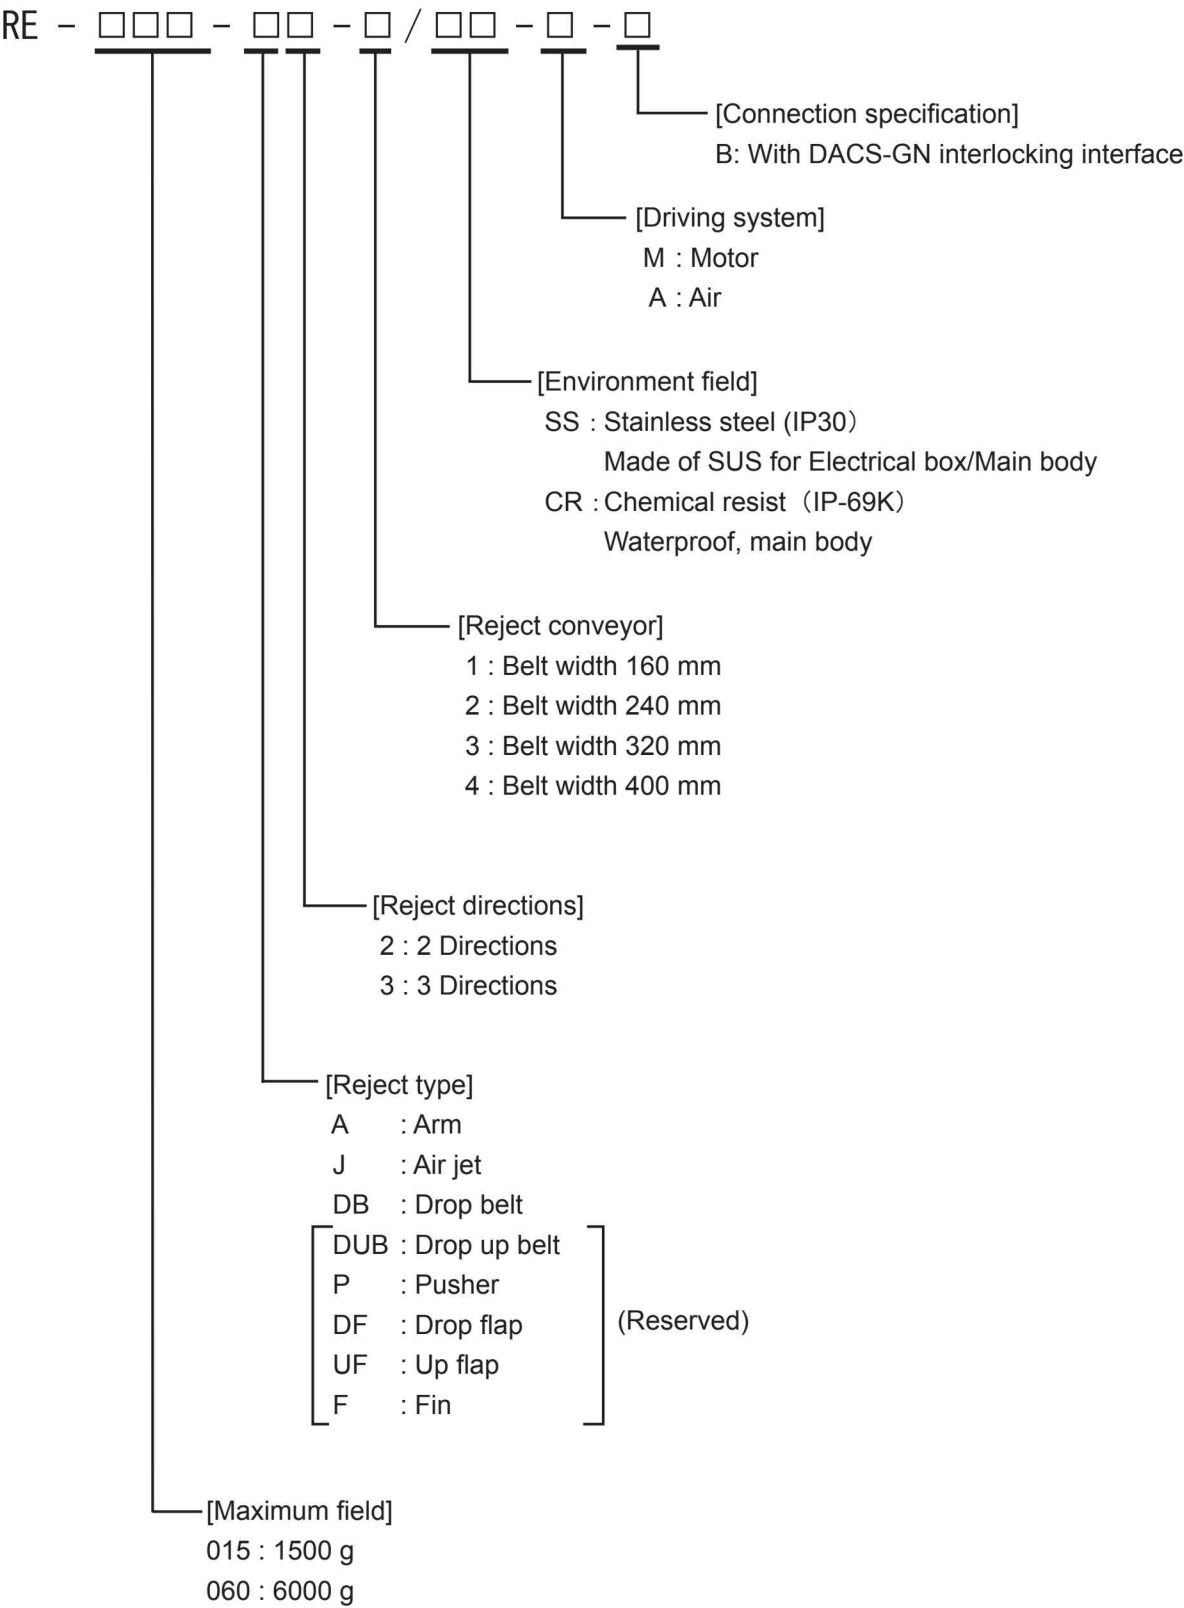


This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.

9.1.2 Types of Rejector Device

Various types of rejector devices are provided according to the characteristics and shapes of the products to be sorted.


■ Arm type

The arm type rejector device, which sorts the products in two or three directions with one or two arms, is generally employed due to its versatility.

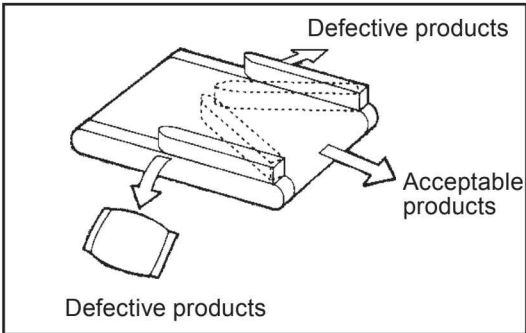


■ Air jet type

The air jet type rejector device, which sorts the products in two or three directions with a jet of air from one or two nozzles, is suitable for light products.

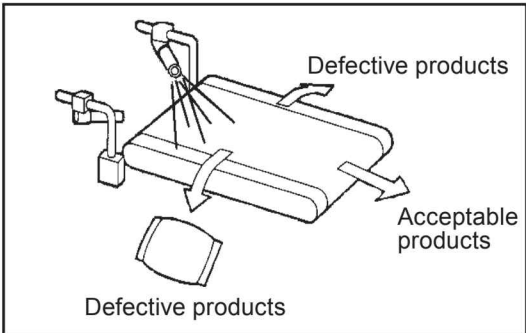


■ Drop belt type

The drop belt type rejector device sorts the products with a vertically movable belt.

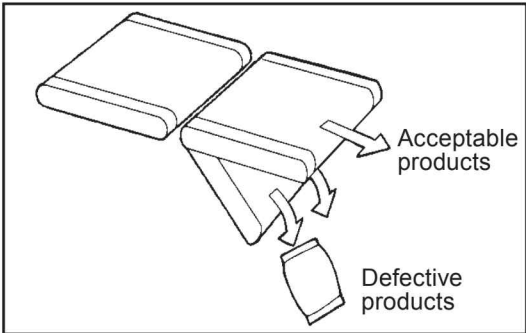


■ Fin type

The fin type rejector device sorts the products, which are transferred by the roller conveyor, in three directions with movable fins.

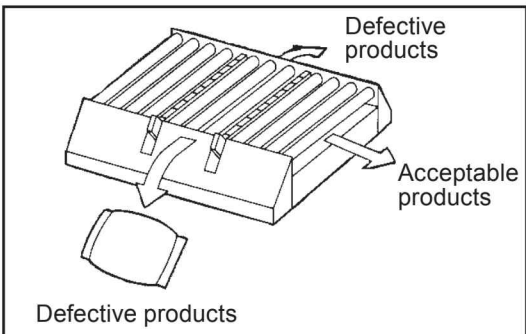


■ Air pusher type (Belt transfer)

The air pusher type rejector device sorts the products, which are transferred by the belt, in two directions with an air-driven pusher.

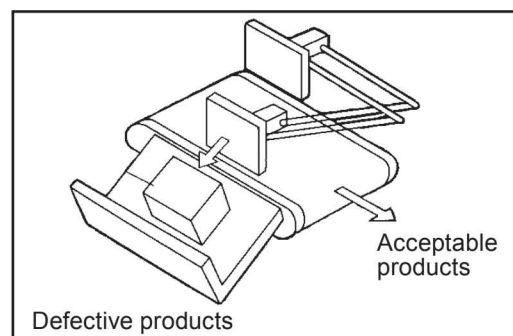


■ Air pusher type (Roller conveyor transfer)

The air pusher type rejector device sorts the products, which are transferred by the roller conveyor, in two directions with an air-driven pusher. This is suitable for heavy products.

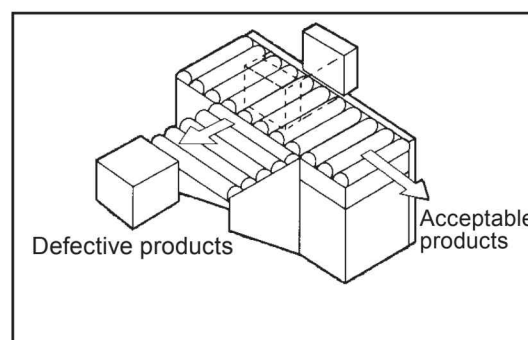


■ Drop flap type

The drop flap type rejector device, which sorts the products in two directions with a vertically movable flap, is suitable for light products.

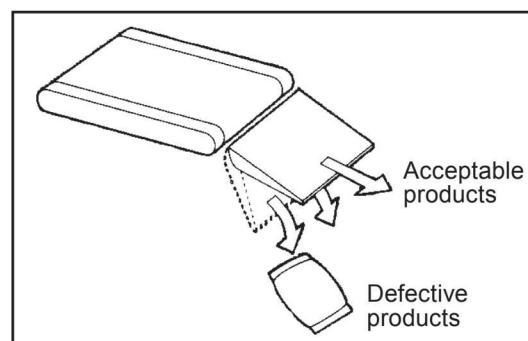

■ Slide type


The slide type rejector device, which sorts the products in various directions by transferring them by the caterpillar belt, is suitable for the products prone to topple over or become deformed.

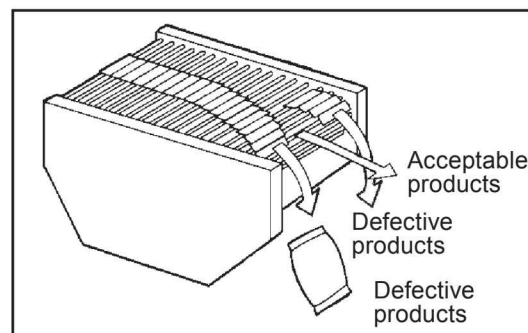


9.2 Installation of Rejector Device

9.2.1 Air Jet Type


■ Configuration of mechanical unit

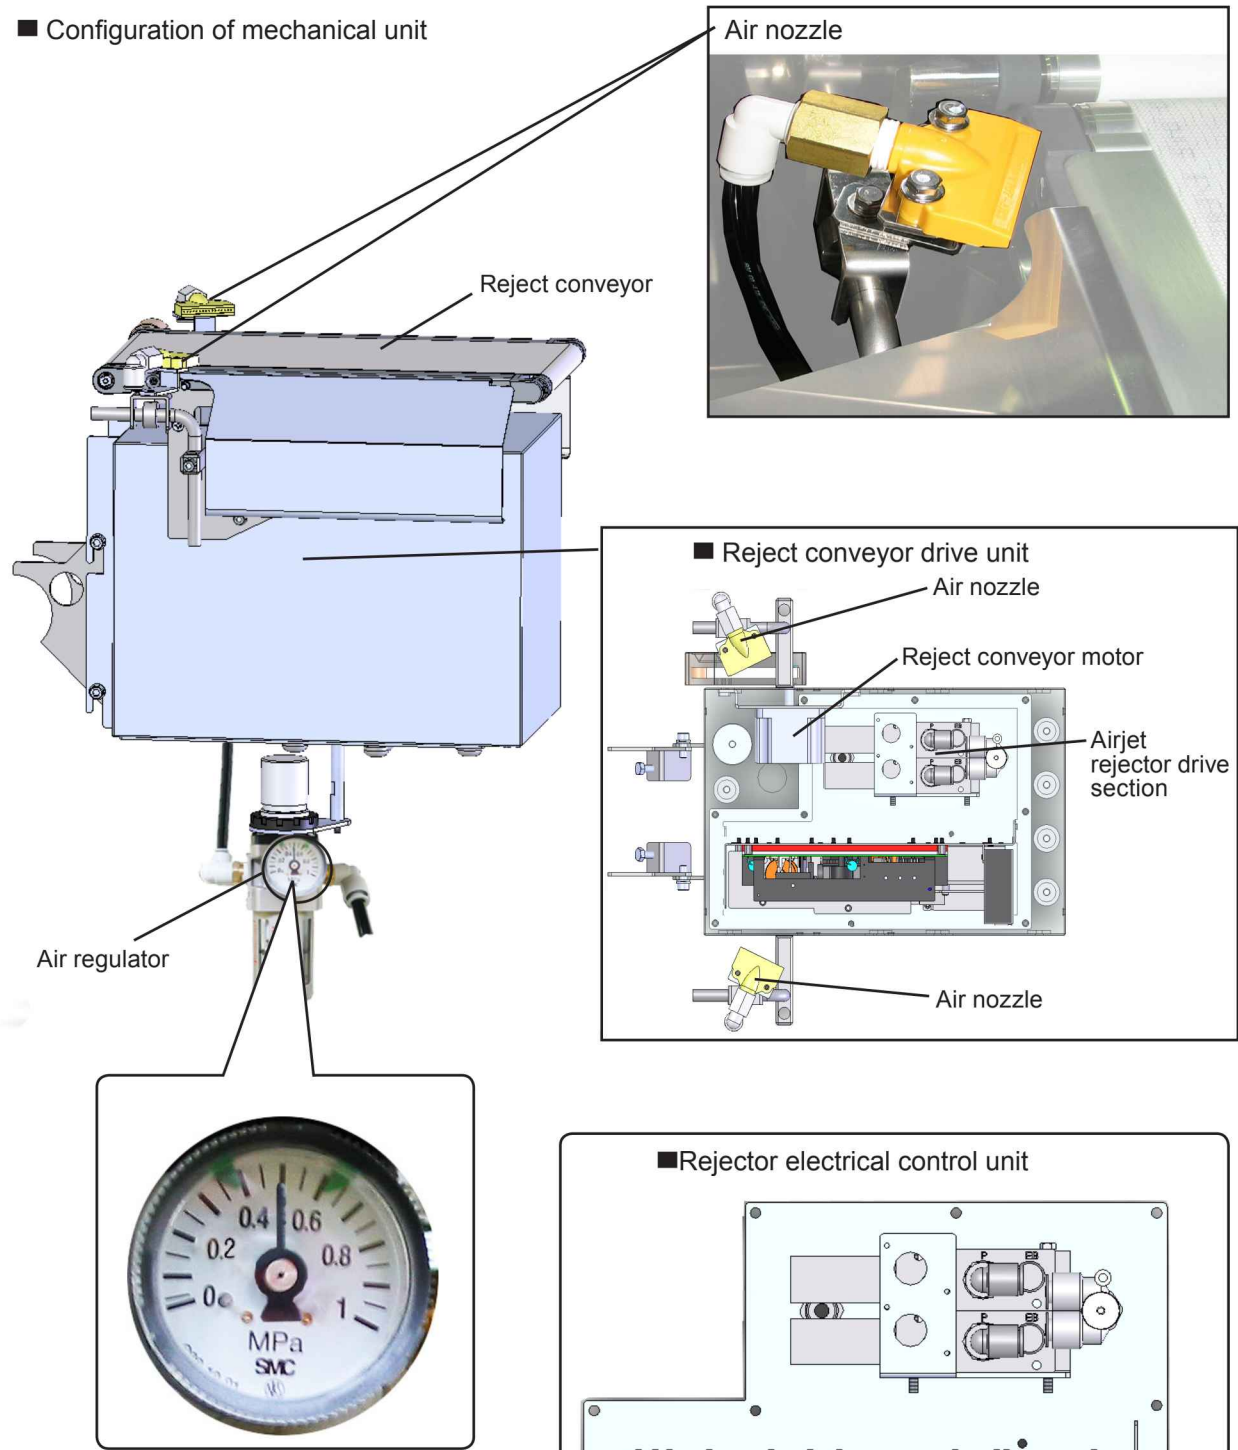

NOTE Check that the standard pressure value is 0.5 MPa.

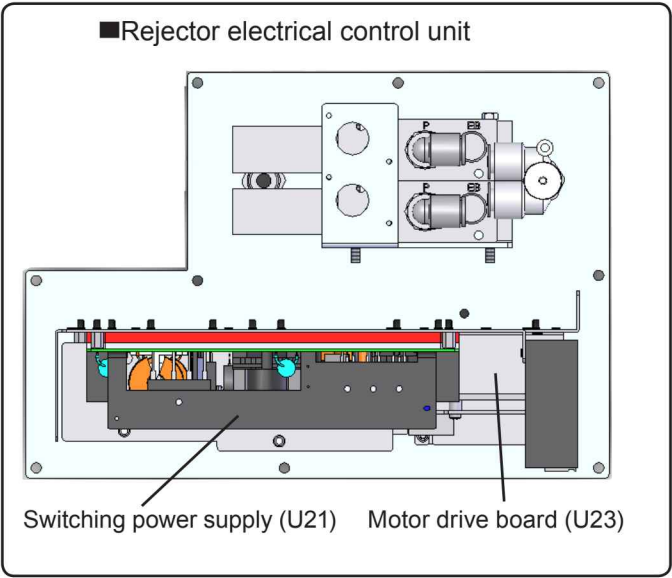

RE-015-J2,3,P2-□/SS,CR-A-B Block Diagram

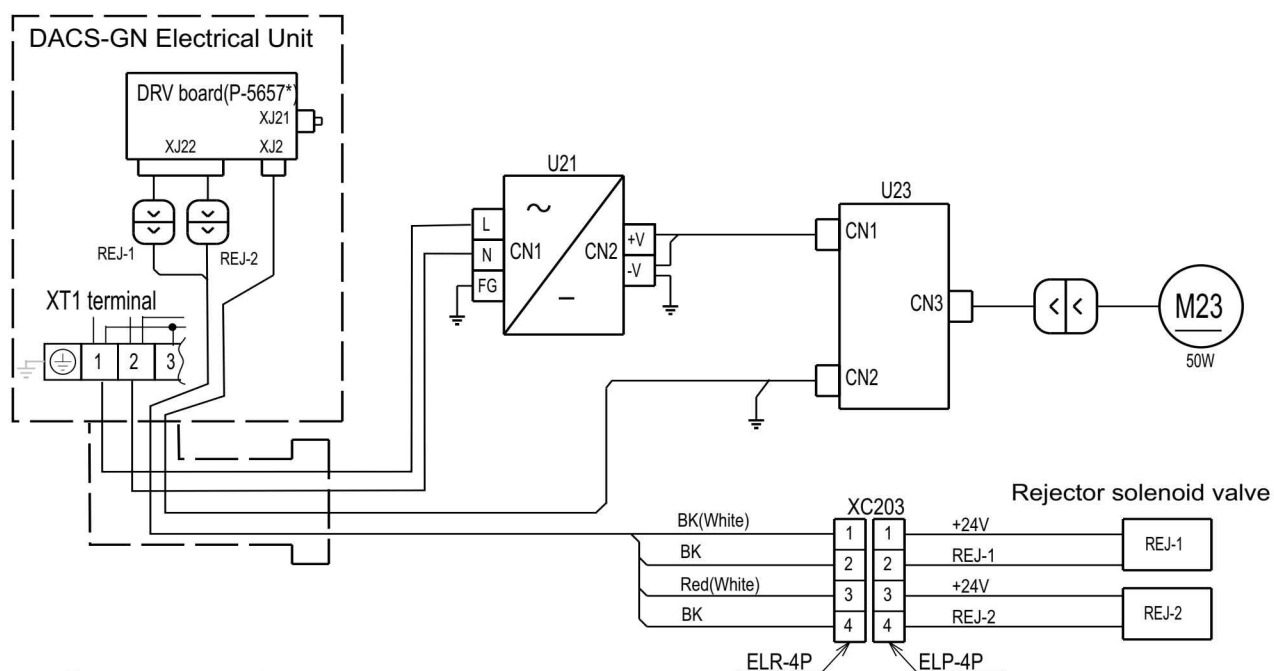

Type: RE-015-J3-□/SS-A-B

Type: RE-015-J3-□/CR-A-B

Type: RE-015-J2-□/SS-A-B


Type: RE-015-J2-□/CR-A-B

Type: RE-015-P2-□/SS-A-B

Mark	Name	Model	Note
U21	Switching power supply	ZWS240BP-24/T	
U23	Motor drive board	K1371-D	
M23	Motor for conveyers	K1371-M	

Block Diagram (100-000-7174-001)

RE-015-J2,3,P2-4/SS,CR-A-B Block Diagram

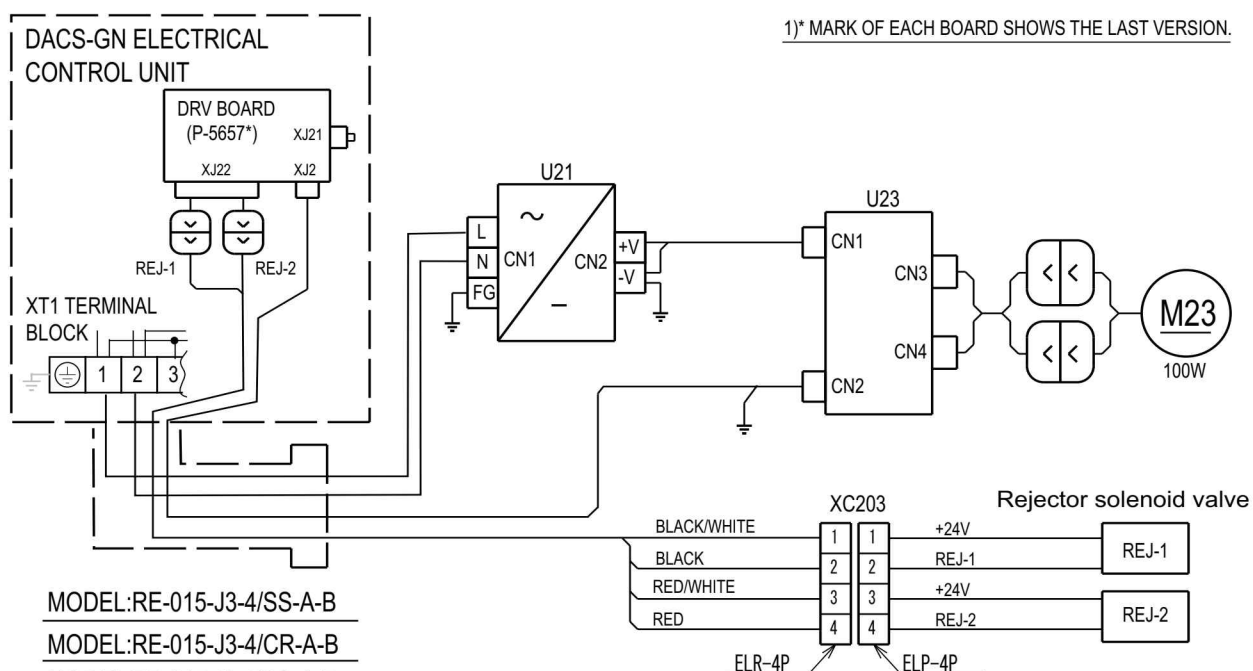

1)* MARK OF EACH BOARD SHOWS THE LAST VERSION.

MODEL:RE-015-J3-4/SS-A-B

MODEL:RE-015-J3-4/CR-A-B

MODEL:RE-015-J2-4/SS-A-B

MODEL:RE-015-J2-4/CR-A-B

MODEL:RE-015-P2-4/SS-A-B

BLOCK DIAGRAM::(100-000-6758-00)

SYMBOL	DESCRIPTION	TYPE	MANUFAC.
U21	POWER SUPPLY	ZWS240BP-24/T	
U23	MOTOR CONTROLLER	K1370-D	
M23	CONVEYOR MOTOR	K1370-M	


9.2.2 Arm Type

■ Configuration of mechanical unit



External view (SS type)




Internal wiring of the main unit

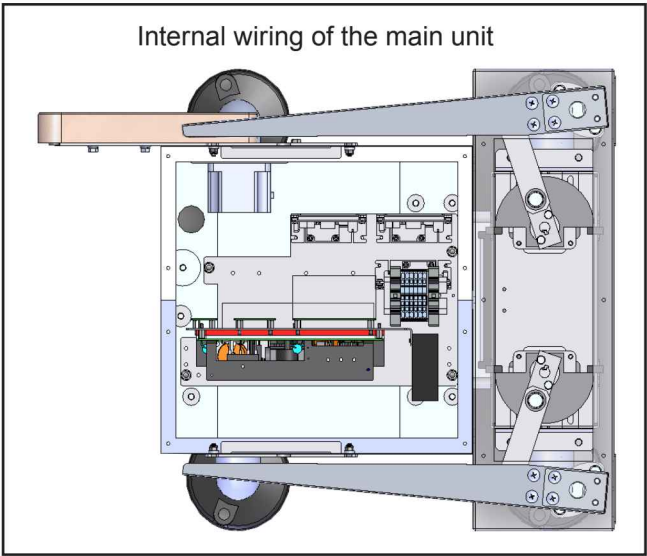


External view (CR type)

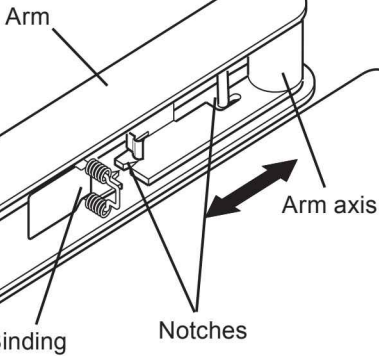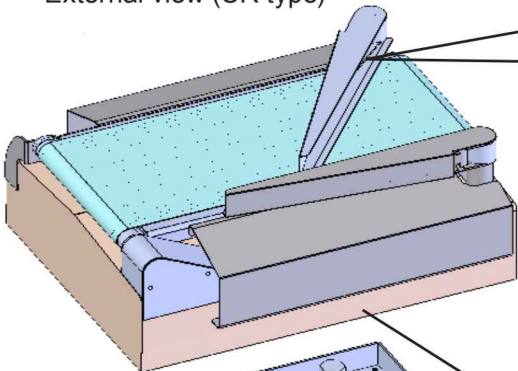

Internal wiring of the main unit

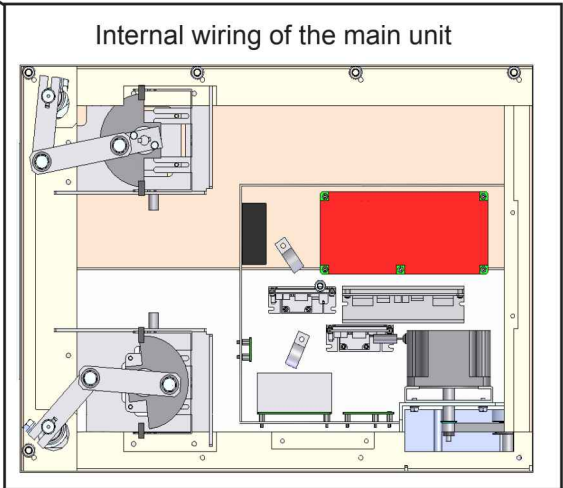

■ Rejection Drive Unit (SS type)

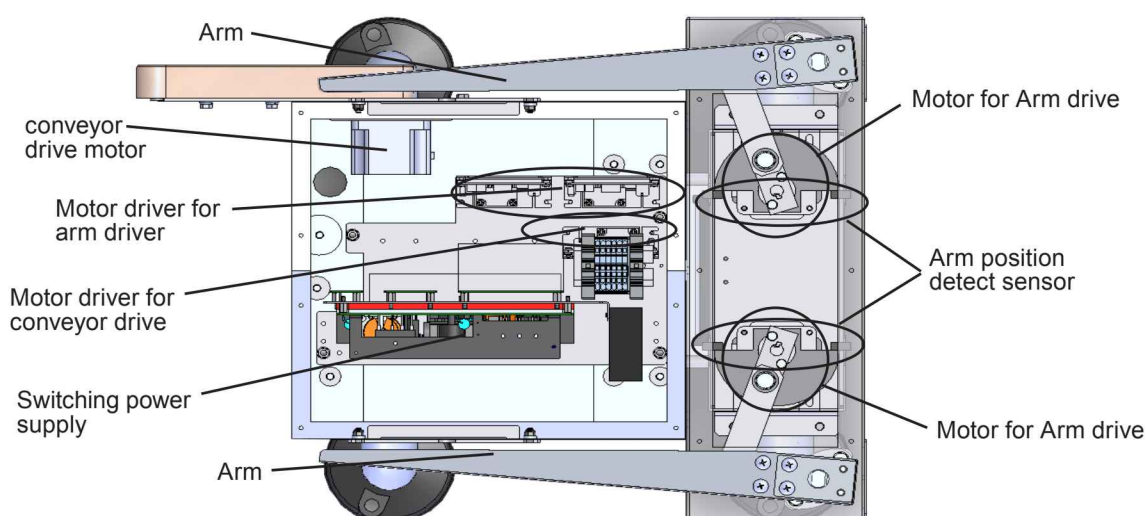

Refer to the instruction manual about removing arms.

■ Arm driving motor driver (Controller "motor")

External view of the motor driver


a) 30, 50 W type

To switching power supply [CN1]

To DRV board [CN2]

Motor speed adjusting VR

To arm driving motor [CN3]

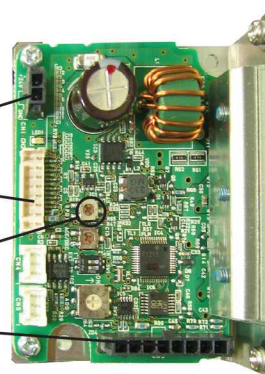

b) 100 W type

To switching power supply [CN1]

To DRV board [CN2]

Motor speed adjusting VR

(drive motor control signal)
[CN3]

(drive motor power supply)
[CN4]



NOTE When replacing the arm driving driver and the conveyor driving motor driver, set the position of the motor speed adjusting dial to the same position as it was before the replacement.


This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.

■ How to drive the conveyor motor in an emergency

When the weigh conveyor stops due to errors as sensor unit malfunction and cannot be operated, reject conveyor can require forcible drive operation. When this case occurs, follow the step below.
(For the conveyor driven motor driver such as arm, airjet, dropbelt)

CAUTION Since this operation is a forcible operation given in emergency, weighing check should not be performed.

- 1. Turn the power switch OFF.
- 2. Remove the rear cover attached to the electrical control unit.
- 3. Pull out the cable coming from DRV board and connected to connector CN2 on the motor driver board at the bottom inside the check weigher.
- 4. Insert the jumper connector attached with the cable pulled out.
- 5. Turn ON the power switch.
- 6. When the drive conveyor does not start operation, turn the volume on the motor driver board (manual motor speed controller) clockwise. When the motor turns, use it with the normal speed.

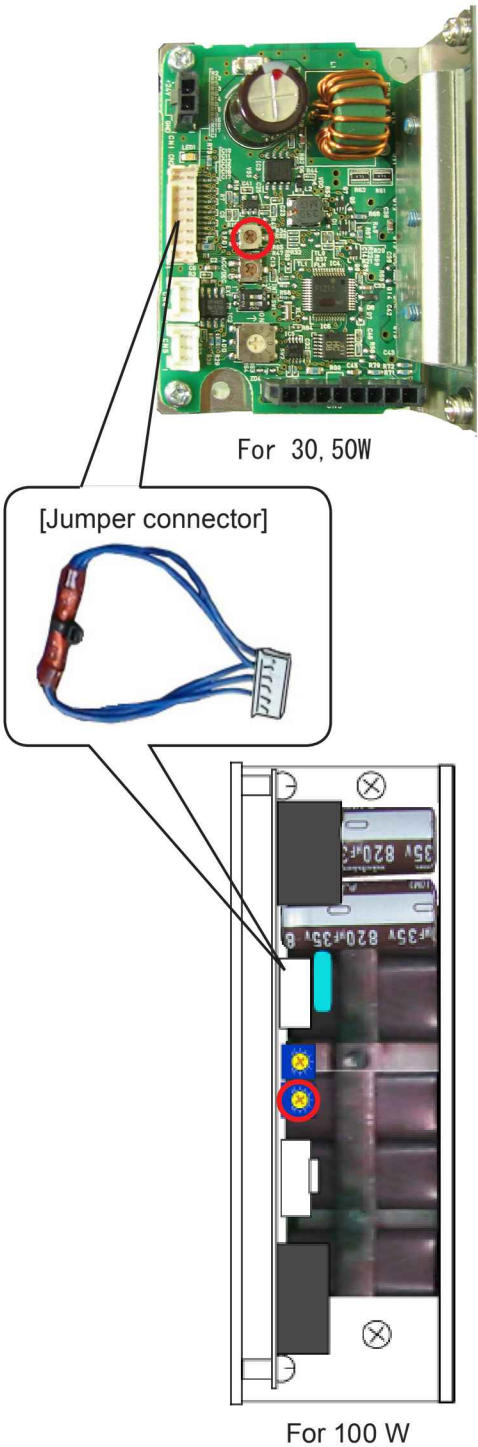


NOTE After the problem in the weigh unit is solved, do not forget to remove the jumper connector and use the machine over the regular connection.

■ RE-015-A3-□/SS-M-B Block Diagram

MODEL:RE-015-A3-□/SS-M-B


1)* MARK OF EACH BOARD SHOWS THE LAST VERSION.

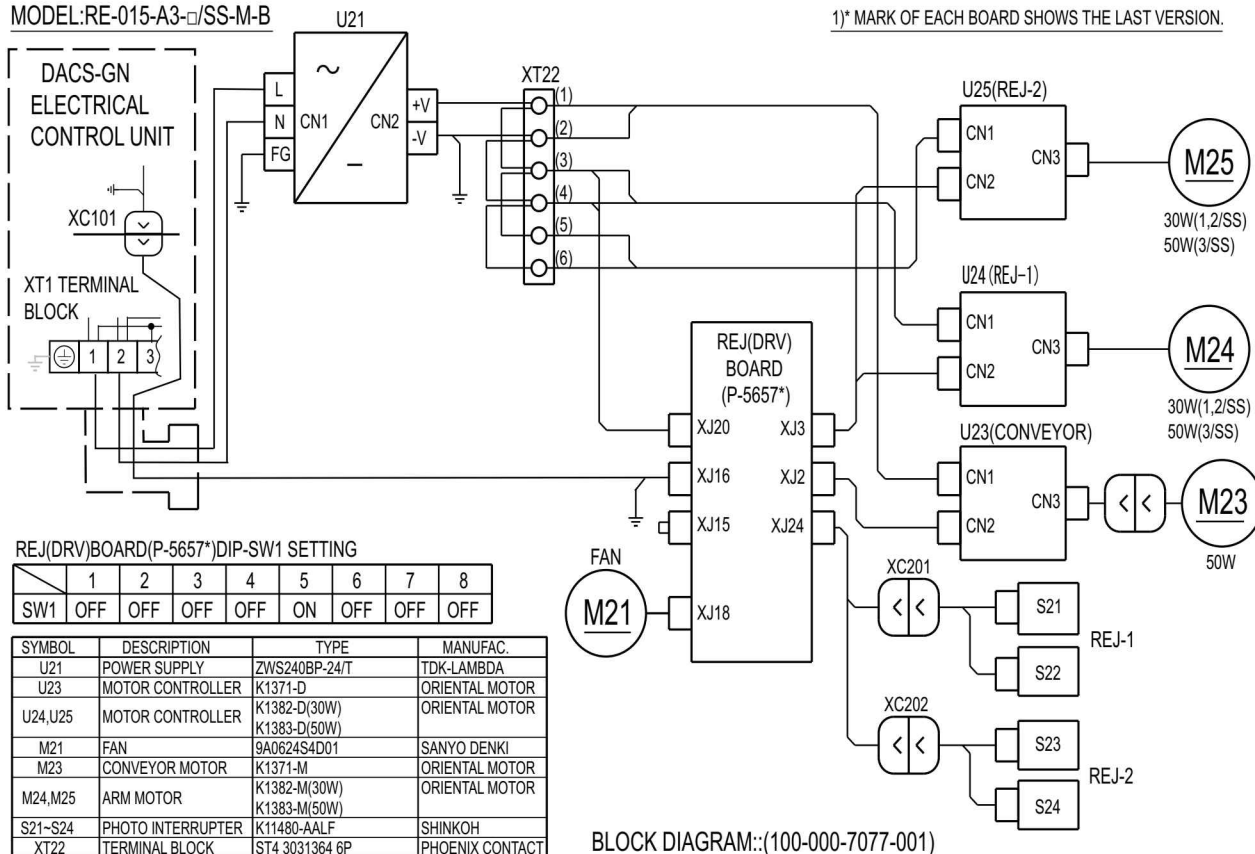

■ RE-015-A3-□/CR-M-B Block Diagram


MODEL:RE-015-A3-□/CR-M-B

1)* MARK OF EACH BOARD SHOWS THE LAST VERSION.

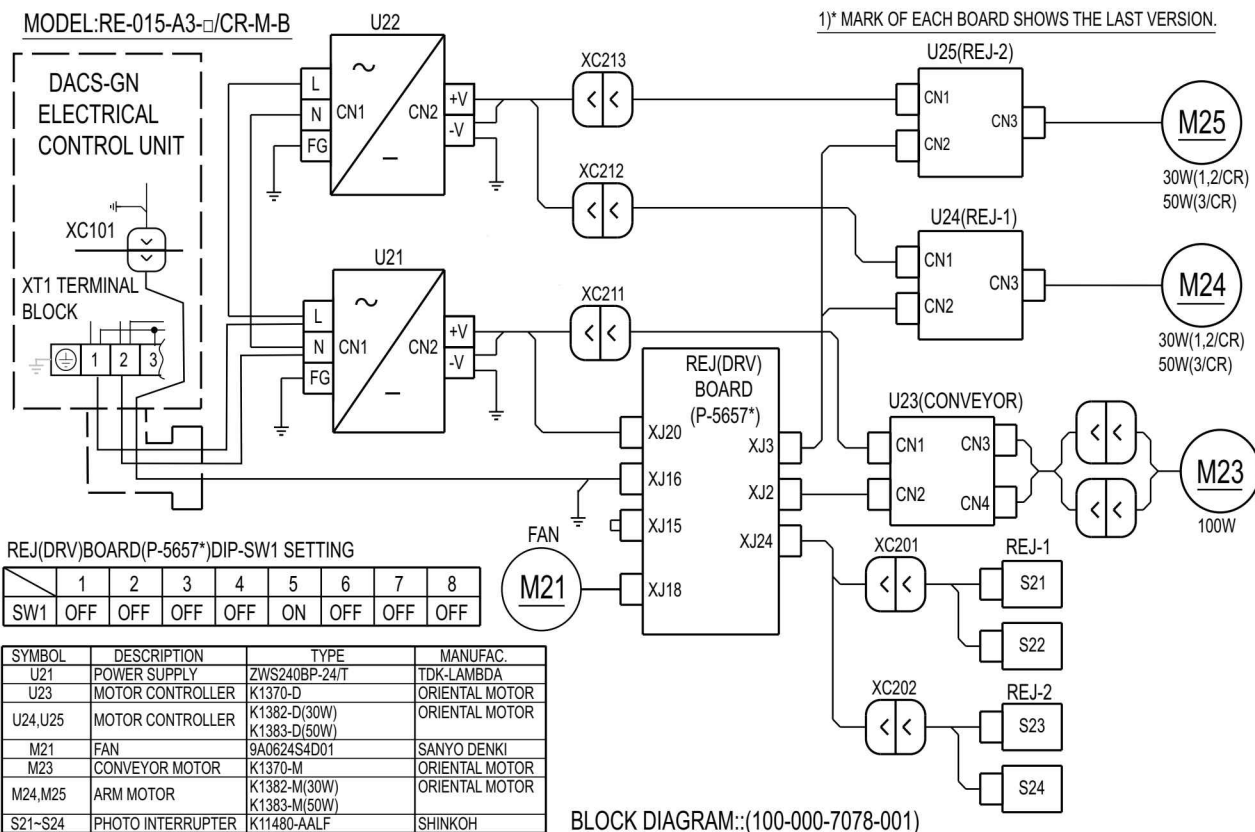

This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.

■ RE-060-A3-□/SS,CR-M-B Block Diagram

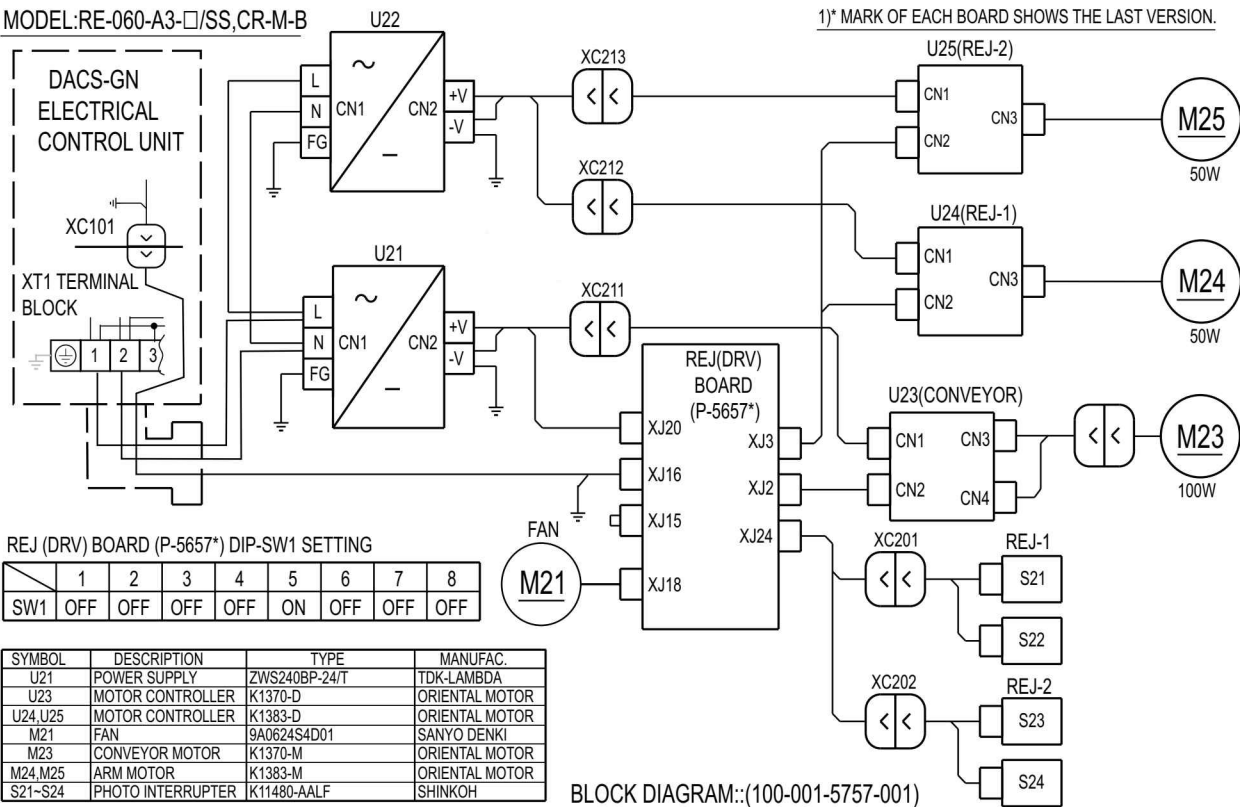


■ Position adjustment of photo sensor fitting


After replacing the arm drive motor and photosensor, adjust the position of the photosensor fitting in the following steps:

1. Loosen the nuts (two places) tightening the photosensor fitting and the arm driving motor.
2. Attach the photosensor fitting to the specified position for each model.
3. Tighten the nuts (two places) jointly fixing the photosensor.


Type: RE-015/060-A3-2,3,4/SS

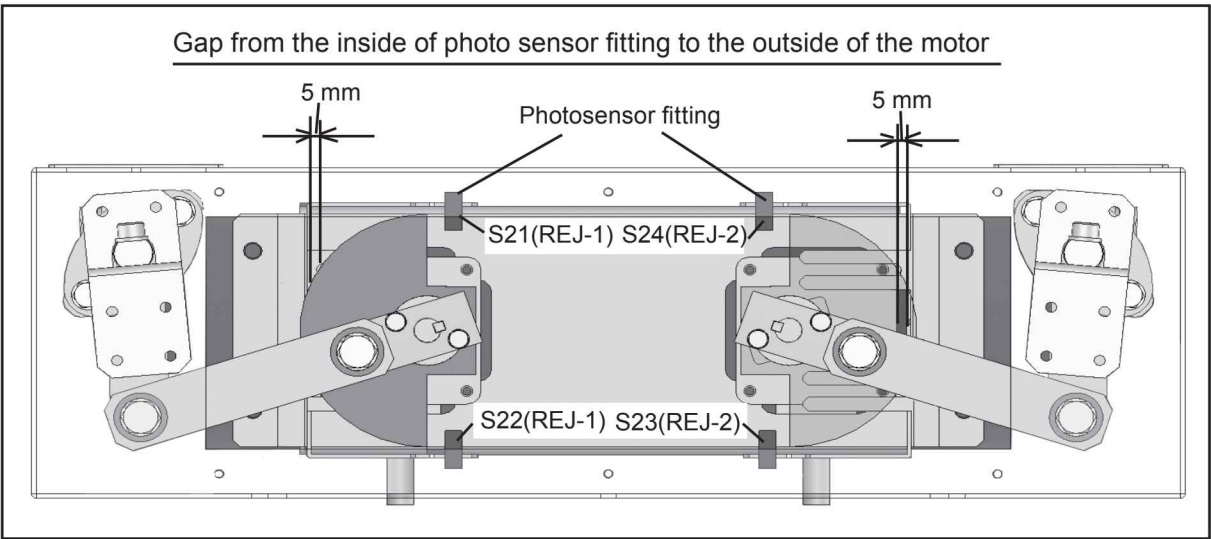


Type: RE-015/060-A3-1/SS

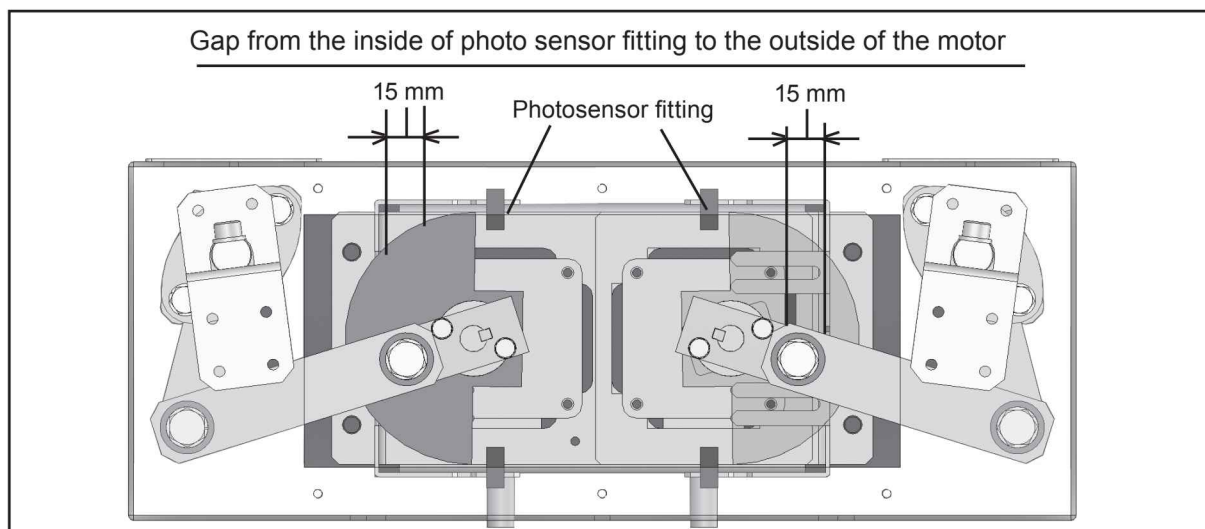

Type: RE-015/060-A3-2,3,4/CR

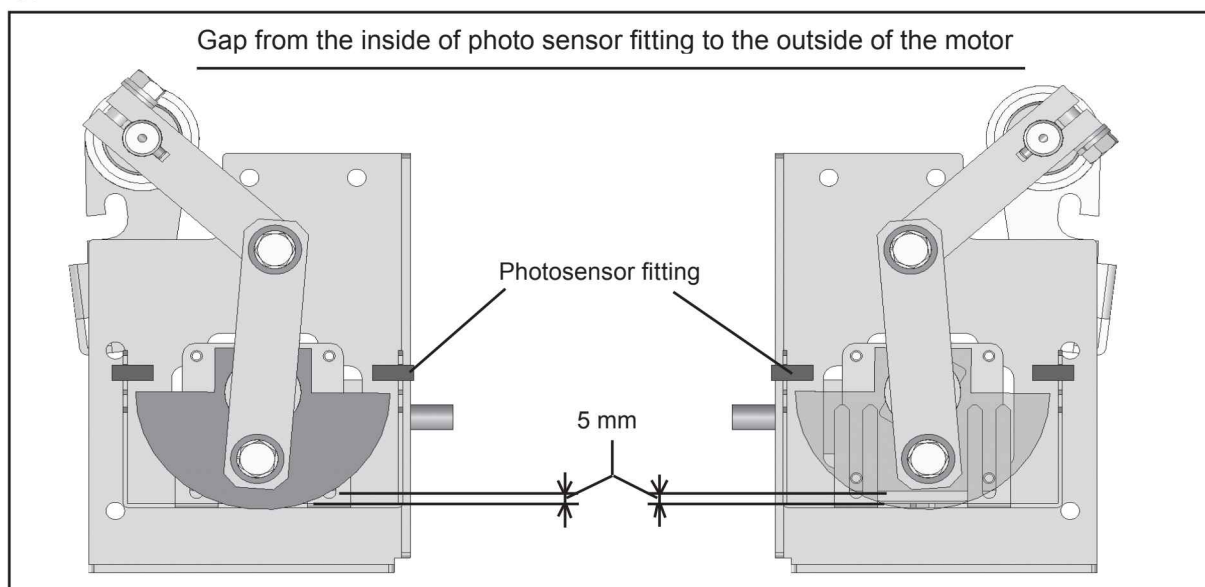


Type: RE-015/060-A3-1/CR

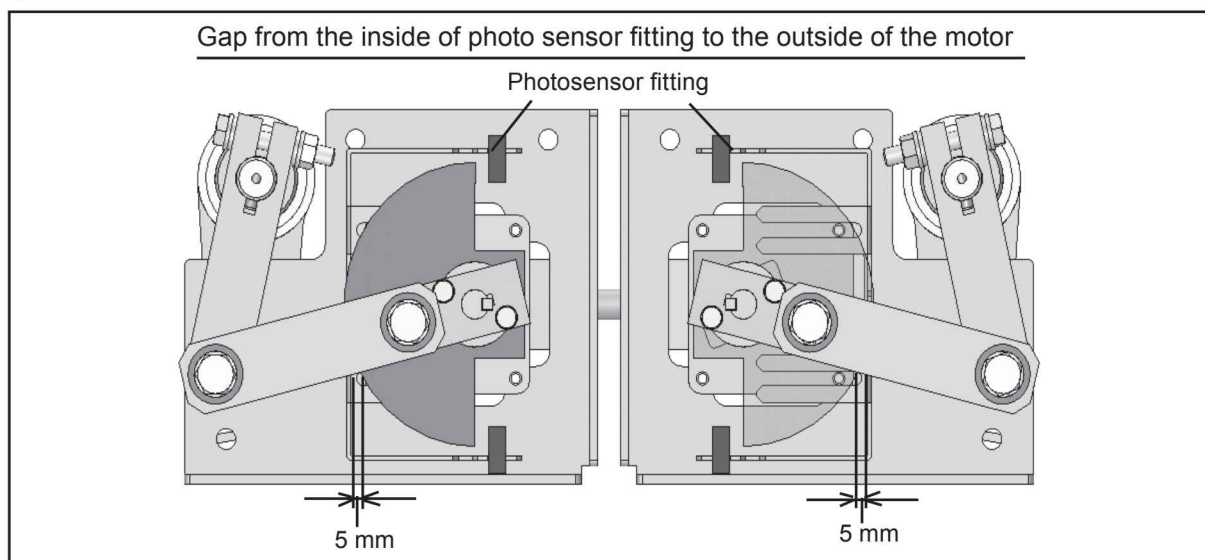


9.2.3 Drop Belt Type

■ Configuration of mechanical unit

External view and internal wiring of the main unit (Standard specification)

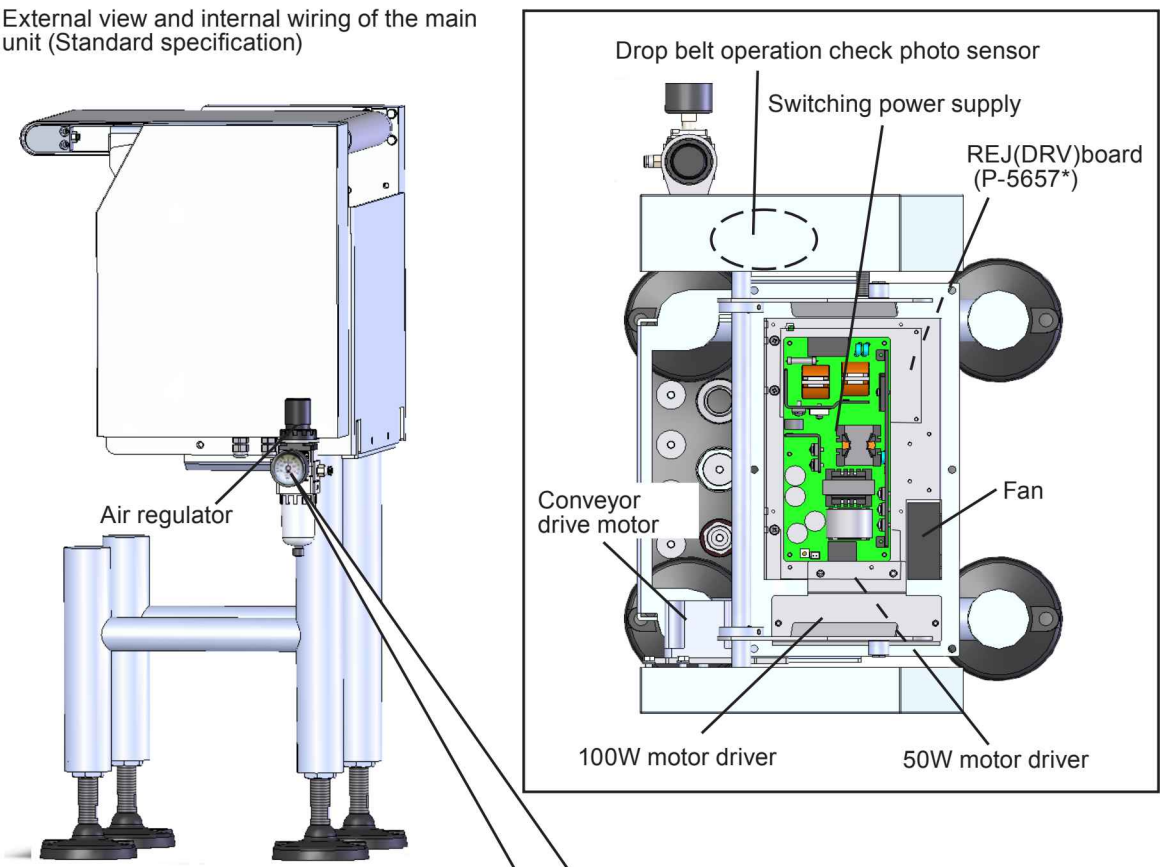

■ Rejection drive unit

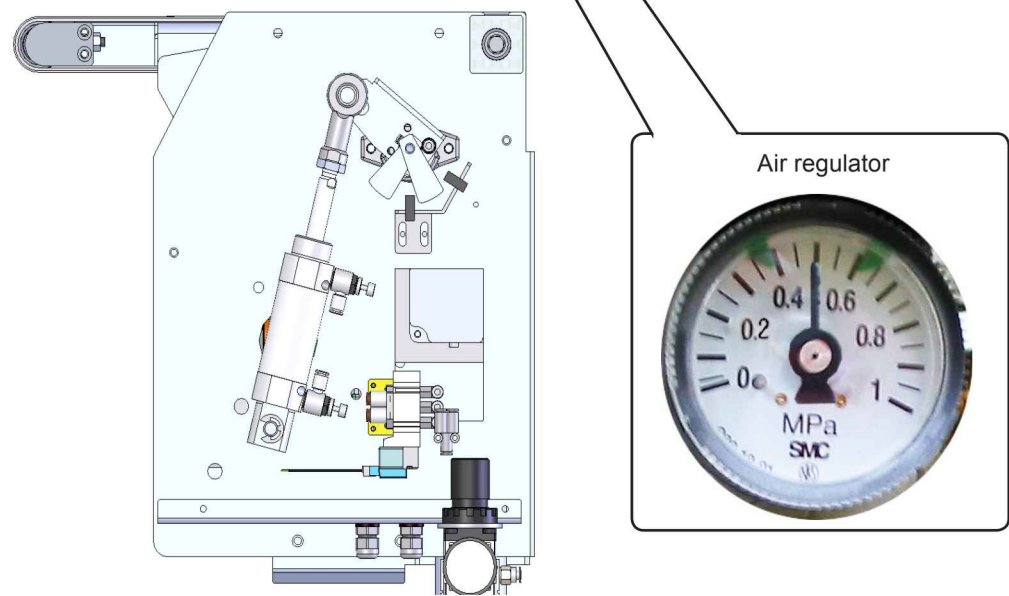

NOTE Check that the standard pressure value is 0.5 MPa.


■ Drop belt photo sensor adjustment

Sensors and light-shielding boards for rising position detection and lowering position detection are attached to the conveyor rotation axis. Adjust the light-shielding board position when adjusting the normal position and the actuating position.

1. Reject drop belt: in position (product has a corrected weight)

Photo sensor A: receiving light


Photo sensor B: receiving light

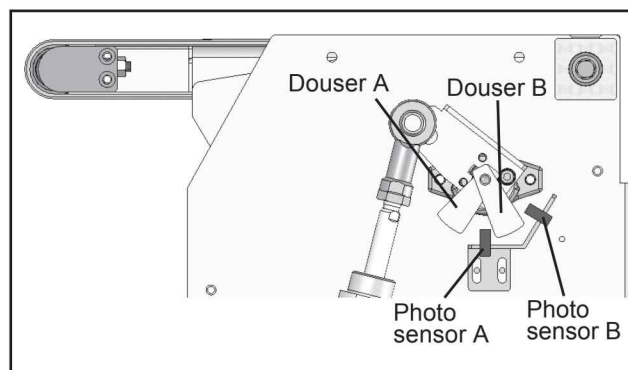

2. Reject drop belt: in transfer

Photosensor A: receiving light


Photosensor B: shielding light

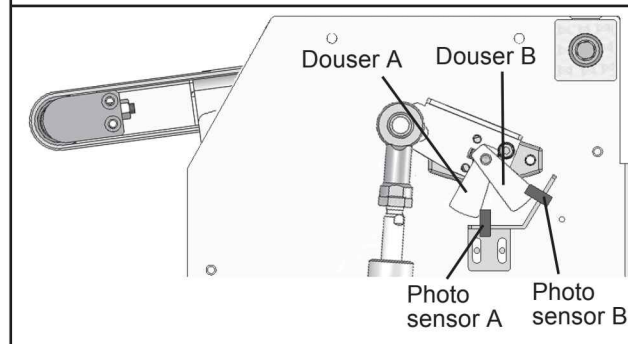

3. Reject drop belt: transfer completed (faulty position)


Photosensor A: Shielding light

Photosensor B: Shielding light

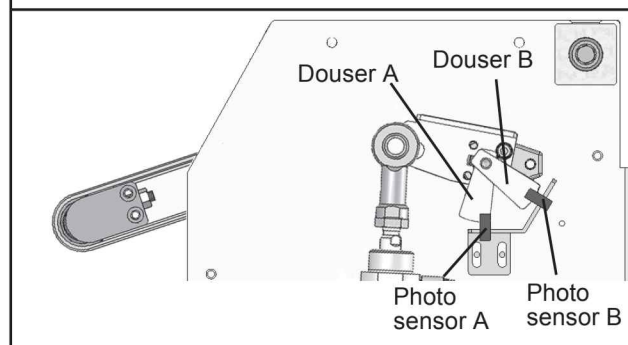


■ Rejecting arm drive unit

When the reject arm operation is defective or insufficient, inspect the solenoid valve and the air cylinder for drop arm. Adjust the speed of drop arm by using the speed controller.

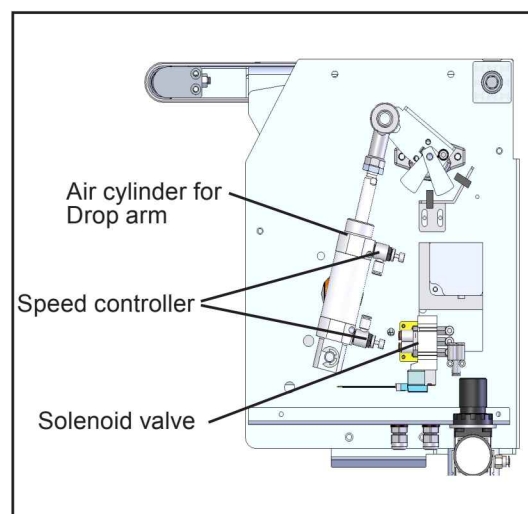


This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.

■ RE-015-DB2-□/SS-M-B Block Diagram

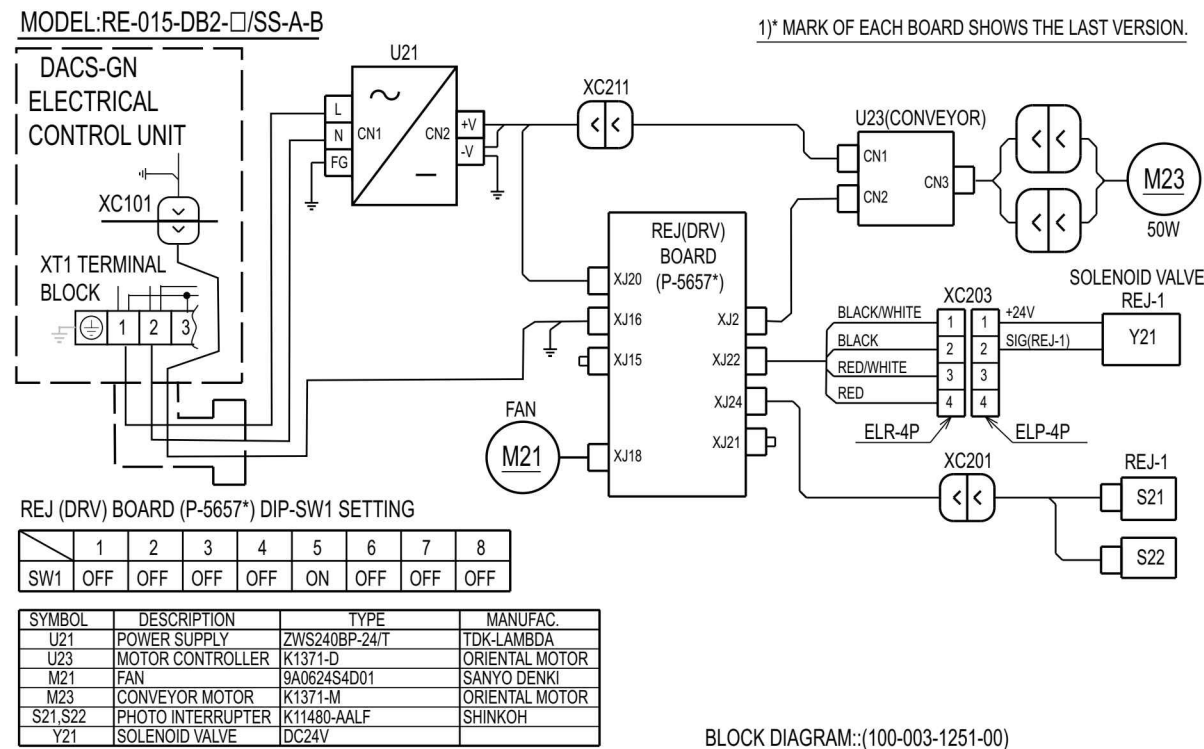


■ RE-060-DB2-□/SS,CR-M-B Block Diagram

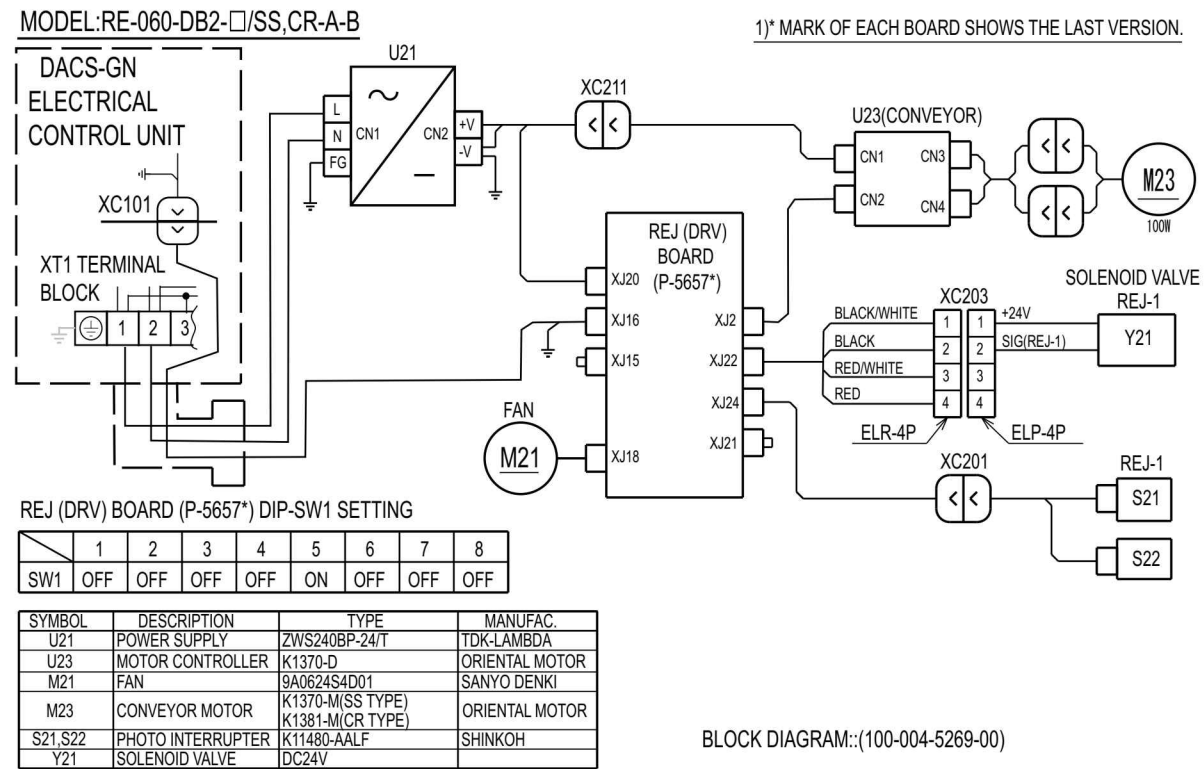

9.2.4 REJ (DRV) Board (P-5657*)

■ External view of REJ Board (P-5657*)

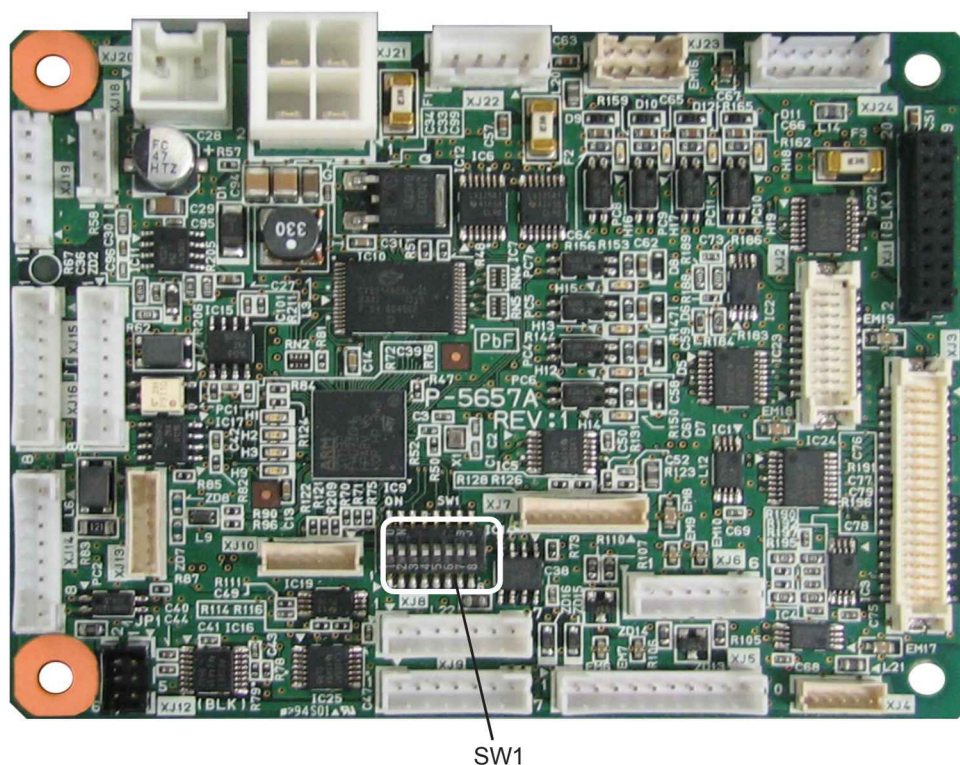

■ Board functions

- 1) Controls the rejection conveyor, the arm drive motor, and others.
- 2) Control of the fan motor

■ DIP-SW1 functions

SW1-	Function		Default setting
1	Board ID setting 1	It is always OFF at RE	OFF
2	Board ID setting 2	It is always OFF at RE	OFF
3	Board ID setting 3	It is always OFF at RE	OFF
4	Board ID setting 4	It is always OFF at RE	OFF
5	Board ID setting 5	It is always ON at RE	ON
6	Not assigned	It is always OFF at GN	OFF
7	Not assigned	It is always OFF at GN	OFF
8	Boot loader activated	OFF: Application start ON: Boot loader start	OFF

NOTE

If the power is shut down during software install, or failed software installation, set the No.8 of SW1 to ON then try installation software.

After installation of software, do not fail to return the SW1-No.8 to OFF.

■ Program update after board replacement (installation) [Additional function]


(Software version: Ver.3_5300J or later)

(MCU: N32110H, DRV:N32111E, ADC:32112, REJ:32114C, IO:32115A or later)

1. Set the switches DIP-SW1-1, and 1 to 7 on the board to replace to OFF, and set DIP-SW1- 8 to ON, and mount the board.


2. Turn ON the power switch.

- The Program Version Information screen for warning appears.

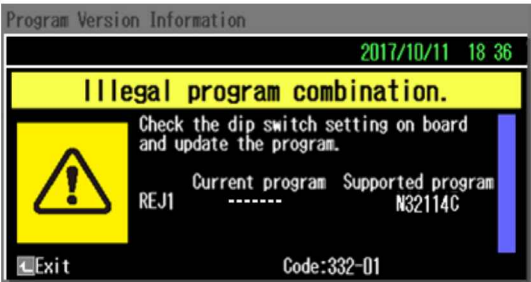

3. Press  key.

- The Program Update screen to confirm the update (installation) appears.

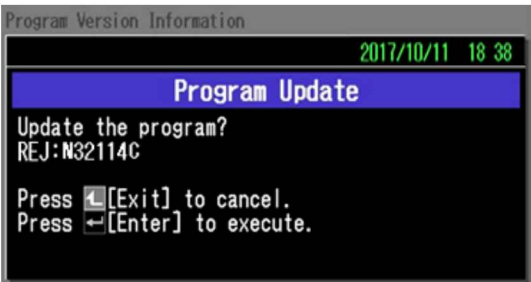


4. Press  key to perform the program update (installation).

- The Access Level Change screen is displayed.
- Input the level 3 password.






Contact to ISHIDA agent for the password required in the level 3. "???" is displayed on the password displayed screen for security reasons.

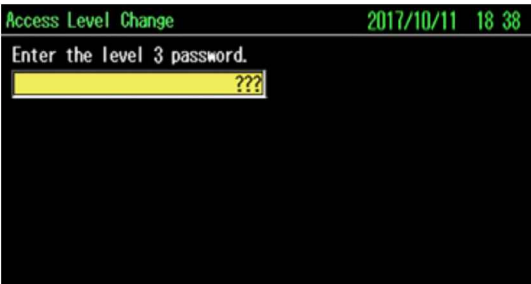


5. Press  key.

- The program update (installation) starts.

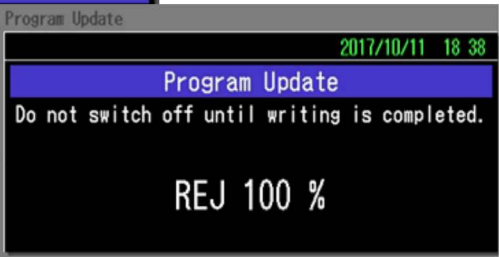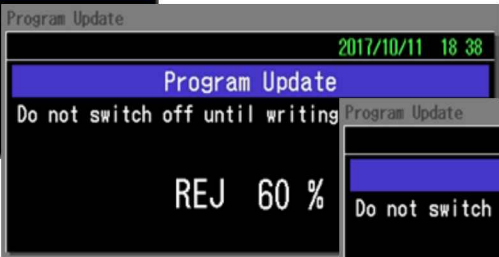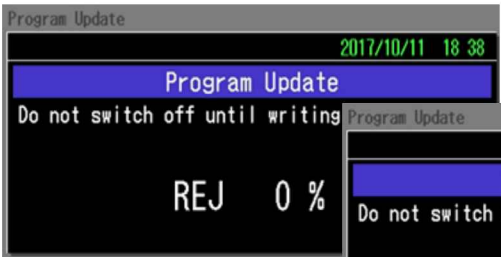

6. A message "Completed. Turn off the power and restart." appears. As indicated, turn off the power switch.

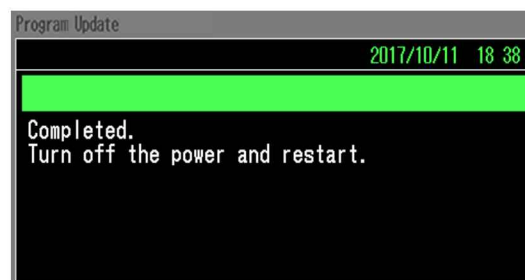


7. Return the switches DIP-SW1 to 8 on the board to the OFF state.

8. Turn ON the power switch again.

- Point the cursor to [Setup Menu] - [Program Version Information], and press key.




9. Check that the corresponding program No. is displayed on the Program Version Information screen.

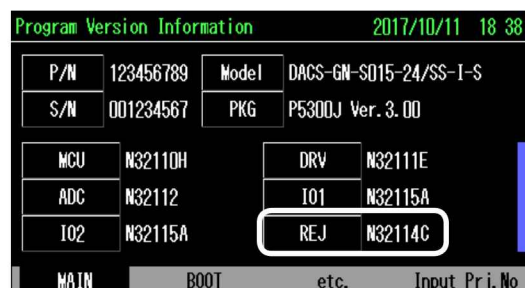

■ Function to detect the boot state of the board program [additional function]

This function detects that the board program has started in the boot state (in which the program update is ready). In the boot state, normal operation is not available. There are two causes for the boot operation of the board program:

- 1) After downloading the program, power is turned ON soon after OFF.
(The residual voltage of the switching power supply disables the power OFF.)
- 2) The switches DIP-SW1 to 8 on the board are remained to be ON.

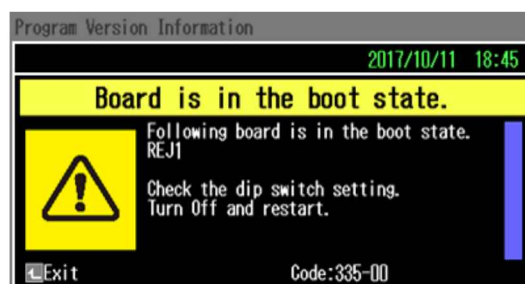


This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.

9.3 Rejection Conveyor (SS Type)


9.3.1 How to Detach and Attach Rejection Conveyor

In general, the rejection conveyor is detached and attached at the time of cleaning after operation or during maintenance such as belt replacement. Though it can be easily detached/ attached by means of the quick detach/attach mechanism, how to detach and attach it is described below for confirmation.


1. Lightly lift up the plate spring of the conveyor bracket with the fingers as shown on the right figure. Then the lever hooks are opened to the right and left. The conveyor base can be now detached. (It can be easily detached by means of the quick detach/attach mechanism.)

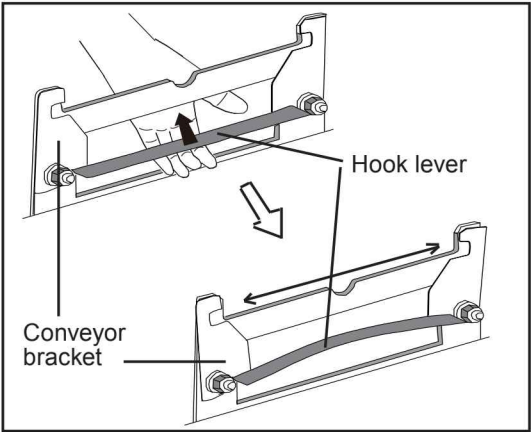

NOTE When detaching the driving pulley (roller side) side, remove the conveyor by pulling out the driving pulley from the timing belt.

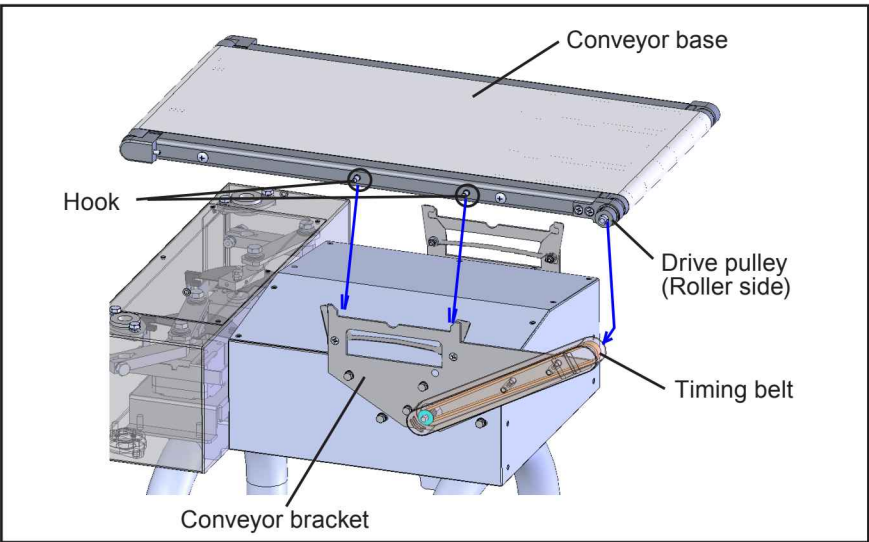

2. Place the conveyor base hook on the securing section of the conveyor bracket, and lightly pull down the plate spring with the fingers as shown on the right figure. Then the lever hooks move in the central direction. The conveyor base can be now secured. (It can be easily attached by means of the quick detach/attach mechanism.)

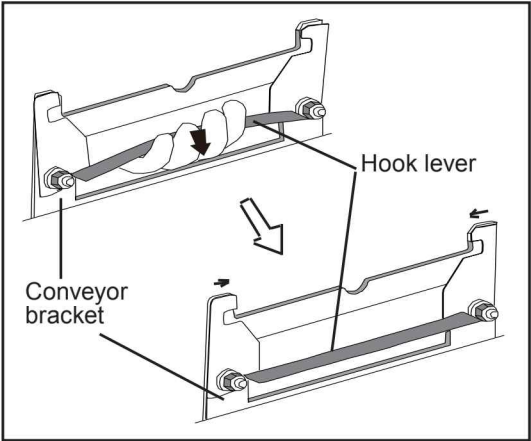


NOTE Secure the conveyor base to the conveyor bracket after hanging the driving pulley (roller side) on the timing belt.

9.3.2 Tension and Meandering Adjustments of Rejection Conveyor Belt

The tension of the flat belt for the rejection conveyor is adjusted with the tension adjustment screws. Perform the following steps to adjust the tension of the flat belt. When adjusting the meandering of the flat belt, start from step 3.

1. Make sure that the rejection conveyor is stopped, and tighten tension adjustment screws A and B so that the tension of the flat belt (transfer belt) becomes uniform at both sides to the extent that the driving roller and flat belt (transfer belt) do not run idle.
2. Then tighten the screws by one more turn.

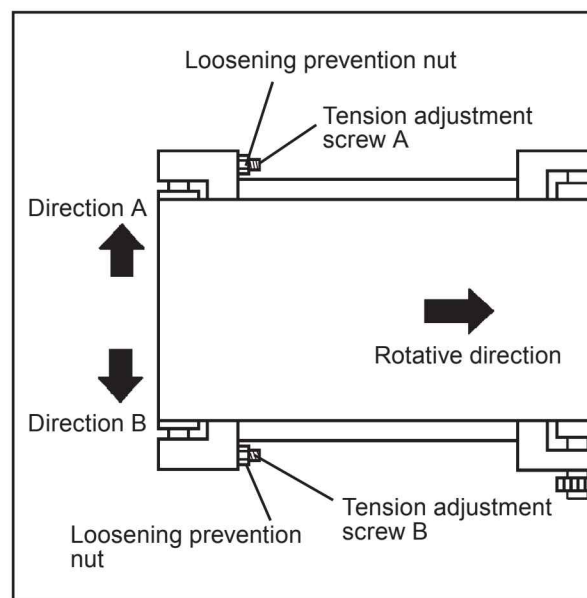

NOTE Make sure that the tension of the flat belt (transfer belt) is uniform at both sides.

3. Set the high belt speed reservation. Touch the operation start key  on the main menu of the operation panel.
 - The rejection conveyor starts to operate.
4. Check the inclination direction of the flat belt (transfer belt).
5. When the flat belt (transfer belt) inclines in the direction A, tighten tension adjustment screw A or loosen tension adjustment screw B. When the flat belt (transfer belt) inclines in the direction B tighten tension adjustment screw B or loosen tension adjustment screw A.
6. When the meandering problem of flat belt (transfer belt) is solved, secure the tension adjustment screws A and B by the loosening prevention nut. Then press  (the operation stop key).
 - The reject conveyor stops.




- Be careful not to tighten the flat belt (transfer belt) too much with tension adjustment screws A and B.
- The tensile condition in step 2 is optimal and the tension reaches the limit if the screws are tightened by a half more turn. (If the screws are tightened too much, the durability of the bearings extremely deteriorates.)

9.4 Rejection Conveyor (CR Type)


9.4.1 How to Detach and Attach Rejection Conveyor

Usually, rejector conveyor is disassembled for cleaning after operation or maintenance such as replacement of belts. Easy disassembly structure enables you to disassemble the conveyor as shown below.


1. Lift up the discharged side of rejection conveyor to release the shaft from the hook as shown in the right figure.
(Removal can be easily done by the easy disassembly structure.)

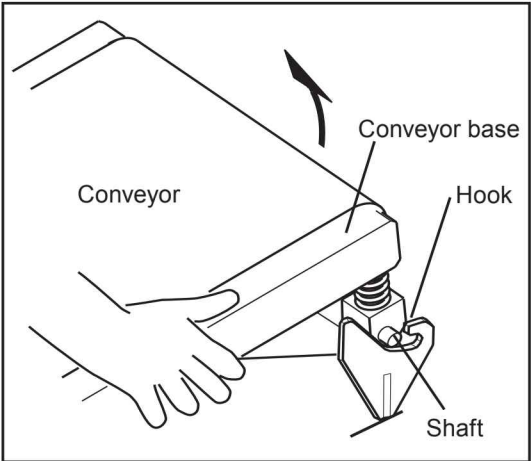

2. As in the right figure,
 - (1) Lift the discharged side of rejection conveyor to the direction of arrow mark.
 - (2) Lift up the conveyor (drive roller) by pulling it to the direction of arrow mark, and remove the conveyor.

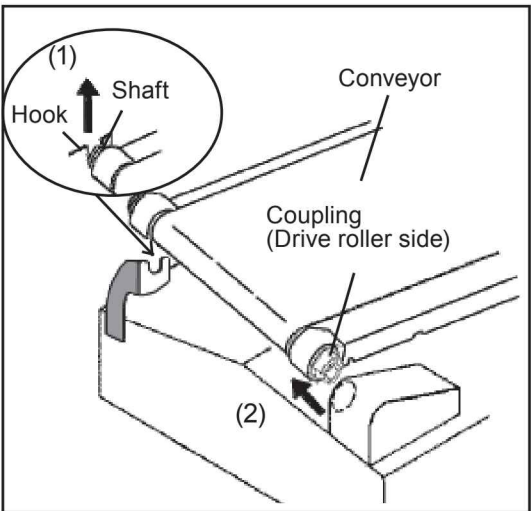

3. Remove the rejection conveyor, clean and check it, then assemble it again.
4. Align the coupling notch of the drive roller side of the rejection conveyor with the coupling pin of the drive bearing side.

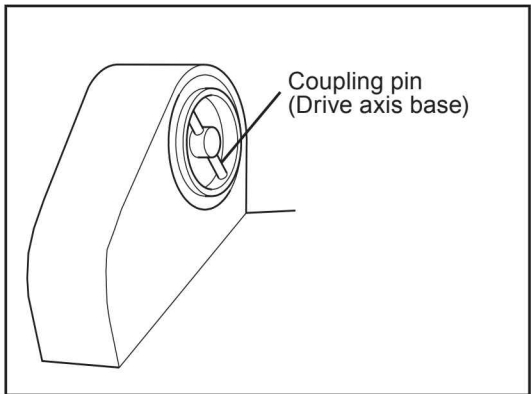


NOTE Be careful not to damage the coupling of the drive roller because it may be a little hard to disassemble it.

NOTE In assembling the drive roller coupling, ensure correct setting; the coupling pin may be hard to fit the notch of weigh conveyor.

5. Insert the conveyor (drive roller) at the intake side of the rejection conveyor to the direction (1), then to the direction (2).




When pushing the shaft at the conveyor end in the hook, hold the conveyor base with a finger push it in carefully taking care not to be pinched.

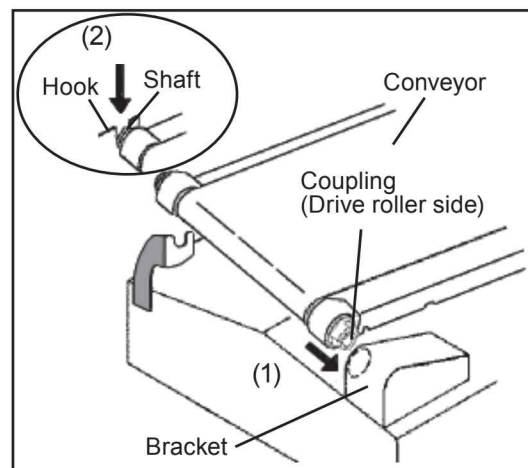

6. Hold the discharged side of the rejection conveyor by gripping the conveyor base as shown in the right figure, and press the conveyor.
(Easy disassembly structure helps you to attach it easily.)

NOTE

Be sure to hold the conveyor base by your fingers and then push the conveyor base so as not to get your finger caught.

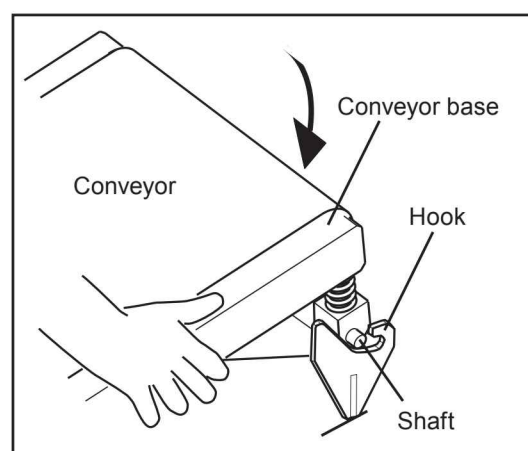


9.4.2 Replacing Rejection Conveyor Belt

Usually, rejection conveyor is disassembled for cleaning after operation or maintenance such as replacement of belts. Easy disassembly structure enables you to disassemble the conveyor as shown below.

1. Remove the rejection conveyor according to "9.4.1 How to detach and attach rejection conveyor". (It can be disassembled by the easy disassembly structure.)

NOTE


It may be a little hard to disassemble the coupling of drive roller; take care.

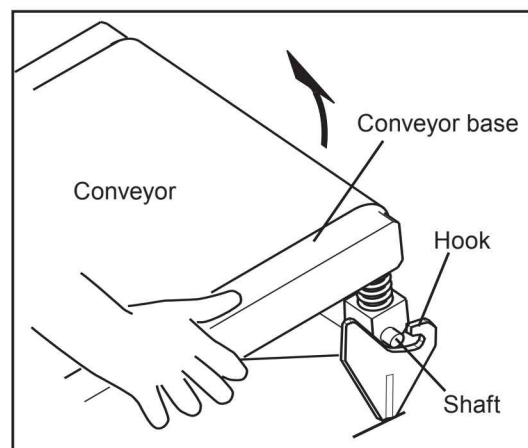

2. From the disassembled rejection conveyor, remove the flat belt to the direction shown in the right figure.




In the CR specification which is equipped with the meandering-proof mechanism, normally conveyor belts require no meandering adjustment. When the conveyor unit of the CR specification is newly assembled at site, adjust the right/left conveyor length at the driven roller side to avoid meandering.

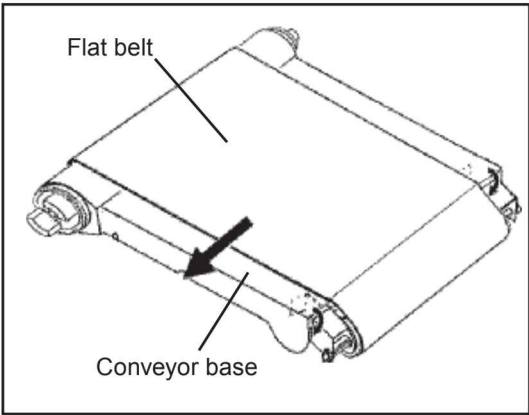


3. Install new flat belt to the rejection conveyor base to the direction as shown in the right figure.



Install new flat belt to the rejection conveyor base to the direction as shown in the right figure.

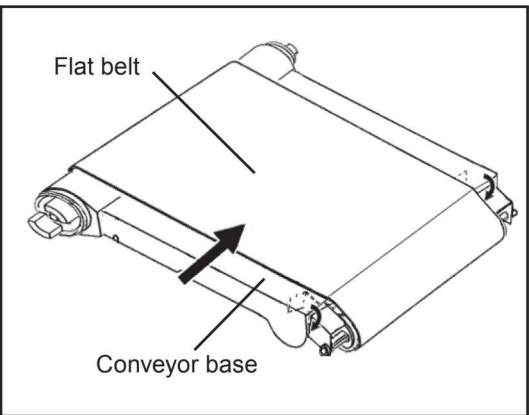

4. Attach the rejection conveyor according to "9.3.1 How to detach and attach rejection conveyor". (It can be disassembled by the easy disassembly structure.)

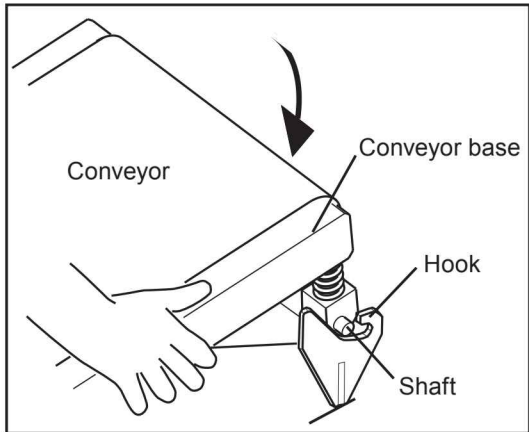


NOTE

Be sure to hold the conveyor base by your fingers and then push the conveyor base so as not to get your finger caught.

9.5 Rejection Conveyor Drive Unit

9.5.1 Rejection Conveyor Drive Unit (Air jet type)

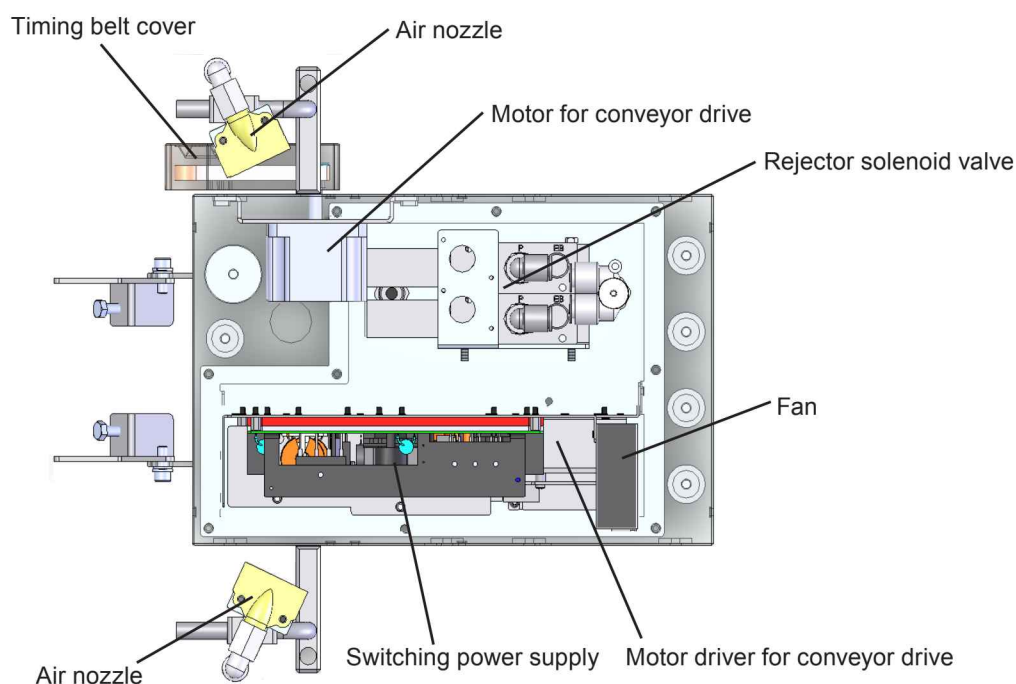


TIP

- The standard air jet type (DACS integrated model) has no REJ (DRV) board inside the reject unit. The operation is controlled by the signal of the DRV board for the DACS-GN electrical unit.
- When the reject unit is separated from the main unit, the REJ (DRV) board is inside the reject unit.

9.5.2 Rejection Conveyor Drive Unit (Arm type)


Normally, it functions silently and smoothly. If parts such as a bearing are broken, it will cause metallic sound or not function smoothly. If such a situation occurs, examine the conveyor drive unit.

■ Rejection drive unit (SS type)

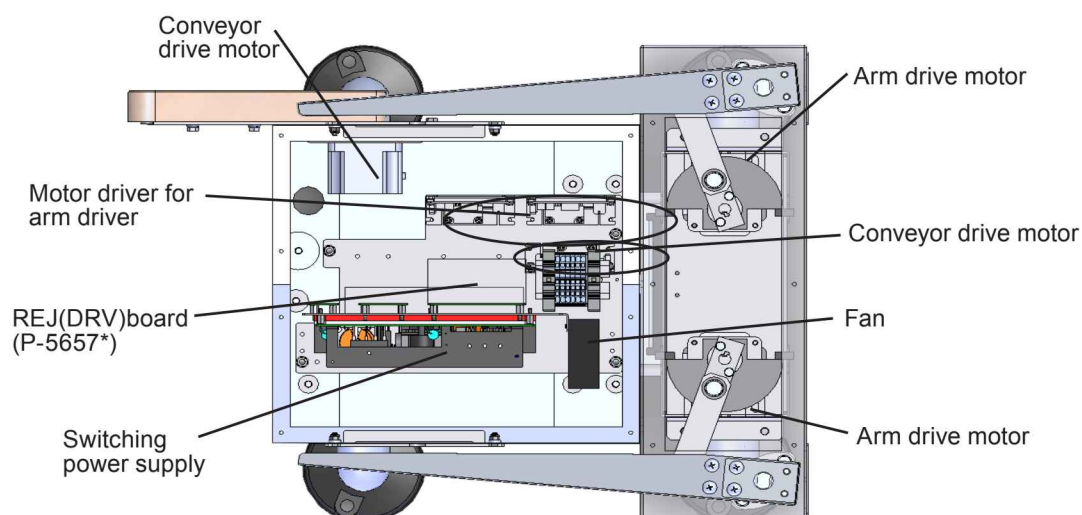

This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.



■ Rejection drive unit (CR type)

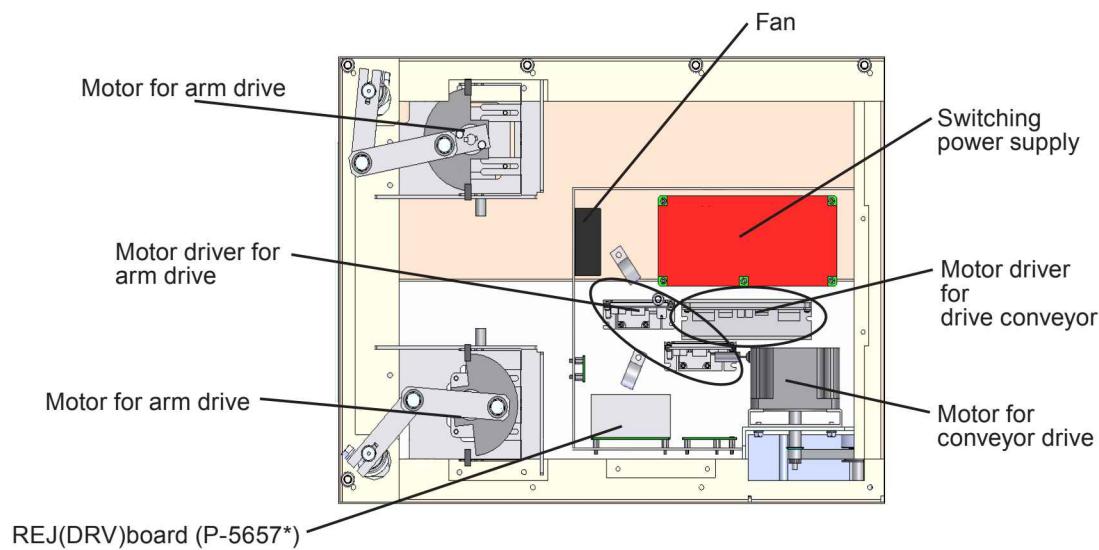

9.5.3 Rejection Conveyor Drive Unit (Drop belt type)

■ Conveyor drive unit (A side of the rejector)

Normally, it functions silently and smoothly. If parts such as a bearing are broken, it will cause metallic sound or not function smoothly. If such a situation occurs, examine the conveyor drive unit.

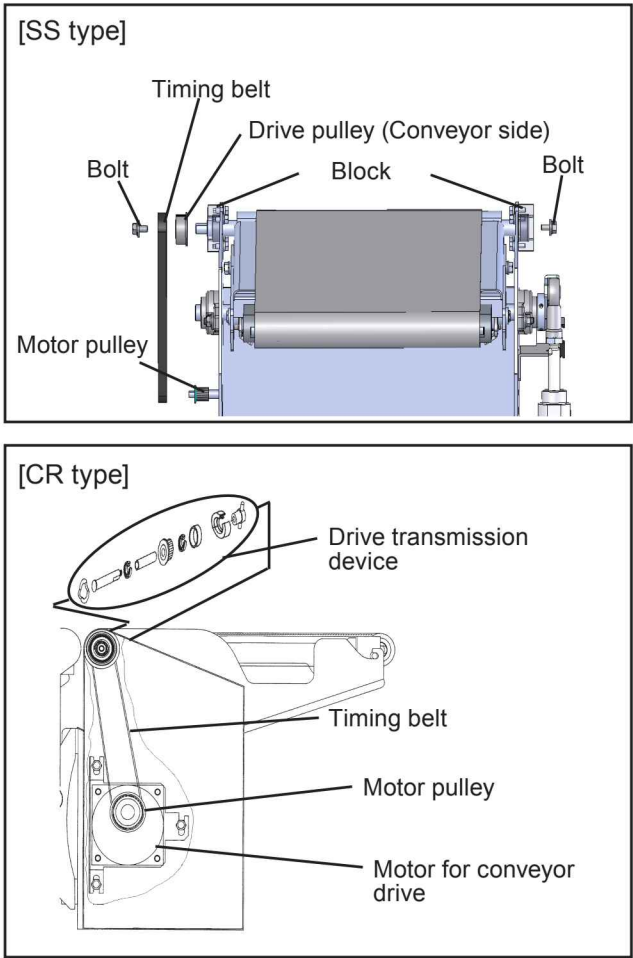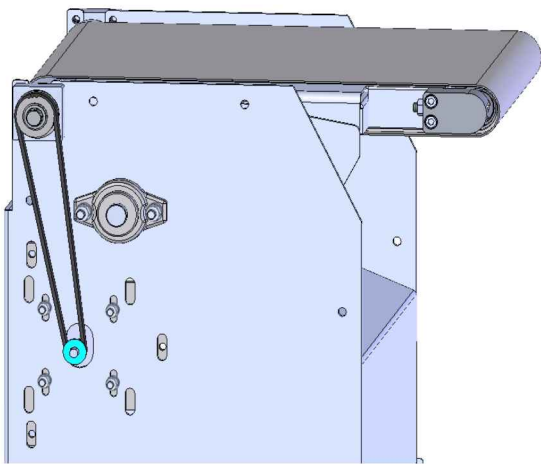

9.5.4 Rejector Manual Test

The operation check for the reject mechanism of the reject unit is manually available by the following steps:

1. Point the cursor to [Rejector Test: Manual] on the [Auxiliary Unit Diagnosis] screen, and press .

[Rejector Manual Test] screen will appear.






2. Press  to operate the right rejecting arm, and press  to operate the left rejecting arm. Press  key to set them center.

- The rejecting arm of the selected direction operates for one cycle.



For the reject unit of the drop belt type, use only the key for "Right direction."

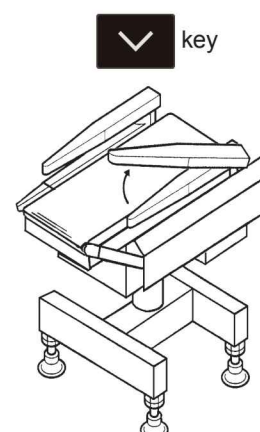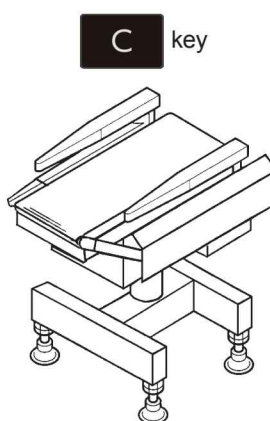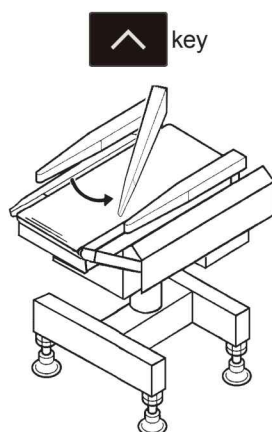

In the Standard type, the unit is interlocked with the arm reject unit. For the Air jet type and Drop belt type, the operation is slightly different from that of the Standard type.

This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.

9.6 Error Displays and Countermeasures (Rejector / Standard Type)

When error is triggered, the error message appears on the Error display. Here describes the cause and countermeasure of the rejector for the possible errors in a table format.




The Instruction Manual also refers to countermeasures against errors, in “9.1 Error Messages and Countermeasures”. Refer also to the Instruction Manual.


REFERENCE

9.6.1 Rejecting Error (Non-complete)

- Dir. 2 RE Operation error occurred

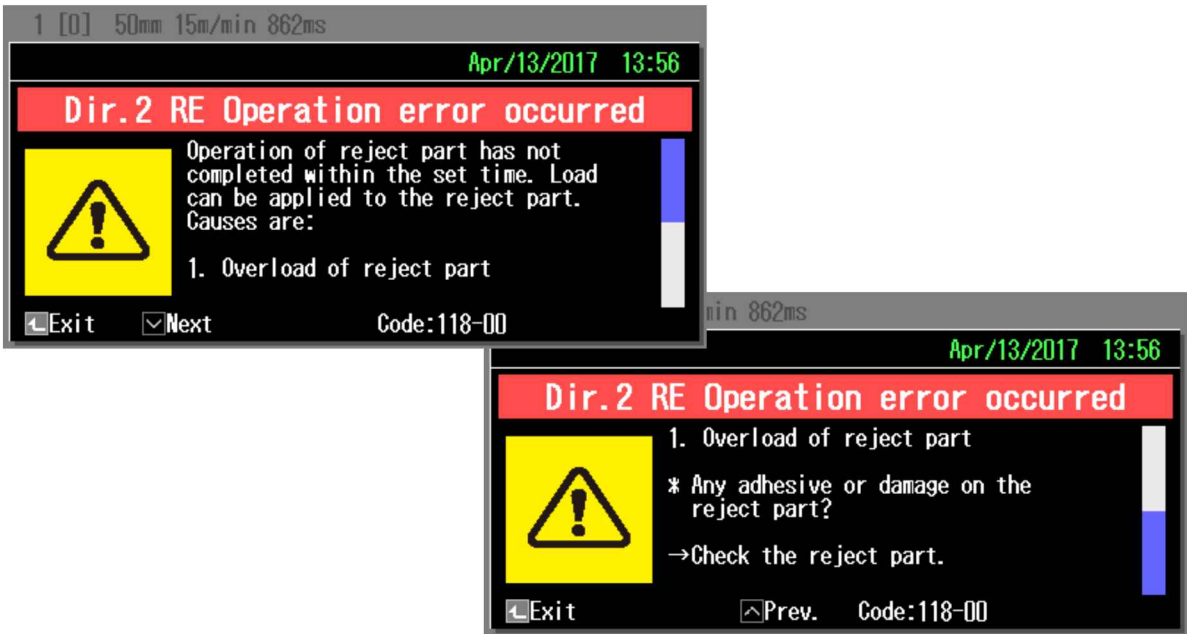




- Dir. 1 RE Operation error occurred

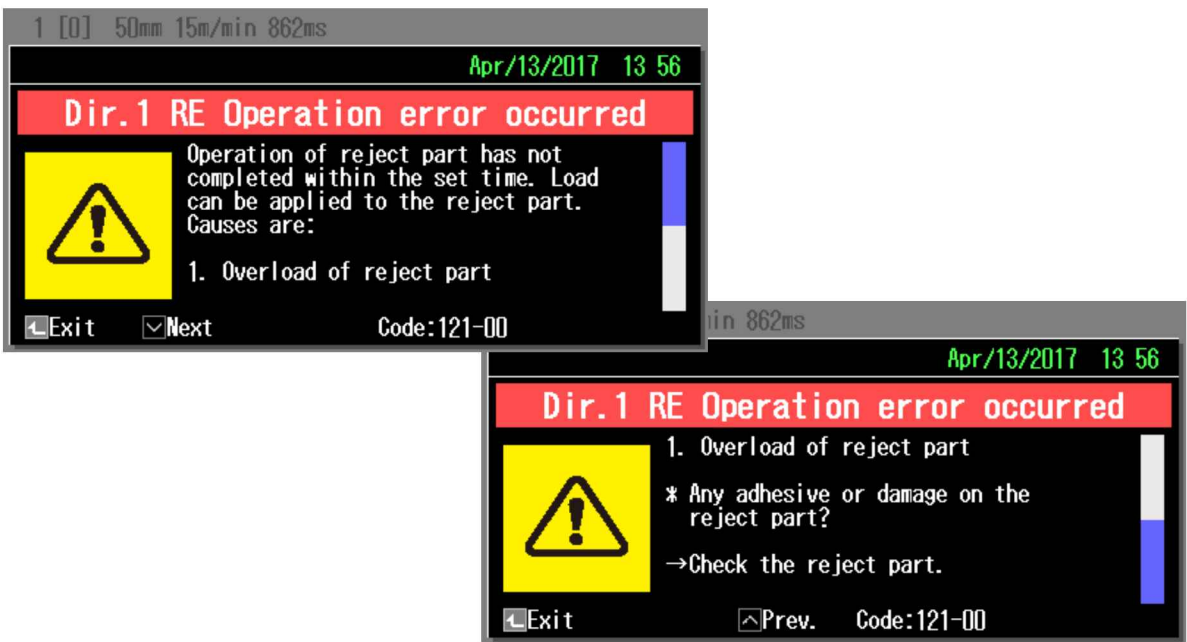

9.6.2 Air Low Stop

This message appears when air pressure is decreased by the pneumatic rejector.

■ Detected decrease in air pressure

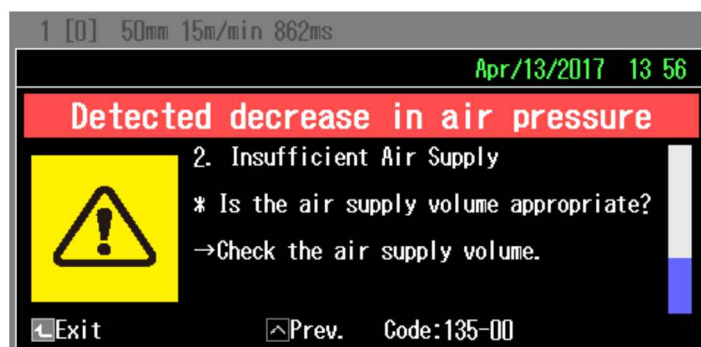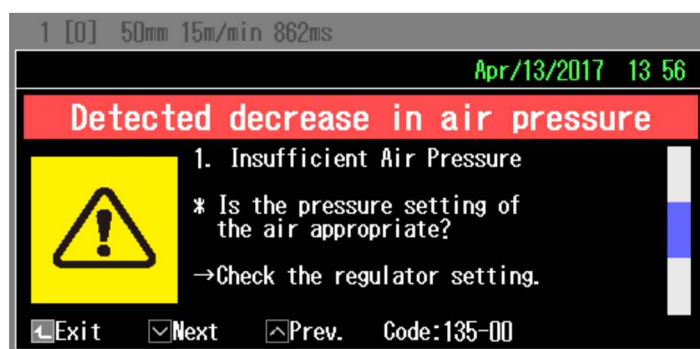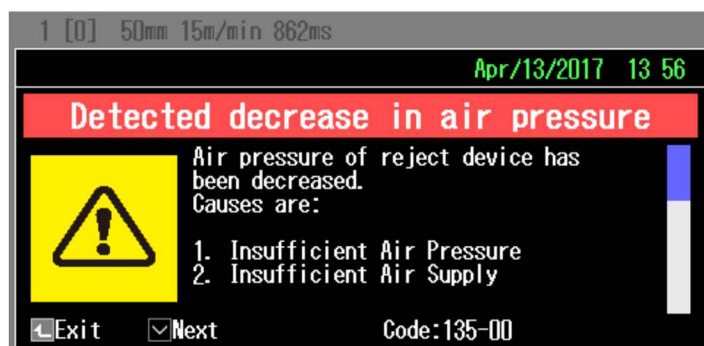

■ Countermeasure

Check the air piping and set the air supply volume and the air pressure value to normal.





When an optional air pressure drop detector is provided, set to "On" and install a pressure sensor to the air regulator. Otherwise, an error message may not appear correctly.

This document was provided by ISHIDA CO., LTD. to HEAT AND CONTROL INC. (2060849-01) on April 17, 2018. No reproduction or copy in whole or in part without permission.

9.6.3 Rejection Conveyor Error




1. Reject conveyor error

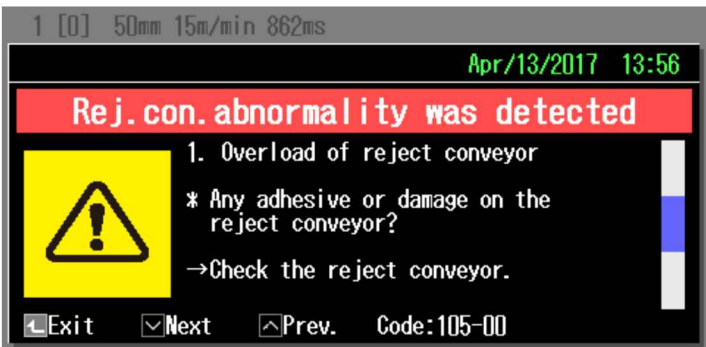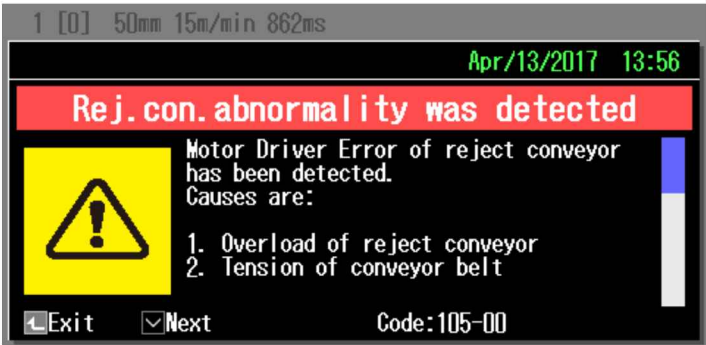

■ Error cause and countermeasure

Error contents	Cause	Countermeasure
Rej. con.abnormality was detected	This error is displayed when the rotation of the rejection conveyor is not usual.	• Check whether it touches the fore-and-aft conveyors. • Replace motor or driver.
	The rejection conveyor is overloaded and it cannot stop or rotate properly. (Motor drive trip)	• Turn off the power once, and then inspect the conveyor. • Inspect the conveyor tension and roller rotation.

2. In the case of abnormal motor rpm

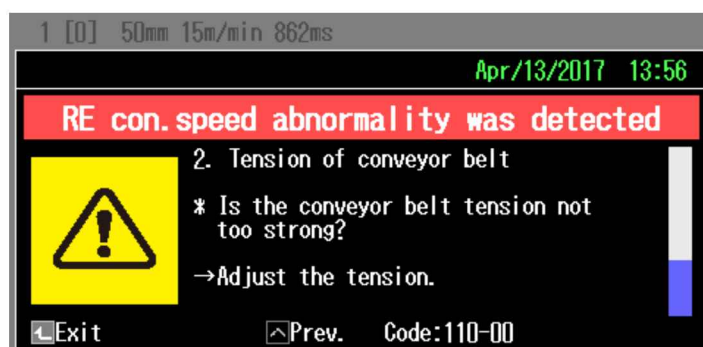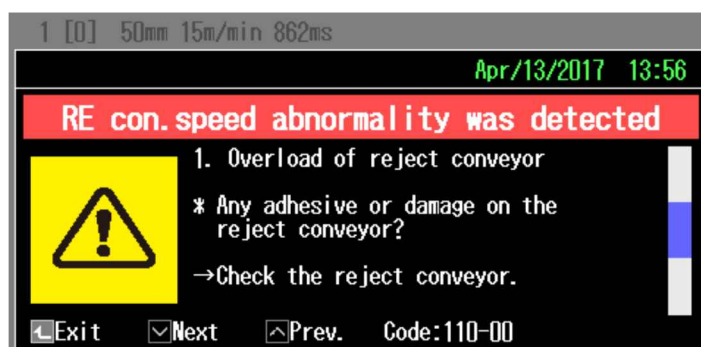
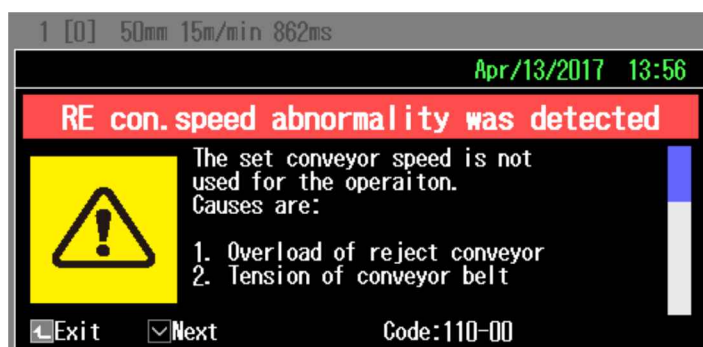


■ Error cause and countermeasure



Error contents	Cause	Countermeasure
Rej. con.abnormality was detected	This error is displayed when the rotation of the rejection conveyor is not usual.	• Check whether it touches the fore-and-aft conveyors. • Replace motor or driver.
	The rejection conveyor is overloaded and it cannot stop or rotate properly. (Motor drive trip)	• Turn off the power once, and then inspect the conveyor. • Inspect the conveyor tension and roller rotation.

9.6.4 Other Errors (Rejector)



■ Dir. 2 RE abnormality was detected

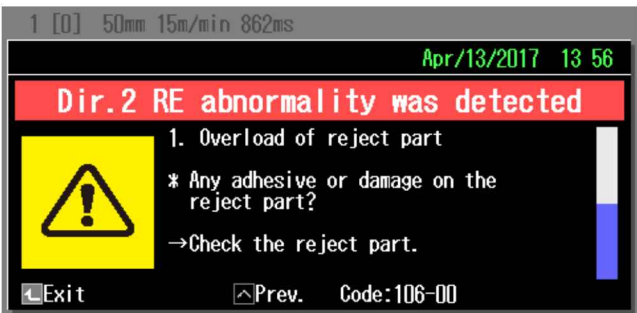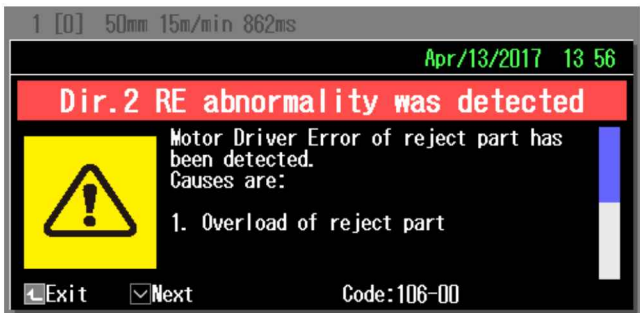



■ Dir. 1 RE abnormality was detected

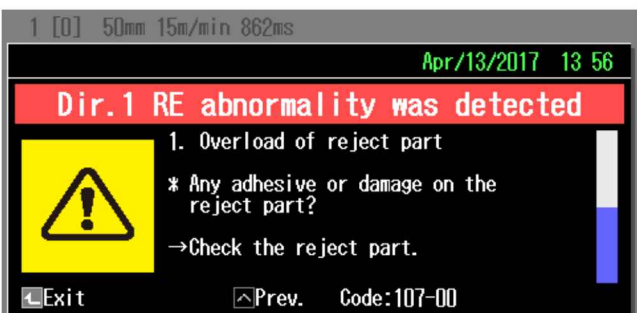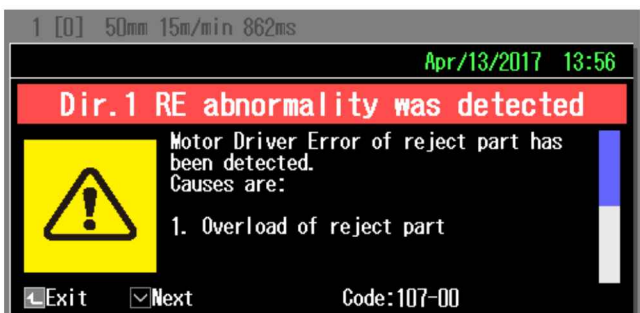


■ Dir. 2 RE Load detected

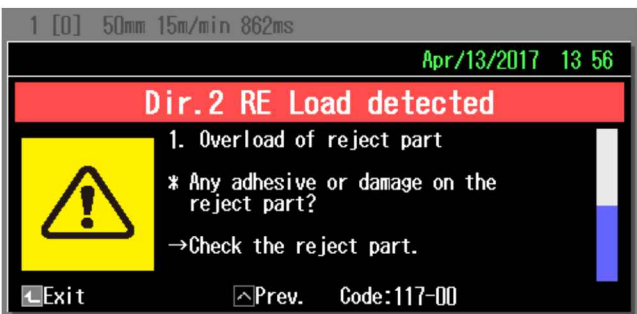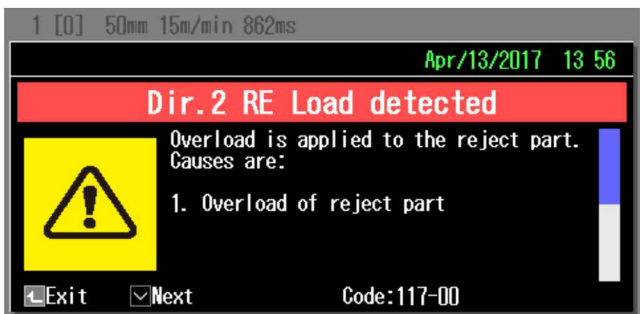


■ Dir. 1 RE Load detected

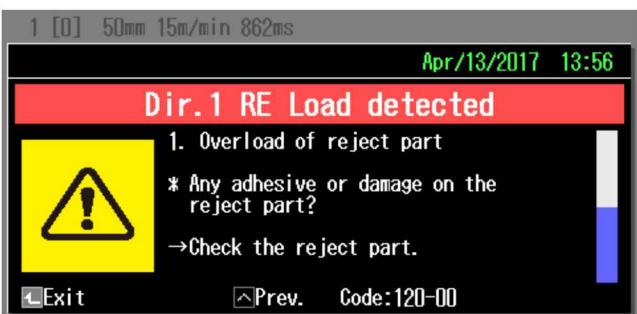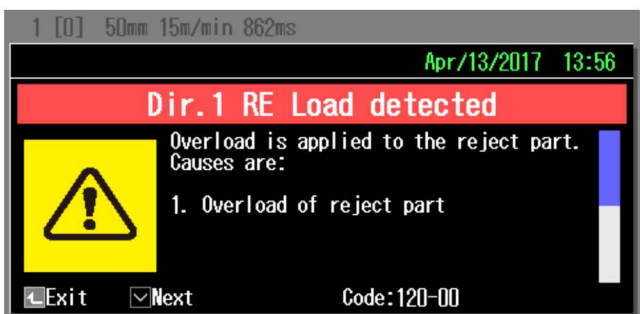

■ Reject operation not in time

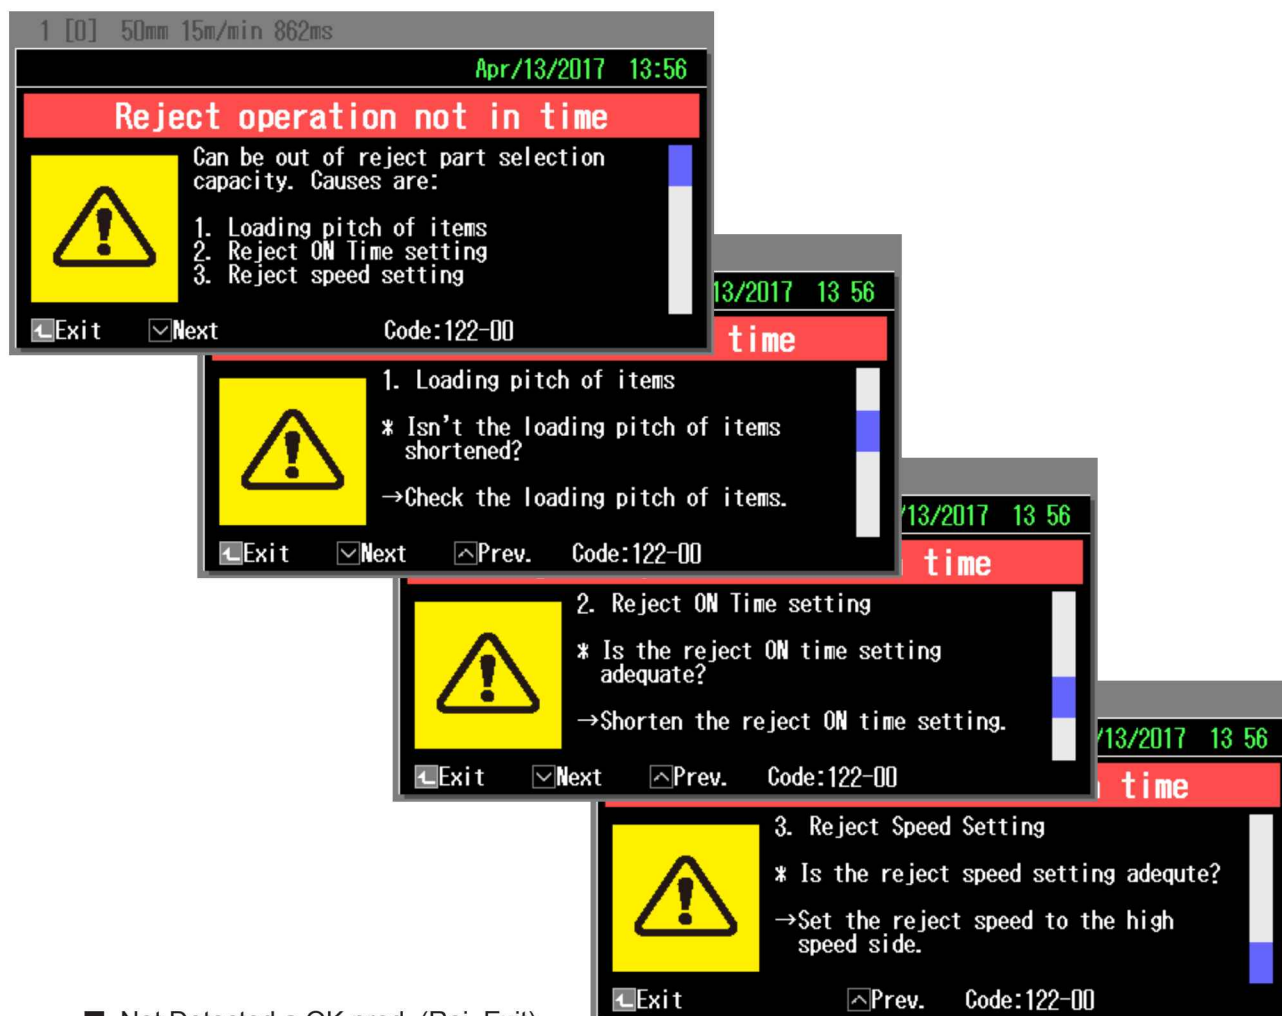

■ Not Detected a OK prod. (Rej. Exit)

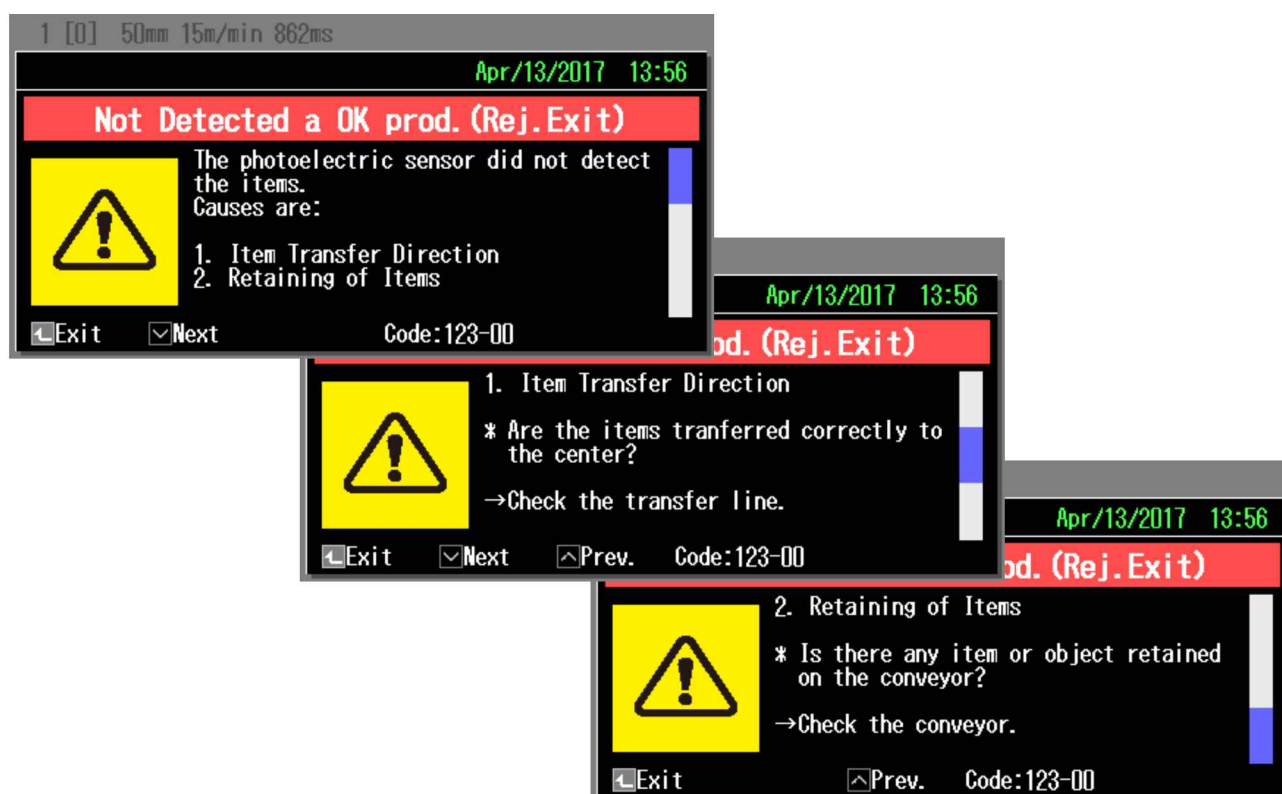

■ Detected a product (Rej. Exit)

1 [0] 50mm 15m/min 862ms
Apr/13/2017 13 56
Detected a product (Rej. Exit)

The photoelectric detected the items in an inadequate timing.
Causes are:
1. Item Transfer Direction
2. Retaining of Items
Exit Next Code:124-00

Apr/13/2017 13 56
t (Rej. Exit)
1. Item Transfer Direction

* Are the items tranferred correctly to the center?
→Check the transfer line.
Exit Next Prev. Code:124-00

Apr/13/2017 13 56
t (Rej. Exit)
2. Retaining of Items

* Is there any item or object retained on the conveyor?
→Check the conveyor.
Exit Prev. Code:124-00

■ Detected a product untested (Rej. Exit)

1 [0] 50mm 15m/min 862ms
Apr/13/2017 13:56
Detected a product untested(Rej.Exit).

The photoelectric sensor detected the items untested. Causes are:
1. Retaining of Items
2. Shift in Photoaxis
3. Logical Setting of Photo Sensor
Exit Next Code:125-00

13/2017 13:56
ej.Exit).
1. Retaining of Items

* Is there any item or object retained on the conveyor?
→Check the conveyor.
Exit Next Prev. Code:125-00


13/2017 13:56
ej.Exit).
2. Shift in Photoaxis

* Is the photoaxis of photo sensor free from shift?
→Adjust the photoaxis ot photoelectric sensor.
Exit Next Prev. Code:125-00


13/2017 13:56
ej.Exit).
3. Logical Setting of Photo Sensor

* Is the logic of photoelectric sensor correctly set?
→Set to Light ON.
Exit Prev. Code:125-00


■ Not Detected a NG prod. (Dir. 1)

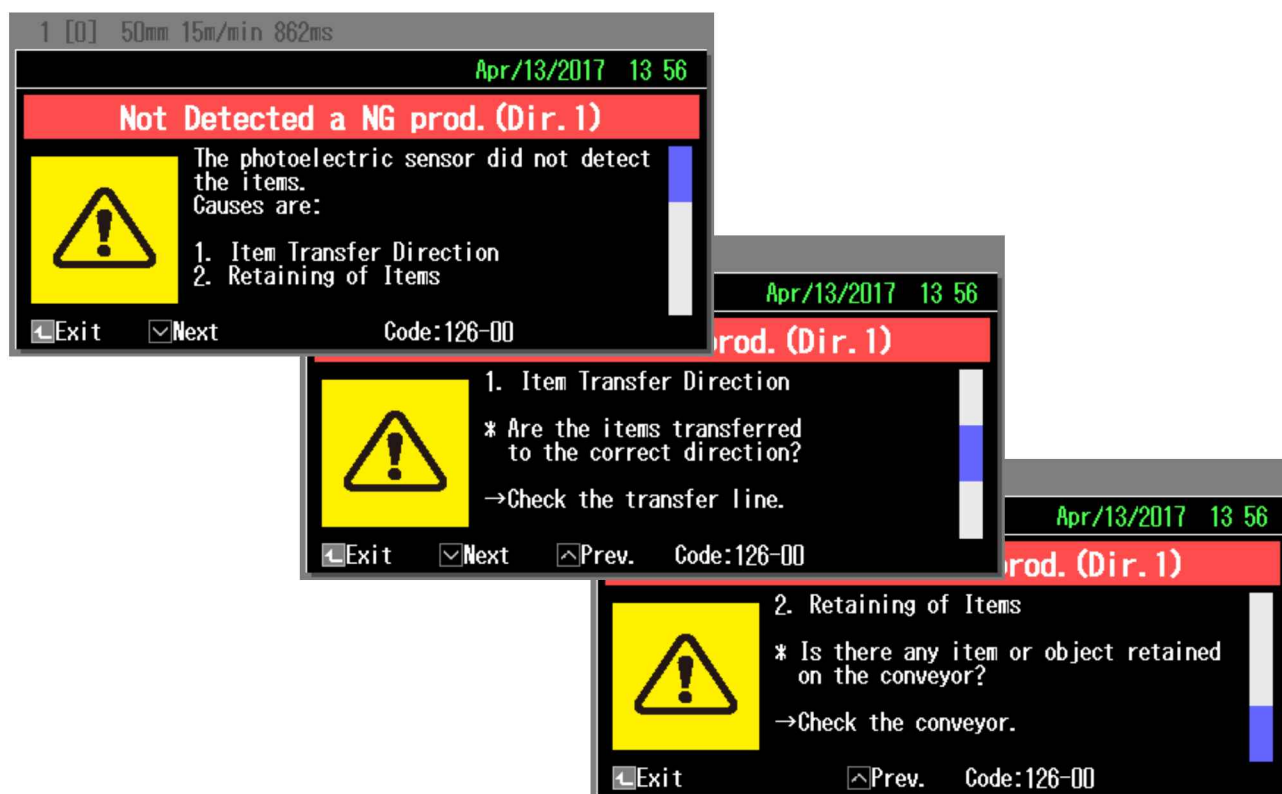


■ Not Detected a NG prod. (Dir. 2)

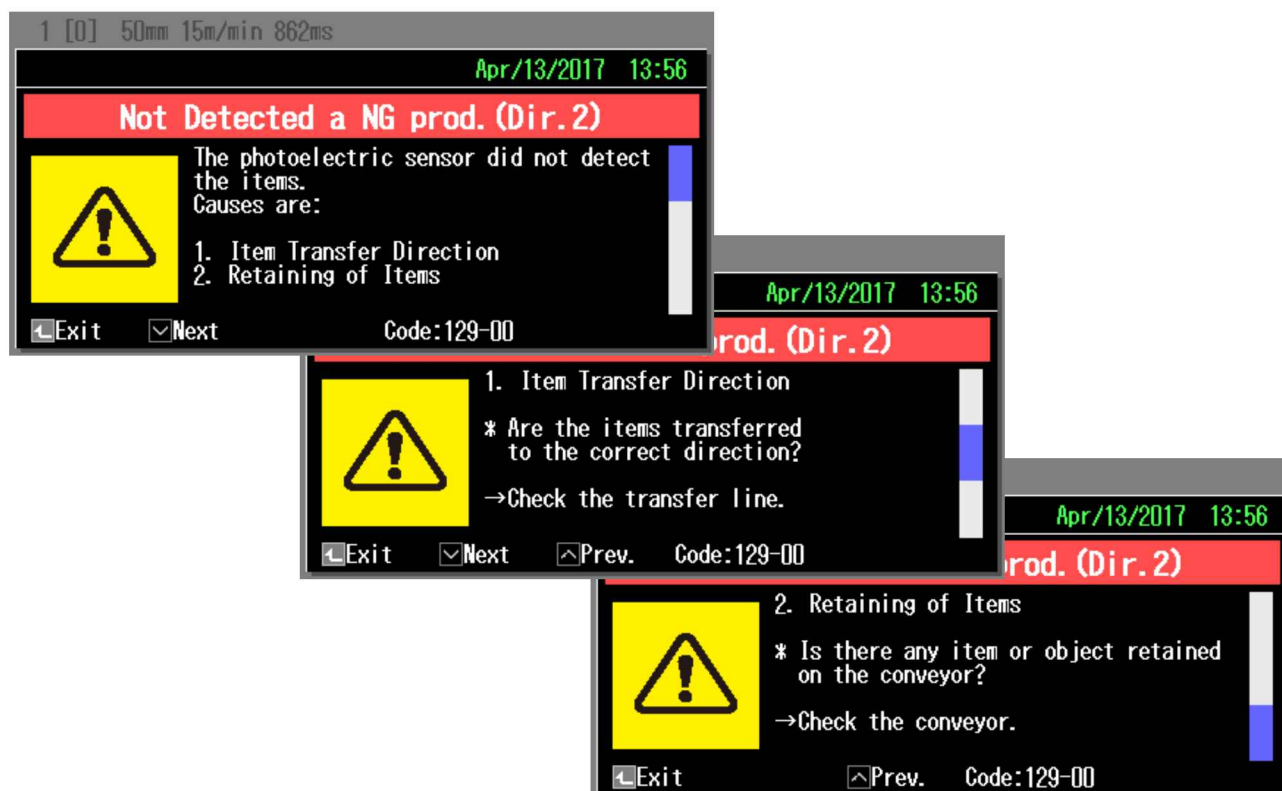

■ Rej (Dir. 2) Err (Over-Run)

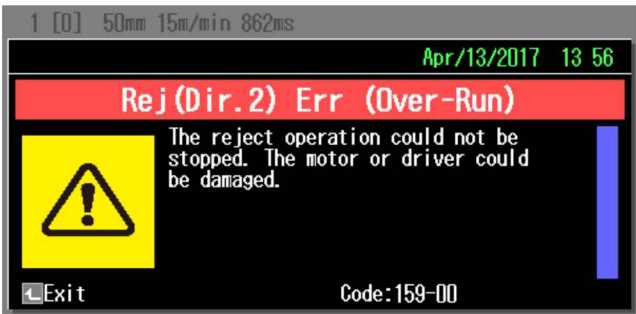

■ Rej (Dir. 1) Err (Over-Run)

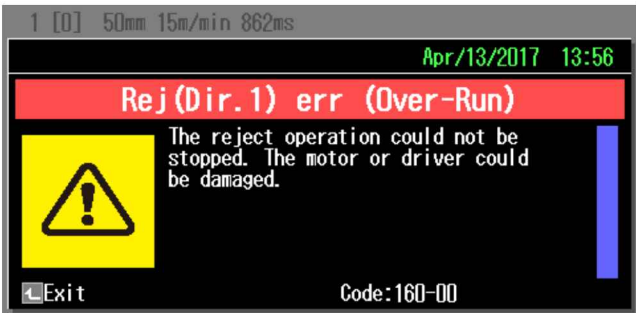

■ Full has been detected (Dir. 1)




■ Full has been detected (Dir. 1)






■ Full has been detected (Dir. 2)






■ Full has been detected (Dir. 2)

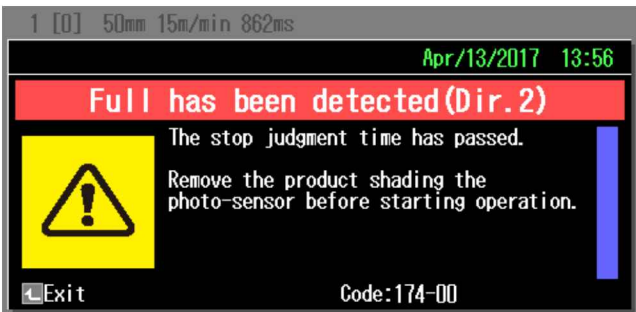



■ Photosensor (Dir. 1) being interrupted

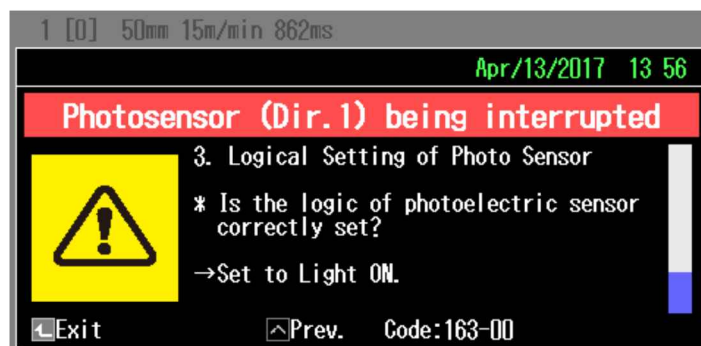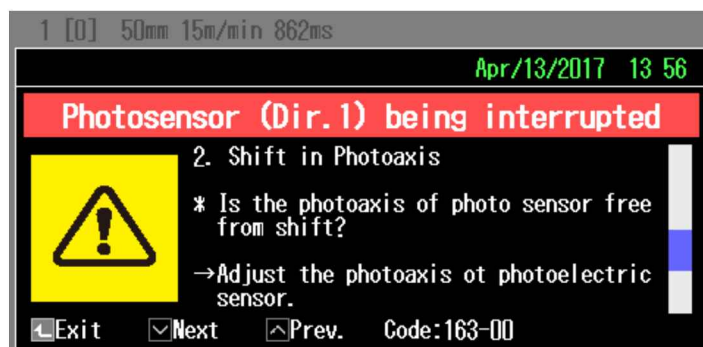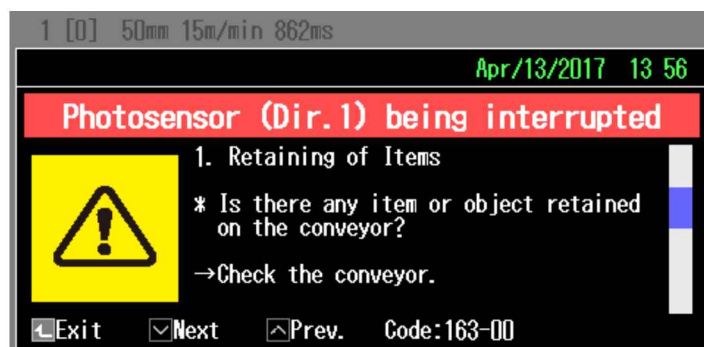



■ Photosensor (Dir. 2) being interrupted

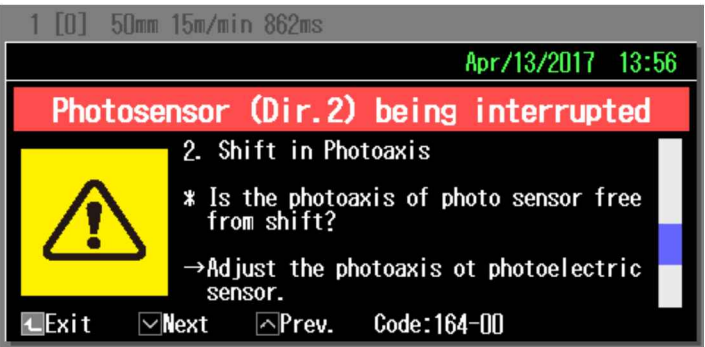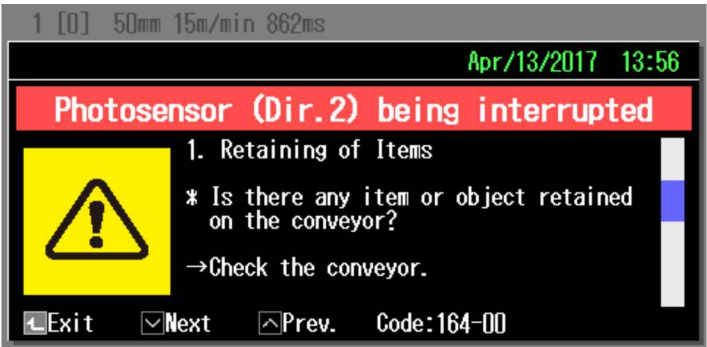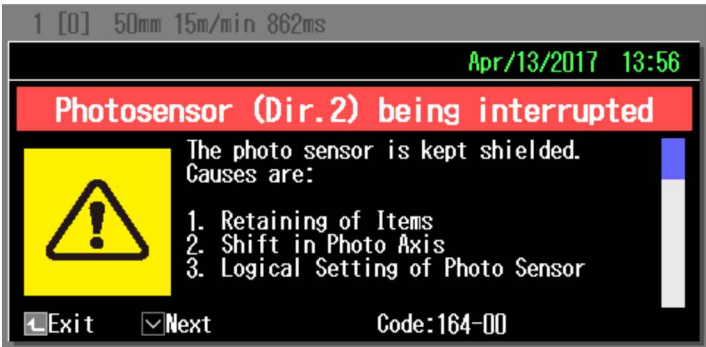

■ Photosensor (Rej. Ent.) being interrupted

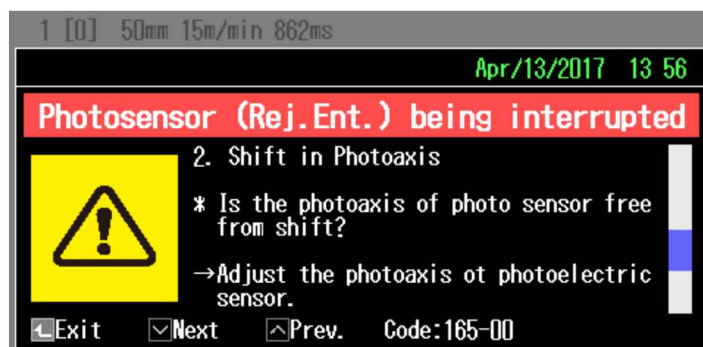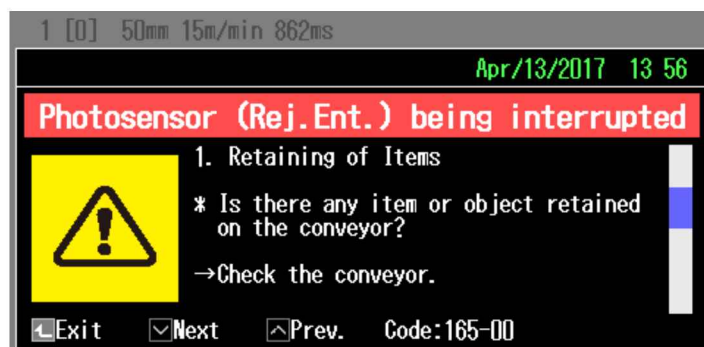

■ Photosensor (Rej. Exit) being interrupted

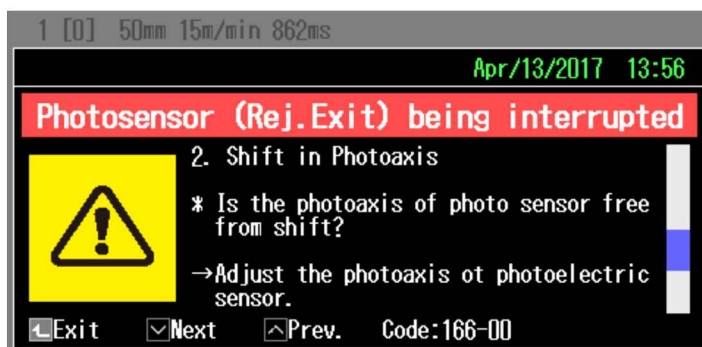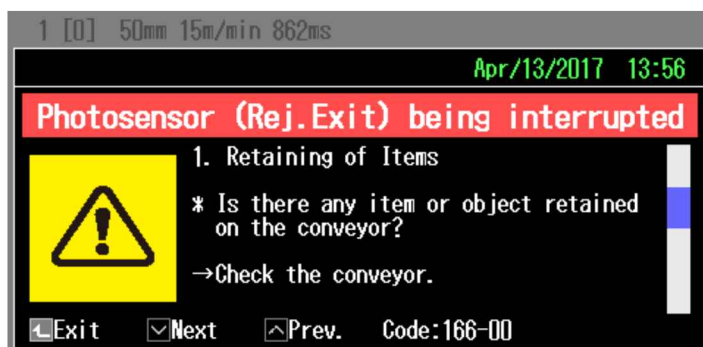

Amendment Log

Ver.	DATE	PART No.	DATAILES
1st	September / 2016	000176256506	
2nd	October / 2017	000176263306	Ver.3 software



44 SANNO-CHO, SHOGOIN, SAKYO-KU,
KYOTO, 606-8392 JAPAN
PHONE: (075)771-4141
FACSIMILE: (075)751-1634
URL: <http://www.ishida.com>
