

7 USEFUL FUNCTIONS

7.1 Summary

This chapter describes the useful functions available for this device.
Use the functions as required.

<Contents>

- Advanced operations

<Purpose>

- To understand and master the functions of the advanced operations.

<Intended reader>

- Operators
- System administrators

7.2 New Product Registration by Using Registered Product Data

This section describes how to register new products by using registered product data.

7.2.1 Copying and Editing Registered Product Data

<Purpose>

The product data already registered can be copied and registered as new product data. To copy and edit product data, follow the procedures below.

1. After creating copy data following the procedure described in "6.10.8 Preset Paste" or "6.14.3.2.1 Selecting and Copying Preset", press the [Exit] key.

► The Main Menu appears.



Fig. 7-1

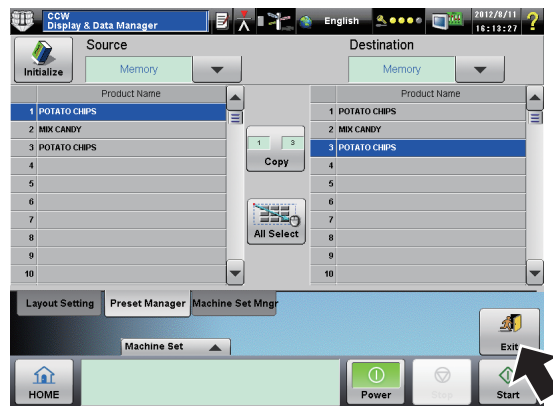


Fig. 7-2

- Press the [Select Preset] key.

► The Select Preset screen appears.



Fig. 7-3

- Select the preset number copied in step 1 (No. 3).

► The Main Menu appears with the selected preset number displayed.



Fig. 7-4

- Press the [Preset] key.

► The Preset screen appears.



Fig. 7-5

5. Change the desired preset item setting
(e.g. Target weight:90→100).

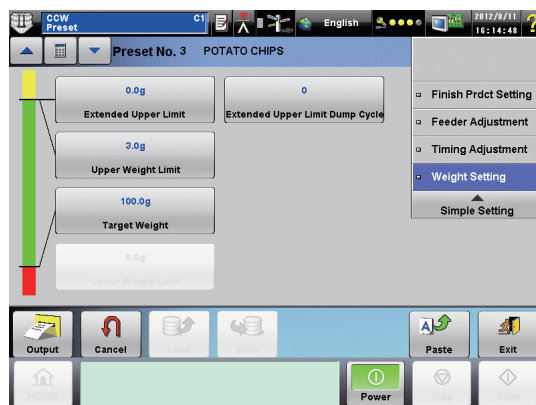


Fig. 7-6

7.3 Reducing Product Change Time

This section describes how to discharge remaining products more quickly in order to reduce time for product change after weighing is completed.

7.3.1 Using Feeder Adjustment of Drain Function

Remaining products can be discharged using the drain function. For the drain function setting, follow the procedures below.

1. On the Main Menu, press the [Drain] key.

- ▶ The Drain screen appears.
- ▶ The drain starts.



Fig. 7-7

2. Press the [Feeder Adjust] tab.

- ▶ The Feeder Adjust tab screen appears.



Fig. 7-8


3. Press the [RF Time] lamp key and the [RF AMP] lamp key to select the operation time and operation amplitude, and press the [Increase] key to set a larger value for each setting.

TIP

- Setting a larger value can discharge products faster.

NOTE

- Set the maximum value so that no product jam will occur in the collection chute or packer.
- Feeder values changed during drain are not reflected in the preset.

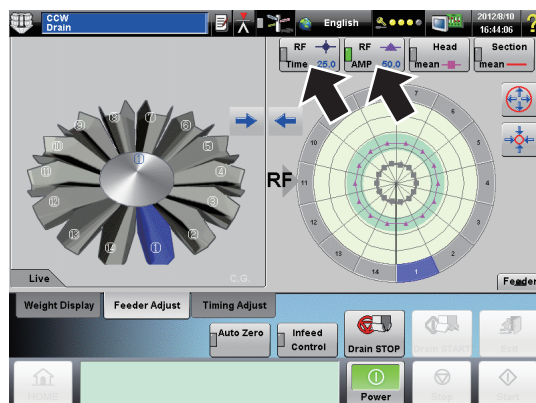**Fig. 7-9**

7.3.2 Using Full Open Lock Function

Products of a size that cause no jam in a hopper or collection chute can be discharged using the full open lock function.

For the full open lock function setting, follow the procedures below.

1. On the Main Menu, press the [Full Open] key.

► The Full Open Lock screen appears.



Fig. 7-10

2. Select all feeders and hoppers.

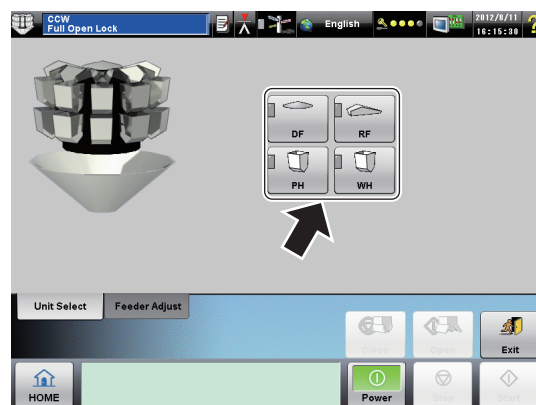


Fig. 7-11

3. Press the [Open] key.

► All hoppers open.

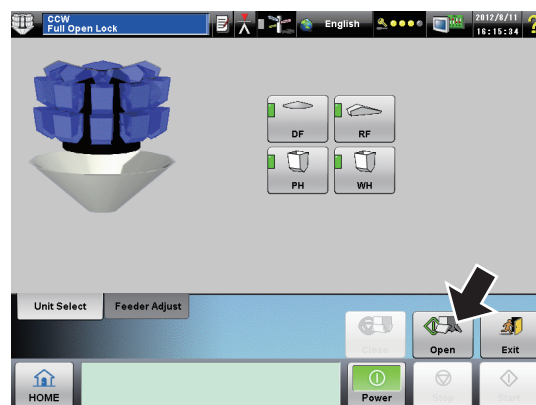


Fig. 7-12

4. Press the [Feeder Adjust] tab.

► The Feeder Adjust tab screen appears.

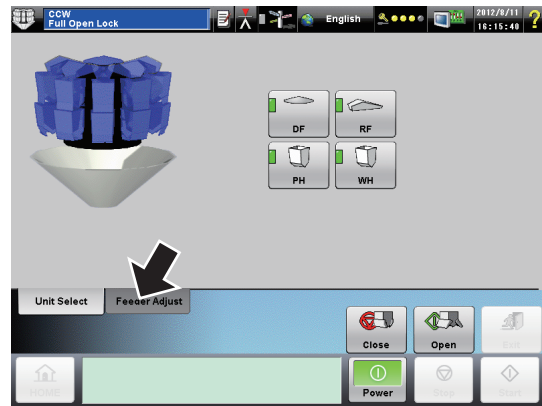


Fig. 7-13

5. Press the [RF Time] lamp key and the [RF AMP] lamp key to select the operation time and operation amplitude, and press the [Increase] key to set a larger value for each setting.

TIP

- Setting a larger value can discharge products faster.

NOTE

- Feeder values changed during full open lock are not reflected in the preset.

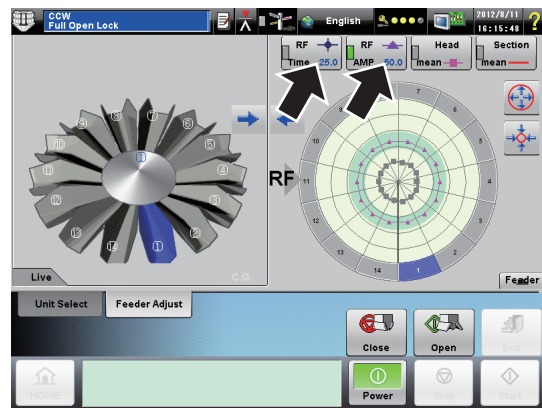


Fig. 7-14