


BB-2/3T

Bottom Belt Case Taping System

User Guide

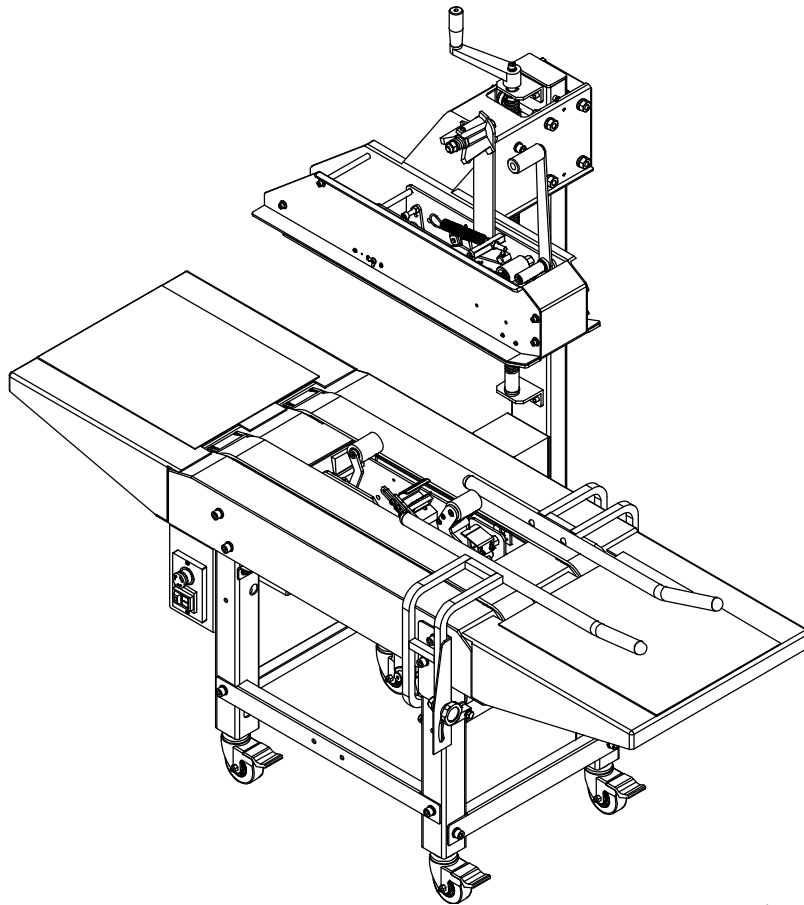

EASTEY®

BB-2/3T

Bottom Belt Case Taping System

User Guide

Revised 06/25/2019

P/N 5000787 Rev. D

Copyright and Trademarks

Copyright ©2015-2019 Engage Technologies Corporation
All rights reserved. All trademarks and brand names
are the property of their respective owners.

Eastey
7041 Boone Ave. N.
Brooklyn Park, MN 55428

Phone: (763) 428-4846; Fax (763) 795-8867; 1-800-835-9344

www.eastey.com

Contents:

Safety	7
Introduction	8
BB-2/3T Case Taper Overview	8
Specifications	9
Dimensions	10
Installation	11
Install Casters	11
Set Machine Height.....	11
Location Requirements	12
Install Front and Rear Tables	13
Next Steps.....	14
Operation	15
Load Tape	15
Check Tension	16
Thread Tape.....	16
Main Spring.....	18
Control Panel	19
Adjustments	20
Box Width and Height Adjustment.....	20
Guide Rail Adjustment	21
Top Tape Head Height Adjustment	22
Belt Adjustment	23
Maintenance	24
Rollers	24
Cutting Knives	24
Changing Drive Belts	25
Troubleshooting	28
Parts List.....	30
Electrical.....	30
Machine Body and Tables.....	32
Mast and Upper Tape Head Seat.....	35
Appendix A: Electrical Schematic	37
Warranty Statement	38
Customer Support.....	40

Safety

Safety Precautions

Before installing, operating or servicing this equipment, please read the following precautions carefully:

- This machine is equipped with moving belts. Do not place hands near the belts when they are moving, as fingers may be pinched where belts descend under the exit table or into the frame. Always remove boxes from the exit table after they clear the exit end of the conveyor.
- Observe caution when near tape heads or when threading tape. The tape cutting knives are very sharp, automatically operated, and linked to the wipe down rollers.
- Always disconnect power before attempting maintenance for any electrical or moving parts. Do not attempt to open or work on the electrical box, junction boxes, or other electrical components of the unit without first disconnecting power to the machine. Electrical shock hazard exists if power is not disconnected.
- Use only the specified power-supply cable. Do not use the power cable to pull or position the machine, as this will damage or break the cable.
- Do not bypass any factory-designed safety features such as knife guards, interlocks, switches, etc. Do not operate the machine if such modifications have been made.
- Do not attempt to operate the machine with loads that exceed the limits of use and operation in regards to weight and sizes, or with unstable loads that present a hazard of tipping or falling.
- This equipment is designed for indoor operation in a typical clean, dry factory environment. Do not operate the machine in any extremely wet or oily environment that may exceed operating specifications.
- Do not place hands, head, or any part of the body inside the confines of the machine unless the tape head mechanisms are securely fastened, and the electrical supply is shut off.
- To minimize the potential for personal injury, always be sure that the machine operators and others working on the machinery are properly trained in the correct usage of the equipment and properly instructed regarding operation.
- Never provide service or clear a box jam while the machine is running. Always stop the machine and shut off power before servicing.
- When feeding a box into the unit, always hold down the box top and present the box to unit. Release hands as soon as the belts begin to take the box.
- Do not wear loose clothing such as ties, scarves, jewelry, etc. Long hair should be pulled back and/or covered while operating this machine.