

# Installation


The BB-2/3T Case Taper is shipped boxed and mounted on a shipping pallet. The case taper is mostly assembled with the exception that the front and rear tables and casters and any optional components such as top squeezers are not attached.

Remove the cardboard packaging from the machine and lift the machine up and off of the shipping pallet.

**CAUTION!** The BB-2/3T Case Taper is heavy and will require a forklift, floor crane, or several people to move safely off the shipping pallet. Use proper equipment when lifting the case taper and ensure the case taper is secure and will not shift while being moved or during height adjustment and caster installation.

## Install Casters

Four locking casters are provided standard with the BB-2/3 Case Taper and may be installed if preferred. To install the locking casters, thread a caster into the bottom of the adjustment insert at the bottom of each leg as shown at left below and tighten the nut (A) to affix the caster in place.

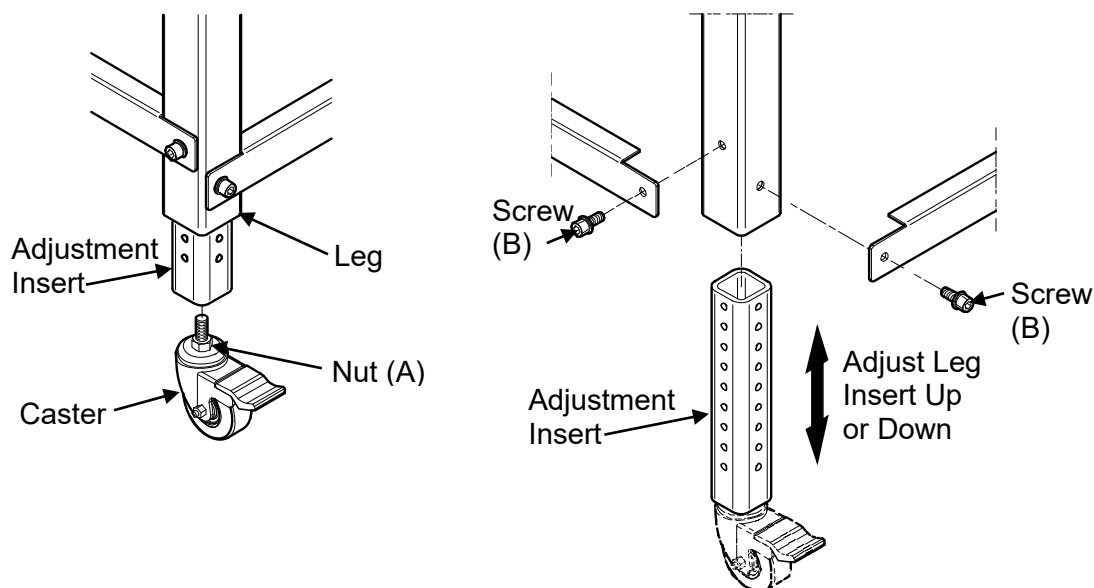

## Set Machine Height

To adjust the leg height, loosen the screws (B) on each leg, slide the insert up or down (as shown at right above) to the required height, and then re-fasten the screws (B).

## Move Taper To Required Location

**CAUTION!** If the case taper must be lifted for moving, use proper equipment when lifting and moving the case taper to ensure the case taper is secure and will not shift.

Set up the case taper and move it to its location. The casters allow easy movement over smooth flat surfaces. If you need to lift the unit to move it, you will need to use a pallet jack, floor crane, or fork lift to move it to its location.

## Location Requirements

When installing the BB-2/3T Case Taper please be aware of the following considerations:

1. The surface on which it is located is flat and level.
2. Conveyor or packing table height.
3. Alignment with packaging line.

When the BB-2/3T Case Taper is positioned in the operating location you will need access to:

1. Control panel switches: Emergency Stop, Start, and Stop.
2. Height and width adjustments.
3. Tape loading (Both upper and lower tape cartridges).

Packing tables are provided standard at both the in-feed and exit ends of the case taper. An operator can fill boxes and close the flaps at the in-feed table before feeding boxes into the case taper, and then pick up boxes that have been sealed from the exit pack table.


If the case taper is part of a longer packaging line, take into consideration the table and conveyor height in relation adjacent machinery.

The machine should be placed on a flat, level floor so that it does not rock or move. We recommend that the machine be securely locked in place when used.

When the case taper has been moved to its location, use the levers on the casters to lock the wheels to prevent rolling and keep the unit in place.

## Install Front and Rear Tables


Front and rear tables are identical and therefore interchangeable. Temporarily loosen socket head cap screws at the locations shown in the following illustration. Align the keyhole slots in the table flanges with the loosened cap screw heads and position table with conveyor belts, then re-tighten cap screws to secure table. Install one table at each end (front and rear) of the conveyor body.

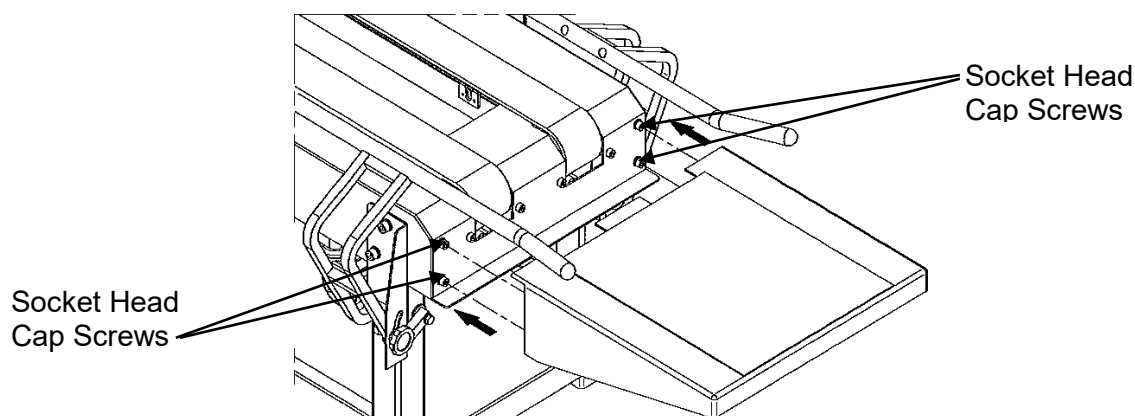

Load the tape heads with tape. (One roll each; follow instructions provided in the *Tape Cartridge User Guide*.)

## Optional Mounting For Top Squeezers

Threaded holes are provided on both sides (left and right) of the case taper upper tape head seat at the locations indicated to fasten optional top squeezers to each side of the upper tape head seat assembly if they are to be installed.

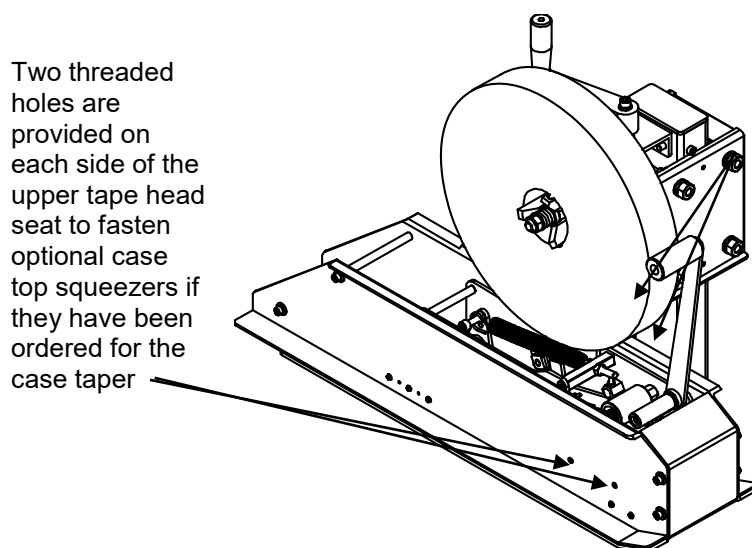

## **Next Steps**

Follow instructions in the Operation section for instructions to load the tape cartridges in the upper and lower tape heads.

Refer to the Adjustments section for instructions to make necessary height and width adjustments that must be made for operation of the box taper.

Refer to instructions in the Operation section for instructions to power or shut down the machine.