

Operation

Load Tape

Press the Stop switch and disconnect the power.


CAUTION! To avoid personal injury, remove the tape cartridge before loading tape.

When handling the tape cartridge be careful to avoid contact with the tape cutting blade.


The taping cartridge in the upper head assembly is secured in place by a single wing bolt (winged-head cap screw). Temporarily remove the wing bolt to remove the upper tape head.

After the tape head has been removed, remove core of spent tape roll (if present) and push the tape roll onto the spindle assembly.

NOTE: Make sure the tape roll is pushed all the way on the spindle assembly.

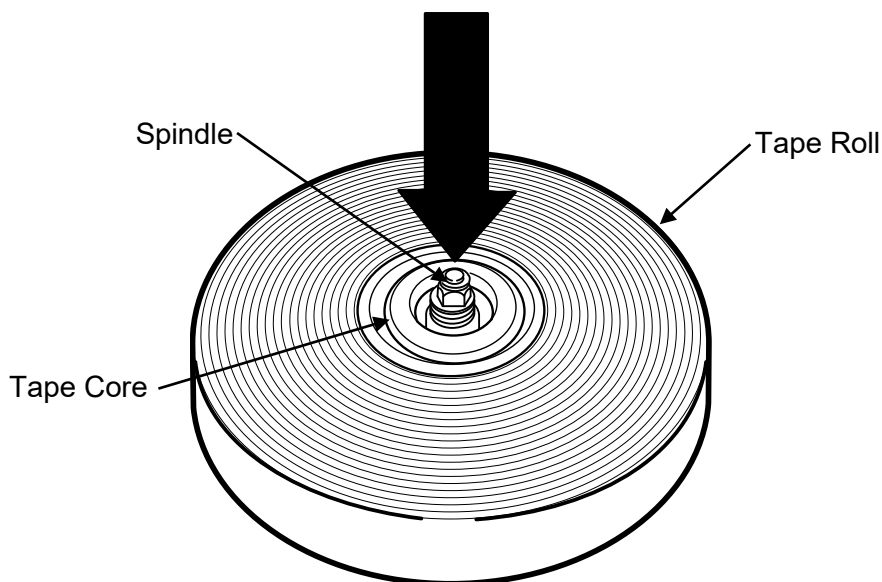

Check Tension

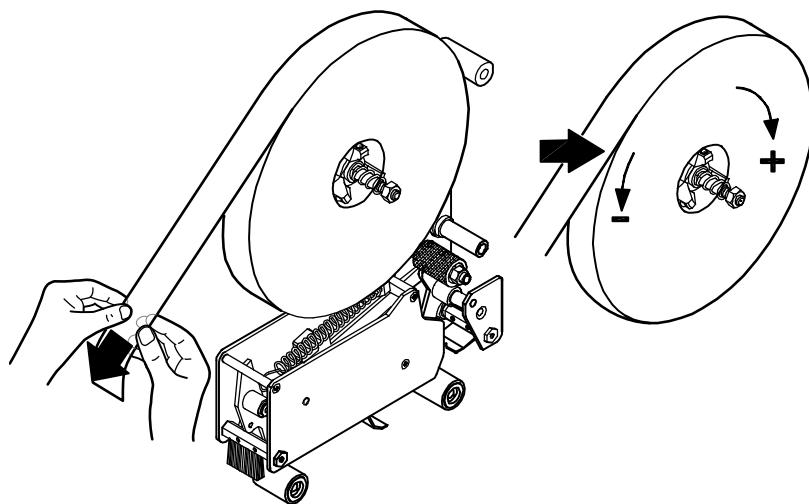


Check the tape for correct tension. Tighten or loosen the tape core holder to adjust tension.

Thread Tape


Carefully thread the new tape through the rollers in the tape head as shown in the applicable diagram in the Tape Head User Guide provided with the tape head.

For convenience, diagrams for threading tape in the Eastey-EX Tape Head and EZ-EX Tape Head are provided on the following page. Follow the diagram that applies for your tape head, depending on the tape head model and position on the taper.


Eastey-EX Tape Head

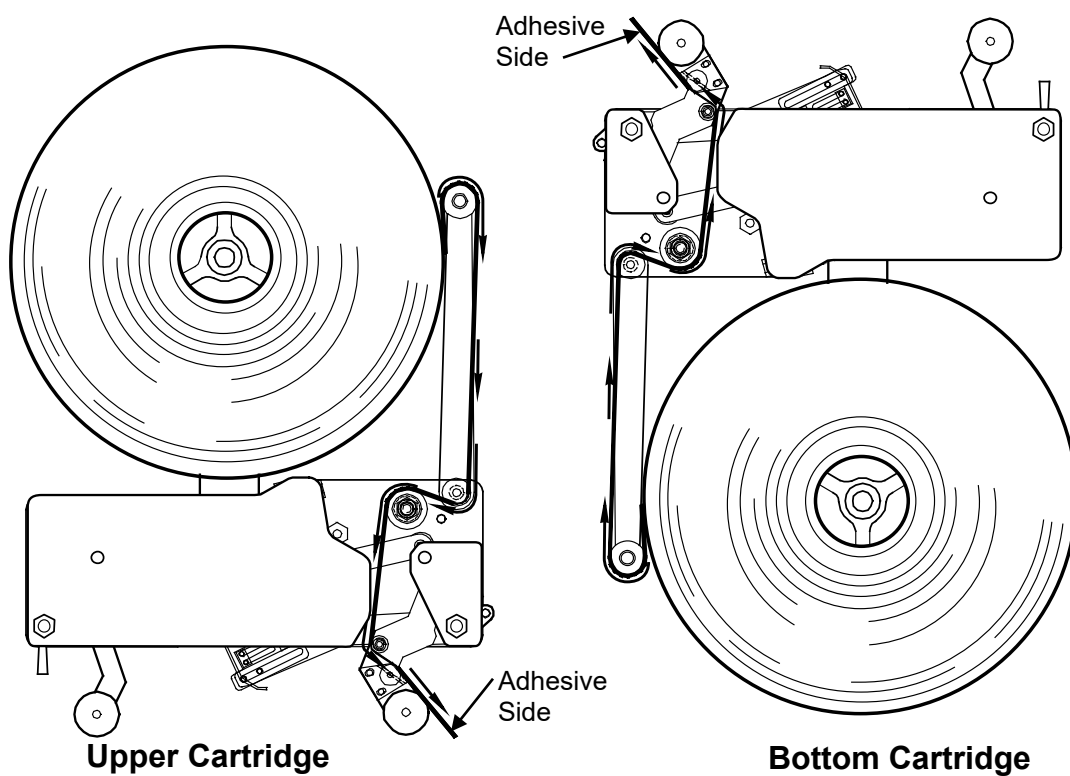

EZ-EX Tape Head

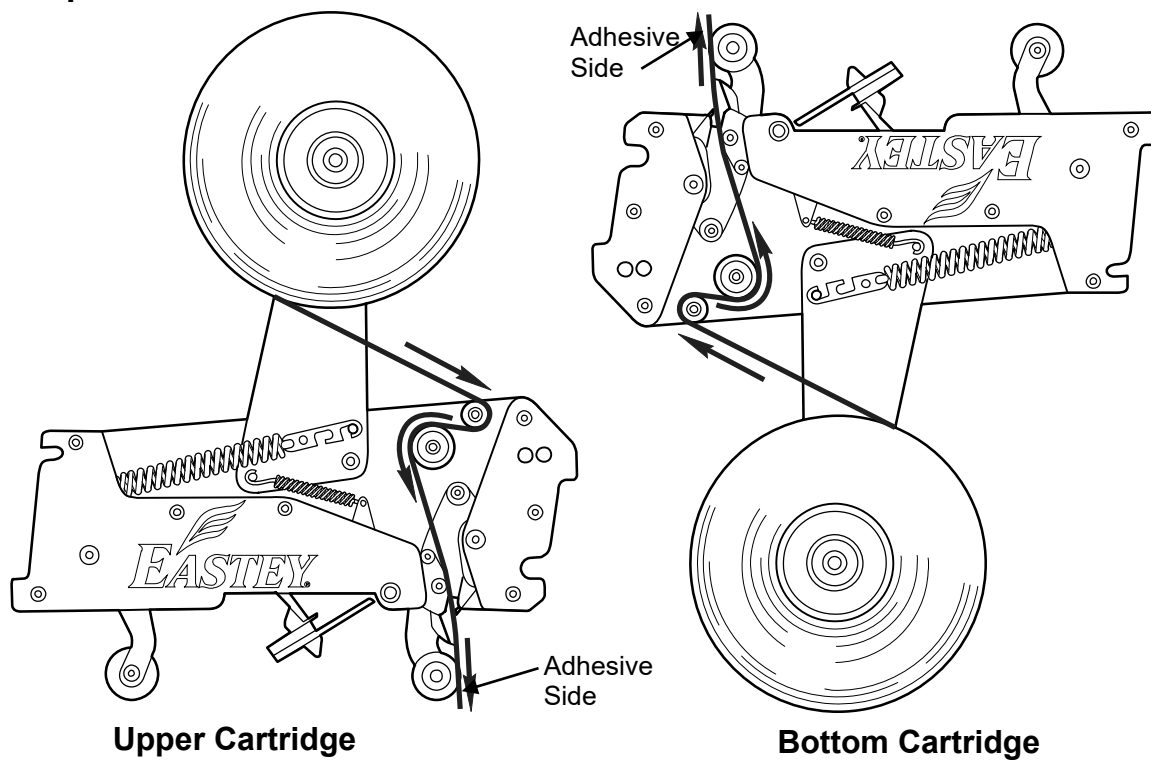

Center Tape — Easteys-EX Tape Head only

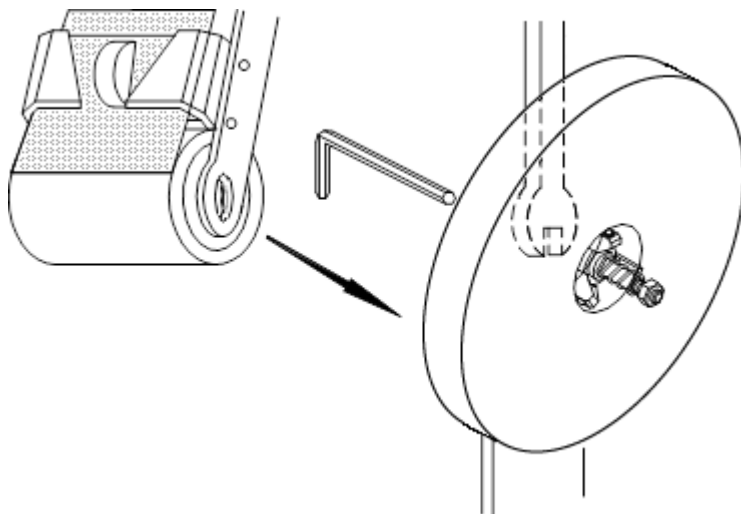


Make sure the tape is centered on all the rollers.

There are several rollers in the tape cartridge where the tape alignment should be checked to verify the tape stays on center as it is being dispensed.

Return the tape cartridge to the operation position.



Main Spring

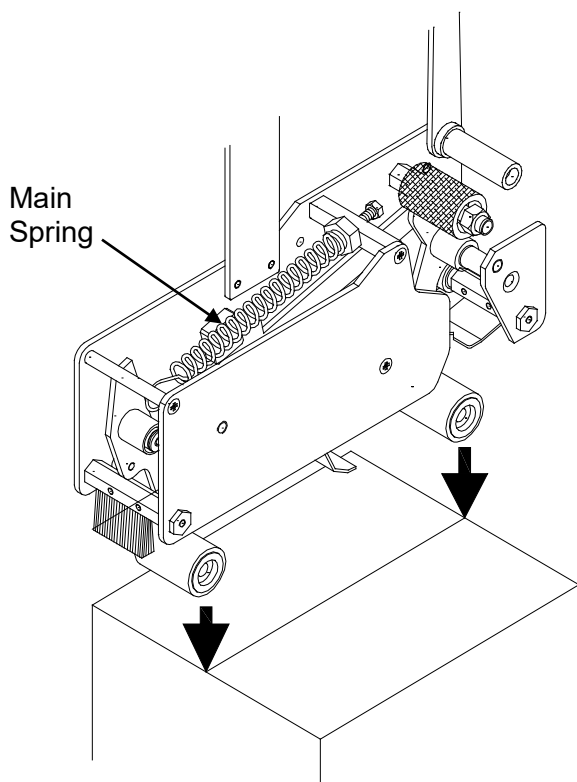

For sealing light weight boxes, decrease the main spring tension. For heavier boxes, increase the main spring tension.


When setting tension for the rollers, consider the amount of pressure on the box flaps required to make the seal. Cartons completely filled to the top with product may require more pressure on top and bottom seams when applying tape than partially-filled cartons, where excessive pressure could possibly crush the carton.

Control Panel

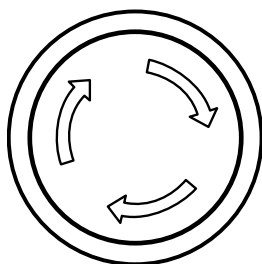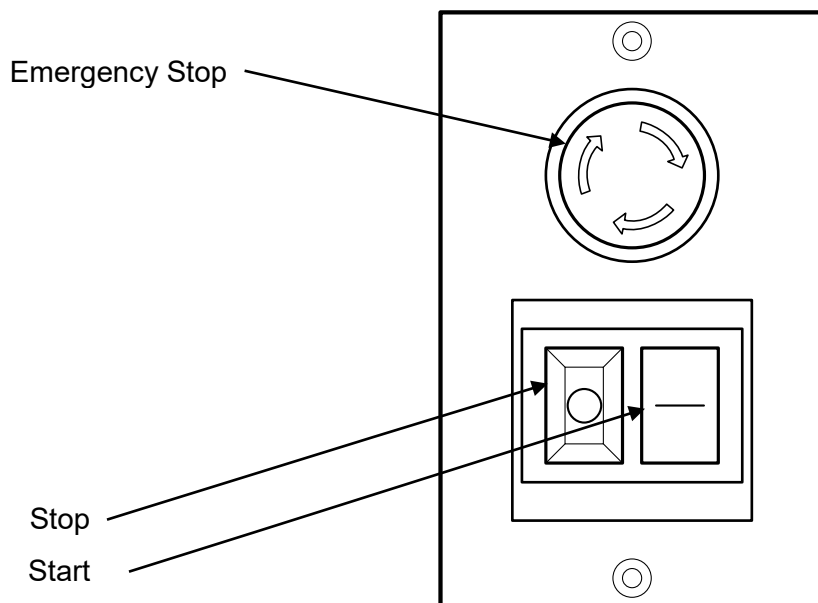


Emergency Stop Button

Press the button for emergency stop.

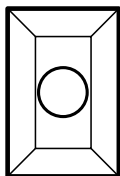

Stop

Press to stop motors and belts but keep power to the system on. (Non-emergency stop.)

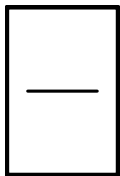

Start

Press to start motors and belts.

Start and stop buttons are covered by a clear plastic to protect them from dust, dirt, etc.

To reset the Emergency Stop button once the emergency condition has been cleared and it is safe to operate the machine again, press the Emergency Stop button in while turning it approximately a quarter-turn in the direction indicated by the arrows.