


Adjustments

Box Width and Height Adjustment


Place a box filled with product on the in-feed table. Position the box centered with the conveyor drive belt and tape heads. Use the filled box to adjust the width of guide rails and top tape head height to accommodate the box width and height as explained in the instructions that follow. (If the case taper is equipped with optional top squeezers, use the filled box to adjust these too.)

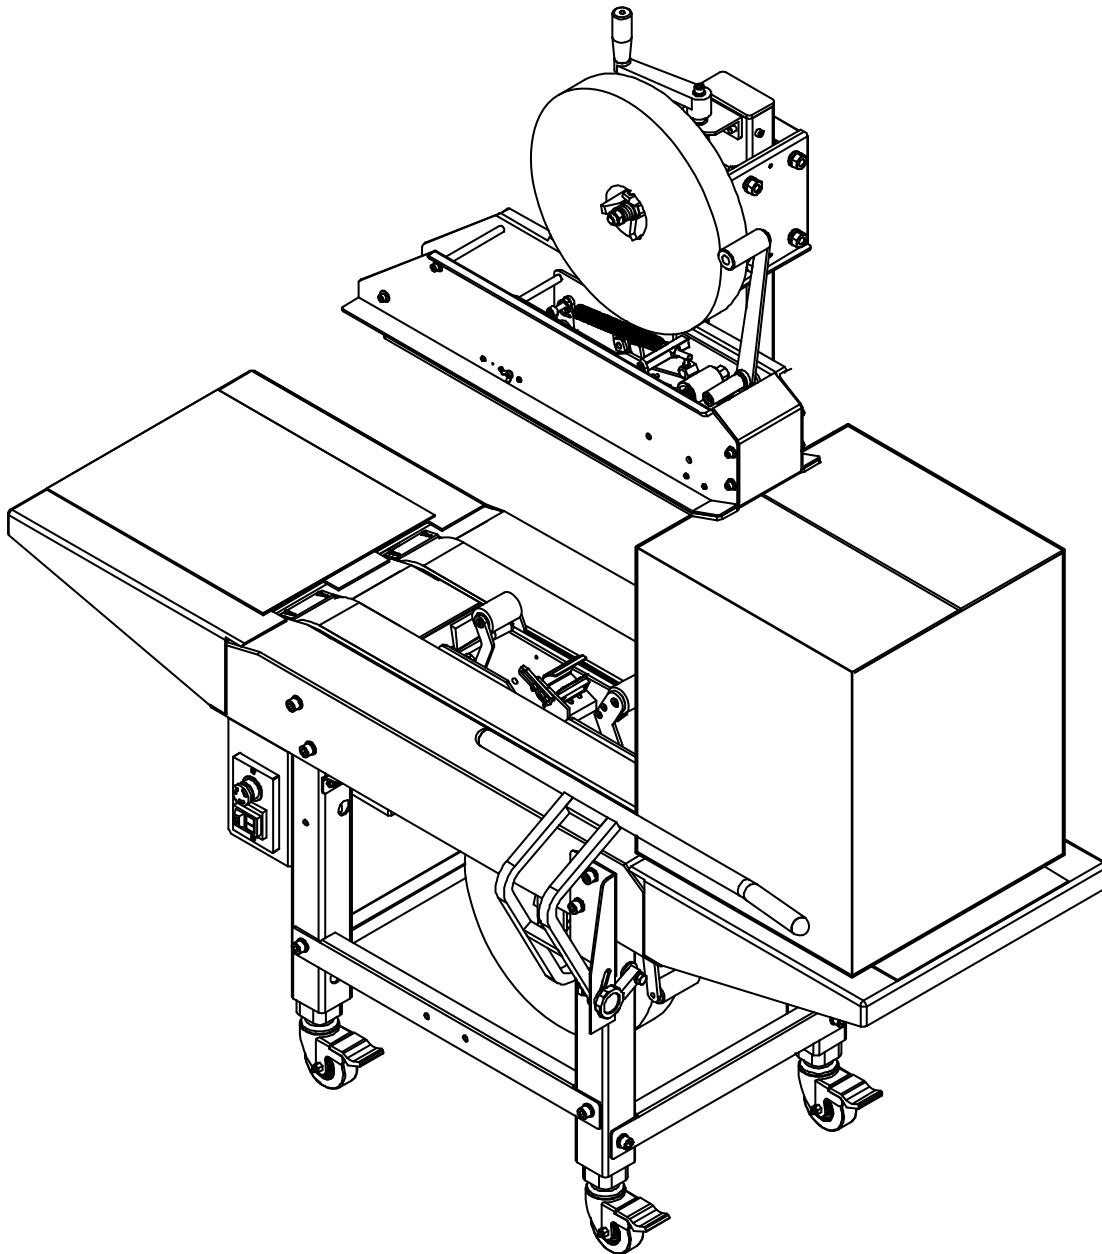

Guide Rail Adjustment


The purpose of the guide rails is to guide the box into the center of the machine as it is fed into the conveyor from the in-feed table. Keeping the box centered on the conveyor keeps the tape heads centered with the box, which keeps the tape seal on-center as it is applied to the box on the top or bottom seams.

To adjust the guide rail width, loosen the hand knob below the in-feed table on the leg on the side opposite the mast. Guide rails are mechanically linked so they will both rotate equal distance as they are adjusted. Move the guide rails to the width required for the box, and then retighten the hand knob with the guide rails in the new position.

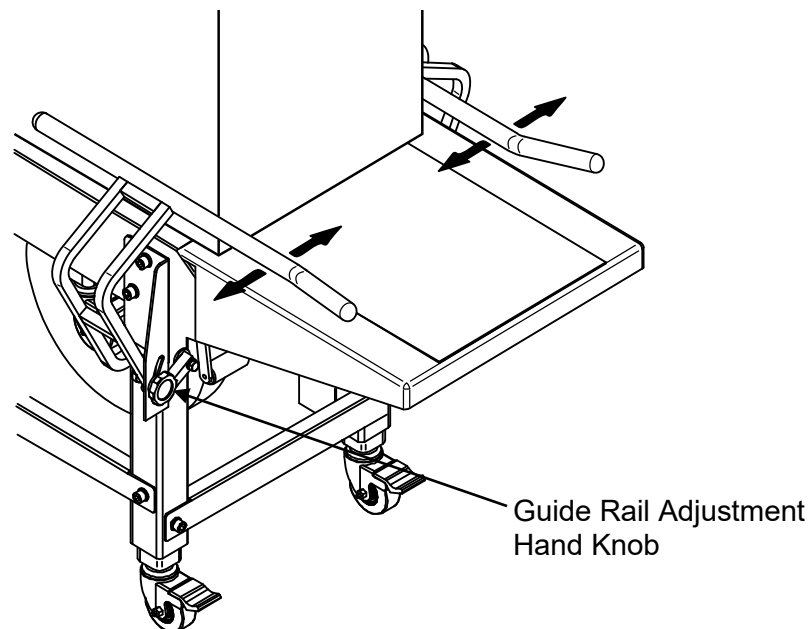

Top Tape Head Height Adjustment

Use the hand crank at the top of the mast to adjust the top tape head height to accommodate box height, as shown in the following illustration. Turn the crank counter-clockwise to raise the tape head. Turn the crank clockwise to lower the tape head.

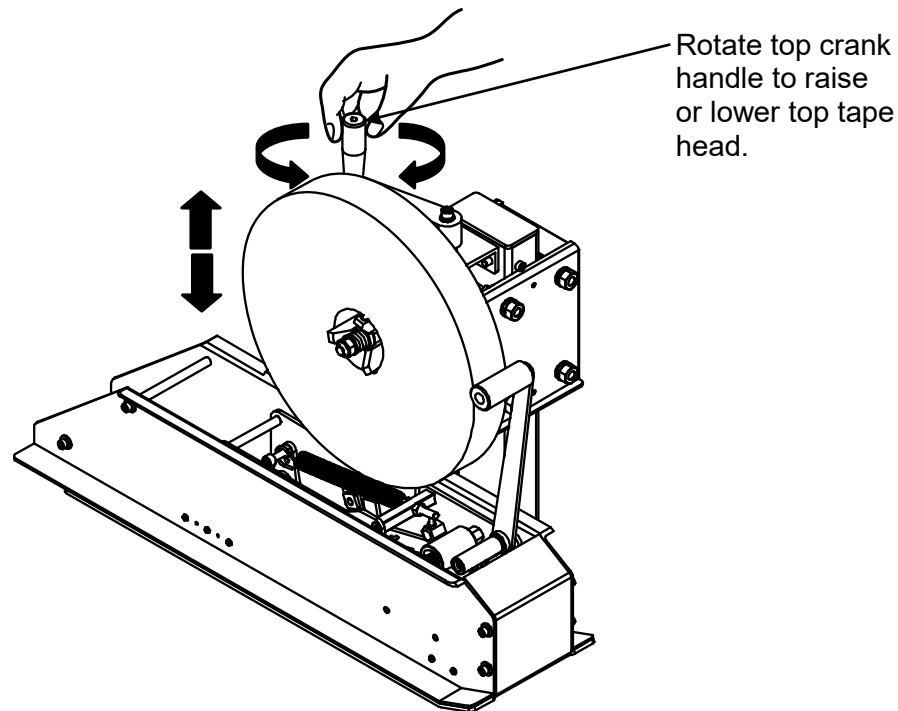


Top Squeezer Adjustment

(When equipped with optional top squeezers.)

If optional top squeezers are installed, adjust top squeezers to the box width, moving each box guide horizontally to the required width. Keep squeezer guides equal distance from the tape head center to keep the box centered on the conveyor and to keep the tape seal centered on the box seam.

Belt Adjustment

To adjust the belt tension, loosen the hex socket cap screws (A) in the slotted holes in the belt housing below the idler, then adjust the hex socket tensioning screws (B) in the end. When belt is set to the required tension, re-tighten the hex socket cap screws (A).

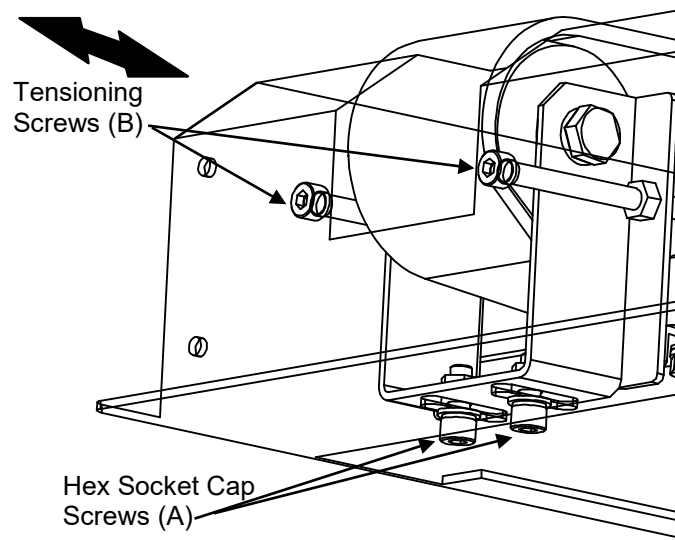

Tape Head Adjustment — Refer to Tape Head User Guide.

Refer to instructions in the Tape Head User Guide that is provided with the tape head for instructions regarding adjustment information for the tape head.