

Maintenance

The BB-2/3T Case Taping System will provide many hours of maintenance free operation. There are a few items that may require attention from time to time.

Rollers

Make sure rollers stay clean and grease free. If you should have to clean the rollers simply wipe them down with a clean lint-free cloth. If a more thorough cleaning is necessary wipe the rollers down with a mild detergent and water and let dry. **Never use harsh or abrasive cleaners or chemical agents when cleaning the rollers.**

Cutting Knives

Occasionally inspect the cutting knives to ensure they are clean and free of adhesive residue. Make sure the cutting knife is sharp by inspecting cuts in the tape. Cuts should be straight and neat. If the quality of cuts is eroding, the knife blade is dull and should be replaced.

Changing Knife Blades — Refer to Tape Head User Guide


Turn off and unplug the taper. It is not necessary to remove either tape head to change the blade. Refer to the Tape Head User Guide provided with the tape head for instructions for changing the knife blades.

CAUTION! Always be aware of the cutting edges while replacing the knife blades. Handle the knife blades carefully.


Changing Drive Belts

Turn off and unplug the taper.


Loosen the tension on the belt completely.

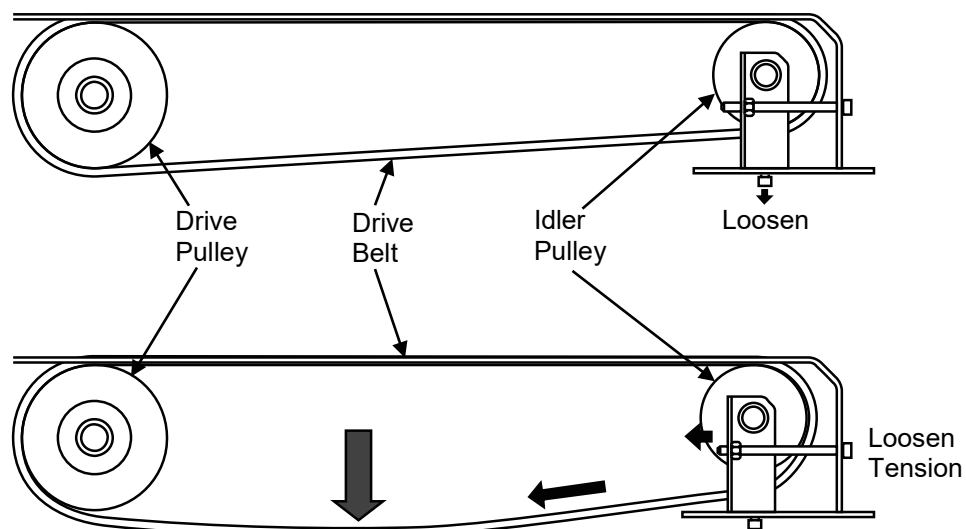


With the belt loose, remove the connecting pin that holds the belt together.

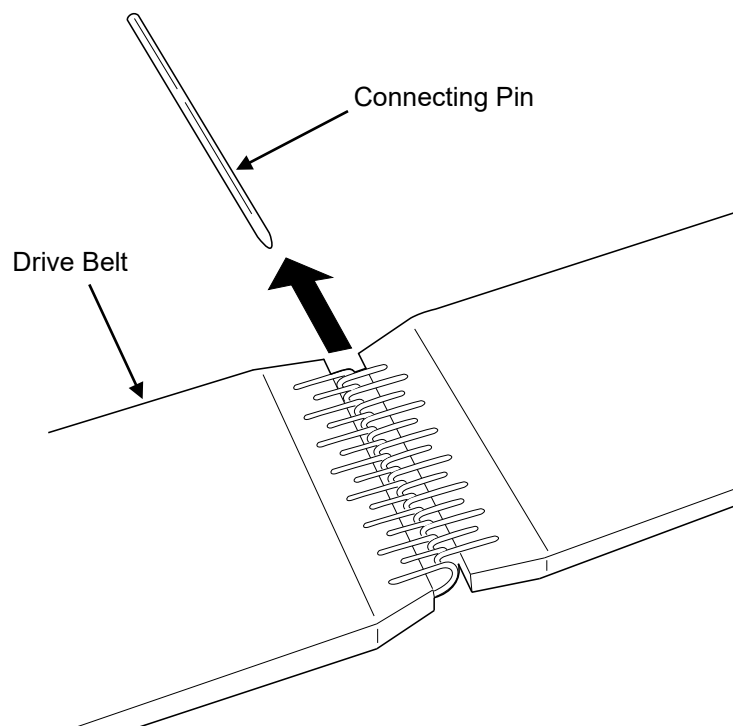


Take the belt off the machine.

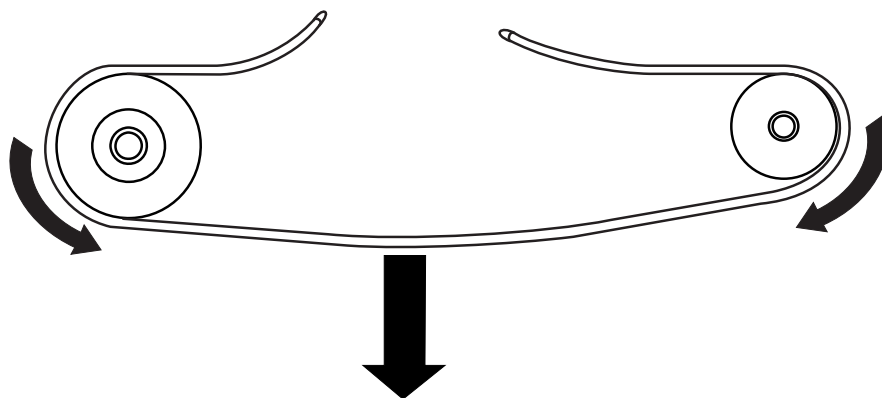


Install the new belt around the drive and idler pulleys.

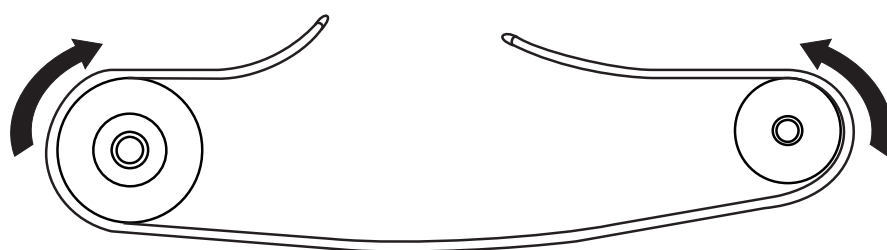

While the belt is still loose, connect the ends by lining up the loops and replacing the connecting pin.

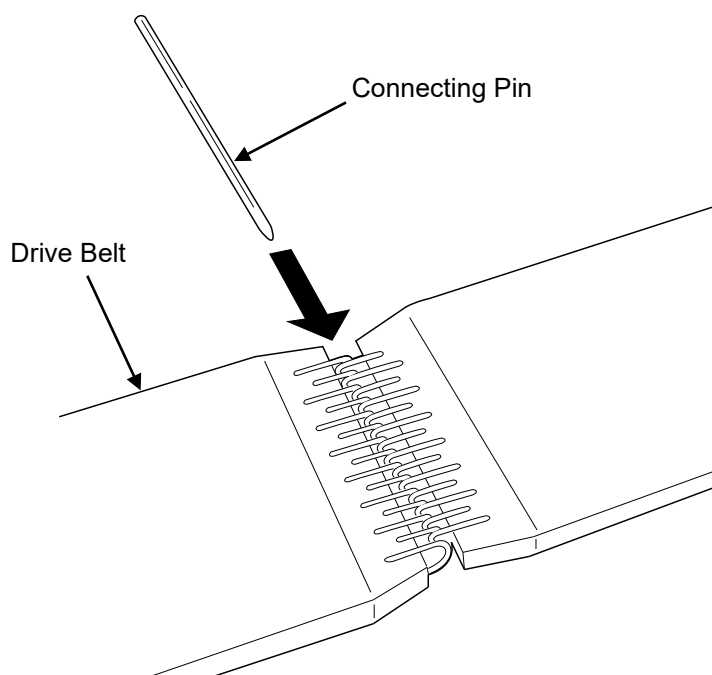

Using the tensioning bolts, restore tension on the idler pulley.

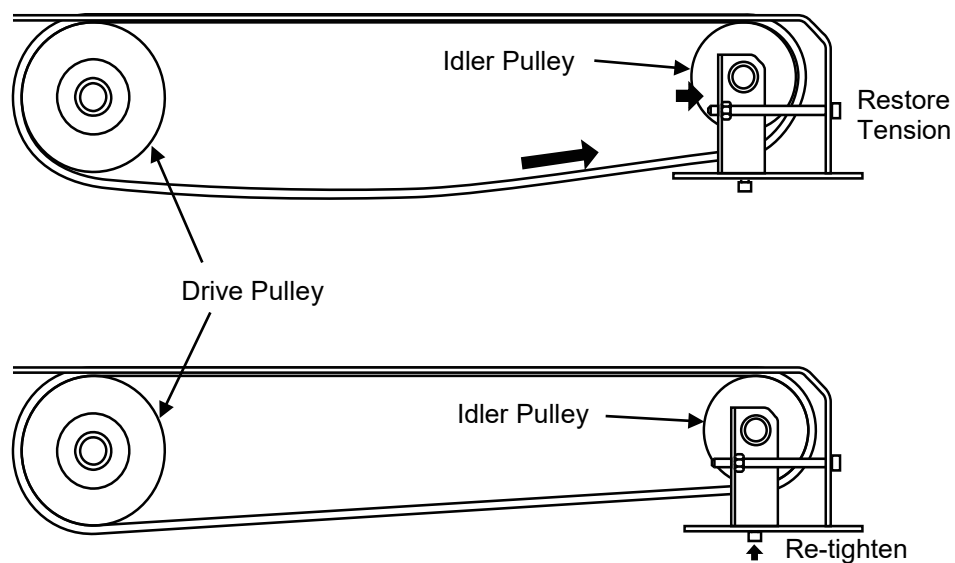

Retighten the socket head cap screws in the bottom of the conveyor to secure the idler pulley brackets in place.

Plug in and turn on the BB-2/3T Case Taper to resume taping.