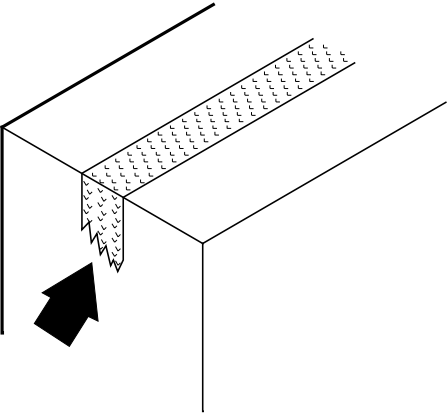
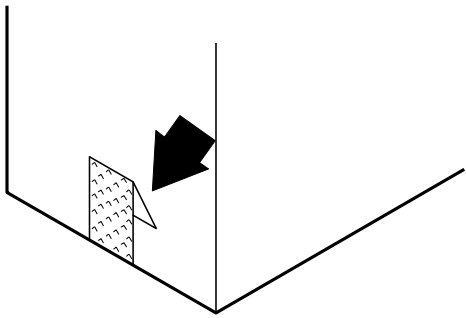
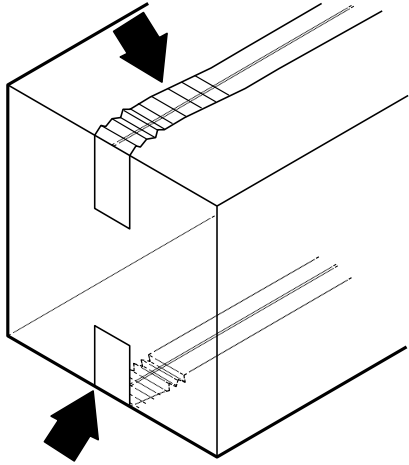
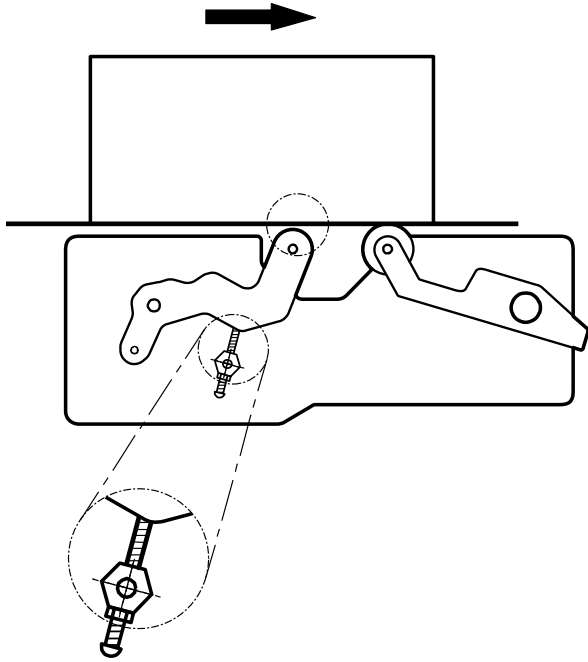


Troubleshooting

Problem	Solution
Machine is not operating	- Machine has inadequate electrical power or power is not connected. Verify system power meets specification requirements. - An Emergency Stop condition exists. Clear the machine and reset the Emergency Stop.
Machine cannot tape cartons	The height or width adjustments are not set correctly for the box size. See Adjustments section to make adjustments for box size.
Uneven Tape Leg on Front	- Tape tension is too low. Tighten the one-way clutch roller and/or the tape core. - Adjust the one-way clutch roller in the slot so it is slightly beyond the front wipe roller. - Adjust the tape leg length. See Tape Leg Adjustment section.
Uneven Tape Leg Rear	- Too much tape tension. Adjust the one-way clutch and or tape core. - Clean and ensure all rollers move freely. Lubricate all roller slots. - Tighten main spring.
Uneven or Torn Tape 	- Blade is dull. Replace blade. - Tape tension is incorrect. Increase tension. - Clean and adjust blade. - Blade mounted incorrectly or backwards. - Knife arm spring is worn. Replace knife arm spring. - Adjust cartridge height.

Problem	Solution
Tape Folding 	• Check that all rollers turn freely. • Check to be sure tape is threaded properly on front roller (page 17). • Check wipe down brush.
Tape Curling and Bunching Up — Eastey-EX Tape Head Only 	Eastey-EX Tape Head Only • Adjust the tape cartridge height (approximately .06 inches from box)  • Check tape tension set by the spring tension at the tape core.