




RAUMAK

PACKAGING

MULTI BAG G

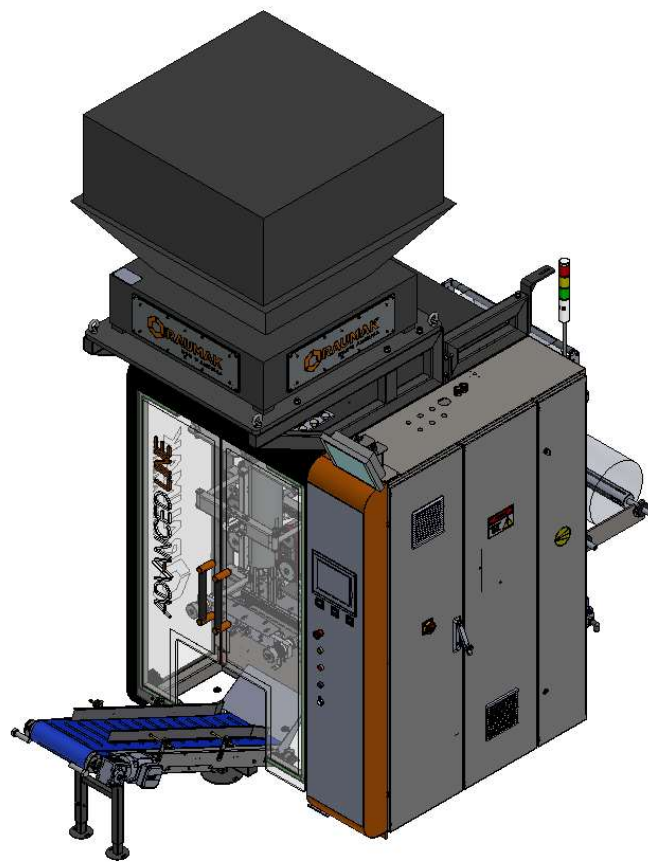

Operation And Maintenance Manual

Serial Number: 24024140

ARTESANO

Revision: 00



Dear user

This manual aims to instruct you about the specific steps for the correct installation, operation and maintenance of this equipment. Read it carefully and proceed according to the instructions.

If you have questions, we provide below the main contacts where you can engage directly the desired technical department.

ASTEC – Technical Assistance

Tel.: 55 - 47-3370-4540 RAMAL 202

E-mail: astec3@raumak.com.br

SAC – Client Service

Tel.: +1 (470) 294 1071 / +1(404) 242 4003

E-mail: raumakusa@raumakusa.com

Spare parts

Tel.: +1 (470) 294 1071 / +1(404) 242 4003

E-mail: raumakusa@raumakusa.com

Sales:

For your needs of machinery and equipment, please contact our sales:

Tel.: +1 (470) 294 1071 / +1(404) 242 4003

E-mail: raumakusa@raumakusa.com

Training:

For your needs of machine operation courses, contact the ASTEC:

Tel.: +1 (470) 294 1071 / +1(404) 242 4003

E-mail: raumakusa@raumakusa.com

RAUMAK NORTH AMERICA

365 Brogdon RD – Suite 101.

Suwanee, GA 30024

Phone: +1 (470) 294 1071 / +1 (470) 589 1039

raumakusa@raumakusa.com

Visit us in the Internet: www.raumak.com.br/en



GUARANTEE CERTIFICATE

RAUMAK MÁQUINAS Ltda. offers guarantee against defects of manufacture or materials, for its products for a period of 12 months (being three legal months and nine months by manufacturer account), counting from date of supply the respective products (it dates of emissions of the form a bill of sale), not considering the date of installation. The warranty will only be valid upon the fulfillment of the following care:

- Transport, handling and adequate storage;
- Installation and correct operation, observing the limits and environmental conditions specified in the purchase;
- Operation within the equipment capacity limits;
- Periodic accomplishment of the preventive maintenances as Manual;
- The operator must have knowledge to operate the manual machine as of instructions and training given for in agreement the Raumak technician during installation and delivery technique;
- Installation, repair or maintenance could only be effect'ed by authorized RAUMAK, except upon written authorization issued by RAUMAK;
- In the event of defects, the buyer shall immediately report the failure, leaving the Raumak evaluate and rank as manufacturing defects or not;
- In the event of defects, the equipment must be available to the supplier for a minimum period necessary to identify the cause of the fault and carry out your repairs;
- In case of substitution of parts or accessories in guarantee the same one will have to inside return the RAUMAK from the constant stated period in the form a bill of sale, otherwise, will be charged.

Excluded from the warranty:

- The components that in normal working regime, have shorter life than the guarantee period;
- The pneumatic components damaged if it is found that the compressed air system is not adequate or contains impurities;
- In case of brusque oscillation of the net of electric energy (rays, storms, thunders or short circuit).
- All part that to present problems; electric, pneumatic, electronic or mechanic opened by unauthorized person.

The warranty does not include services of transports, services of locomotion, lodging and feeding of the staff of the when requested assistance technique for the costumers.

The repair and or substitution of parts or products, on installments of the RAUMAK during the period of guarantee, will not prorogue the stated period of original guarantee.

The present warranty if limits to the supplied product if not making responsible the RAUMAK for damages the people, third, to other equipment, losses of profits or any other actual damages or consequent, suffered for bad use or not respecting acknowledgements or signaling contained in the equipment.



RAUMAK NORTH AMERICA.

365 Bragdon RD – Suite 101.
Suwanee, GA 30024
Phone: +1 (470) 294 1071 / +1 (470) 589 1039
raumakusa@raumakusa.com

Visit us in the Internet:

www.raumak.com.br/en



1	SUMMARY	
2	INTRODUCTION	8
3	GENERAL INFORMATION	9
3.1	Equipment Nameplate	9
3.2	Receipt and Inspection	10
4	SAFETY INSTRUCTIONS	11
4.1	Machine Usage	11
4.2	Work Environment	11
4.3	Fundamental Rules for Working Safely	11
4.4	Safety Adhesives	13
4.5	Safety Devices	15
4.5.1	Security keys	15
4.5.2	General key	15
4.5.3	Emergency button	15
4.5.4	Automatic and manual depressurizer	15
4.5.5	Light indication	15
5	CLEANING	16
5.1	Cleaning The Machine	16
5.2	Cleaning Of Acrylics	16
6	TECHNICAL SPECIFICATIONS	17
6.1	General Machine Information:	17
6.2	Equipment Technical Data	18
6.3	Production	19
7	INSTALLATION	20
7.1	Mechanical Installation	20
7.1.1	Environmental conditions	20
7.1.2	Leveling	20
7.2	Pneumatic Installation	21
7.3	Electrical Installation	22
8	MECHANICAL SYSTEMS	23
8.1	Main Components And Their Functions	23
8.2	Identification Of Principal Components	24
8.2.1	Jaw	25
8.2.2	Vertical seal	27



8.3	Adjustmens and Format Changes	28
8.3.1	Pneumatic adjustments.....	28
8.3.2	Temperature control on seals.....	28
8.4	Basic Operating Sequence	29
8.4.1	Film core replacement procedure.....	30
8.5	Operation	32
8.5.1	Panel and command.....	32
8.5.2	Start button	32
8.5.3	Stop button	32
8.5.4	Reset button	32
8.5.5	Emergency button	32
8.5.6	General key	32
8.5.7	Ethernet connection.....	32
8.6	Alarm List	33
9	HMI	34
9.1	Startup Screen.....	34
9.2	Adjustments	35
9.2.1	Speeds	36
9.3	Maintenance	37
9.3.1	Valve maintenance	38
9.3.2	Valve test.....	38
9.3.3	Testing motors.....	39
9.3.4	I/O Monitoring.....	39
9.4	Enables	40
9.5	Production	40
9.6	Recipes	41
9.7	Alarms	42
10	MAINTENANCE.....	43
10.1	Maintenance Preventive.....	43
10.1.1	Procedure for maintenance	43
10.1.2	Preventive maintenance routines.....	44
10.1.3	Cleaning	45
10.1.4	Draining water	46
10.1.5	Pressure regulator filter.....	47



10.2	Lubrication	47
10.2.1	Lubrication of rolling bearings	48
10.2.2	Lubrication of linear guides	49
10.2.3	Moto reducers	50
10.3	Lubrification Map	51
10.4	Spare Parts List	52
10.5	Cause and Defect Ratio	53
10.5.1	Identify the symptom of the problem	53
10.5.2	Section the problem	53
10.5.3	Isolate the problem	53
10.5.4	Initial procedure	53
10.5.5	Machine does not turn on	53
10.5.6	Machine does not turn on	53
10.5.7	Jaw does not open or close	54
10.5.8	Horizontal seal metal does not advance or recede	54
10.5.9	Plastic stretches and does not cut	54
10.5.10	Inefficient Seal	54
10.5.11	Do not seal top or bottom of package	54
10.5.12	Resistor do not heat up	55
10.5.13	Package breaks easily when soldering	55
10.5.14	Variation in package length	55
10.5.15	When the machine is running, the air pressure drops	55
11	TECHNICAL DIAGRAMS	56
11.1	How To Find And Identify Components	56
11.2	Annexes	59
11.2.1	Pneumatic diagram	59
11.2.2	Electrical diagram	60
11.2.3	Mechanical diagram	61
12	REVISION HISTORY	62