




9 HMI


From these HMI explanations, the operator can perform the setup and operate the equipment, as well as assist in possible maintenance. Remember that the maintenance and repair of this equipment should only be performed by qualified professionals.

9.1 Startup Screen

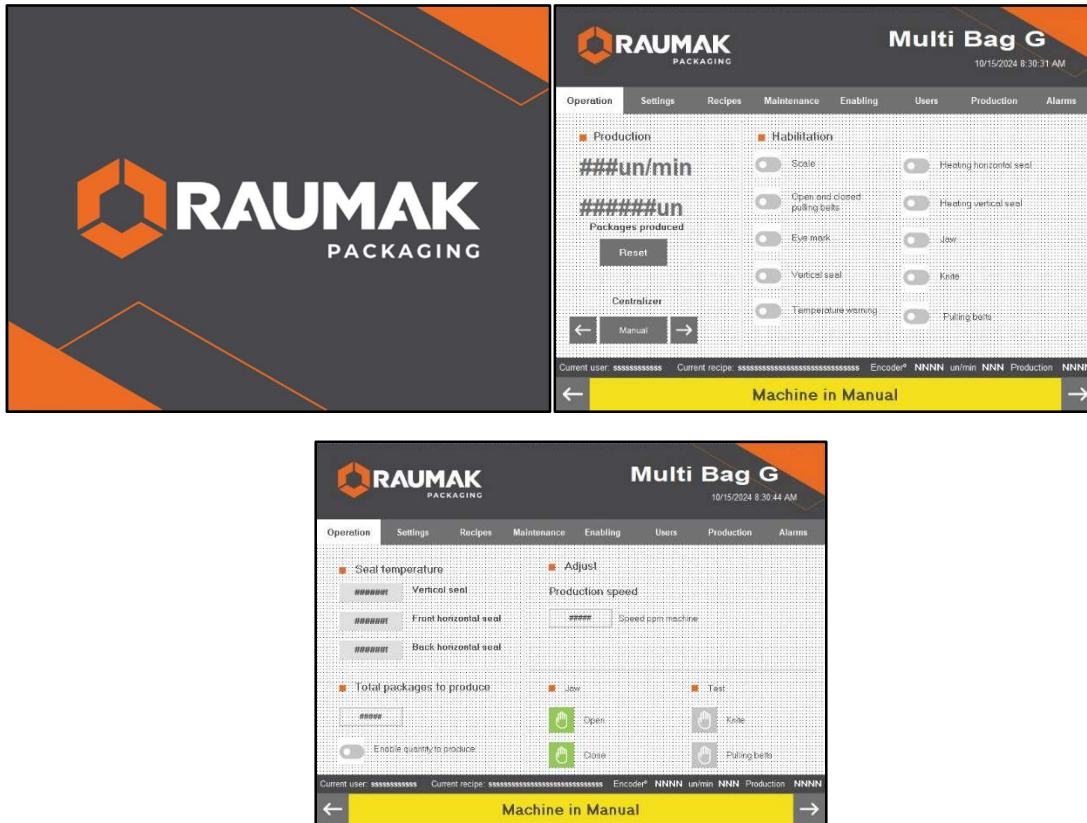

Every time the equipment is turned on the HMI will start on this screen. The buttons on this screen give access to the main functions of the equipment.


Pop Up User

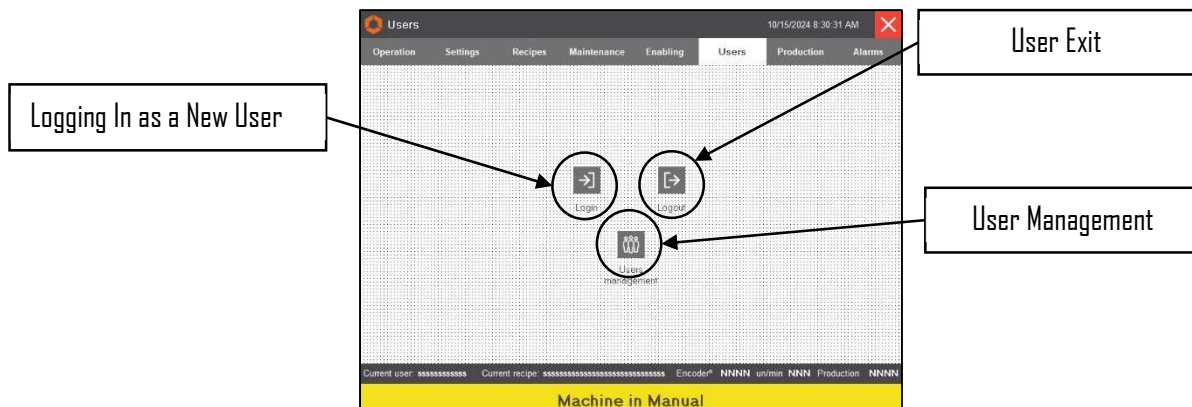






9.2 Adjustments

When you press the button **Adjustments**, in any of the screens at the top, it will access the screens below. These screens provide access to the components' settings. You can navigate through this settings area by clicking on the arrows at the bottom of the screen and thus navigate through the settings of each component.

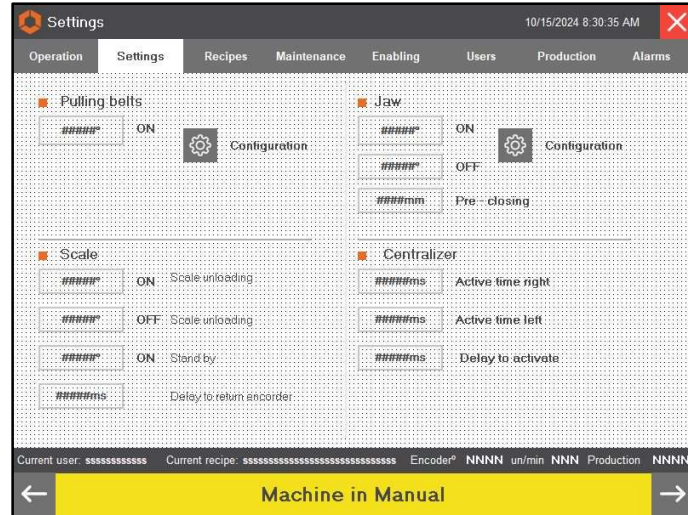

Navigation with the buttons:  will give you access to the previous or next screen of the settings screens as illustrated below:

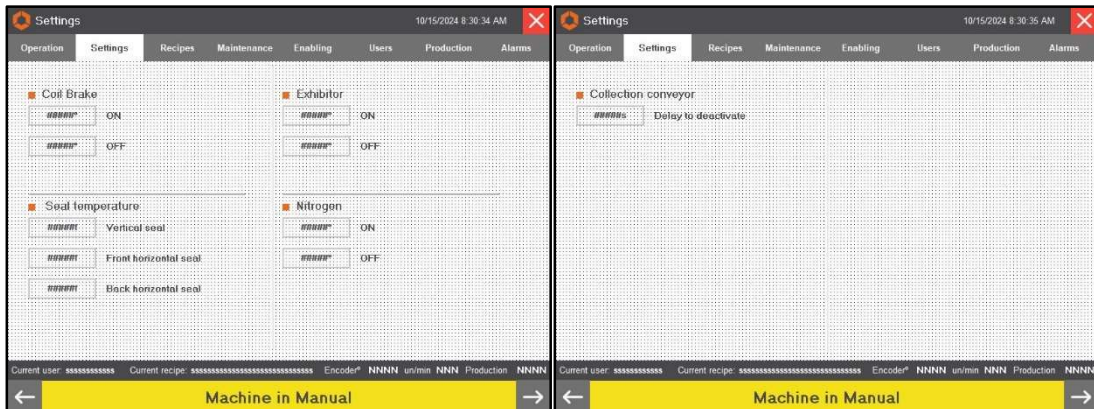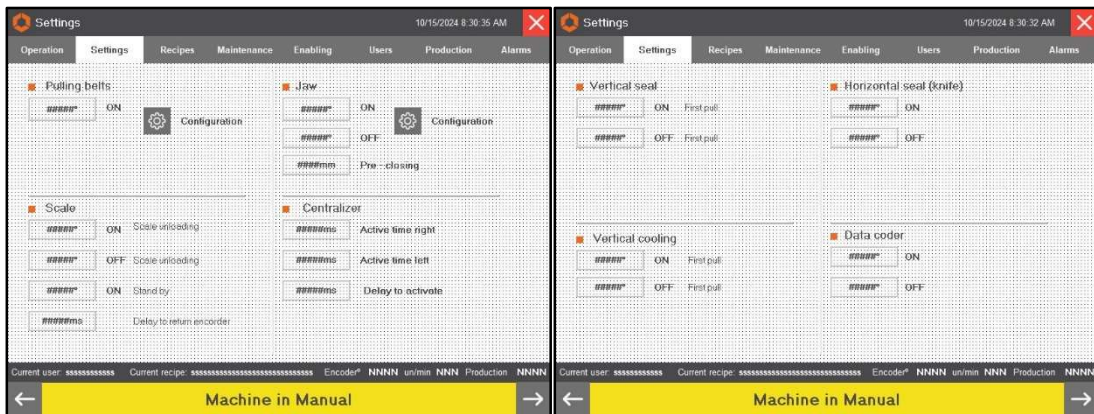

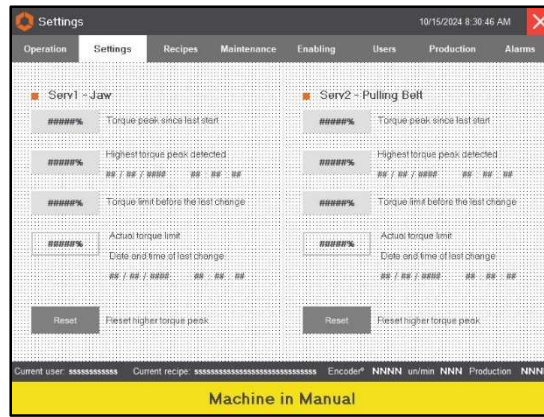

9.2.1 Speeds

On the motor speed screen, you can set the speeds on the device's frequency converters. To do this, enter the desired setting value in the value change field, Enter the value in Hertz in this field. The speed screens are illustrated below:





Units of measure for changing values

In the Settings screens, enter the desired value in the value change field , according to the required unit as per the table below:

Abbreviation on the HMI screens	Unit
cs	Hundred seconds
ms	Milliseconds
mm	millimetre
Hz	Frequency in Hertz

9.3 Maintenance

In the maintenance screen you will find the components when you click on the respective items they will immediately turn on. When the maintenance button is clicked **Maintenance**, the screen below will appear, which contains all the maintenance of the machine's components.






9.3.1 Valve maintenance



Valves maintenance

The select button . The selected button will take you to the Valve Maintenance screen. On the valve maintenance screen the operator or maintenance personnel can start and stop the cylinder of the selected component with a time pre-selected in hundredths of a second on the maintenance screen. Enter the desired time in the field .

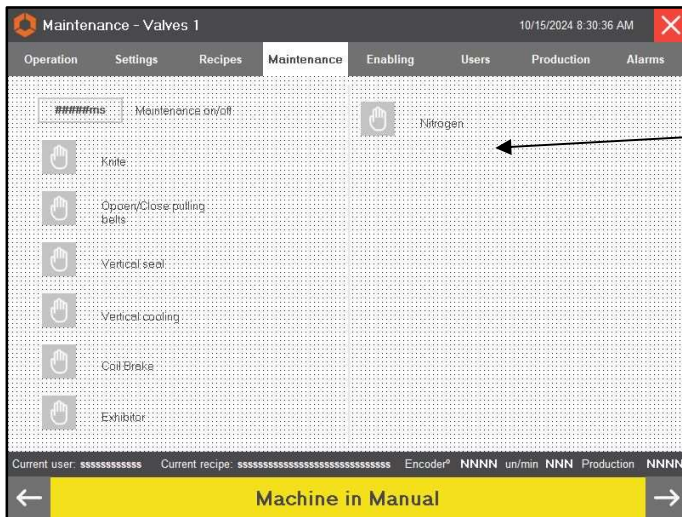

Press in the area where the component is mentioned to start the cylinder. Upon actuation, the cylinder will cycle on and off in the pre-selected time and cyclically until the pre-selected time has elapsed.

9.3.2 Valve test



Valves test

By Vavle Test on button . Similar to the engine test the valve test works in the same way, as soon as you touch the icon it will turn on or off, just click on any of the components listed on the screen below;






9.3.3 Testing motors



By clicking on the motor test button **Motors test**, the selected button will give you access to the motor test screen. In the engine maintenance screen, the operator or maintenance team can start the engine of the selected component, in this screen the components are not cycled, i.e., they are turned on and off each time the icon is touched.

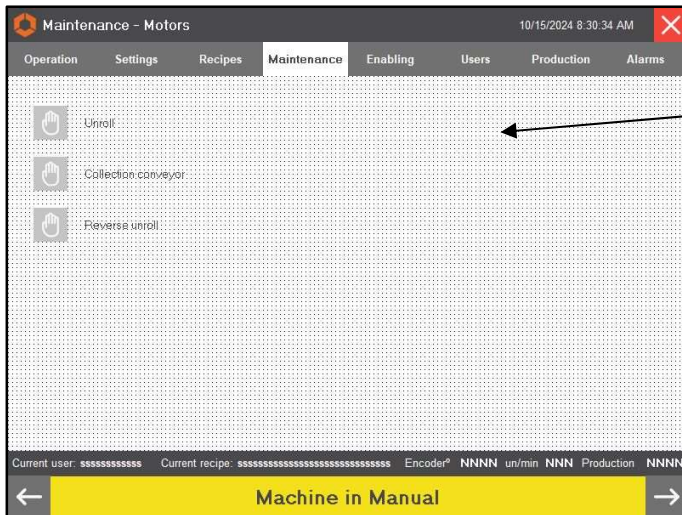

To start, press in the area where the component is mentioned. When triggered, the motor will run until the button is clicked again.

9.3.4 I/O Monitoring




Clicking the I/O unit monitoring button **I/O's Monitoring** on the home screen takes you to the I/O unit monitoring screens. From the monitoring screen, the operator or maintenance personnel can check all inputs and outputs of the machine easily.






9.4 Enables

To access click on the button **Enables**. This function allows you to test and simulate the operation of the machine at idle or without load. This point requires more attention, since if any component is deactivated, when the machine is turned on, the same element will not work in the equipment cycle.

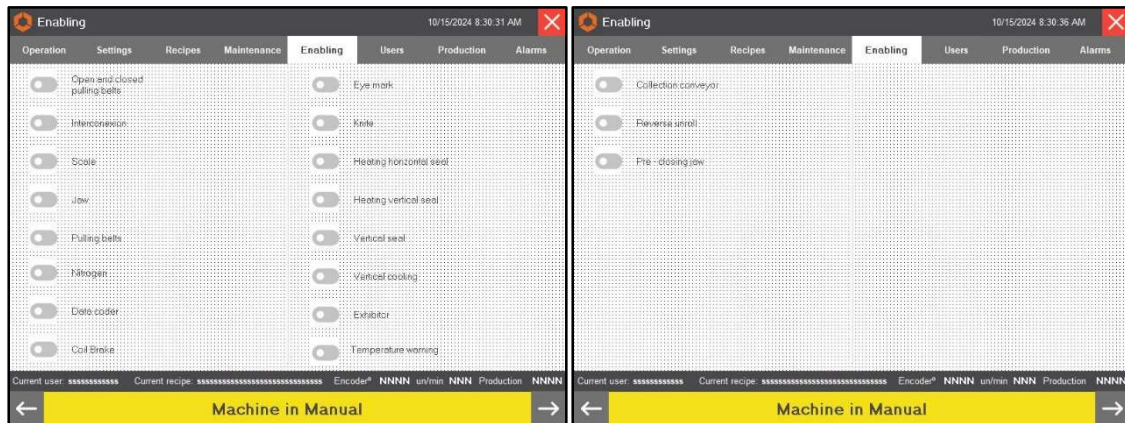

9.5 Production


Clicking the button **Production**, in any of the screens, will access the screen shown below:

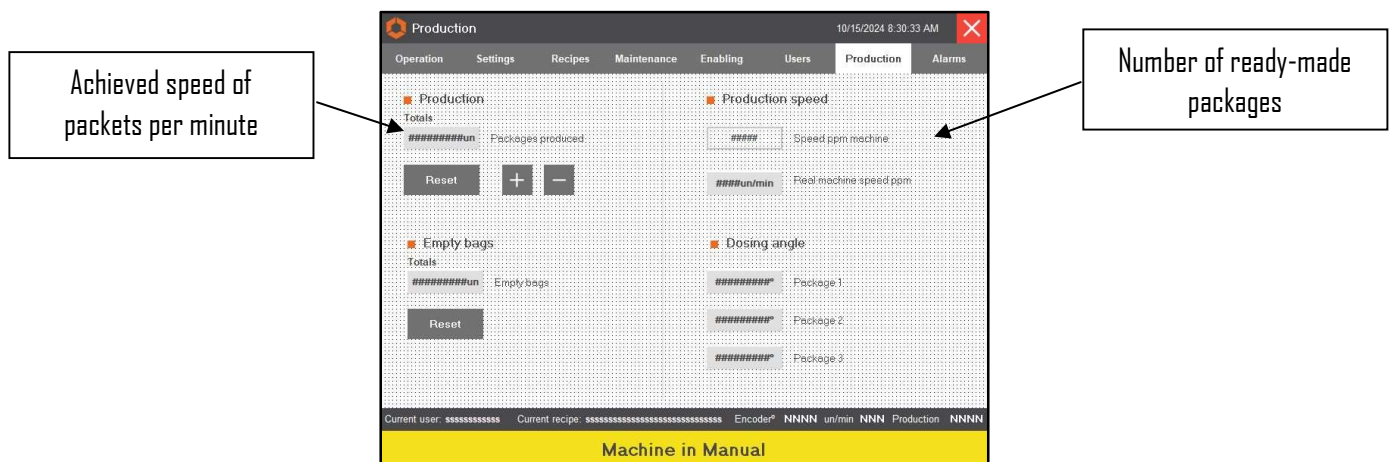



9.6 Recipes

To access the recipes, press the button **Recipes**, on the screen. It will give you access to the screen shown below:

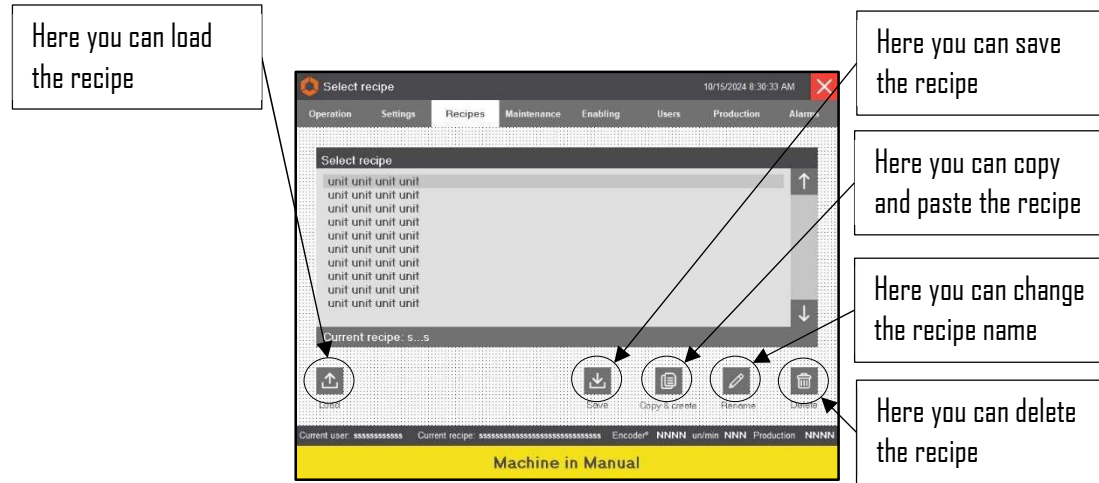

Use to navigate through the Recipes list.



Use to open the selected recipes.




Use this to save the changes you have made.



9.7 Alarms

To access the alarms, click on the button **alarms**, on the HMI main screen. In the alarms screen it is possible to register alarms for every moment in which the machine stops, either completely or by failure of a cylinder, sensor or other component, and that will be registered in the alarm manager screen.

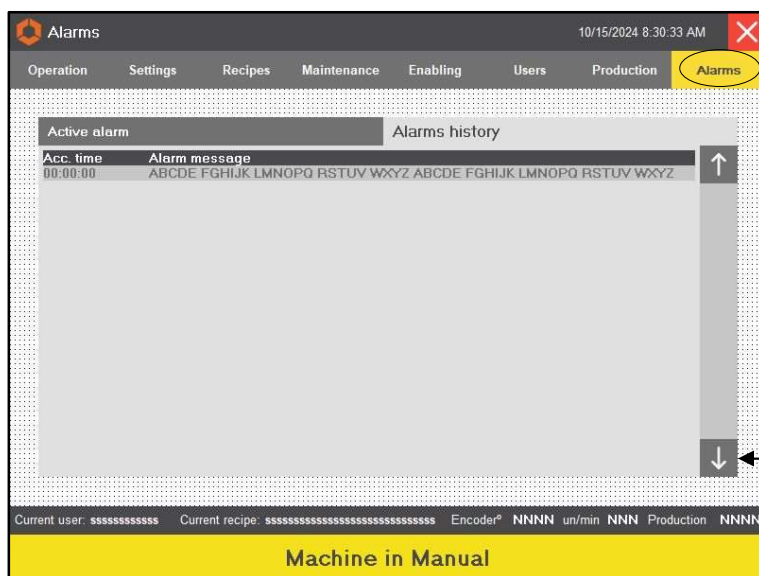

Alarm access screen, where you can set off the alarms according to your needs

By navigating with the buttons, you can see the active alarms of the equipment