



Operation Panel

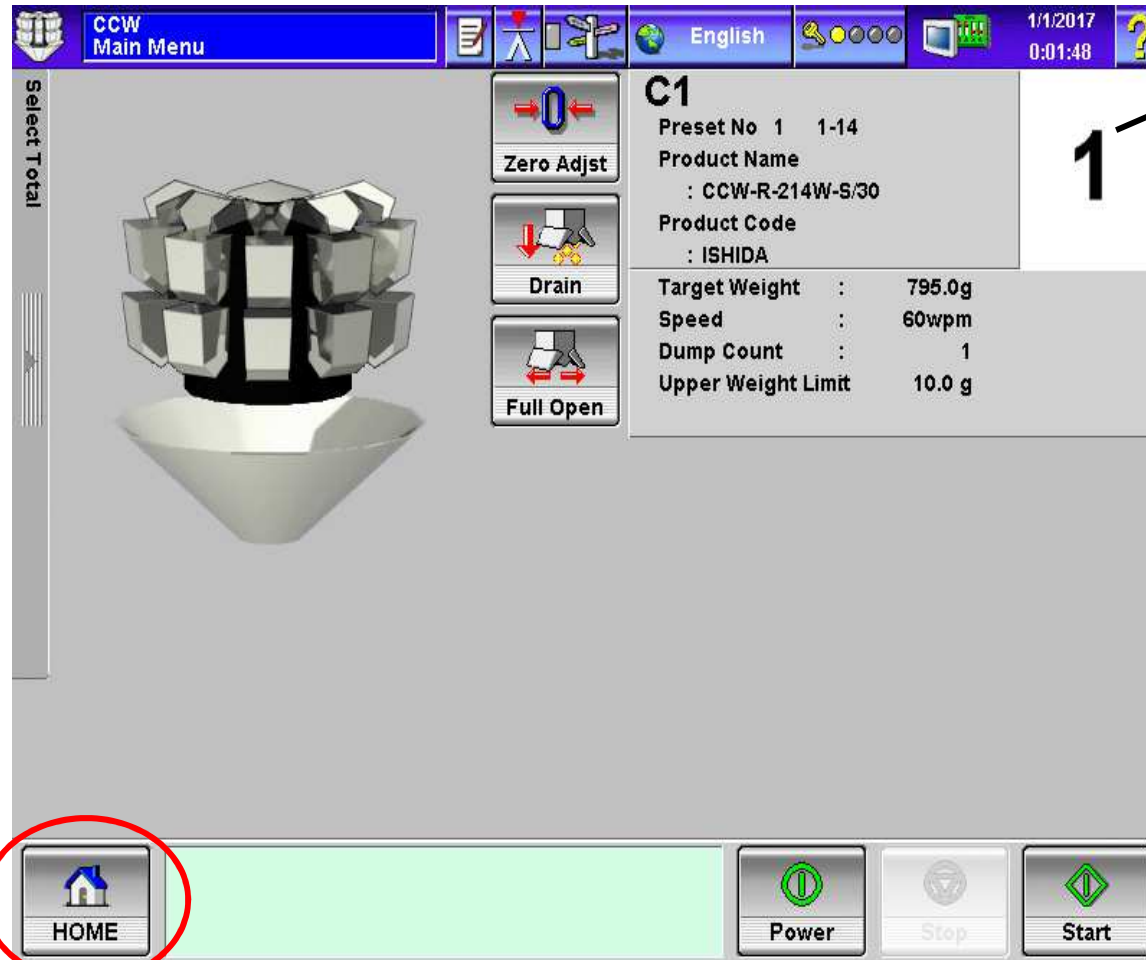

1 Preset Select

*Selects the Preset to run Production and NON-Production. Selections can be made between 1~200.


Zero Adjust

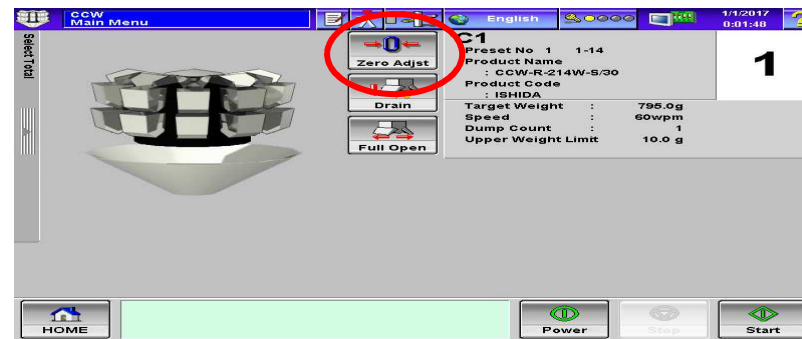

Select Any Head (Individual Head Weights)

*Selection of individual Weigh Hopper for Zero Adjustment.

NOTE: under normal operation, when highlighted BLUE, selection is ON or is available to be adjusted. GRAY is normally OFF or not adjustable.

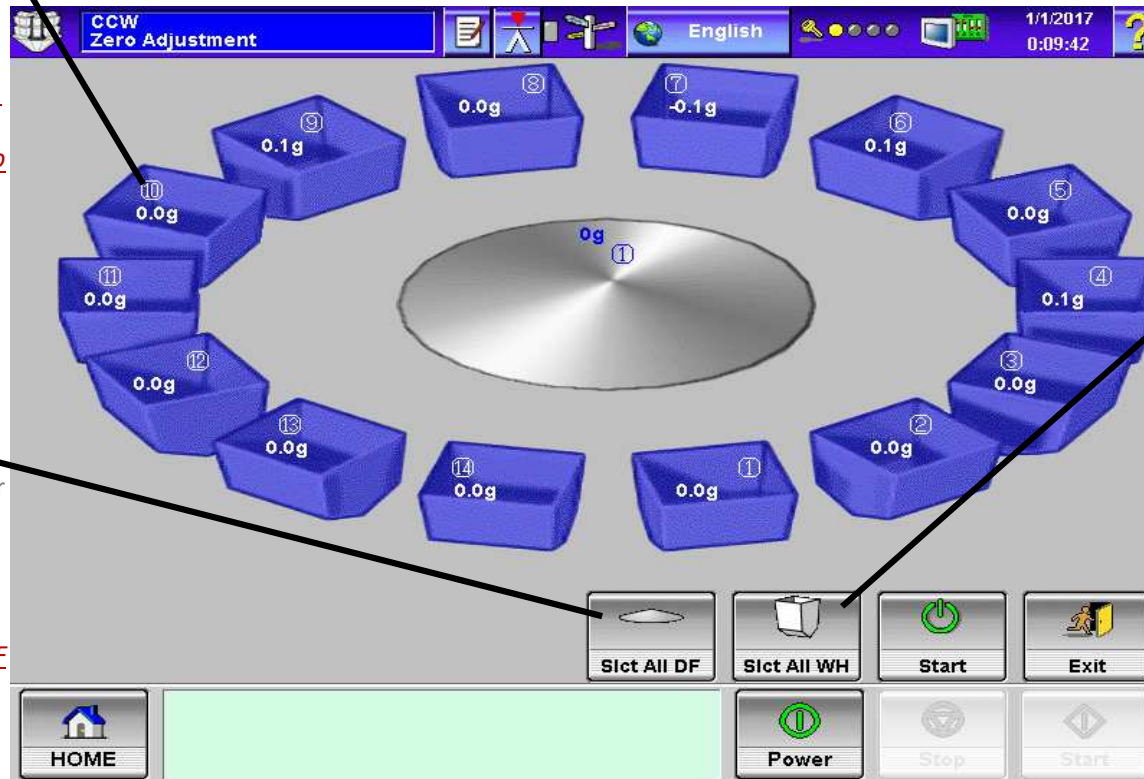

Select All DF


*Selection of Dispersion Feeder for Zero Adjustment. NOTE: under normal operation, when highlighted BLUE, selection is ON or is available to be adjusted. GRAY is normally OFF or not adjustable.

Select All WH Heads


*Selects All Weigh Hoppers for Zero Adjustment. NOTE: under normal operation, when highlighted BLUE, selection is ON or is available to be adjusted. GRAY is normally OFF or not adjustable.

Drain

HEAT AND CONTROL

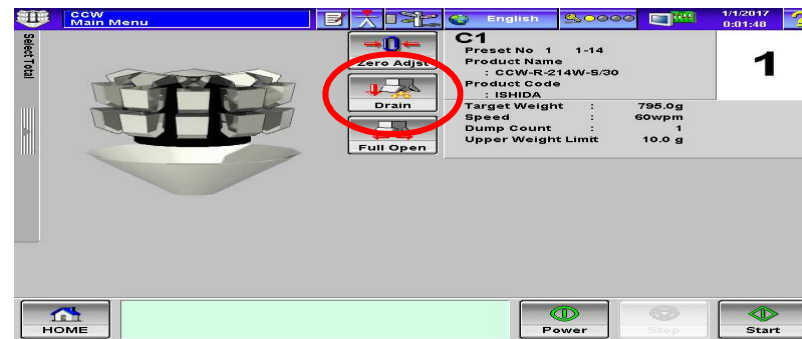

Weight Display
*Reflects the current weight in the Weigh Hopper and the Dispersion Table.

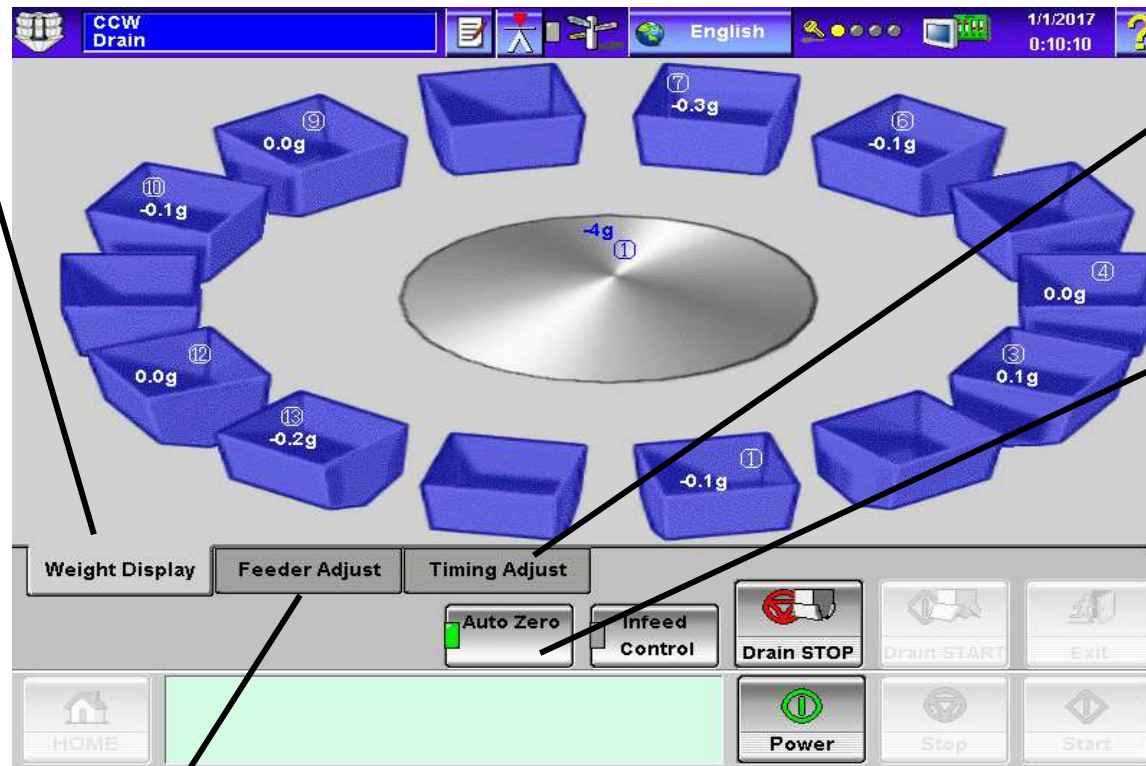

Timing Adjust

*Adjustment to the Timing can be manipulated without changes being stored in the Master Preset Memory.


Auto Zero Adjust

*Under normal operations, Auto Zero Adjustment will be completed every sixth cycle (default) of the WH. NOTE: If not selected the Weigh Hopper will not be auto zero every sixth cycle.

Feeder Adjust


*Adjustment to the RF/DF can be manipulated without changes being stored in the Master Preset Memory.

Full Open

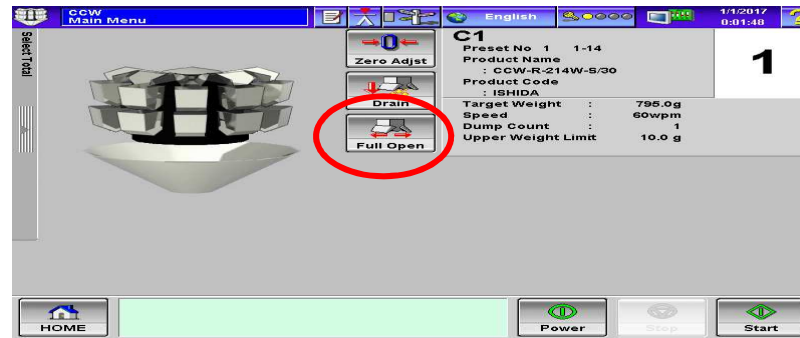

ALL DF Select

*Selects All Dispersion Feeders for Full Open Lock. Dispersion Feeders will vibrate for an AMP and TIME that is saved in the Master Preset memory. Dispersion Feeders will vibrate for a maximum of one-hour or until "closed," whichever comes first. NOTE: under normal operation, when highlighted BLUE, selection is ON or is available to be adjusted. GRAY is normally OFF or not adjustable.

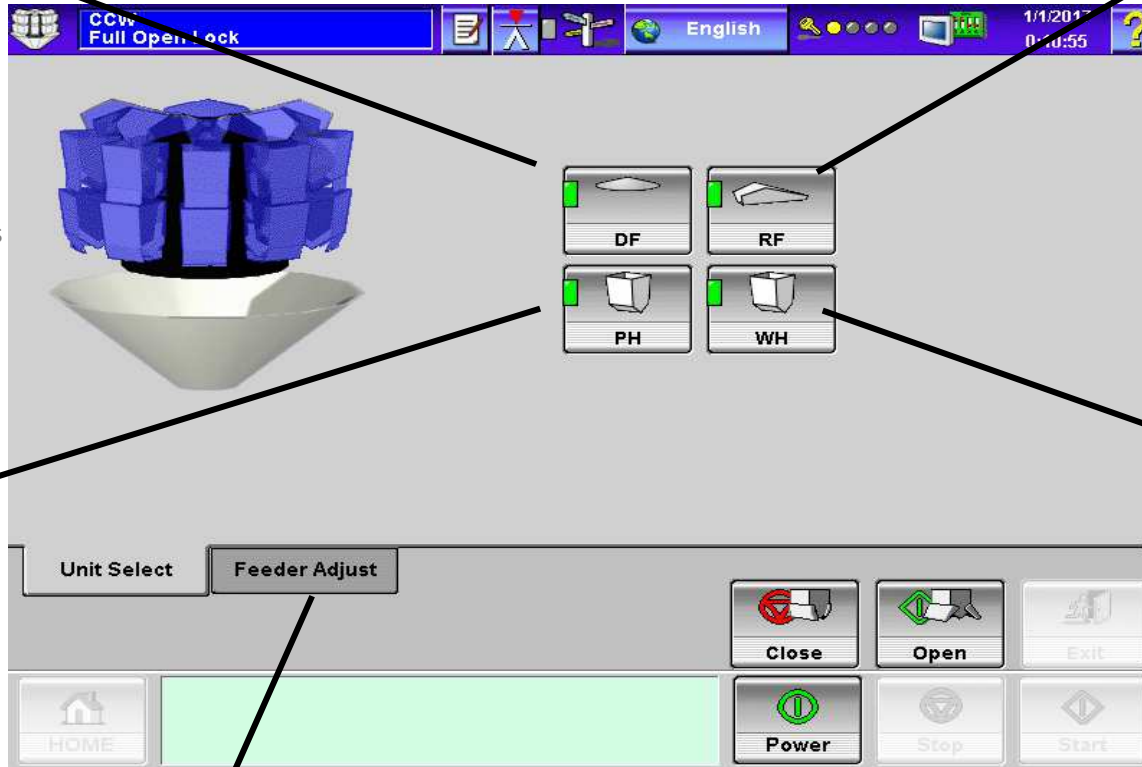

ALL PH Select

*Selects All Pool Hoppers for Full Open Lock. PH will remain in Full Open Lock for one-hour or until "closed," whichever comes first. NOTE: under normal operation, when highlighted BLUE, selection is ON or is available to be adjusted. GRAY is normally OFF or not adjustable.

Feeder Adjust

*Adjustment to the RF/DF can be manipulated without changes being stored in the Master Preset Memory.

ALL RF Select

*Selects All Radial Feeders for Full Open Lock. Radial Feeders will vibrate for an AMP and TIME that is saved in the Master Preset memory. Radial Feeders will vibrate for a maximum of one-hour or until "closed," whichever comes first. NOTE: under normal operation, when highlighted BLUE, selection is ON or is available to be adjusted. GRAY is normally OFF or not adjustable.


ALL WH Select

*Selects All Weigh Hoppers for Full Open Lock. WH will remain in Full Open Lock for one-hour or until "closed," whichever comes first. NOTE: under normal operation, when highlighted BLUE, selection is ON or is available to be adjusted. GRAY is normally OFF or not adjustable.



Preset Set-Up

Preset Set-up

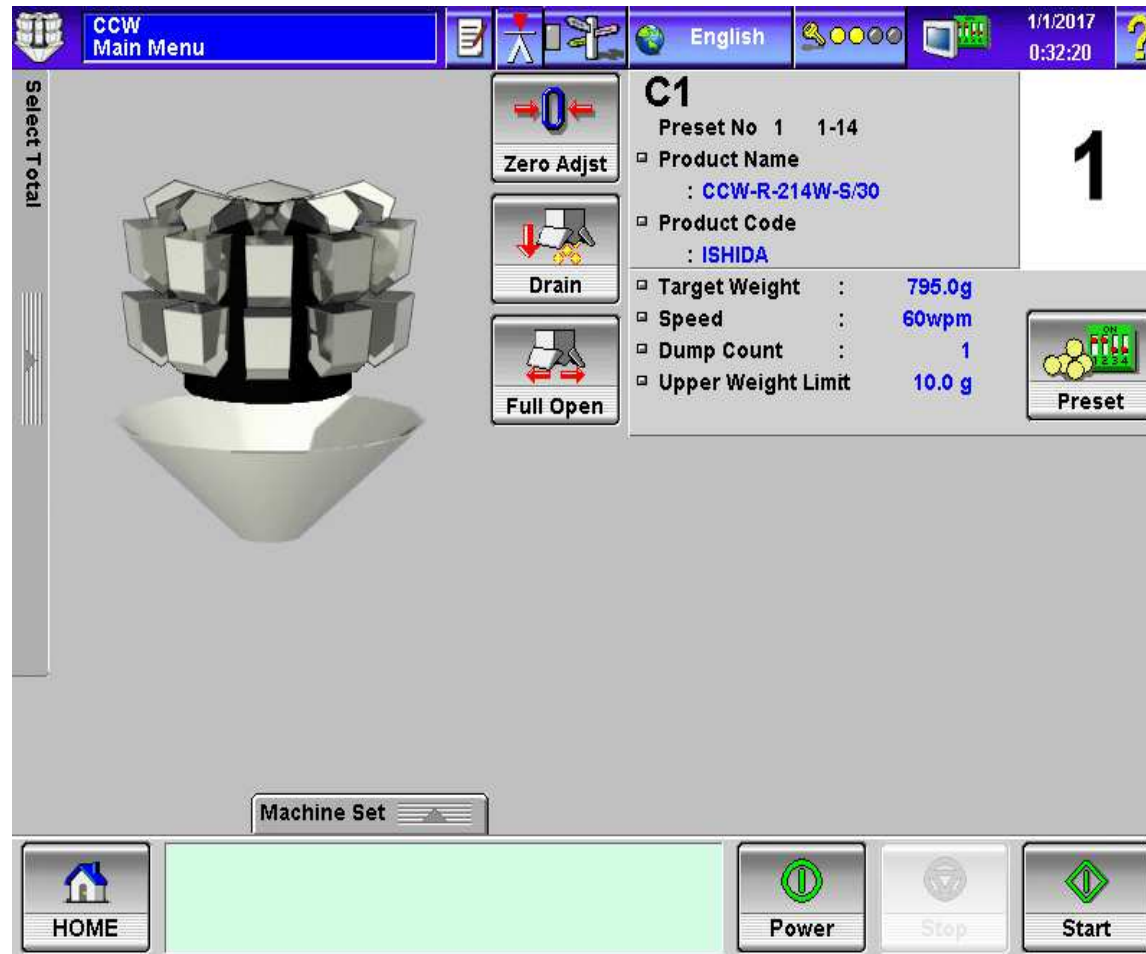

Product Set

*Selections can be made between 1~200.


Preset Selection

~ Photo



Selected Preset

*Under normal operation, when highlighted BLUE, selection is ON or is available. GRAY is normally OFF or not selected.

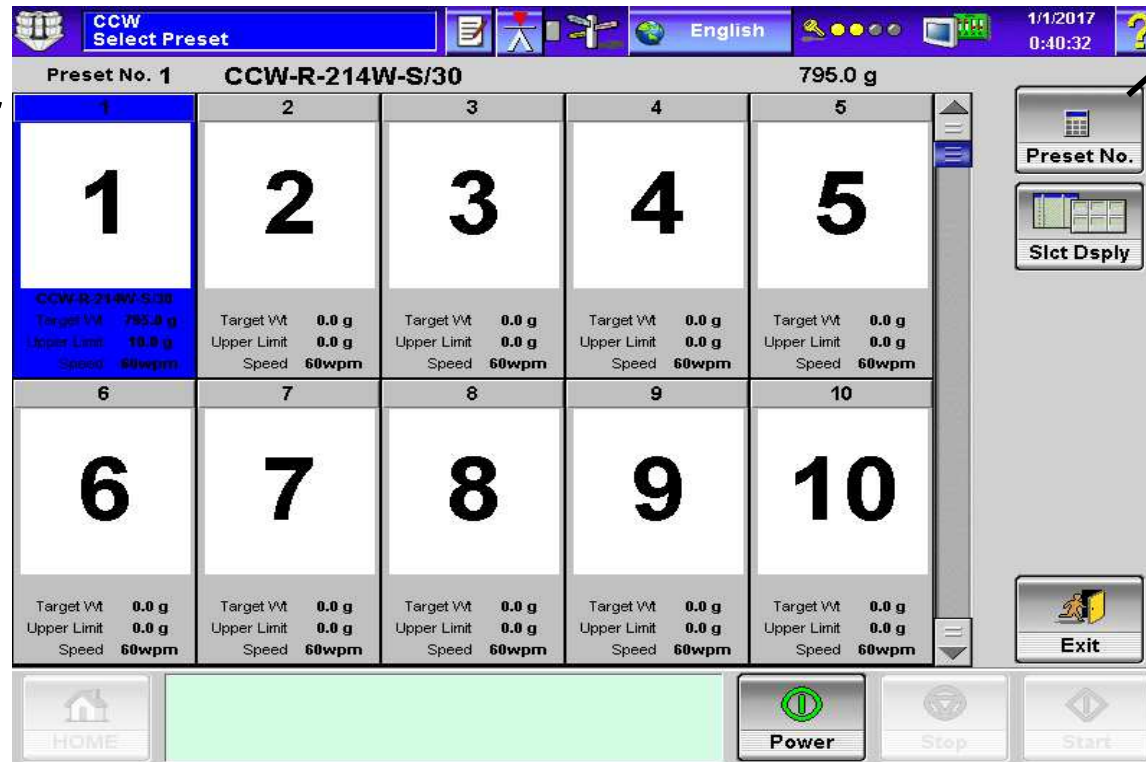

Select Preset No.

*Selections can be made between 1~200.

Select Display Type

*Selection display type can either be PHOTO or LIST.

Preset Selection

~ List



Selected Preset
*Under normal operation, when highlighted BLUE, selection is ON or is available. GRAY is normally OFF or not selected.



Select Preset No.

*Selections can be made between 1~200.

Select Display Type

*Selection display type can either be PHOTO or LIST.

Product Setting

~ Finish Product Setting

~ Product Set



HEAT AND CONTROL



Preset No. Select Up / Down

Product Name
*Maximum 24 characters

Product Code
*Maximum 16 characters

Product Category
*Maximum 4 characters

Print or Card Output
*See page 15 to select either printer or CF/USB card output.

Product Camera Key
*Selects the RCU Camera to take picture. NOTE: Picture can be selected in place of number from drop down box above.

Choose picture or number
*Selections can be made between number or photo.

Finish Prdct Setting

Feeder Adjustment

Timing Adjustment

Weight Setting

Camera

Output

Cancel

Exit

HOME

Power

Stop

Start

Preset No. 1 CCW-R-214W-S/30

Product Name
CCW-R-214W-S/30

Product Code
ISHIDA

Product Category
CCW

Target Weight
795.0g

Speed
60wpm

Dump Count
1

Upper Weight Limit
10.0 g

Machine Set

HOME

Power

Stop

Start



Product Setting

~ Finish Product Setting

~ Machine Set



Speed (wpm)


*See Interlock Parameters Guide, Pages 28-29 for further explanation on Speed

Dump Count

*Refers to the amount of "Dumps" the weigher will need to dump to meet the desired Target Weight. Under normal operation, set to 1 Dump Count.

Average Control

*Allows for a Lower Limit weight. Will allow the weight of the discharge to be below the Target Weight, however, the average of all discharges will be at or above the Target Weight.

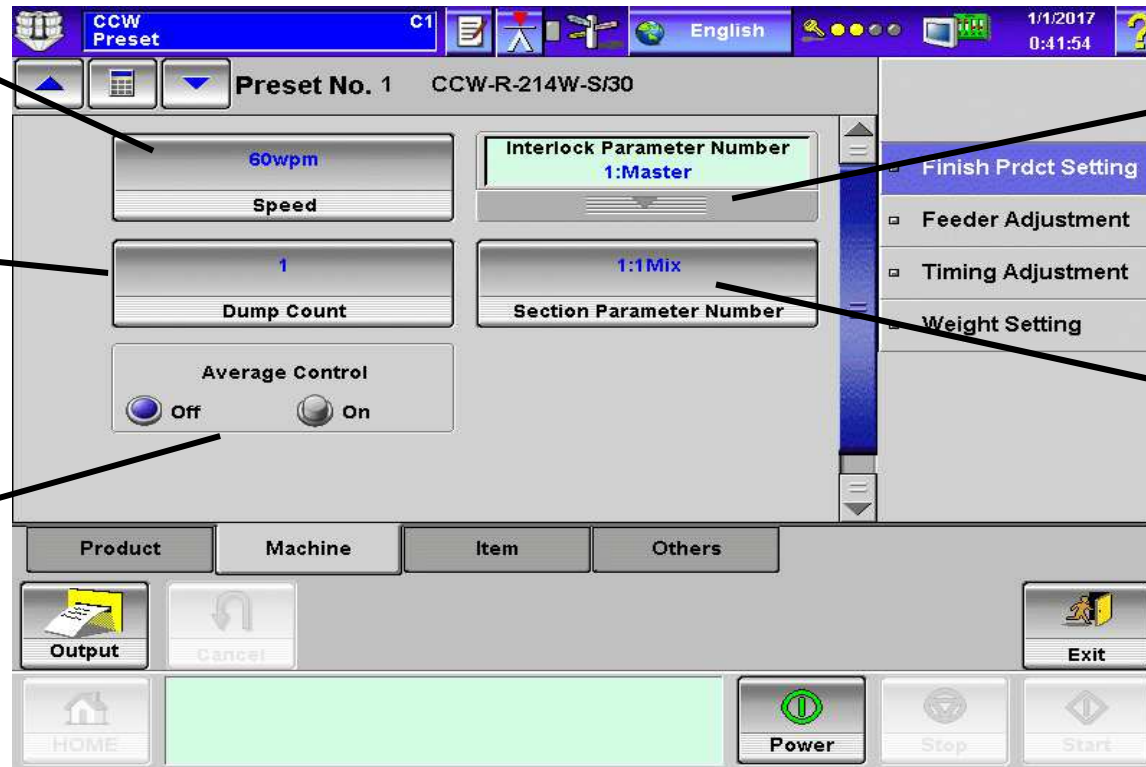

Interlock Set


*See Interlock Parameters Guide, Pages 28-29 for further explanation on the various interfaces: Master, Slave, Stroke on Demand & Bag on Demand

Section Set

*Under normal operation, set to 1:1 Mix. Only used if CCW is used to "MIX" multiple products.

Interlock Parameters


Master An interlock mode in which a discharge occurs after an internally set calculation interval elapses and a signal is received from the packer.

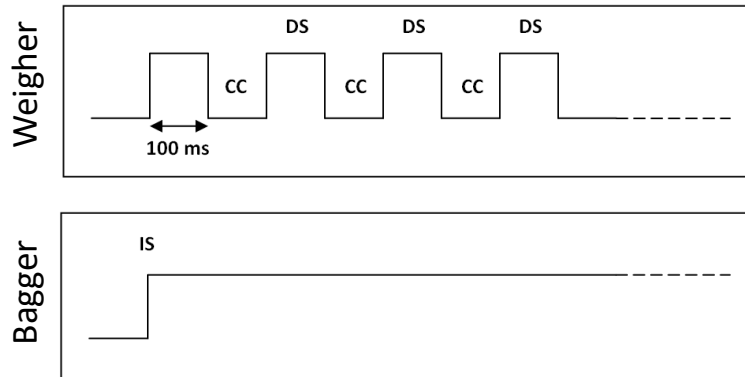

{
 bagger sends IS to weigher & holds high constantly
 weigher calculates combination
 weigher dumps product
 weigher sends DS to bagger

- * speed is controlled by the weigher
- * the bagger must run 5 - 10 bags faster than the weigher

Slave An interlock mode in which the weigher discharge is initiated by the signal from the packer.

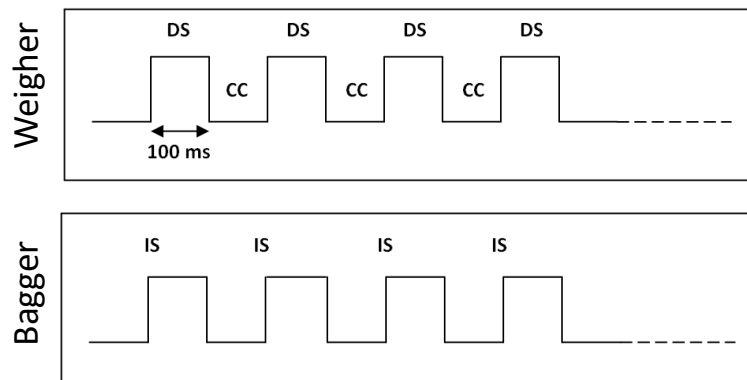


{
 the bagger sends IS to weigher
 the weigher calculates combination
 the weigher dumps & sends DS to bagger

- * speed is set by the bagger
- * if weigher misses cycle, it waits for IS to start next cycle
- * best option for high speed operation (+80 bpm)

Interlock Parameters

Stroke on Demand

An interlock mode in which the weigher and the packer exchange confirmation signals before discharge.

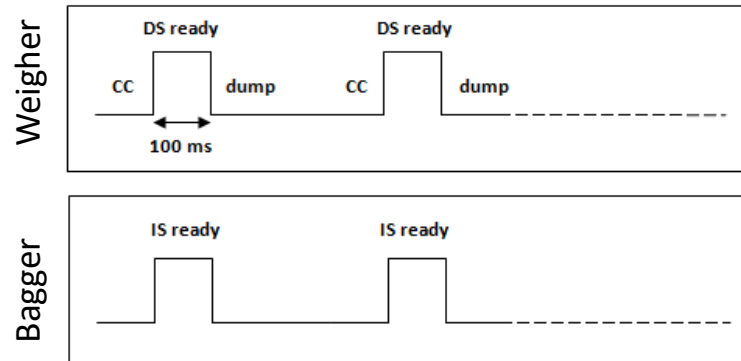


{
weigher calculates combination first
weigher sends DS to the bagger
bagger sends IS to the weigher
weigher dumps product

- * speed is set by bagger
- * the weigher must cycle 5 - 10 bags faster than the bagger
- * if weigher misses cycle, it will automatically re-feed and recalculate until a combination is found

Bag on Demand

An interlock mode in which a self-run calculation & discharge is performed after a signal is received from the packer.

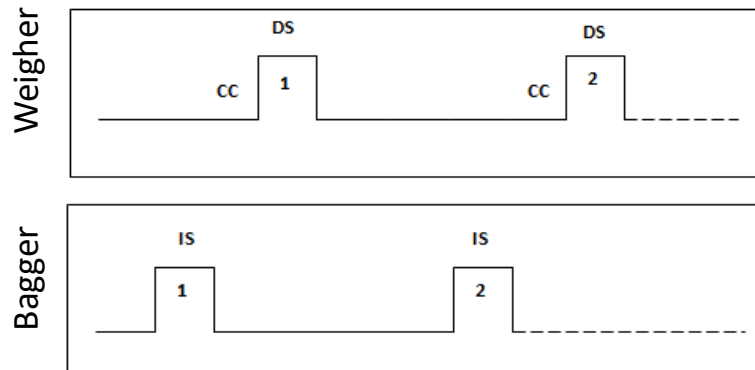

{
bagger sends only one IS to weigher
weigher immediately calculates combination
weigher sends DS to bagger & dumps product

- * if the weigher misses a cycle, it will automatically refeed and recalculate until a combination is found.
- * similar to slave mode, but used very little



Product Setting

~ Finish Product Setting


~ Item Set



Auto FD Target
*Under normal operation, set to 3.8.

Disch. Priority
*Under normal operation, set to 30. If product is not discharged from a Weigh Hopper, on the proceeding combination, the weigher will make that Weigh Hopper a priority and will utilize that weight as long as a valid combination can be attained (a weight this is between the Target Weight and the Upper Limit).

Good Effic. Judgment
*Under normal operation, set to 99.0%.

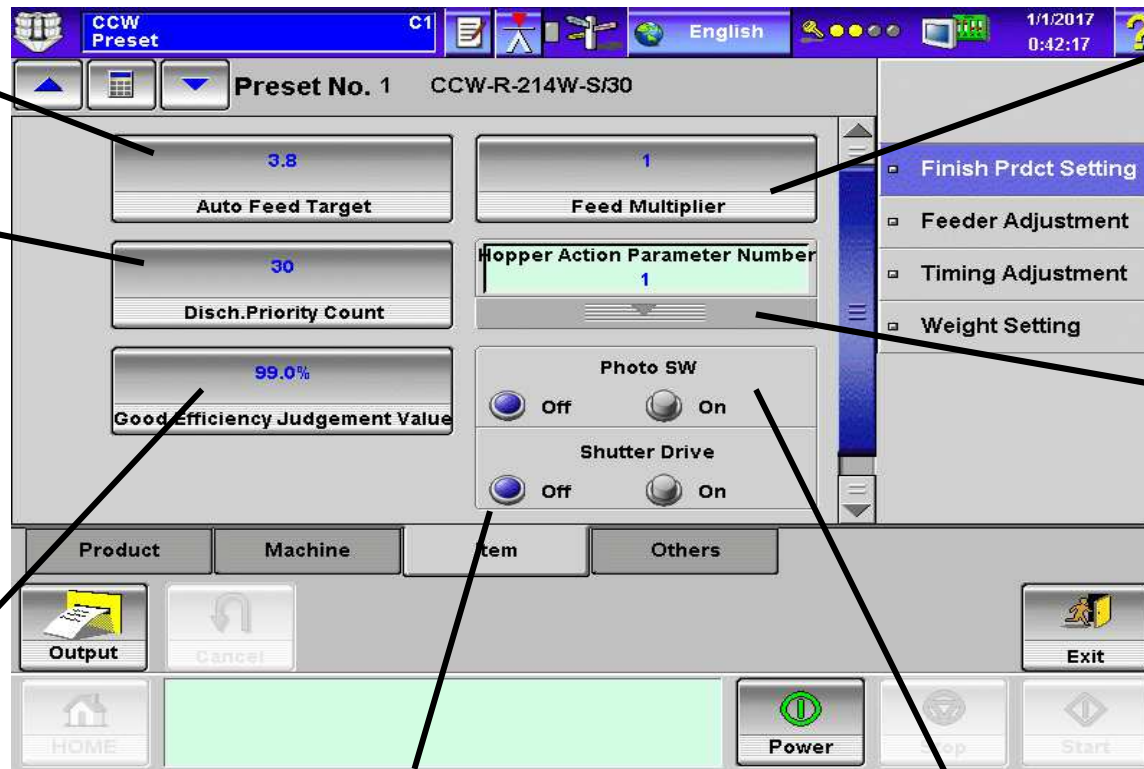

Feed Multiplier
*Under normal operation, set to 1. If Radial Feeder and/or Dispersion Feeder TIME is set to 99 but is not able to move product adequately, changing Feed Multiplier from 1~9 will allow for more time to be attained.

Hopper Action
*Under normal operation, set to 1. If production speed is considered to be high speed and individual Weigh Hopper weights are small, can be changed to Hopper Action 2. If Weigh Hopper weights are great, can be changed to Hopper Action 3.

Shutter Drive
*Under normal operation, set to OFF.

RF Photo SW
*Under normal operation, set to OFF.



Product Setting


~ Finish Product Setting

~ Other Set



Stable Time

*Under normal operation, leave at individual machine value. The period of time from when the Weigh Hopper begins to receive product to when the product is weighed. Allows for the product to become stabilized/settle so that the weight can be weighed in a static manner.

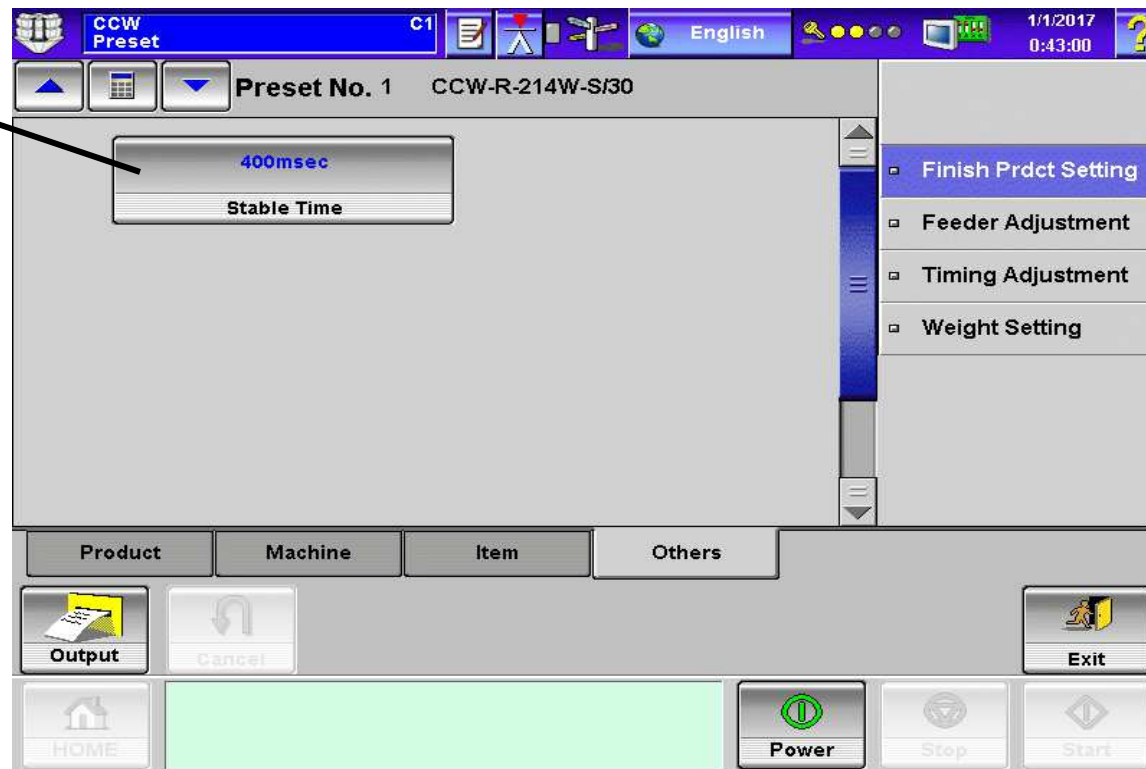

Product Setting

~ Feeder Adjust

Dispersion Feeder Target Weight Select

*Under normal operation set percentage values above and below to 20%. The Target Weight is the value of weight that will be feed to the Dispersion table during production. In addition, a percentage above and below the DF Target weight value is selectable.



Amplitude Key

Time Key


Default Values

*Standard Default Values are TIME 25.0 and AMP 50.0

Optimum Values

*Optimum Values are only available if selection to save to memory was performed during production. **NOTE:** During production must be in Site Engineer Level or higher to save to Optimum Values.

Amplitude / Time Displays

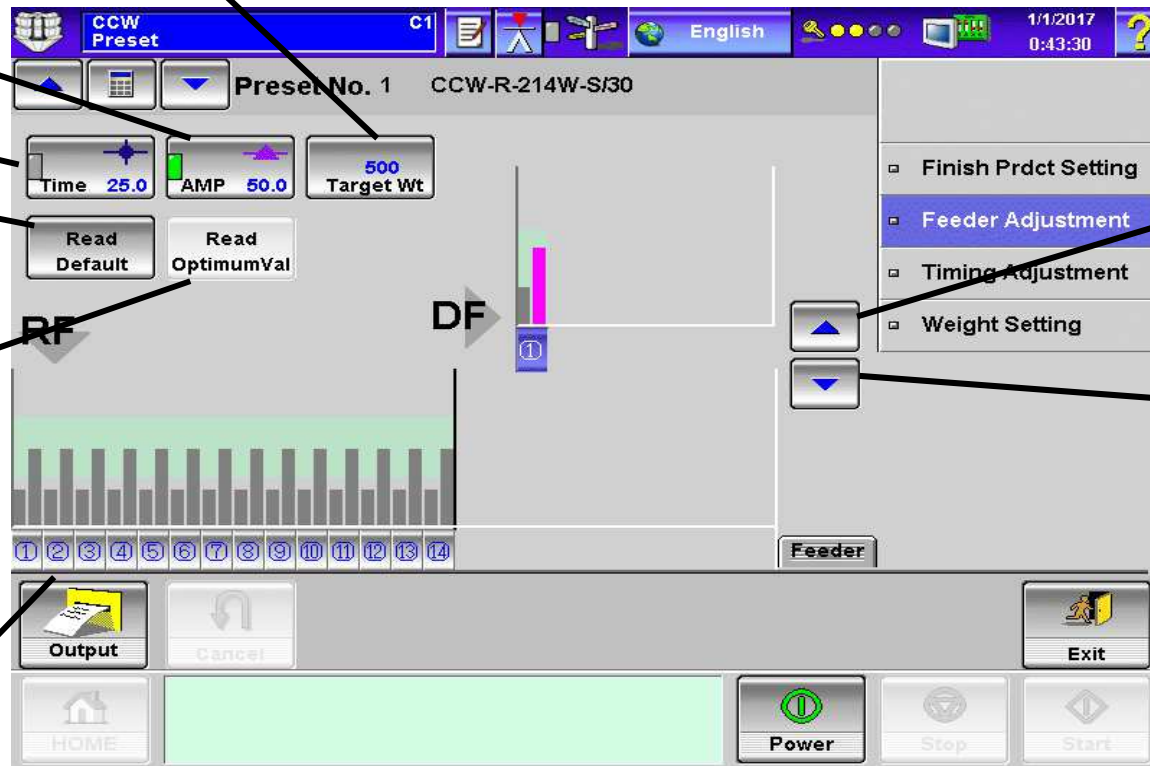

Increase Value

*Will increase the TIME or AMP values incrementally per one step.

Decrease Value

*Will decrease the TIME or AMP values incrementally per one step.

Product Setting

~ Timing Adjust


*Before making changes to values, see page 47 for further explanation on Timing Adjustments'



Auto Calculation

*Under normal operation, the Auto Calc. is set to OFF. When the Auto Cal. is set to OFF, no changes will be made to the various timing settings. However, if the Auto Cal. is set to ON when a change is made to the WH ON, the WH-PH will automatically be adjusted, and when a change is made to the PH ON, the PH-RF will automatically be adjusted.

NOTE: when changing the WH ON or the PH ON the automatic adjusted change will be equal to the time increase/decrease of the change made.

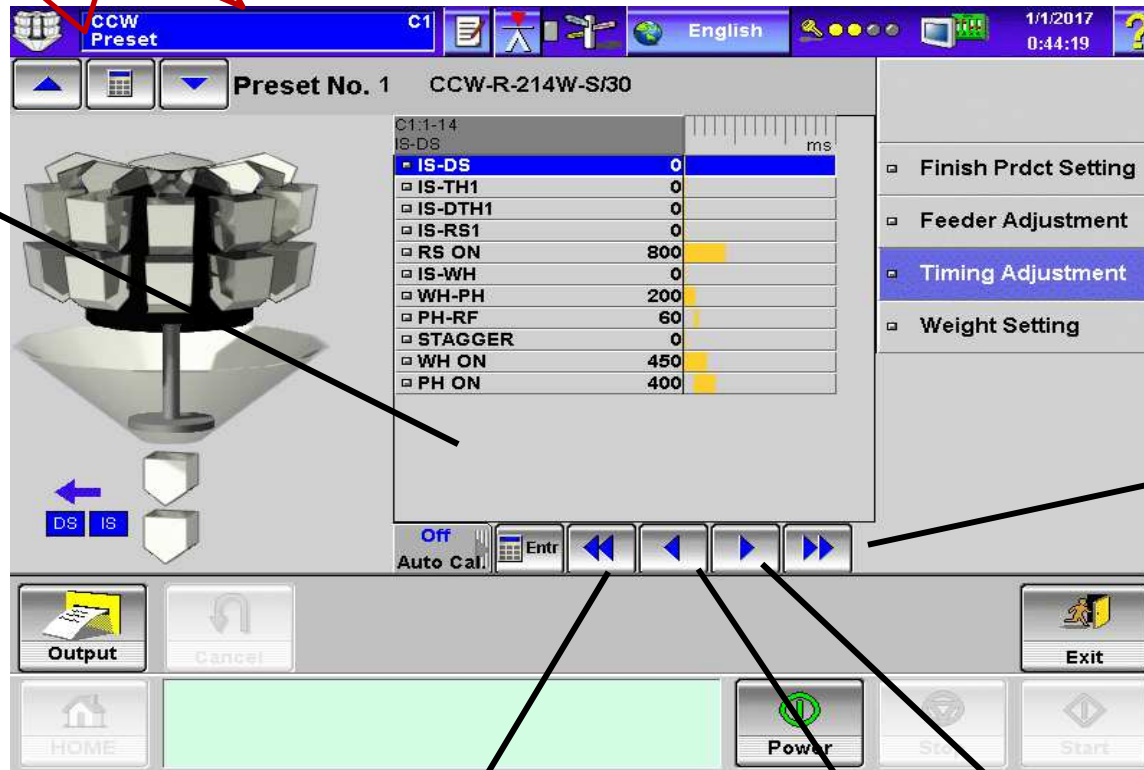

Increase
X100

Decrease
X100

Increase/Decrease
X10





Product Setting

~ Weight Setting

Extended Upper Limit

*If a combination can not be made between the Target Weight and the Upper Limit, a combination can be found that is above the Upper Weight Limit. **The key is unavailable when the upper weight limit is 0.0g. If 0.0g is set, the Extended Upper Limit will be 0.0g.**

Upper Limit


*The Upper Limit sets the upper limit of the proper weight. **If 0.0g is set, the Upper Weight Limit is infinite.**

Target Weight

*The Target Weight sets the weight of products to be discharged from the CCW to the packaging machine.

Lower Weight Limit

*The Lower Weight Limit sets the lower limit of the proper weight. **If 0.0g is set, the Lower Weight Limit is 0.0g. NOTE: The Lower Limit will not be available unless Average Control has been selected to ON.**

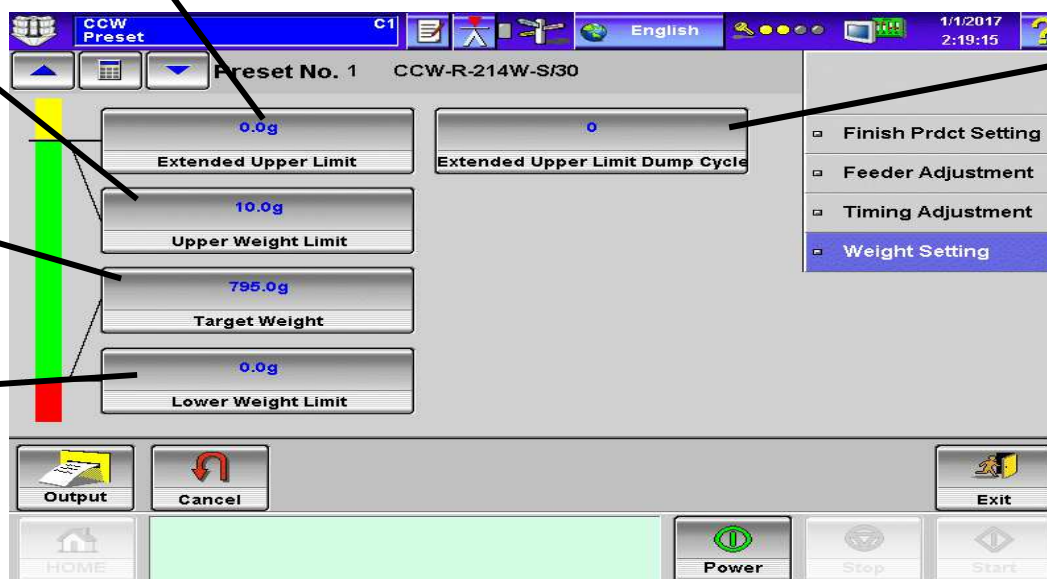

Extended Upper Limit Dump Cycle

*Will only allow for the Extended Upper Limit to be used in the value set in the Dump Cycle. **The key is unavailable when the upper weight limit is 0.0g. If 0 is set, the Extended Upper Limit Dump Cycle will be not be used an no Extended Upper Limit will be obtained.**

Target Weight (g)	Automatically Set Value
5.0 - 50.0	9% of the target weight
50.0 - 100.0	4.5g
100.0 - 200.0	4.5% of the target weight

Target Weight (g)	Automatically Set Value
200.0 - 300.0	9g
300.0 - 500.0	3% of the target weight
500.0 - 1000.0	15g
1000.0 - 10000.0	1.5% of the target weight

Home Screen/Production Pop-Up Menu



- Histogram**
*See page 36 for image specific
- X-bar Chart**
*See page 36 for image specific
- Weigher's Transitional Data**
*See page 36 for image specific
- Per Head – Cmb.**
- Participation Data**
*See page 36 for image specific
- Total Setting**
*See page 36 for image specific
NOTE: Must be in Site Engineer Level or higher to change or access.
- Operation Log**
*See page 36 for image specific

