



Self Diagnosis

~ Test Drive

NOTE: In Display and Data Manager:
Layout Setting, selection of this
screen can be set to be in either Site
Engineer, Installation or Maintenance
level.

HEAT AND CONTROL

Head Selection

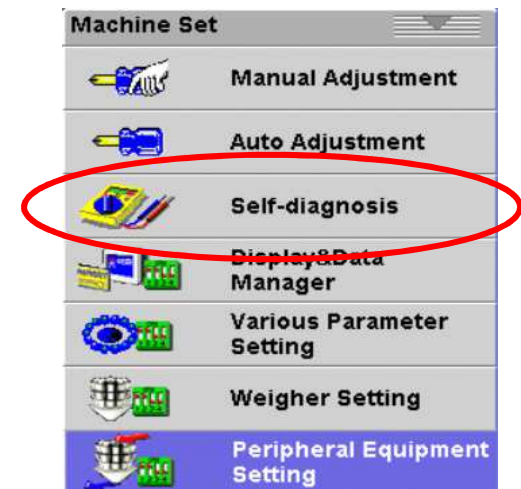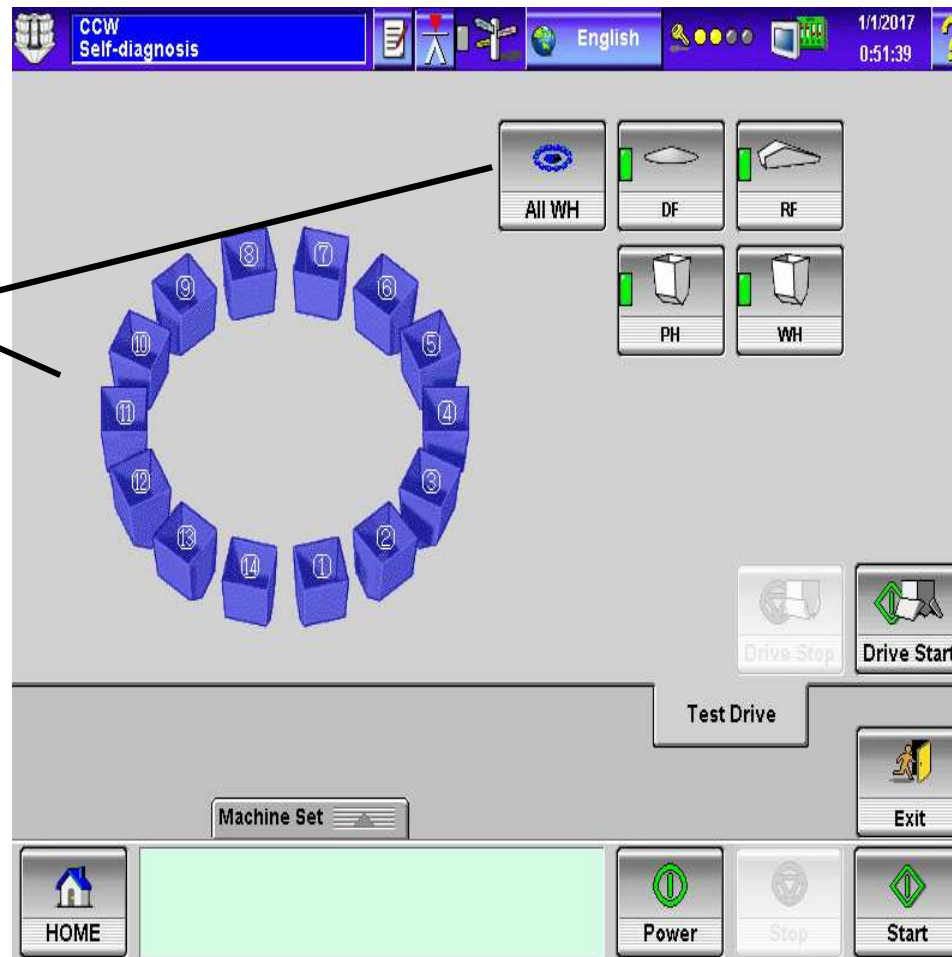



Display & Data Manager

~ Preset Manager/Machine Set Manager

CF/USB card must be initialized if using CF/USB card for first time



1. Select level MAINTNANCE (default password 1, 2, 3)
2. Select Machine Set
3. Select Display and Data Manager
4. Select All Setting Manager
5. Select Card initialize

Backup of Preset Manager and Machine Set Manager to CF/USB Card (*NOTE: *backup of this type of memory cannot be read on a desk top computer*).

1. Select level INSTALLATION (default password 2)
2. Select Machine Set
3. Select Display and Data Manager
4. Select Preset Manager (NOTE: will take approximately 10-20 seconds for weigher to recall memory for all Presets)
5. Select **SOURCE** *memory* and **DESTINATION** *card*
6. Either select each individual column to be copy/transferred or select All Select to copy/transfer all 200 columns from Source Memory to Destination Card.
7. Select Machine Set Manager
8. Select **SOURCE** *memory* and **DESTINATION** *card*
9. Either select each individual column to be copy/transferred or select All Select to copy/transfer all columns from Source Memory to Destination Card.

Recommend using a Compact Flash card with 128MB or a USB Drive of 1GB.

Display & Data Manager

~ Preset Manager

Initialize Key
*Deletes the selected Preset.

Memory / Card Source Select

Memory / Card Destination Select

Preset List Source Select
*Selects the individual Source memory.

Select All Presets
*Selects all Source memory.

Preset List Destination Select
*Selects the individual Destination memory.

Copy Key
*Copies the selected memory Source to the selected memory Destination.

Machine Set

Machine Set	Function
Manual Adjustment	Manual Adjustment
Auto Adjustment	Auto Adjustment
Self-diagnosis	Self-diagnosis
Display&Data Manager	Display&Data Manager
Various Parameter Setting	Various Parameter Setting
Weigher Setting	Weigher Setting
Peripheral Equipment Setting	Peripheral Equipment Setting

The main interface shows two columns: **Source** and **Destination**. Both columns have a 'Memory' dropdown and a list of product names. The first entry in both lists is '1 CCW-R-214W-S/30'. Between the lists are 'Copy' and 'All Select' buttons. At the bottom, there are tabs for 'Layout Setting', 'Preset Manager', and 'Machine Set Mngt'. The 'Machine Set' dropdown is currently set to 'Machine Set'. At the very bottom are 'HOME', 'Power', 'Stop', and 'Start' buttons.

Display & Data Manager

~ Machine Set Manager

Initialize Key
*Deletes the selected Machine Set and returns values to default.

Machine Set List Source Select
*Selects the individual Source memory.

Select All Machine Settings
*Selects all Source memory.

Memory / Card Source Select

Memory / Card Destination Select

Machine Set List Destination Select
*Selects the individual Destination memory.

Copy Key
*Copies the selected memory Source to the selected memory Destination.

Machine Set

Manual Adjustment
Auto Adjustment
Self-diagnosis
Display&Data Manager
Various Parameter Setting
Weigher Setting
Peripheral Equipment Setting

The main interface shows two columns: **Source** and **Destination**. Both columns have a list of settings (1-10) and a **Copy** button. The **Source** column is currently set to **Memory** and the **Destination** column is set to **CF/USB**. The **Machine Set** dropdown at the bottom is set to **Machine Set Mng**. The bottom status bar includes **HOME**, **Power**, **Stop**, and **Start** buttons.

Various Parameter Setting

~ Weigh Spec Set



HEAT AND CONTROL



Load Cell Weigh Range
 *Allows to toggle between the lower and upper ranges of the load cell range. **Default is set to the lower of the two load cell ranges.**

Empty Judgement Weight
 *Sets what the empty weight in the weigh hopper will be considered. Once the weight in the Weigh Hopper exceeds the Empty Judgment Weight, the Weigh Hopper will be considered for a combination calculation. **Default is set to 1.0g.**

Auto Zero Tolerance
 *Sets what the maximum weight in the weigh hopper will allow for an Auto Zero during production. If the weight in the Weigh Hopper exceeds the Auto Zero Tolerance, at the time of the Auto Zero, the Weigh Hopper will error resulting in an Zero Error. **Default is set to 4.0g.**

Auto Zero Interval
 *Sets the frequency in which, during production, the Auto Zero function will take place. NOTE: if set to 0, the Auto Zero Frequency is OFF. **Default is set to 6.0g.**



Stable Judgment Weight

*Sets the maximum allowable tolerance for deviation between each stable weight check. **Default is set to .15g for load cell range of 400 and .30g for load cell range of 800.**

Stable Count

*Sets the amount of stable count checks that will be performed before the weight in the Weigh Hopper is considered to be stable. **Default is set to 3 for older weigher and 6 for newer weighers.**

AFV Filter Auto / Off

*Sets whether or not the AFV filters are set to ON or OFF. **Default is set to Filter 0 – AUTO, Filter 1 – AUTO, Filter 2 – AUTO, Filter 3 – OFF, Filter 4 – OFF.**

Various Parameter Setting

~ Combination Set

Compensation

*Sets a weight value that is above the target weight but below the upper limit for the first combination check. During the second check (re-check), the compensation value is set to OFF and a proper discharge must then be between the target weight and the upper limit values. **Default is set to 0.3g.**

Auto Compensation Revision

*When set to ON, the weigher will determine a compensation value based off previous first checks and second check combinations. **NOTE: when set to ON, the compensation value may be below the Compensation Value or above the Compensation Value.** **Default is set to OFF.**

Error Stop Head Count

*Sets the amount of errors for No Act. that need to be reached before weigher stops and operator intervention is needed. **Default is set to 1 Error Head.**

CCW Various Parameter Setting

English

1/1/2017 1:07:04

Output

Compensation Value: 0.3g

Auto Compensation Revision: Off On

Action for Error

Zero Error: Auto CLR Stop No Act

PH,WH,BH Hopper Error: Auto CLR Stop No Act

Overscale Error: Auto CLR Stop No Act

Stop with 1 Error Heads

Error Stop Head Number

Stop w/ Continuous Error 4 TM

Overweight Error Stop Count

Weigh Spec Set Combination Set Sectioning Set

Machine Set

HOME Power Stop Start

Overweight Error Count

*Sets the amount of consecutive Overweight warning until the weigher stops and operator intervention is needed. **NOTE: if set to 0 the weigher will automatically dump the overweight combination.** **Default is set to 4.**



HEAT AND CONTROL



Zero Error Action

Hopper Error Action

Overscale Error Action

*Sets the action for the Error. If set to Auto CLR, product will be released with a warning message. If set to Stop, product will not be released and an error message will appear. Operator will need to clear error for the weigher to continue performance. If No Act is set, the product will not be released, a warning message will be received, but the errored hopper will be "shut off" until the Error Stop Head Number has been reached. Once reached the operator must address each error. **Default is set to STOP.**

Various Parameter Setting

~ Sectioning Set



HEAT AND CONTROL



Parameter Set
 *Sets the section heads that will be considered for a combination calculation.
 Under normal conditions, set to 1~14.

CCW Various Parameter Setting

English

1/1/2017 1:07:25

Output

Number	S1	S2	S3	S4	S5	S6	S7	S8
1	1-14							
2	1-14							
3								
4								
5								
6								
7								
8								

Smallest Head No in section: 1

Largest Head No in section: 14


Delete

Weigh Spec Set Combination Set Sectioning Set

Machine Set

HOME

Power Stop Start

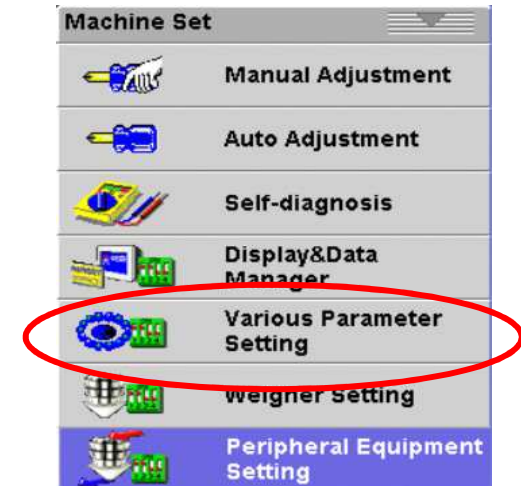

Weigher Setting

~ Active Head

HEAT AND CONTROL


NOTE: In Display and Data Manager: Layout Setting, selection of this screen can be set to be in either Site Engineer, Installation or Maintenance level.



All Head Select



Deactivate Head

*Will deactivate the use of the Weigh Hopper. NOTE: the Weigh Hopper will remain deactivated until being activated.

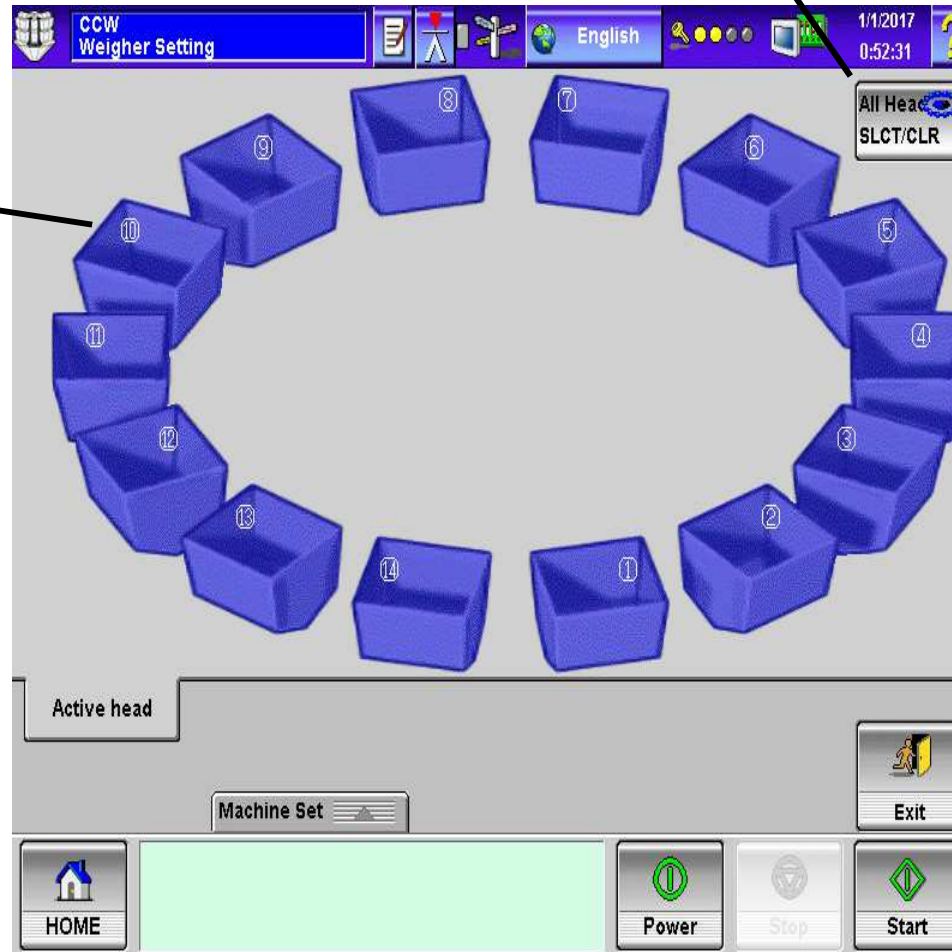

Weigher Setting

~ AFD Setting

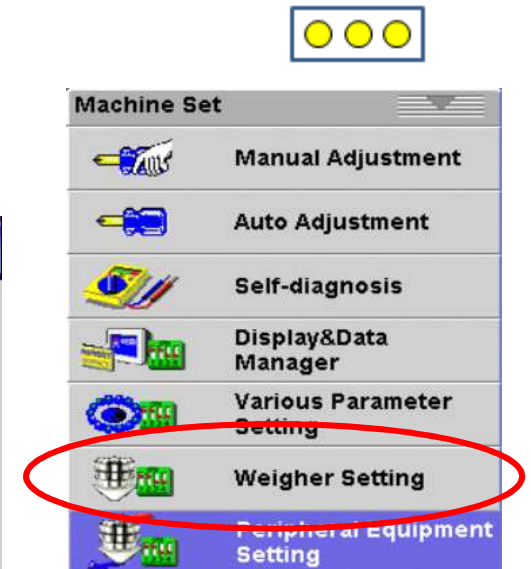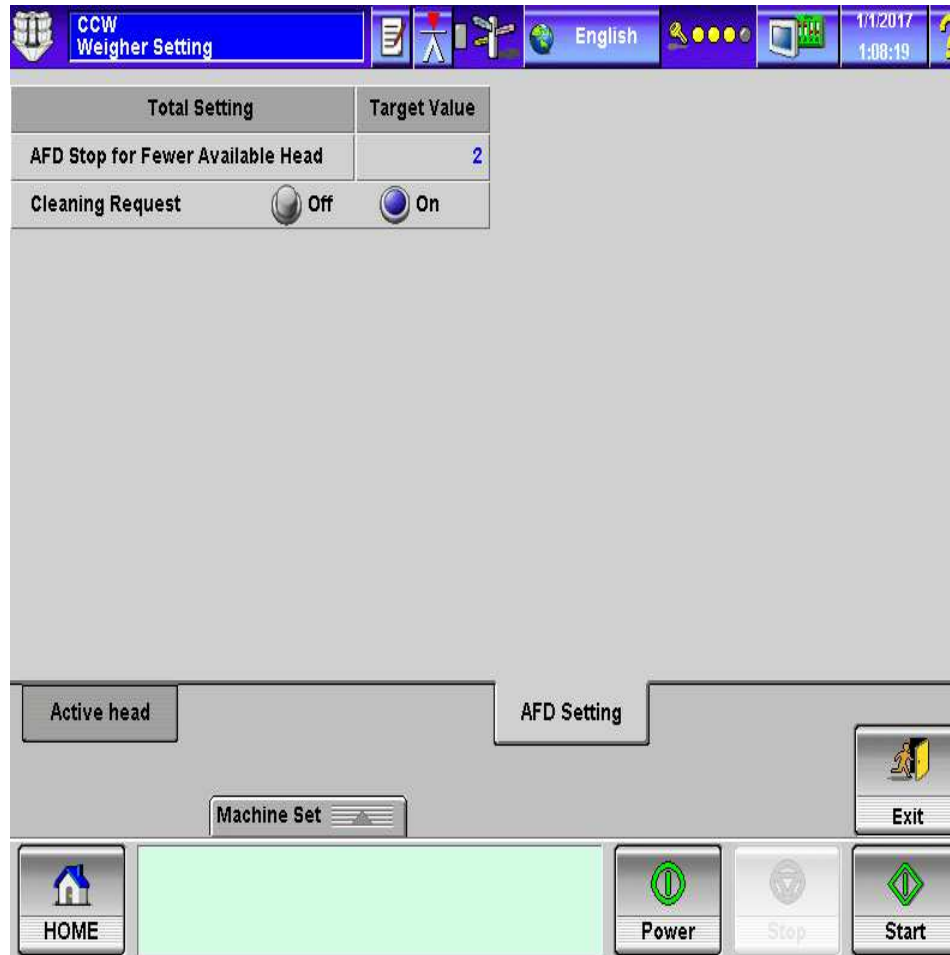

Peripheral Equipment

~ Packer Interlock Set



HEAT AND CONTROL



Parameter No.

Dump Confirm Hold


*Sets the time that the discharge completion signal will remain "ON." **NOTE: when using Stroke-On-Demand interface, the Dump Confirmation Hold signal time does not apply.**

Multi Dump Initiate

*When set to SELF, will only require one interlock signal from the bagger to discharge the proper combination. When set to SYNC will need an interlock signal from the bagger for each discharge until the full proper combination has been met.

Multi Dump Confirm

*When set to First, the weigher will send the confirmation signal after the first "dump." When set to Last, the weigher will send the confirmation signal after the last "dump."

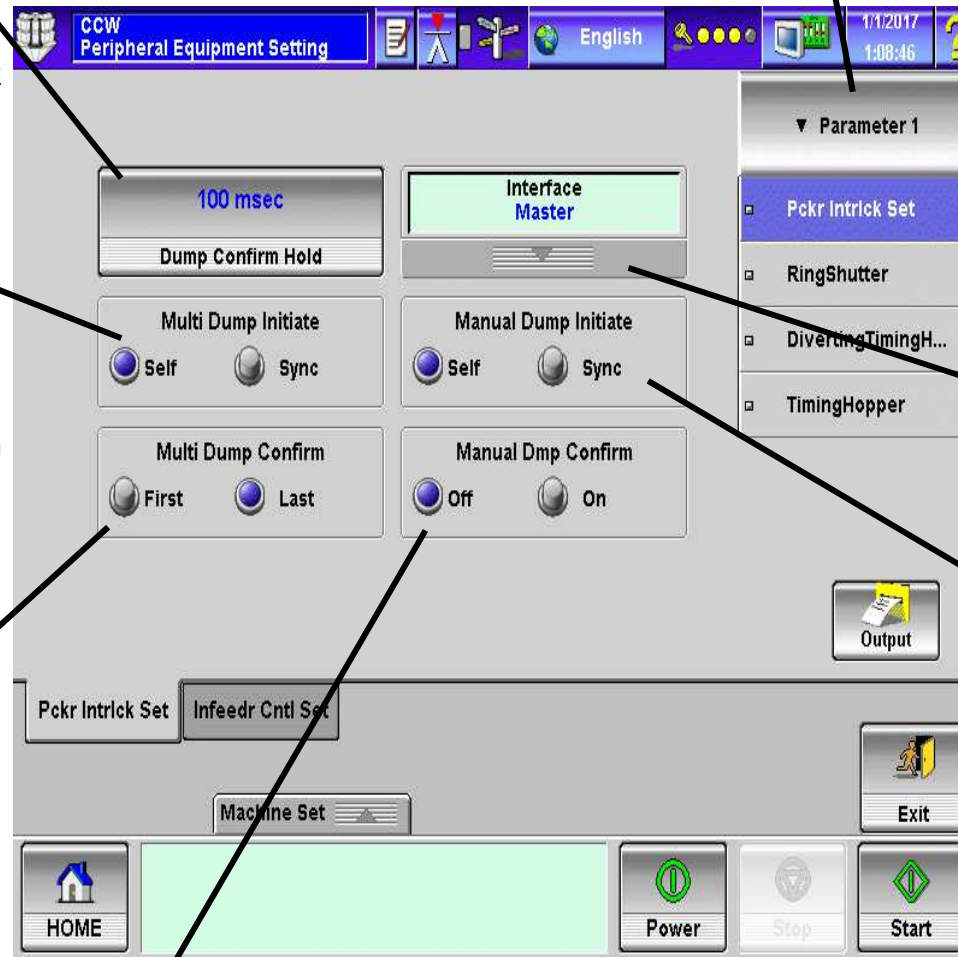

Manual Dump Confirm

*When Zero Adjust, Drain, and Clear Error's set to OFF, the discharge signal will not be sent to the bagger. When set to ON, the discharge signal will be sent to the bagger.



Interface Type

*Will set the interface for production. The four interface modes are: Master, Slave, Stroke-On-Demand and Bag-On-Demand.

Manual Dump Initiate

*When set to SELF, Zero Adjust, Drain, manual adjust - Test Cycle and Clear Error's will not require an interlock signal from the bagger. When set to SYNC, Zero Adjust Drain, Full Open Lock and Error's will need an interlock signal from the bagger.

Peripheral Equipment

~ External Hopper Set



HEAT AND CONTROL



EXC Board No.

On / Off Setting

Should always be set ON

Minimum Head No.

Maximum Head No.

Pool in Multi Dump

*When set to ON, will "pool" or collect the entire "dump" in the TH before discharging the full charge. When set to OFF, will not collect the full "dump," but will discharge each individual proper combination until the full combination calculation has been met.

Cycle Pool

*Under normal operation, set to ON.

*When set to OFF, and when using a TH, the discharge complete signal will come from the Weigh Hopper. When set to ON, and when using a TH, the discharge complete signal will come from the Timing Hopper). NOTE: the RCU display will be one cycle off.

Port No. Setting

*Sets the port in which the External Hopper is plugged into. NOTE: the port is found on the EXC board.

Discharge Direction

*When using a Diverting Timing Hopper, sets the discharge direction to either proper side (Side 1) or Error Side (Side 2) to discharge product.

Product Hold Stop

*Under normal operation, set to 0.

Peripheral Equipment

~ Infeed Control Setting

Smallest Head Number

*Sets the smallest head number that product will be dispersed to by the Dispersion Table.

Largest Head Number

*Sets the largest head number that product will be dispersed to by the Dispersion Table.

Infeed Detector

*Sets whether the infeed weight will be detected by either weight or photo eye. Under normal condition is set to weight.

CCW Peripheral Equipment Setting

English

1/1/2017 1:09:33

Infeeder No 1

▼ Infeeder 1

1

Smallest head number

0.2 sec

Transient Intrpt.

14

Largest Head number

2sec

Feed Intrpt.

Infeed Detector

Weight Photo

Pckr Intrck Set Infeeder Cntl Set

Machine Set

HOME

Power

Stop

Start

Exit

Output



HEAT AND CONTROL



Machine Set

Manual Adjustment

Auto Adjustment

Self-diagnosis

Display&Data Manager

Various Parameter Setting

Weigher Setting

Peripheral Equipment Setting

Transient Interrupt

*Under normal operation, set to 0.2 sec. The weight on the Dispersion Table must remain above the DF upper weight percentage for the transient interrupt time to be considered at its maximum weight. Also used for a DF Photo Eye. The photo eye must be "blocked" for the Transient Interrupt time to be considered at the maximum weight.

Feed Interrupt

*Under normal operation, set to 2 seconds. When the weight on the Dispersion Table is below the DF lower weight percentage, and remains under the low percentage for the feed interrupt time period, production will cease and LOW PRODUCT will be activated.

Maintenance Level



Control Panel

~ Com. Setting



The Class C Network RCU IP Address [192.168.0.1] and Gateway IP Addresses [192.168.0.254] must have the same NETWORK [ex. 192.168.0], but a different HOST on the network [ex. 1 vs 254].

The Class C Network Server IP Address can either have the same NETWORK and host address as the RC IP Address [192.168.0.1] or have a loopback internet protocol address of [127.0.0.1]. **NOTE: IF Server IP address is already 127.0.0.1 do not change to a different IP address.**

Network (points to 192, 168, 0)

Host (points to 1)

RCU

IP Address: 192, 168, 0, 1

GATEWAY: 192, 168, 0, 254

Subnet Mask: 255, 255, 255, 0

MAC Address: 00-30-16-07-18-0B

Main Body

IP Address: 192, 168, 0, 11

Password: pass

User Name: user

Act.for com.Err. [Off]

XJ375 Preset com [Not use]

XJ376 Preset com [Not use]

Server IP Address: 127, 0, 0, 1

Setting [Green circle icon]

Screen Control | Password Set | LangSlt Set | Destination ID | Com. Setting | Exit

HOME | Power | Stop | Start

When Changing the IP Address:

- After changing the Class C Network IP and Gateway Addresses, select the Setting key (**NOTE: it is recommended to wait a minimum of three (3) minutes before cycling power**). During the three minutes waiting period, the Class C Network IP Addresses in the DMU, RCU and the D Drive Folders will be updated with the new Class C Network IP Addresses.
- Turn power OFF and wait at least three (3) minutes before powering up CCW.