


Manual Adjustment

~ Weight Data Display

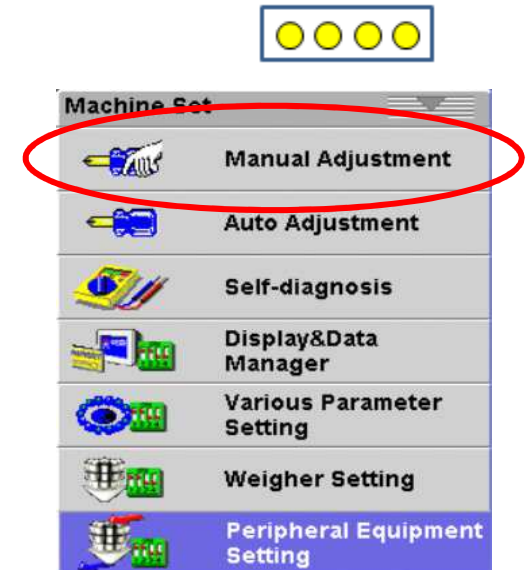

Auto Adjustment ~ AFV Adjustment




HEAT AND CONTROL



AFV Coefficient Values


*The AFV Coefficient Values are stored on the WCU board, as such, the values will NOT be "backed-up" when performing a back of memory. Before WCU board is changed, the AFV Coefficient values will need to be written down so that they can be re-imputed.

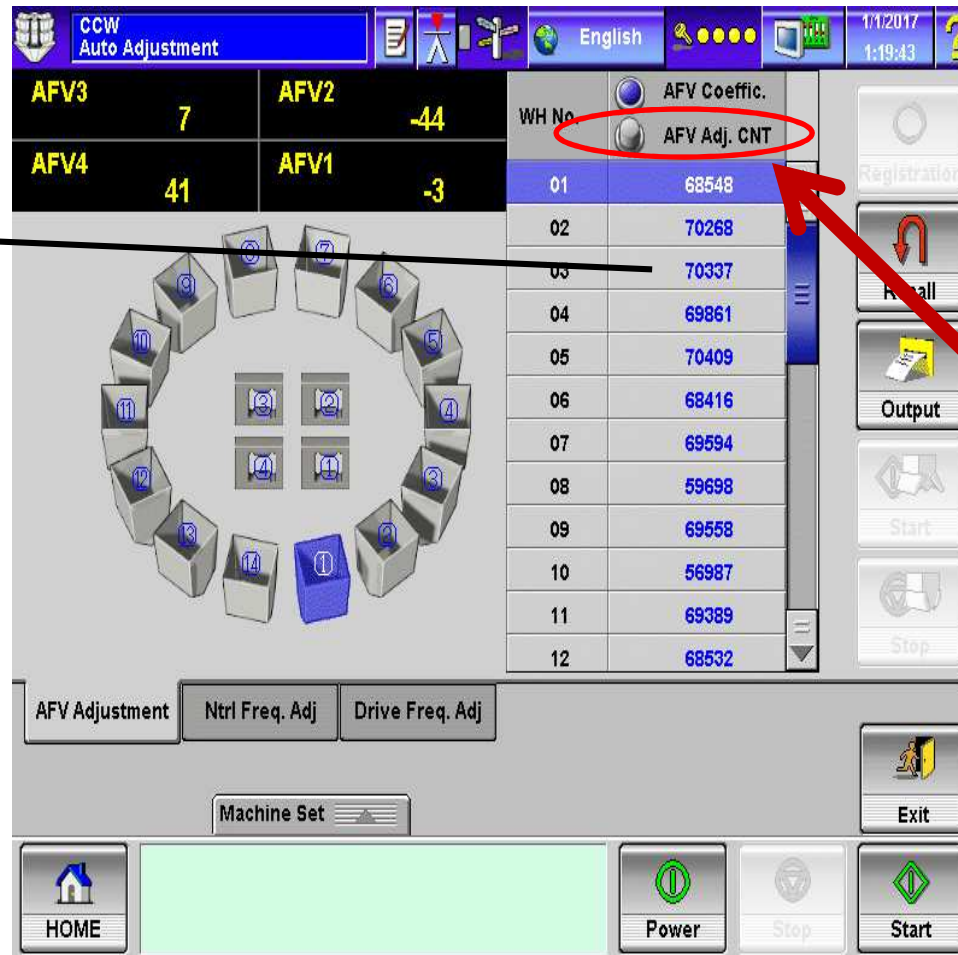

**DO NOT perform
this adjustment!** (CCW
not in a controlled environment)

Auto Adjustment

~ Natural Freq. Adjust

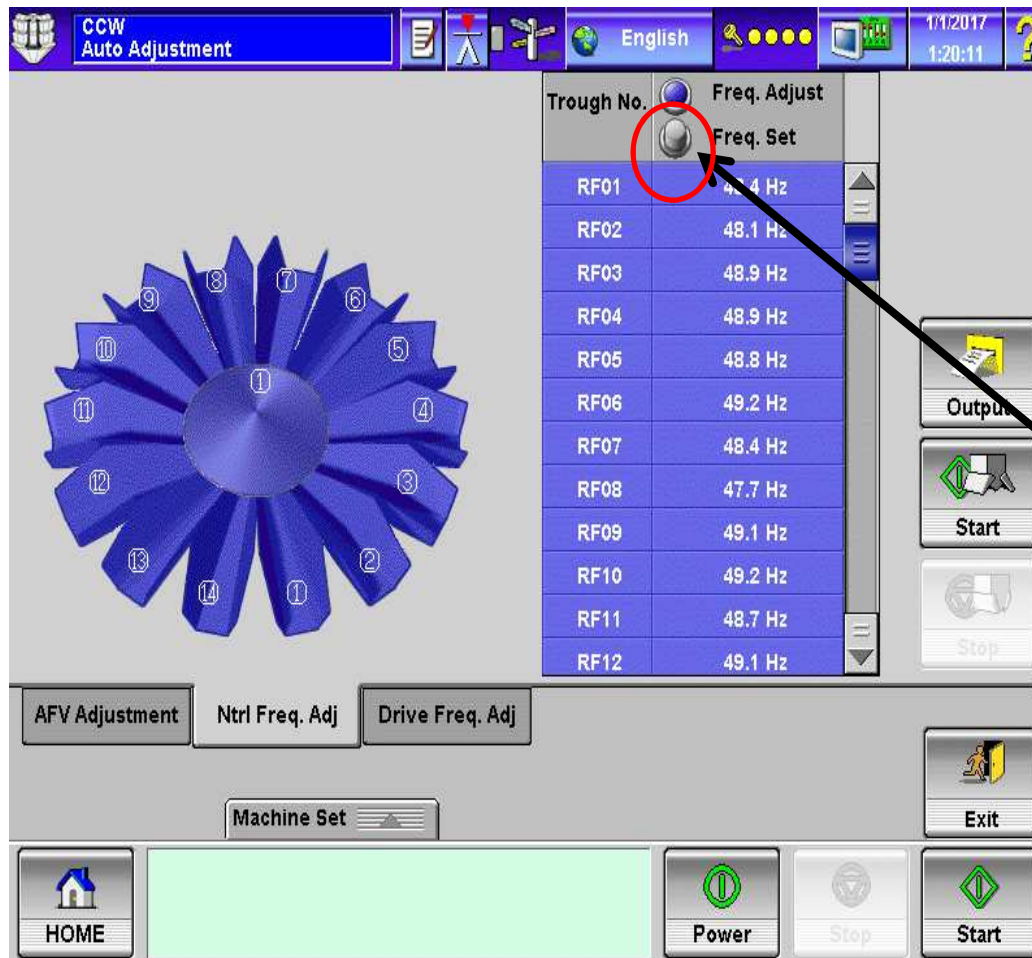

HEAT AND CONTROL



FDRV and RCU Natural Frequency are different



warning message that **FDRV and RCU Natural Frequency are different.**

Natural Frequency in DMU and FDRV are not the same
(Natural Frequency will indicate default settings of 50 Hz)

1. Select level MAINTNANCE (default password 1, 2, 3)
2. Select Machine Settings
3. Select Auto Adjustment
4. Select Nat. Freq. Adj. Tab
5. Select Freq. Set
6. Select Recall
 - a. Recall Natural Frequency – Recall Natural Frequency in FDRV memory to DMU memory.
7. Select Registration
 - b. Register Natural Frequency – Natural Frequency in DMU memory will be registered in FDRV memory.
8. Confirm that Natural Frequency have been restored to saved Natural Frequencies (should not indicate default factory settings of 50 Hz).
9. Cycle Power.



Auto Adjustment

~ Drive Freq. Adjust

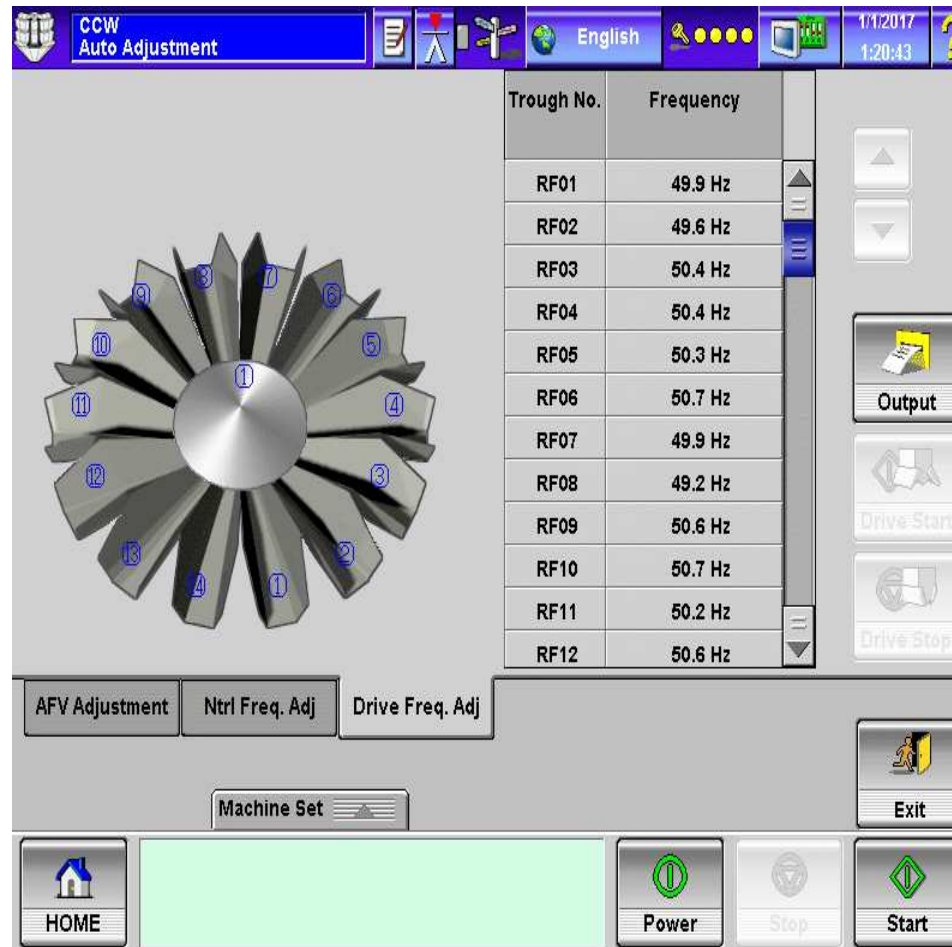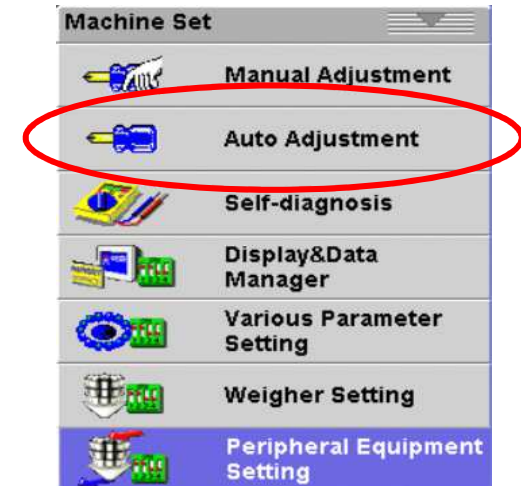**HEAT AND CONTROL**

Display & Data Manager


~ Layout Setting

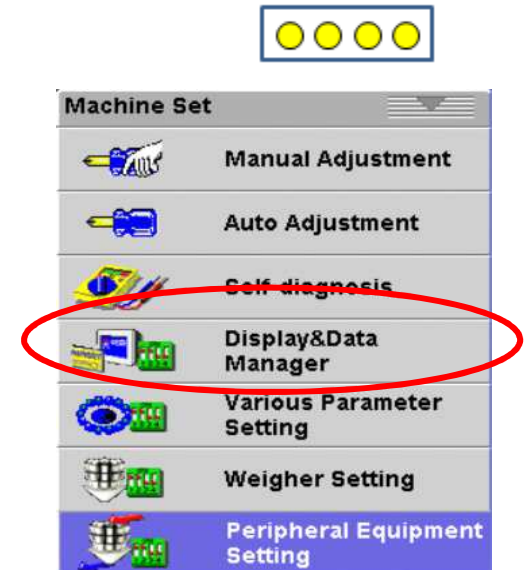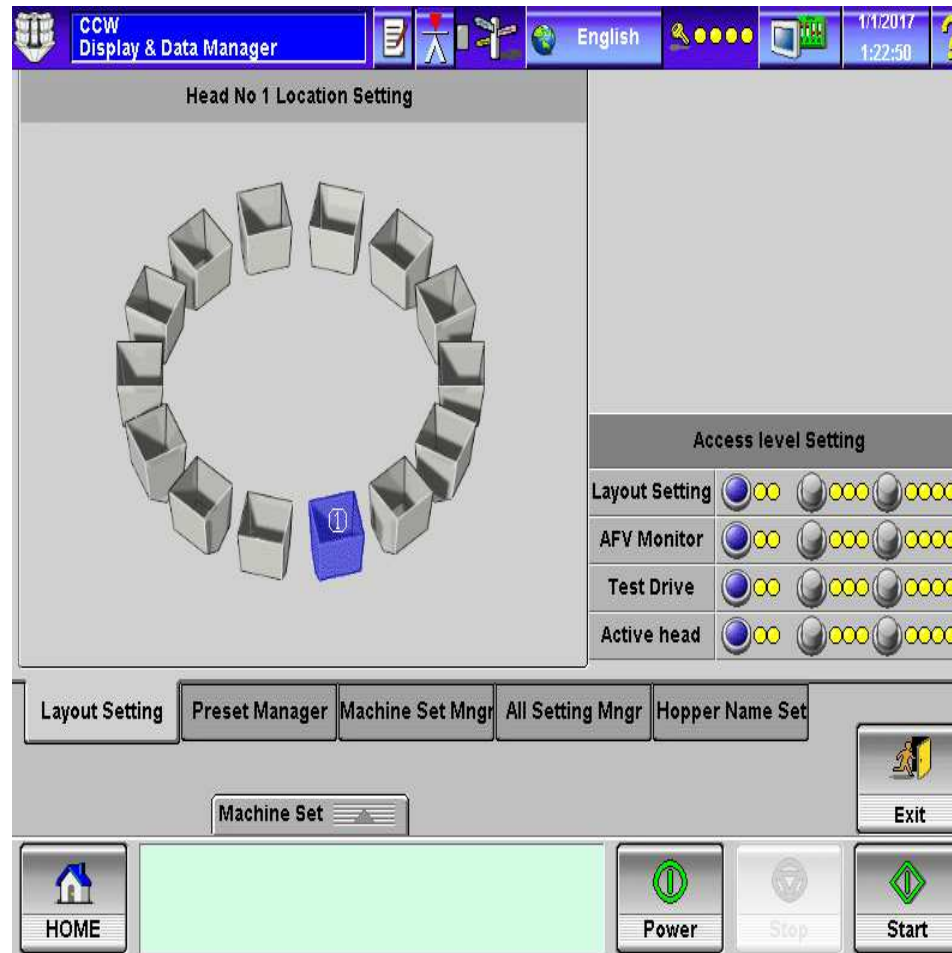


Display & Data Manager

~ All Setting Manager

Memory
Initialize

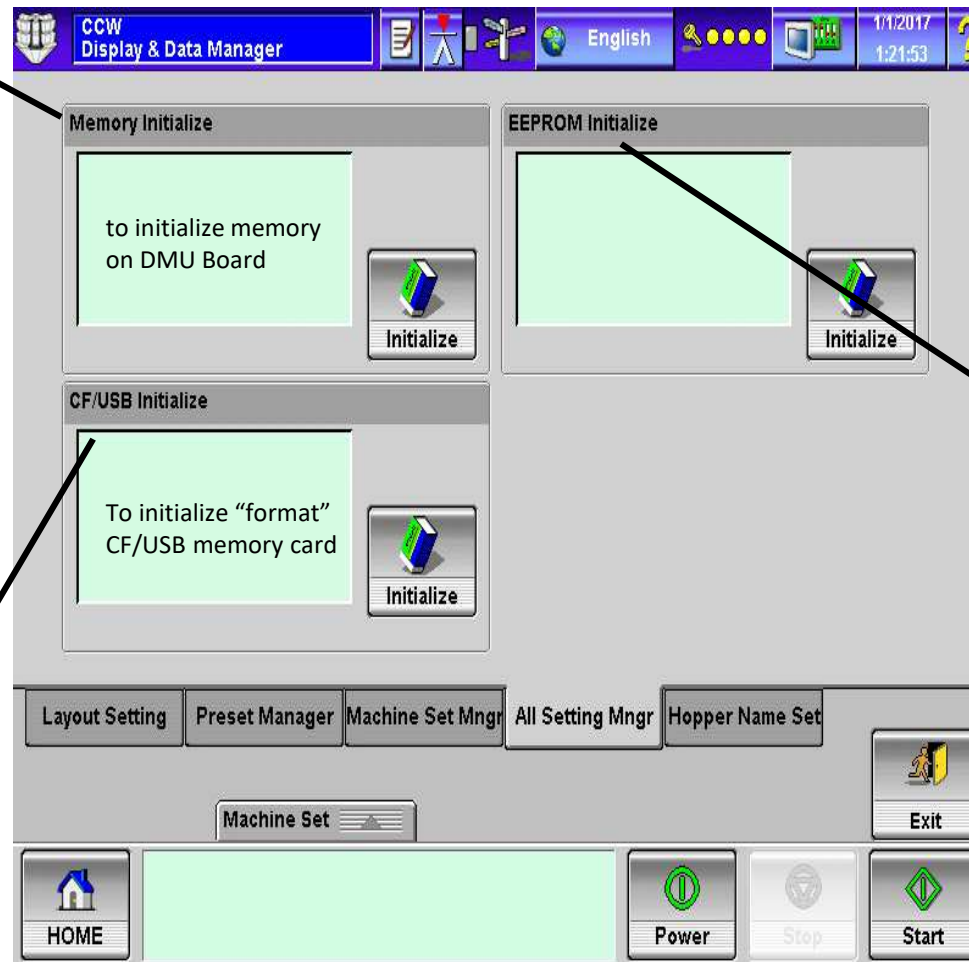

CF/USB
Initialize


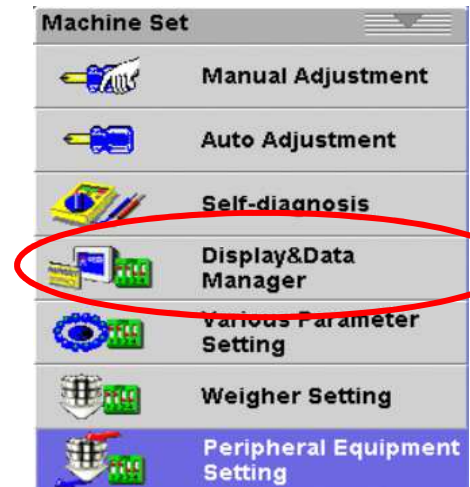


EEPROM
Initialize



Display & Data Manager

~ Hopper Name Set

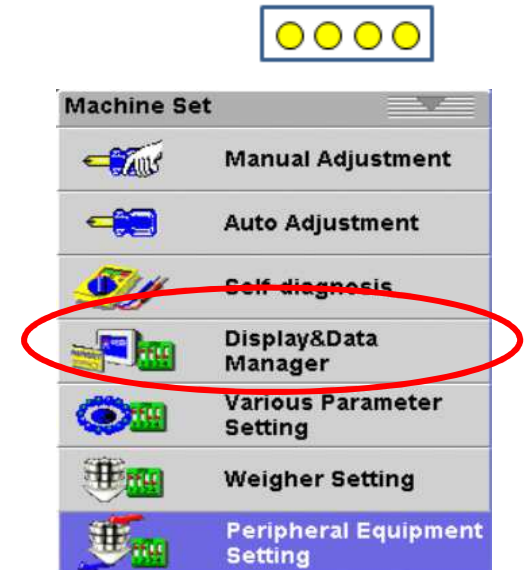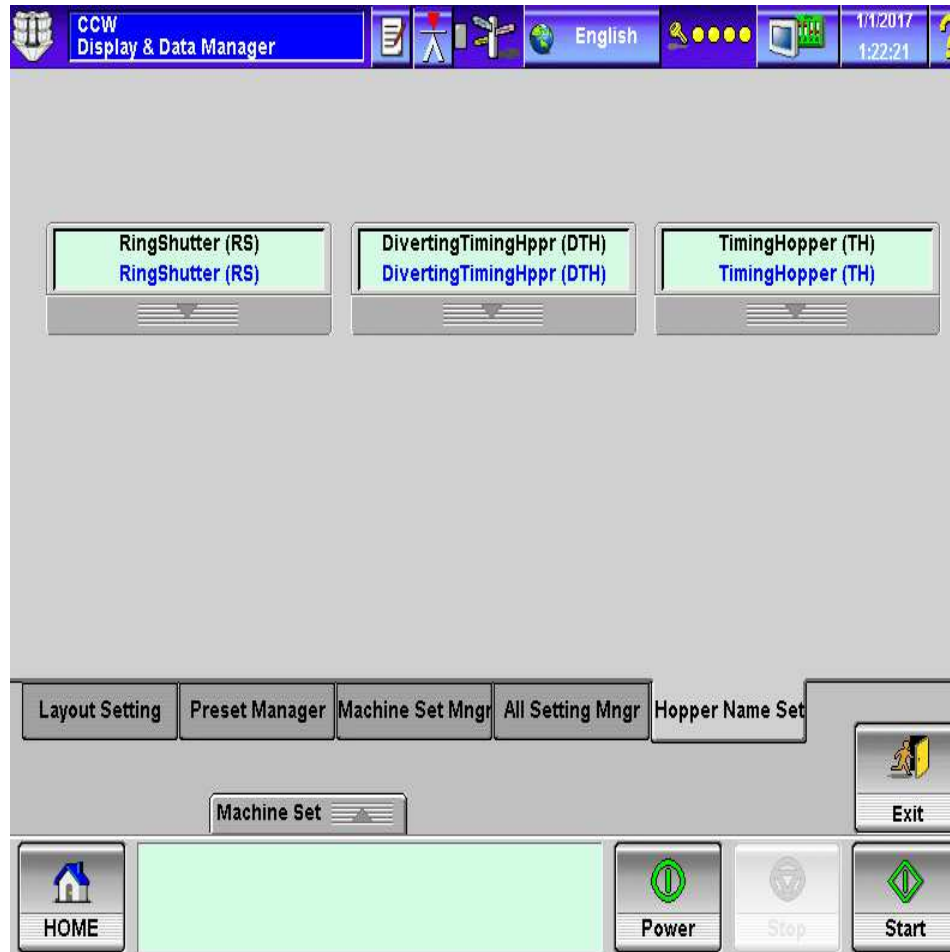

Various Parameter Setting

~ FD Spec Set



HEAT AND CONTROL



Standard Amplitude Min. Value

Standard Amplitude Max. Value

Boost Amplitude Max. Value

Boost Amplitude Min. Value

RF Shutter Drive Condition

Amplitude Selection

RF/DF Slow Start

Photo Eye Switch RF Stop

Output

Machine Set

Manual Adjustment

Auto Adjustment

Self-diagnosis

Display&Data Manager

Various Parameter Setting

Weigher Setting

Peripheral Equipment Setting

Amplitude Selection

RF/DF Slow Start

Photo Eye Switch RF Stop

HOME

Power

Stop

Start

CCW
Various Parameter Setting

English

1/12/2017
2:23:42

Standard Amplitude Min. Value: 0

Standard Amplitude Max. Value: 3

Boost Amplitude Minimum Value: 0

Boost Amplitude Maximum Value: 5

RF Shutter Drive Condition: Off

RF Stop Pattern: Auto

Amplitude Selection: STD AMP (selected), Boost AMP

RF/DF Slow Start: Off (selected), On

Photo Eye Switch RF Stop: Off

Output

Weigh Spec Set

Combination Set

Sectioning Set

FD Spec Set

H DRV Spec Set

Machine Set

Exit

Various Parameter Setting

~ Hopper Drive Spec Set

(PH, WH, BH)



HEAT AND CONTROL



Parameter Select

Drive Actuator

Should always be set to Stepping Motor

Brake Time

*Sets the time (ms) in which the brake is applied after the motor stops.

Drive Stop Parameter

Should be set to slit

Drive Power Parameter

*Can either be set to Half or Full, though is not intended to save energy.

Phase Type

Should always be set to 1-2 phase

Stop Delay Pulse Count

*The maximum number of steps the motor is able to rotate once slit signals are detected.

Min. Output Pulse Count

Interval from when the motor is started until slit signals are not detected.

Error Detect Pulse Count

Returns an error when the difference between the step count of open rotation is different than the step count of close rotation
NOTE: setting this value to 0 disables the Error Detect Pulse Cnt., however, it may cause an overlap error to occur.

Various Parameter Settings

~ Hopper Drive Spec Set

(RS, DTH, TH)



HEAT AND CONTROL



Parameter Select

Drive Actuator

Should always be set to Stepping Motor

Brake Time

*Sets the time (ms) in which the brake is applied after the motor stops.

Drive Stop Parameter

Should be set to Pls Cnt or Photo Rec

Speed

*The revolution per minutes of the rotation of the stepping motor.

Phase Type

(should always be set to 1-2 phase)

Stop Delay Pulse Count

*The maximum number of steps the motor is able to rotate once slit signals are detected.

Min. Output Pulse Count

Interval from when the motor is started until slit signals are not detected.


Error Detect Pulse Count

Returns an error when the difference between the step count of open rotation is different than the step count of close rotation
NOTE: setting this value to 0 disables the Error Detect Pulse Cnt., however, it may cause an overlap error to occur.

Various Parameter Setting

~ Hopper Drive Spec Set

(PH, WH, BH)

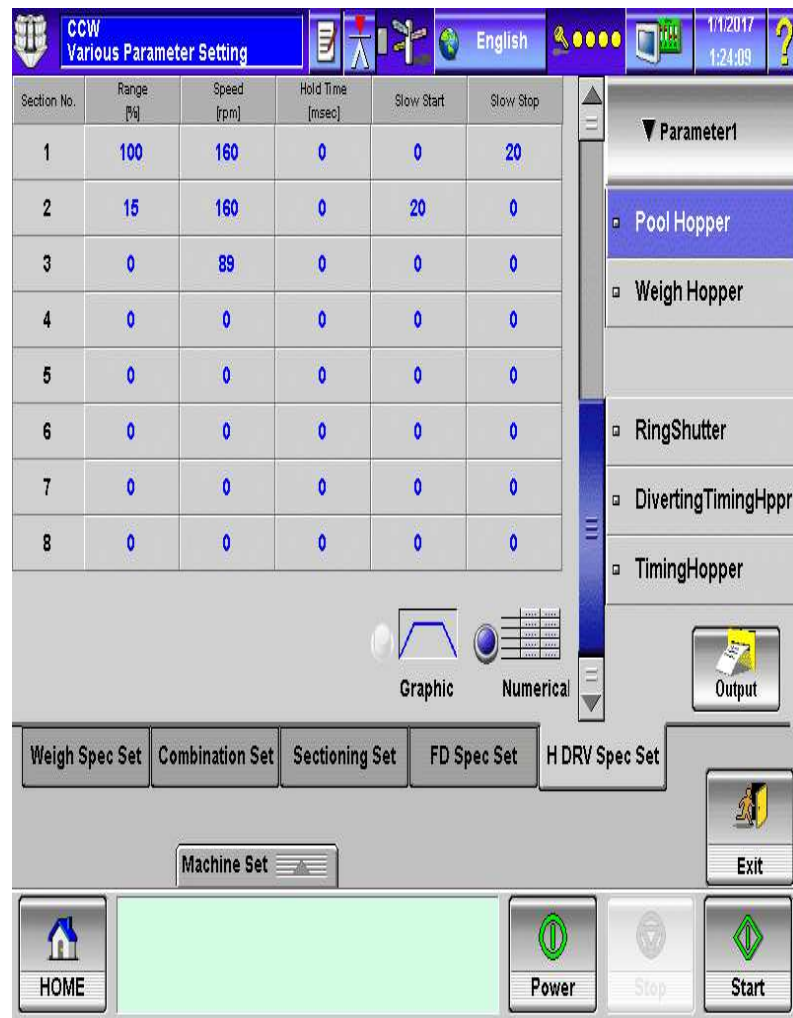

CCW Various Parameter Setting

English 11/20/17 1:24:09

Section No.	Range [g]	Speed [rpm]	Hold Time [msec]	Slow Start	Slow Stop
1	100	160	0	0	20
2	15	160	0	20	0
3	0	89	0	0	0
4	0	0	0	0	0
5	0	0	0	0	0
6	0	0	0	0	0
7	0	0	0	0	0
8	0	0	0	0	0

▼ Parameter1

- Pool Hopper
- Weigh Hopper
- RingShutter
- DivertingTimingHppr
- TimingHopper

Graphic Numerical

Output


Weigh Spec Set Combination Set Sectioning Set FD Spec Set H DRV Spec Set

Machine Set

Exit

HOME Power Stop Start

(RS, DTH, TH)

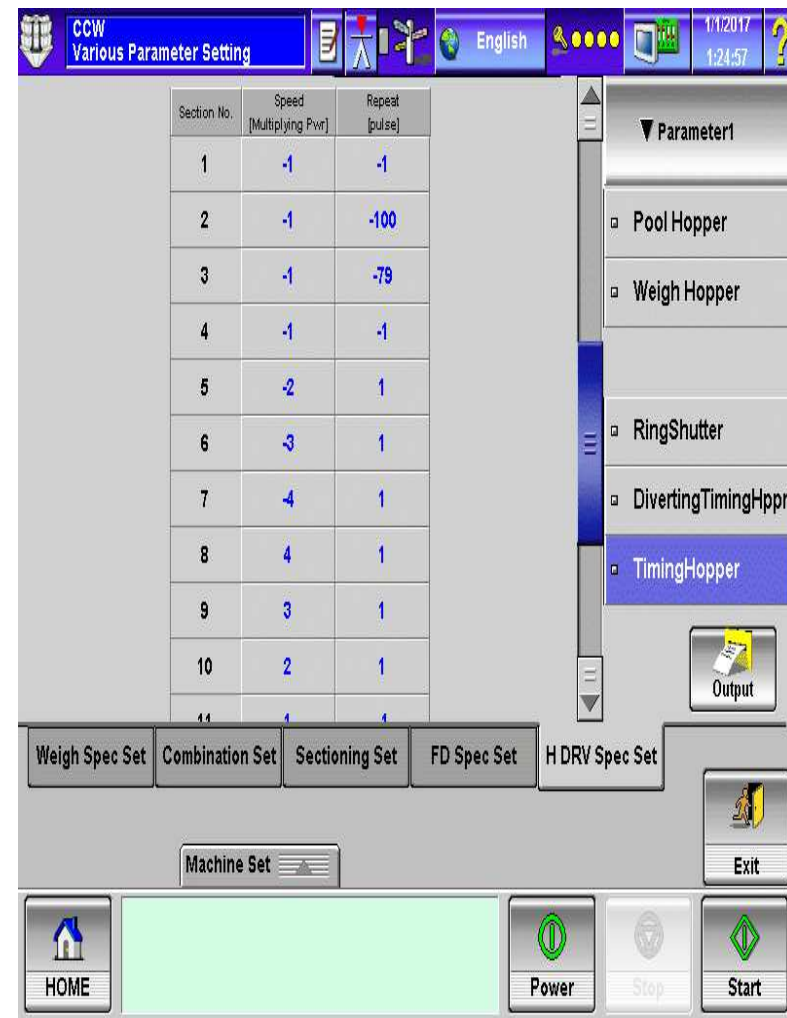

CCW Various Parameter Setting

English 11/20/17 1:24:57

Section No.	Speed [Multiplying Pwr]	Repeat [pulse]
1	-1	-1
2	-1	-100
3	-1	-79
4	-1	-1
5	-2	1
6	-3	1
7	-4	1
8	4	1
9	3	1
10	2	1
11	1	1

▼ Parameter1

- Pool Hopper
- Weigh Hopper
- RingShutter
- DivertingTimingHppr
- TimingHopper

Output

Weigh Spec Set Combination Set Sectioning Set FD Spec Set H DRV Spec Set

Machine Set

Exit

HOME Power Stop Start




HEAT AND CONTROL



Weigher Setting

~ Auto Timing Set

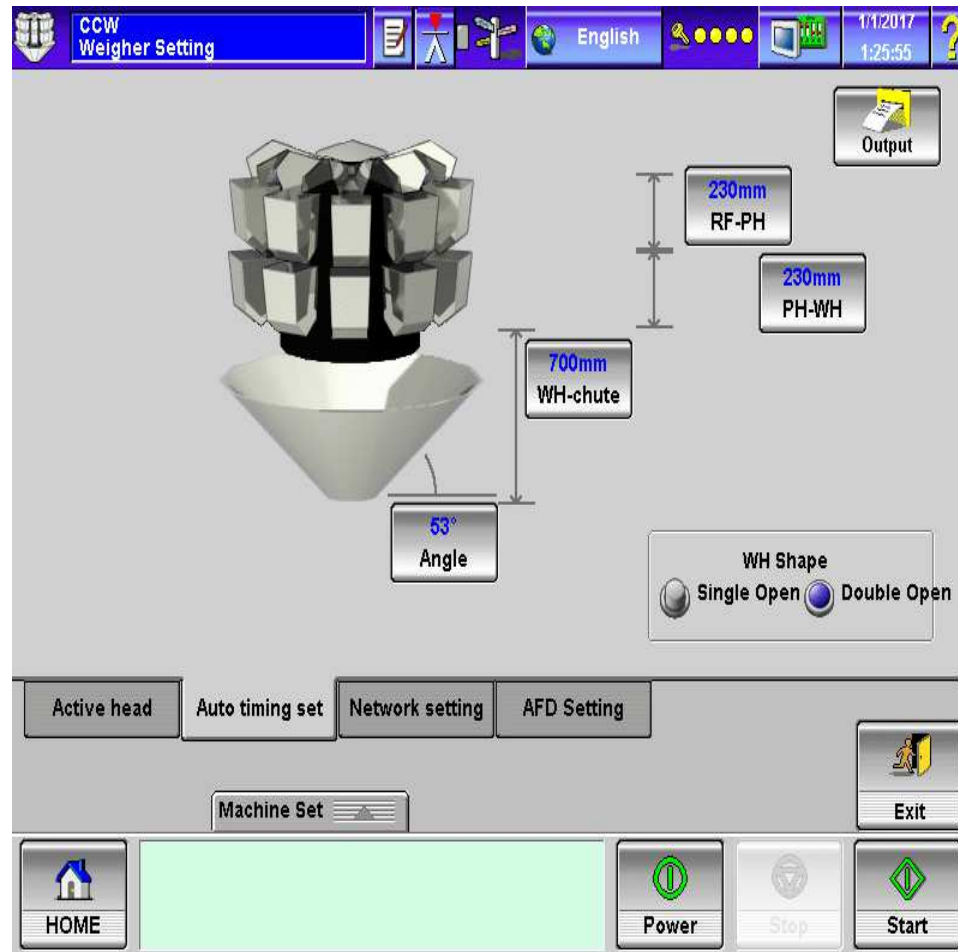

HEAT AND CONTROL



Weigher Setting

~ Network Setting



HEAT AND CONTROL

