



## Standard Operating Procedures

Frito-Lays

Maintenance Department

|                |                         |
|----------------|-------------------------|
| SOP Title      | Vemag Function Settings |
| Machine        | Vemag HP20E             |
| SOP Number     | 2                       |
| Version        | 1.1                     |
| Effective Date | 9/10/26                 |

### 1.Purpose

Remove function settings from user access

### 2.Scope

Function removal procedure lines 1, 3, 4

### 3.Tools and Materials Required


Codes: Advanced User-8150, Service Code-1234

### 4.Safety Precautions


PPE is required on production floor at all times

### 5.Maintenance Steps

Step 1: Press the lower left square + 1 to access the Service Menu

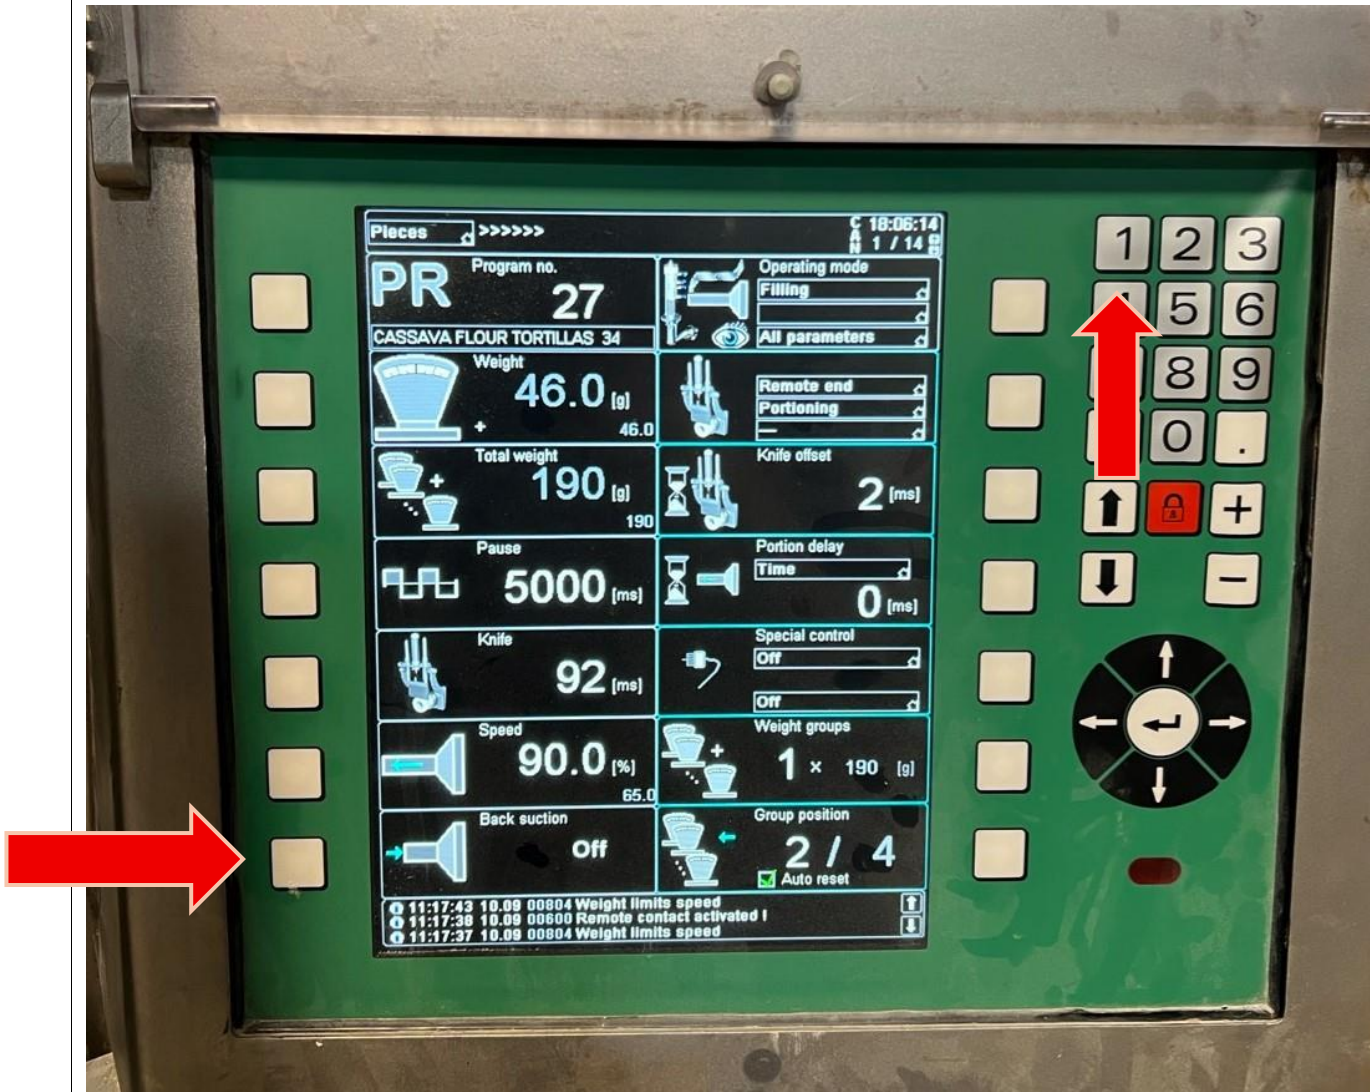

Step 2: Press the Second to lower left square + 1 to access the Screen View Menu

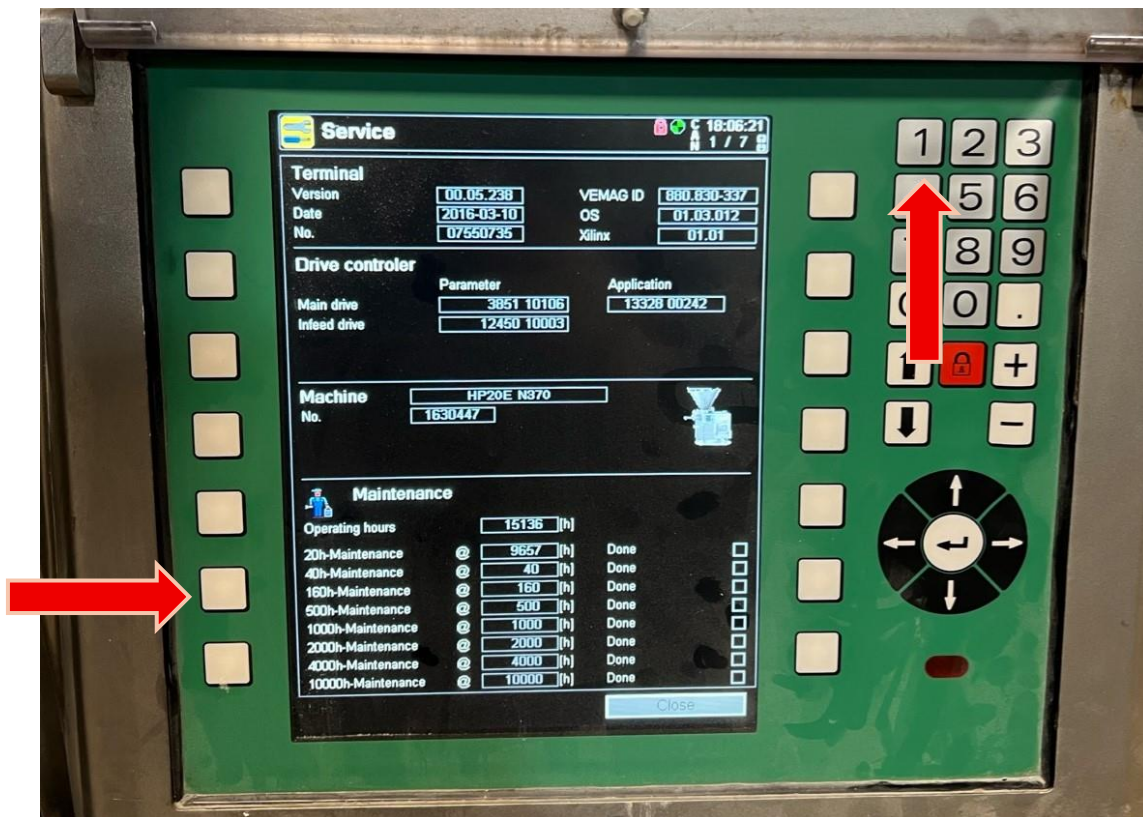

## Step 3: Press the Red Lock Button



Step 4: Type in the Advance User Code: **8150**



## Step 5: Press the Customized View Settings Button

View Screen


The screenshot shows a 'View' screen with a dark background and white text. At the top left is an eye icon and the word 'View'. At the top right, 'CAN' is displayed vertically next to the time '10:47:24'. The screen is divided into several sections:

- Language:** A speech bubble icon with 'A' and 'N' is next to a dropdown menu showing 'English'.
- Date and Time:** Two fields showing '22.08.2013' and '10:47:24'.
- Operating mode settings:** A header for a list of settings on the left side.
- Access to:** A dropdown menu showing 'First portion'.
- Write:** A dropdown menu showing 'Program locking'.
- Customized View Settings:** A button at the bottom right, highlighted by a blue arrow.

The 'Operating mode settings' section includes the following items:

| Setting         | Value | Unit |
|-----------------|-------|------|
| Analog output 1 |       |      |
| Unit            | [V]   |      |
| Resolution      | 1     |      |
| Voltage min     | 0.0   | [V]  |
| Voltage max     | 10.0  | [V]  |
| Input unit min  | 0     | [V]  |
| Input unit max  | 1     | [V]  |
| Analog output 2 |       |      |
| Unit            | [V]   |      |
| Resolution      | 1     |      |
| Voltage min     | 0.0   | [V]  |
| Voltage max     | 10.0  | [V]  |
| Input unit min  | 0     | [V]  |
| Input unit max  | 0     | [V]  |

## Step 6: Select and Deselect the Function you want to remove or add to Operating Menu

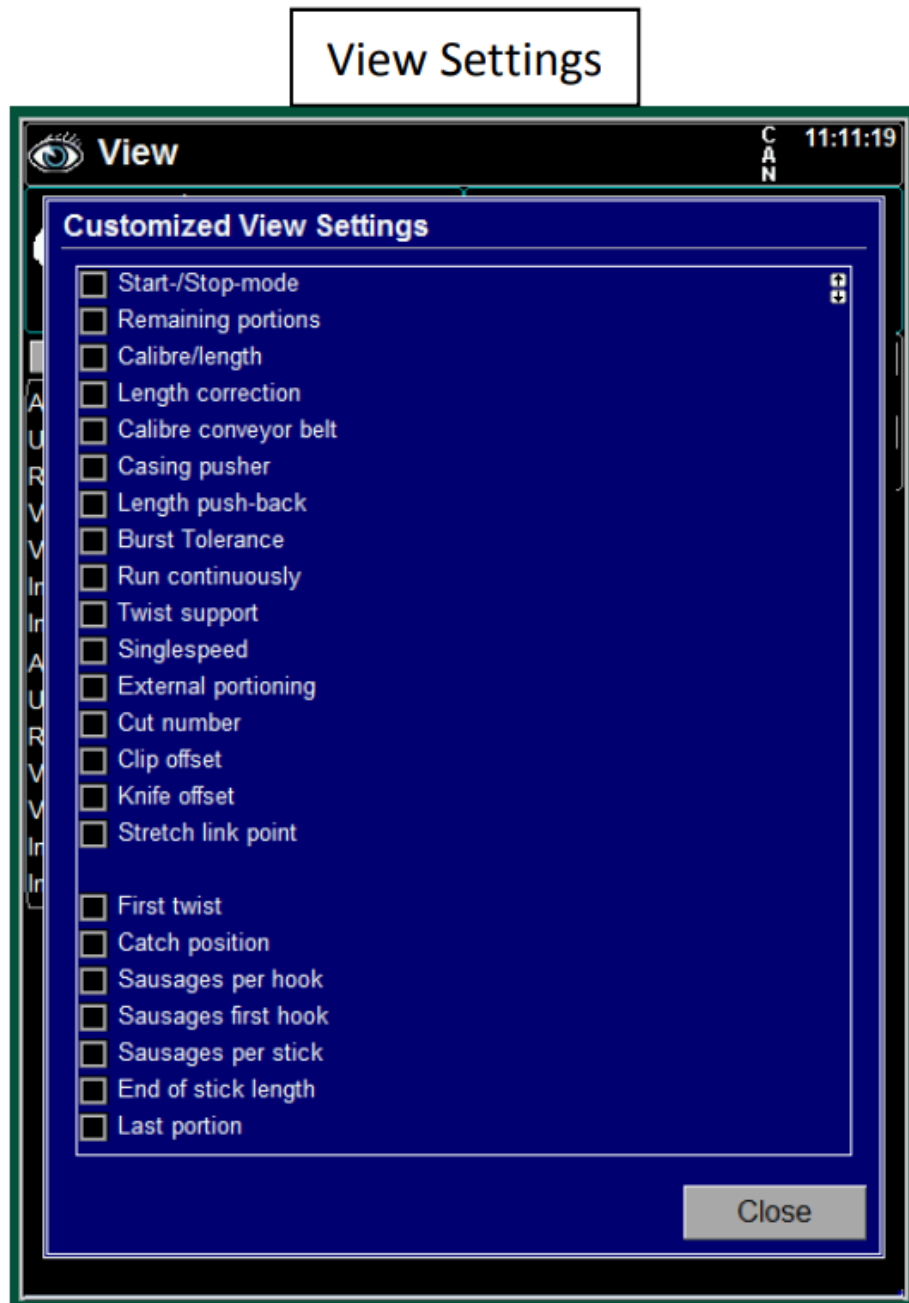


Step 7: To control what level a user can change settings select the “Access to” function in the menu

View Screen

| View                     |          | CAN       | 10:47:24        |
|--------------------------|----------|-----------|-----------------|
| Language                 |          | Date      | 22.08.2013      |
| English                  |          | Time      | 10:47:24        |
| Operating                |          | Access to | First portion   |
| Analog output 1          |          | Write     | Program locking |
| Unit                     | [V]      |           |                 |
| Resolution               | 1        |           |                 |
| Voltage min              | 0.0 [V]  |           |                 |
| Voltage max              | 10.0 [V] |           |                 |
| Input unit min           | 0 [V]    |           |                 |
| Input unit max           | 1 [V]    |           |                 |
| Analog output 2          |          |           |                 |
| Unit                     | [V]      |           |                 |
| Resolution               | 1        |           |                 |
| Voltage min              | 0.0 [V]  |           |                 |
| Voltage max              | 10.0 [V] |           |                 |
| Input unit min           | 0 [V]    |           |                 |
| Input unit max           | 0 [V]    |           |                 |
| Customized View Settings |          |           |                 |

## Step 8: Select the function you want to change

“Access to” Menu

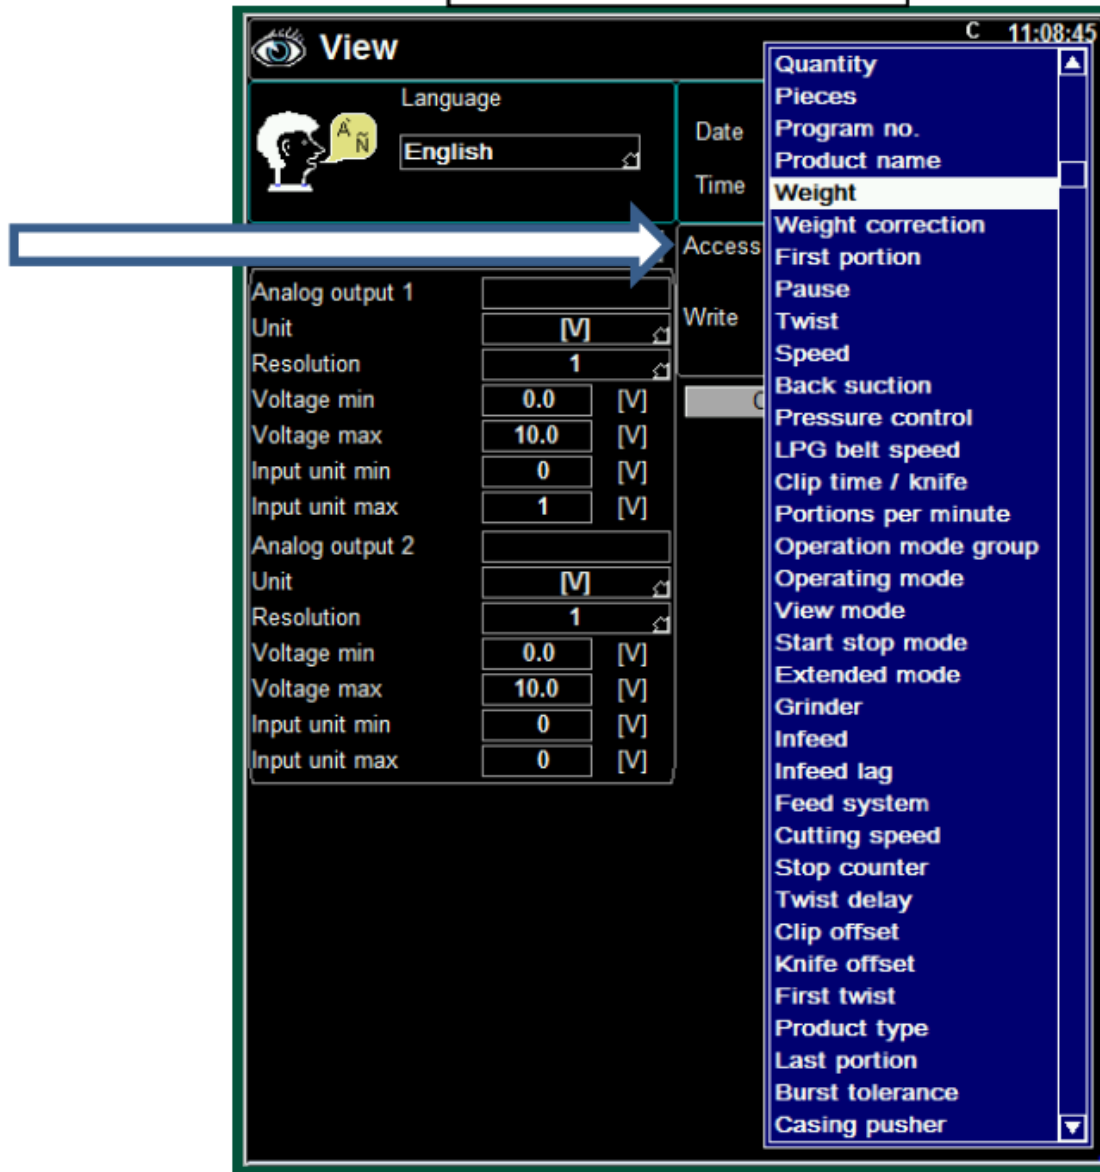

Step 9: Use the “Write” button to change the level a user must be to modify the setting. Currently, operators use “Advance user” so changing to “Service” locks the function. And setting it to “Advance user” gives access

### “Write” Menu

The screenshot shows a software interface titled "View" with a dark background. At the top right, it displays "CAN" and the time "11:16:57". The interface is divided into several sections:


- Language:** A dropdown menu showing "English".
- Date:** A text field showing "22.08.2013".
- Time:** A text field showing "11:16:57".
- Operating mode settings:** A section with multiple rows of settings for "Analog output 1" and "Analog output 2". Each row includes fields for "Unit", "Resolution", "Voltage min", "Voltage max", "Input unit min", and "Input unit max".
- Access to:** A dropdown menu showing "Weight".
- Write:** A button with a dropdown menu. A pink arrow points to this button. The dropdown menu is open, showing three options: "Program locking", "Advanced user", and "Service".

| Operating mode settings |          |
|-------------------------|----------|
| Analog output 1         |          |
| Unit                    | [M]      |
| Resolution              | 1        |
| Voltage min             | 0.0 [V]  |
| Voltage max             | 10.0 [V] |
| Input unit min          | 0 [V]    |
| Input unit max          | 1 [V]    |
| Analog output 2         |          |
| Unit                    | [M]      |
| Resolution              | 1        |
| Voltage min             | 0.0 [V]  |
| Voltage max             | 10.0 [V] |
| Input unit min          | 0 [V]    |
| Input unit max          | 0 [V]    |

## Password Change: Setting the password for Program Locking will enable Program Locking user level and set the password for Advanced User. Program Locking password is always “0” once enabled.

To change passwords:

1. Log in as Service user and press the Lock key
2. Userkey screen will appear. Press “Change...”

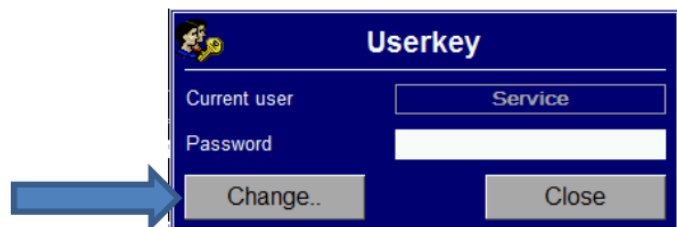

3. Passwords screen will appear, enter the password you want for **Advanced User**

