

WEIGHT CHECKER

DACS-GN-S Series

Small / Middle Series

User Maintenance Manual 2nd Edition



WARNING

This manual is exclusively for a maintenance personnel qualified by ISHIDA CO.,LTD..

NO other person is allowed to access any content of this manual.



WARNING

Do not carry out any service in accordance with this manual until thoroughly understanding the contents of this manual.

ISHIDA CO.,LTD.

Product Code: 000176263306

October. 2017

ESSENTIAL SAFETY REQUIREMENTS



Intended reader of this manual

This manual is exclusively for a maintenance personnel qualified by ISHIDA CO.,LTD.. NO other person is allowed to access any content of this manual.



SAFETY PRECAUTIONS

This manual specifies correct use of the device associated with cautionary statement in order for prevention of potential hazard. Do not carry out installation, service, or maintenance until thoroughly understanding the contents of this manual.



Scope of service work allowed.

Service work is strictly limited to those stated in this manual. NO other service work is allowed than those stated in this manual.



Icons in this Manual

Indication	Explanation
 WARNING	If this hazard is not avoided, there is a possibility of death or injury resulting.
 CAUTION	If this hazard is not avoided, there is a possibility that light or moderate injury may result. It may also indicate that a possibility of damage to equipment exists.
<u>NOTE</u>	Used to emphasize or clarify an important point in the manual.
 REFERENCE	Gives information of page or documents for reference.
 TIP	Gives information which helps understanding.



Power Supply Shut Off and Indication

This section describes the power supply shut off and its indication.




WARNING

- Disconnect power supply cable before performing maintenance and inspections in order to secure operator safety.
- **BE AWARE**, upstream main power switch is still “LIVE” (i.e. energized) **EVEN WHEN** the main power switch is turned to the OFF position. The following is recommended in order to prevent other personnel from turning on the main power switch during the service work:
 - Lock the power switch in the OFF position.
 - Create an accident prevention tag and place it at the power shut-off location.For the placement of a main power switch lock and accident prevention tag, refer to the following.

NOTE

- A main power switch lock and accident prevention tag are to be prepared by customers.

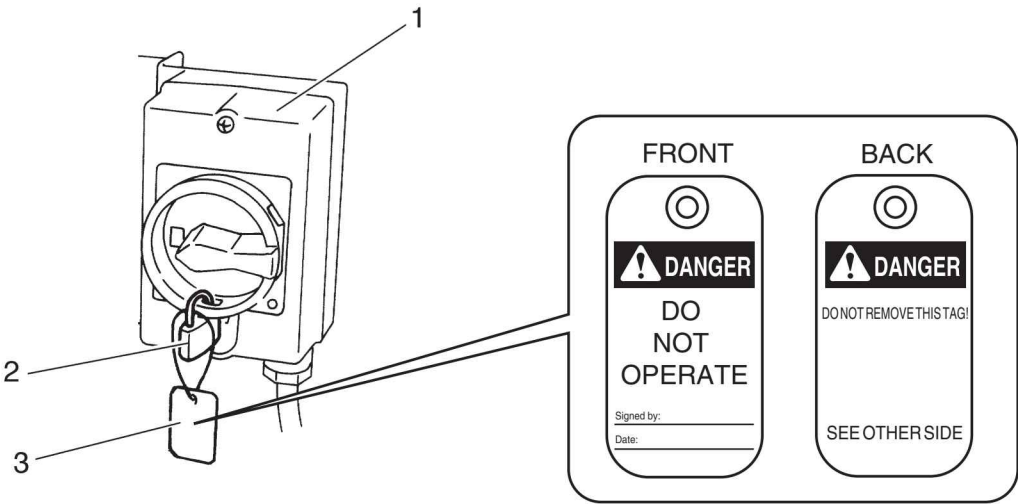

No.	Name
1	Main power switch
2	Padlock
3	Lockout tag



SHOCK HAZARD

High voltage live parts inside enclosures.

Disconnect power supply cable before servicing.

Otherwise, wear Protective Gloves rated 600 [V] or above while servicing so that there is no skin exposure to the live parts.



HAZARD OF INJURY

Moving parts may cause injury.

Disconnect power supply cable before servicing.

Where servicing is unavoidable while the device is being energized, turn off or otherwise stop all moving parts while servicing.

Where servicing moving parts is unavoidable, carefully keep all part of your body and your clothes away from hazardous moving parts while servicing.



CONFIDENTIALITY/COPYRIGHTS/KNOW-HOW

This manual is strictly confidential, and Ishida Co., Ltd. holds all copyrights of this manual. Any disclosure of such confidential information to third parties or unauthorized copying of the information contained herein, directly or indirectly, in whole or in part, is not permitted without prior written approval from Ishida Co., Ltd.

Ishida Co., Ltd. is the exclusive owner of the know-hows either expressly specified or implied in this manual.

Ishida Co., Ltd. grants to the customer non-transferable, non-exclusive license to use such know-hows in the manner described in this manual to the extent it is necessary to maintain the device.



INDEMNITY

Ishida Co., Ltd. accepts no responsibility for any damage and/or loss of property caused by the followings:

- 1) Usage of the device not in accordance with this manual or associated specification sheet.
- 2) Usage of the device with any other software program than we formally supplied for the device.
- 3) Usage of the device with any other peripheral device than that which Ishida Co., Ltd. Guarantees compatibility with the device.
- 4) Any other modification and/or repair of the device then that which Ishida Co., Ltd. conducted.

- 5) Force majeure, including but not limited to, acts of god, fire, earthquake, flood or accident.
- 6) Froman act by a third party.
- 7) The intentional or negligent act by customers.
- 8) Improper use by customers.
- 9) Use under abnormal conditions.



WARRANTY

Ishida Co.,Ltd warrants to the customers that the device shall conform to the specification. This warranty is the only warranty applicable to the device.

Ishida Co., Ltd's liability for breach of warranty shall be limited solely and exclusiverly to repairing ot replacing, at Ishida Co., Ltd's option, the defective devicce.

There are no other warranties of any kind, Express or implied, including but not limited to the implied warranties of marchantability and fitness for a particular purpose which are hereby disclaimed. The remedies set for breach of warranties set forth above are exclusive remedies and Ishida Co., Ltd shall not be responsible for any indirect, special, incidental, punitive or consenquential damages.



MISCELLANEOUS

Although this manual has been carefully edited, if there are any mistakes or if you have any questions, please check the machine type (model) and machine identification and contact your distributor or Ishida Customer Support. The model and machine identification are indicated on the device plate attached to the device. The information contained herein may be changed without prior notice.

The parts live in the machine may be changed in the convenience of the manufacturer without prior notice.

		ISHIDA		44 SANNO-CHO, SHOGOIN, SAKYO-KU KYOTO, 606-8392 JAPAN	
MODEL _____					
PROJECT No. _____					
SERIAL No. _____					
MFG. DATE _____					
POWER SINGLE	AC	V	A	_____	
3-PHASE	AC	V	A	_____	
FREQUENCY				Hz	_____
ISHIDA CO.,LTD.					
MADE IN JAPAN					

1 OVERVIEW

1.1	Unit Configuration	1-3
1.1.1	Appearance	1-3
1.1.2	Component Description	1-4
1.2	Model Name Field Codes	1-5
1.3	System Configuration	1-6

2 SETUP

2.1	Installation Precautions	2-3
2.2	Installation Procedures	2-4
2.2.1	Unpacking work	2-4
2.2.2	Assembling work	2-4
2.2.3	Installation work	2-6
2.2.3.1	Connecting rejector with DACS-GN main unit	2-7
2.2.4	Fixation of rejector	2-8
2.2.5	Removal of weigh unit protective lock bolt	2-9
2.2.6	Wiring work	2-9
2.2.6.1	Rejector [RE-0xx-A3 (Arm), DB2 (Dropbelt)]	2-10
2.2.6.2	Rejector [RE-0xx-J3 (Air jet type)]	2-11
2.2.6.3	Connecting DACS-GN machine to external devices (input/output signal specification) (optional)	2-11
2.3	Post-Installation Check	2-12
2.3.1	Connecting main power supply [UL type]	2-12
2.3.2	Connecting main power supply [EU type]	2-12
2.3.3	Turn the Power On	2-14
2.3.4	Zero Adjustment	2-15
2.3.5	Changing of Operational Level	2-16
2.3.6	Span Adjustment (Standard type)	2-17
2.4	Preparation of Test Operation	2-19
2.4.1	Check the Belt Condition	2-19
2.4.2	Check the Optical Axis of the Photo Switch	2-19

2.4.3	Preparation for Test Run	2-19
2.5	Procedures of Changing Operation Unit Position	2-20
2.6	Procedures of Changing Conveyor Height	2-24
2.6.1	Standard model	2-24
2.6.2	Extended leg model (optional)	2-24

3 MECHANICAL CONFIGURATION

3.1	Mechanical Unit Configuration	3-3
3.2	Infeed Conveyor (SS Type)	3-4
3.2.1	How to detach and attach infeed conveyor	3-5
3.2.2	Tension and meandering adjustments of the infeed conveyor belt	3-6
3.2.3	Replacement of bearings for driving roller of infeed conveyor	3-7
3.2.4	Replacement of driven roller for infeed conveyor	3-8
3.2.5	Replacement of timing belt	3-9
3.2.6	Adjusting tension of timing belt	3-10
3.3	Infeed Conveyor (CR Type)	3-12
3.3.1	Disassembly of Infeed Conveyor	3-12
3.3.2	Replacing Infeed Conveyor Belt	3-14
3.3.3	Tension and meandering (snaking) adjustments of infeed weigh conveyors	3-15
3.3.4	Replacement of driven roller bearing (and oil seal) for conveyor	3-16
3.3.5	Replacement of belt-side bearing (and oil seal) for conveyor drive roller	3-17
3.3.6	Replacing the Bearing (Oil Seal) of Conveyor Drive Roller at Anti-Coupling Side	3-18
3.4	Drive Section of Infeed Conveyor	3-19
3.4.1	Replacement of drive motor	3-20
3.4.2	Replacement of diaphragm	3-22
3.5	Photoelectric Unit	3-23
3.5.1	Photoelectric sensor and output stage circuit diagram	3-23
3.5.2	How to adjust photoelectric sensor unit	3-24
3.6	Weigh Conveyor (SS Type)	3-27

3.6.1	How to detach and attach weigh conveyor	3-28
3.6.2	Tension and meandering adjustments of the weigh conveyor belt	3-29
3.6.3	Replacement of driving roller for weigh conveyor	3-30
3.6.4	Replacement of driven roller for weigh conveyor	3-31
3.6.5	Replacement of timing belt	3-32
3.6.6	Adjusting tension of timing belt	3-33
3.7	Weigh Conveyor (CR Type)	3-35
3.7.1	Disassembly of Weigh Conveyor	3-35
3.7.2	Disassembly (replacement) of Weigh Conveyor Belt	3-37
3.7.3	Tension and meandering (snaking) adjustment of the weigh conveyor	3-38
3.7.4	Replacement of driven roller bearing (and oil seal) for conveyor	3-39
3.7.5	Replacement of belt-side bearing (and oil seal) for conveyor driven roller	3-40
3.7.6	Replacing Bearing (Oil Seal) of the Conveyor Drive Roller at Anti-coupling Side	3-41
3.8	Weigh/Drive Unit (SS Type)	3-42
3.8.1	Replacement of drive motor	3-43
3.8.2	Replacement of diaphragm	3-45
3.9	Weigh/Drive Unit (CR Type)	3-46
3.9.1	Replacing Timing Belt	3-47
3.9.2	Inspection of Upper and Lower Drive Transmission Devices	3-48
3.9.3	Replacing Bearing (Oil Seal) for Coupling of Upper Drive Transmission Device	3-48
3.9.4	Replacement of drive motor	3-50
3.9.5	How to Drive the Conveyor Motor in an Emergency	3-52
3.10	Weigh Unit	3-54
3.10.1	Replacement of Sensor Unit and Limitation Adjustment	3-55
3.10.2	Judgment of Load Cell Breakage	3-58

4 ELECTRICAL CONFIGURATION

4.1	Electrical Unit Configuration	4-3
4.1.1	Electrical Unit Configuration	4-3
4.1.2	Total Diagram	4-4
4.2	Remote Control Unit	4-6
4.2.1	Block Diagram	4-6
4.2.2	Key Board (P-5624*)	4-7
4.2.3	RCU I/F board (P-5646*)	4-8
4.2.4	USB Interface Board (P-5577*)	4-10
4.3	Printer Unit (optional)	4-10
4.3.1	Thermal Printer (SAM-1245-10K)	4-11
4.3.1.1	Winding Motor Drive Board (P-5685*) (optional)	4-12
4.3.1.2	Printer I/F Board (P-5647*) (optional)	4-12
4.4	Signal tower unit (optional)	4-13
4.5	Electrical Unit	4-17
4.5.1	Parts Location of Electrical Unit	4-17
4.5.2	MCU Board (PK-270*→PK-270D)	4-19
4.5.3	DRV Board (P-5657*)	4-21
4.5.4	ADC Board (P-5660*)	4-25
4.5.4.1	Mounting AFV unit (optional)	4-28
4.5.5	Motor Drive Board (U3, U4)	4-29
4.5.5.1	Motor Drive Board (30W/50W)	4-29
4.5.5.2	Motor Drive Board (100W)	4-29
4.6	USB Serial Board (P-1022*) (Optional)	4-30
4.7	Relay Terminal Unit (optional)	4-31
4.8	I/O unit (optional)	4-32
4.8.1	Relay borad P-5658* [XT102, XT104]	4-36
4.8.2	Realy terminal unit (optional)	4-37

5 FUNCTION OF LEVEL 3

5.1	Description of Level 3	5-3
5.1.1	Screen Display of Level 3	5-3
5.1.2	System Configuration	5-4
5.1.2.1	Fix Weight Display	5-5
5.1.2.2	Weight Detection (All Preset)	5-6
5.1.2.3	Q'ty of Reject Machine	5-6
5.1.2.4	FBC Method (Feed Back Control) (optional)	5-7
5.1.2.5	Feed Conveyor Speed	5-8
5.1.2.6	Weigh Conveyor Speed	5-8
5.1.2.7	Rejection Conveyor Speed	5-9
5.1.2.8	Expansion IO port (IO-1) (optional)	5-9
5.1.2.9	Signal Tower (IO-2) (optional)	5-10
5.1.2.10	Rejection Error Monitoring/Full Detect Setting (optional)	5-10
5.1.2.11	Reject Confirm Setting (optional)	5-12
5.1.2.12	Low air pressure monitoring Setting (optional)	5-13
5.1.2.13	Weight display (standby)	5-14
5.1.2.14	Auto Zero Adjustment	5-14
5.1.2.15	Static Filter Number	5-15
5.1.2.16	MODBUS Communication (optional)	5-15
5.1.2.17	After changing the details in system configuration	5-16
5.1.3	System Diagnostics	5-16
5.1.3.1	Operation Unit Diagnosis	5-16
5.1.3.2	Auxiliary Unit Diagnosis	5-19
5.1.3.3	Conveyor Separate Operation	5-23
5.1.4	Automatic Zero Setting	5-24
5.1.5	Weigh Unit Setting	5-29
5.1.5.1	AFV Setting (optional)	5-30
5.1.6	Drive Unit Setting	5-32
5.1.7	Communication Unit Setting (optional)	5-39
5.1.8	Buzzer Setting	5-41
5.1.9	Screen Capture	5-41
5.1.10	Setting Value Save/Recovery	5-43
5.1.11	Shipment Setting	5-46

5.1.12	Program Version Information	5-47
5.1.13	License	5-48
5.1.14	Select Language	5-49
5.1.15	System Initialization (Rejector)	5-50
5.1.16	System Initialization	5-52

6 ERROR MESSAGE AND COUNTERMEASURES

6.1	Error Messages and Countermeasures	6-3
6.1.1	Power Error (DRV)	6-3
6.1.2	Zero Adjustment	6-4
6.1.3	Auto Zero Error	6-5
6.1.4	Span Error	6-6
6.1.5	PhotoSensor Unit Error (Weigh)	6-7
6.1.6	Feed Conveyor Error	6-8
6.1.7	Weigh Conveyor Error	6-10
6.1.8	Preset Data Error	6-12
6.1.9	Other Errors Display	6-14
6.1.10	Communication Error	6-15
6.1.11	Setting Error [Average Control]	6-17
6.1.12	Other Errors (Including Option)	6-19

7 APPENDIX

7.1	Installation Procedure for MCU Program (only replaced to new board)	7-3
7.1.1	Delete MCU Data Memory	7-3
7.1.2	Program Installation for MCU Board and System Initialization	7-4
7.2	Program Installing Procedures for MCU, ADC, DRV, REJ, IO	7-16
7.2.1	Program Installing Procedures with USB Memory	7-16
7.2.1.1	Installation of MCU, ADC, DRV and REJ Programs at the Same Time	7-16
7.2.1.2	Install the Program to the Weigh Unit [ADC board]	7-19
7.2.1.3	Rejector [REJ]	7-20

7.2.2	Error Screen Displayed at Program Install	7-22
7.3	License Confirmation	7-24
7.3.1	License Attestation	7-24
7.3.2	Show License	7-28
7.3.3	License Code History	7-28
7.4	Detailed Information on Communication Unit (with the entire license attested)	7-29
7.4.1	Communication Unit Setting COM1 Communication Unit Setting	7-29
7.4.2	Communication Unit Setting COM2	7-29
7.4.3	Port 2000 Setting	7-30
7.4.4	Port 2026 Setting	7-30
7.4.5	Ethernet Settings	7-31
7.5	Optional Settings	7-31
7.5.1	Ethernet (Port 2000)	7-31
7.5.1.1	i-STATION LINK/LINK2 Settings	7-31
7.5.2	Standard Communication Specification (host server)	7-32
7.5.3	Setting Information of RS-232C	7-34
7.5.4	Setting Information of Standard Preset Communication Specification	7-35

8 WIRING DIAGRAM

8.1	Main Unit Block Wiring Diagram	8-3
8.1.1	DACS-GN-S015 (Standard Type)	8-3
8.1.2	DACS-GN-S015 (Standard Type + IO Unit)	8-4
8.1.3	DACS-GN-S060 (Standard Type)	8-5
8.1.4	DACS-GN-S060 (Standard Type + IO Unit)	8-6
8.2	Rejector Electrical Wiring Diagram (Optional)	8-7
8.2.1	RE-015-A3-□/SS-M-B	8-7
8.2.2	RE-015-A3-□/CR-M-B	8-8
8.2.3	RE-060-A3-□/SS,CR-M-B	8-9
8.2.4	RE-015-J2,3,P2-□/SS,CR-A-B	8-10
8.2.5	RE-015-J2,3,P2-4/SS,CR-A-B	8-10
8.2.6	RE-015-DB2-□/SS-A-B	8-11
8.2.7	RE-060-DB2-□/SS,CR-A-B	8-11

9 REJECTOR

9.1	Rejector Overview	9-3
9.1.1	Rejector Field Code	9-3
9.1.2	Types of Rejector Device	9-4
9.2	Installation of Rejector Device	9-6
9.2.1	Air Jet Type	9-6
9.2.2	Arm Type	9-8
9.2.3	Drop Belt Type	9-14
9.2.4	REJ (DRV) Board (P-5657*)	9-17
9.3	Rejection Conveyor (SS Type)	9-20
9.3.1	How to Detach and Attach Rejection Conveyor	9-20
9.3.2	Tension and Meandering Adjustments of Rejection Conveyor Belt	9-21
9.4	Rejection Conveyor (CR Type)	9-22
9.4.1	How to Detach and Attach Rejection Conveyor	9-22
9.4.2	Replacing Rejection Conveyor Belt	9-23
9.5	Rejection Conveyor Drive Unit	9-25
9.5.1	Rejection Conveyor Drive Unit (Air jet type)	9-25
9.5.2	Rejection Conveyor Drive Unit (Arm type)	9-25
9.5.3	Rejection Conveyor Drive Unit (Drop belt type)	9-26
9.5.4	Rejector Manual Test	9-27
9.6	Error Displays and Countermeasures (Rejector / Standard Type)	9-28
9.6.1	Rejecting Error (Non-complete)	9-28
9.6.2	Air Low Stop	9-29
9.6.3	Rejection Conveyor Error	9-30
9.6.4	Other Errors (Rejector)	9-32

