

USER NAME FIESTA TORTILLAS FACTORY



PARTS MANUAL

MODEL NAME ATLAS-234R

ORDER No. 2017039468/682138

PROJECT No. 2054803-02

ISHIDA CO., LTD.


HOW TO USE THIS PARTS MANUAL

□ OVERVIEW

This parts manual contains a list of replacement parts for a standard equipped machine. Please refer to this manual when ordering or replacing parts.

□ HOW TO REFER TO THIS MANUAL

- The machine is divided into sections.
- The Parts Section Locator, found on the first page, contains an illustration showing the location of main components (units). Refer to the illustration to locate the corresponding section for the desired unit. Some units may contain sub sections. Sub sections are listed within a section heading on the Parts Section Locator.
- The Table of Contents, found on the second page, contains the section/page number, unit name, part code, and drawing number for each unit. For a detailed list of parts and parts code used within each unit, refer to the corresponding unit section.
- Page references are constructed as follows: section number, sub section number (if any), and page number.
- A disassembly illustration is found on the left-hand side page of each parts list.

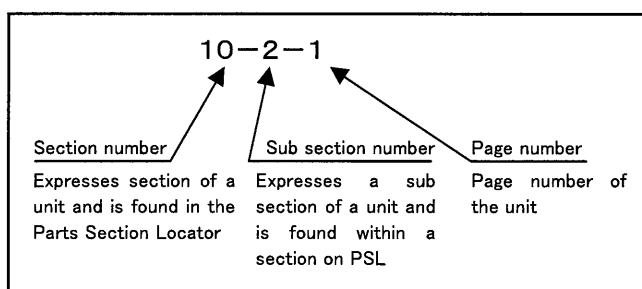

□ ORDERING A PART

When ordering a part, be sure to specify the

part by referring to this manual and advising Ishida of the following information:

- Parts manual number (indicated on the upper side of the Table of Contents)
- Job number of the machine (found on the plate fitted to the main body)
- Company name
- Contact information
- Part code of the required item
- Part name
- Quantity

When you need to order a whole unit, please specify the part code with the marking ● on the itemized list.

REMARK

- The items listed on this manual are original equipment specifications and may be slightly different from the items actually equipped to your Ishida machine now in operation. For this reason, always be sure to indicate job number (indicated on the cover sheet of this manual) when ordering parts.

ATLAS

PARTS SECTION LOCATOR

SECTION

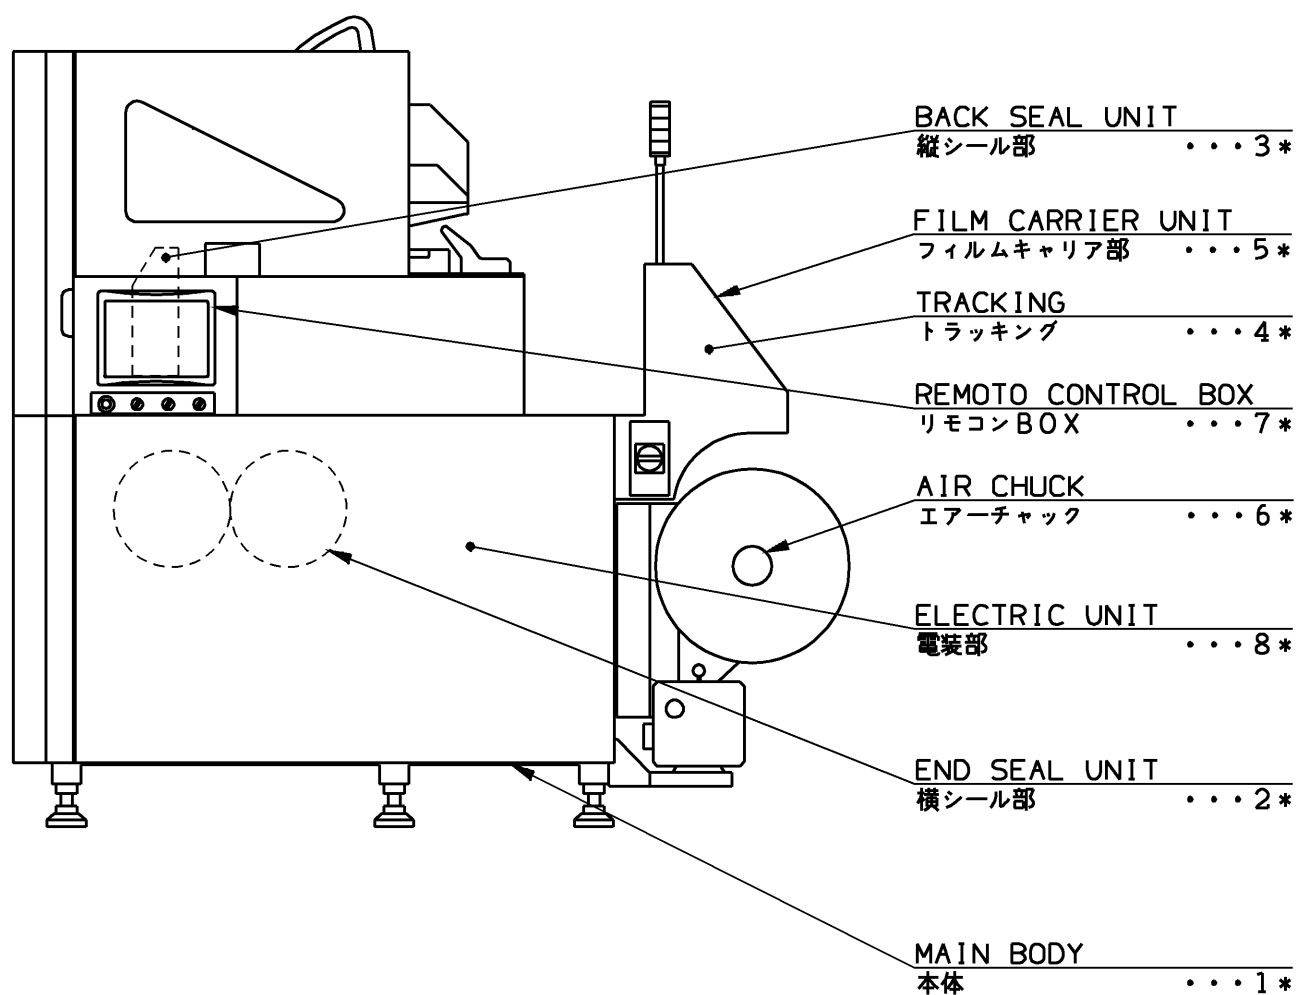


TABLE OF CONTENTS

MODEL NAME ATLAS-234R

PROJECT No. 2054803-02

SECT- PAGE	UNIT NAME	PART CODE	DRAW No.
10- 1	MAIN BODY UNIT::	000-145-7943-04	4D-44038
11- 1	GUARD UNIT:MAIN BODY:	000-150-4572-17	4D-47587
12- 1	COVER UNIT:MAIN BODY:	000-138-4514-11	4D-45908
15- 1	AIR UNIT:COMPRESS:	000-139-5607-06	4D-43318
15- 2	AIR UNIT:VACUUM:	000-134-2869-34	4D-39181
20- 1	DRIVE UNIT:END SEAL:	000-135-3824-02	4D-32803
20- 2	COMPRESSCONTROL UNIT:END SEAL:	000-137-1862-21	4D-51668
20- 3	ARM UNIT:END SEAL:	000-137-1888-15	4D-42278
21- 1	STRIPPING UNIT:END SEAL:	000-145-7934-01	4D-52064
21- 2	KNIFE UNIT:END SEAL:	000-137-1879-21	4D-42416
21- 3	SHUTTER UNIT:END SEAL:	000-137-1876-02	4D-32933
23- 1	HEATER UNIT:END SEAL:	100-017-0365-00	4D-54118
23- 2	JAW UNIT:DETACHABLE:	100-015-0946-00	4D-53183
29- 1	SHAKER UNIT::	000-137-5463-13	4D-42801
30- 1	PULL DOWN UNIT:BACK SEAL:	000-133-3935-07	4D-41909
30- 2	FORMER UNIT::	000-086-3765-03	4D-20100
30- 3	ARM UNIT:BACK SEAL:	000-095-0431-29	4D-20089
30- 4	HEATER UNIT:BACK SEAL:	000-116-5396-47	4D-44223
30- 5	COVER UNIT:BACK SEAL:	000-095-0024-27	4D-31061
30- 6	POSITIONING UNIT:BACK SEAL:	000-133-3937-40	4D-42280
30- 7	OPERATION UNIT:FRONT:	000-135-3836-15	4D-49045
30- 8	POKER BASE UNIT::	000-117-3879-01	4D-31733
30- 9	FLUSHING UNIT:NITROGEN:	000-139-5610-08	4D-43470
40- 1	FORMER ROLLER UNIT::	000-133-3964-04	4D-32926
40- 2	REG MARK UNIT::	000-135-3842-08	4D-40274
50- 1	FILM CARRIER UNIT::	000-147-6341-04	4D-46048
50- 2	COVER UNIT:AIR CHUCK:	100-012-4577-00	4D-42282
51- 1	OPERATION UNIT:REAR:	000-112-5982-12	4D-31092
60- 1	AIR CHUCK UNIT::	000-133-3986-38	4D-53719
70- 1	REMOTE CONTROL BOX UNIT::	000-151-3442-02	4D-47288
70- 2	REMOTE CONTROL BOX AS::	000-144-5016-44	4D-44372
70- 3	PRINTER BOX AS::	000-144-8370-25	4D-44373
71- 1	COVER UNIT:REMOTE CONTROL:	000-086-1701-08	4D-33218
80- 1	PS-0 UNIT::	000-116-5111-06	4D-50035
81- 1	DRIVER UNIT:BACK SEAL:	000-136-1292-28	4D-42414

ATLAS

PARTS SECTION LOCATOR

SECTION

