


Installation and Setup

Removing the Shipping Pallet

Unfasten the four shipping bolts that secure the SB-2 HD to the shipping pallet and lift the SB-2 HD Case Taping System from the pallet.

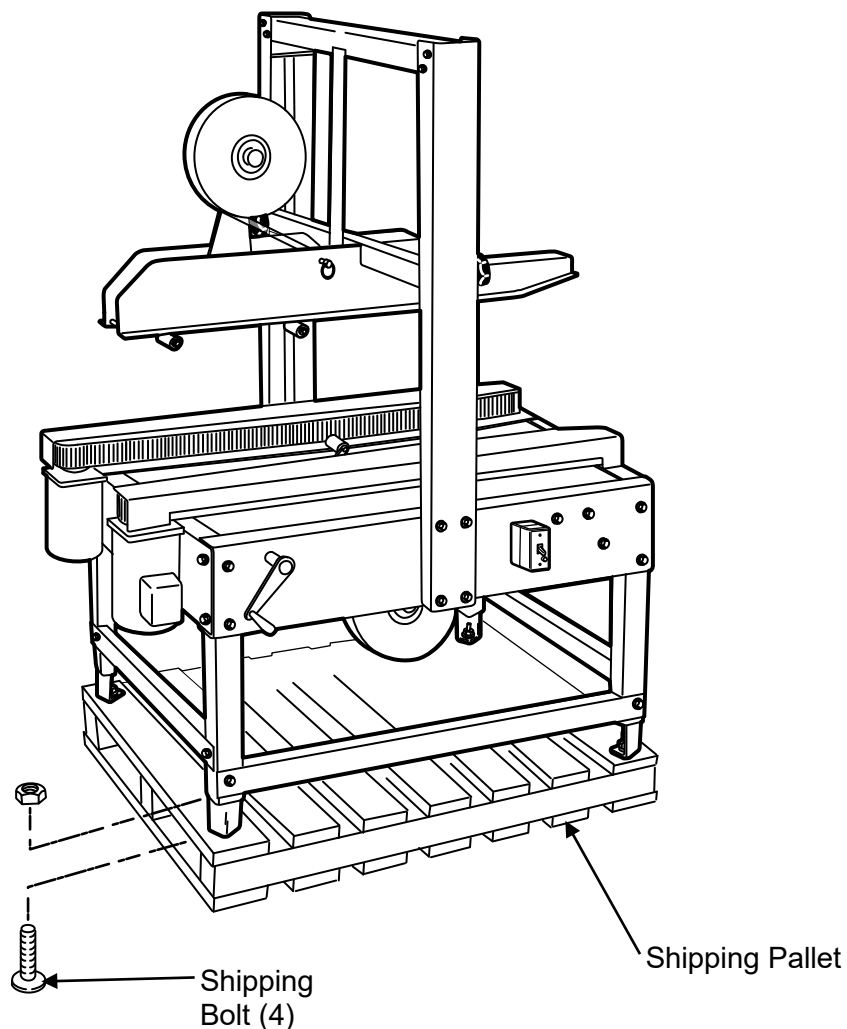


Lift the SB-2 HD Case Taping System from the pallet.

CAUTION! The SB-2 HD Case Taper is a very heavy piece of equipment and will require a forklift, floor crane, or several people to move safely off the shipping pallet. Use proper equipment when lifting the case taper and ensure the case taper is secure and will not shift while the shipping pallet is being removed or during height adjustment or optional caster installation.


Repositioning Width Adjustment Handle

The width adjustment handle is shipped in the shipping position and must be reversed to the operating position.

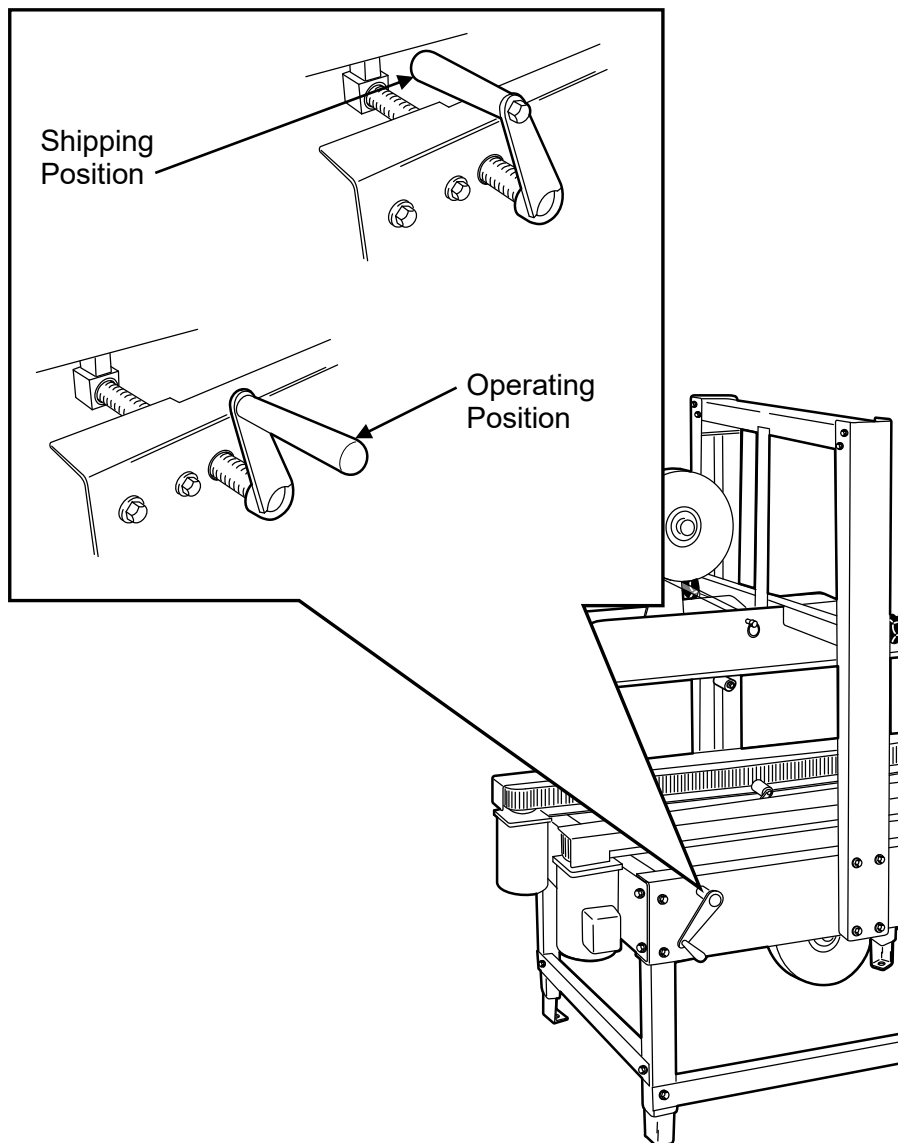

Installing the Optional Locking Casters


If you have purchased the optional locking casters install them on the four taper legs.

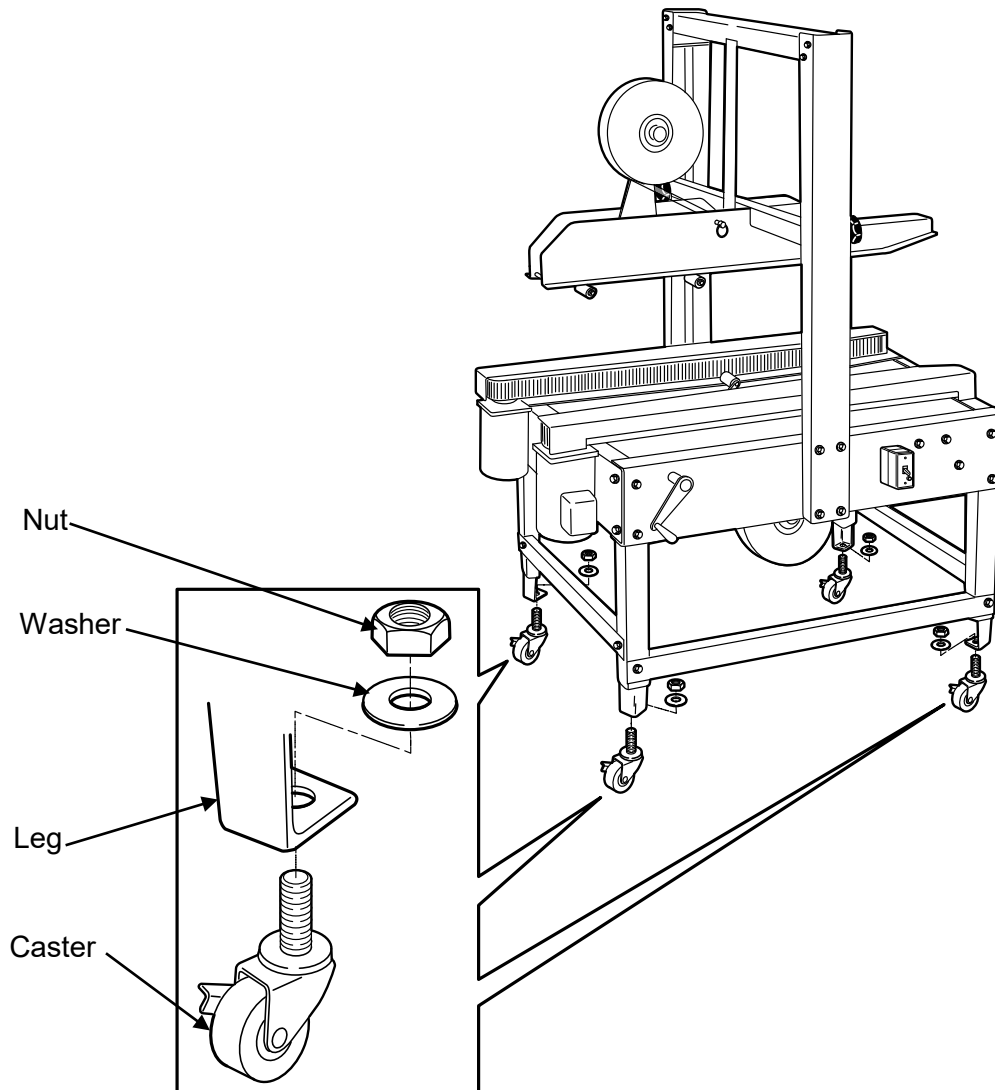

CAUTION! When raising the case taper off the floor to install the casters, use proper equipment to lift the case taper. Ensure the SB-2 HD Case Taper is secure and will not shift while the casters are being installed.

Set Machine Height

To adjust the leg height, loosen the screws shown on each leg. Slide the insert up or down to the required height, and then refasten the screws.

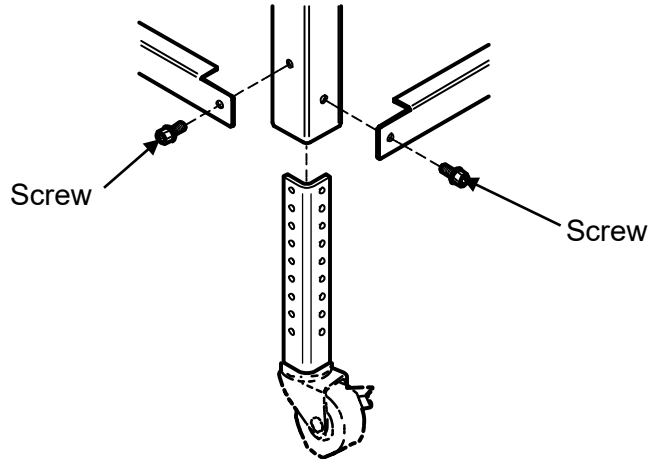

Location Requirements

To move the SB-2 HD to the desired location, you will need to use a pallet jack or fork lift. If you have purchased the optional locking casters you can move the taper easily over a smooth flat surface.

When installing the SB-2 HD Taping System please be aware of the following considerations:

1. The mounting surface is flat and level.
2. Conveyor or packing table height.
3. Alignment with packaging line.

When the SB-2 HD Taper is installed in the operating location you will need access to:

1. The power switch.
2. Height and width adjustments.
3. Tape loading (Both upper and lower tape cartridges).

A packing table may be provided at the in-feed end where the packer can fill boxes and close the flaps prior to feeding the boxes into the machine. It may also be convenient to place a separate table, bin, or exit conveyor near the exit end of the taper for handling of sealed cases.

It is essential that the table and conveyor be at the machine bed height.

The machine should be placed on a flat, level floor so that it does not rock or move. Optional locking casters are available to provide portability; however, we recommend that the machine be securely locked in place when used.

Loading the Tape Cartridges


Turn the main power off and disconnect power.

CAUTION! To avoid personnel injury, remove the tape cartridge before loading tape.

When handling the tape cartridge be careful to avoid contact with the tape cutting blade.


Lower Cartridge

To remove the lower tape cartridge, it is necessary to raise the upper taping head to the highest position. Loosen the height adjust locking knobs (there is one on each side of the vertical mast supporting the tape head seat) and raise the upper tape head. Retighten the locking knobs.

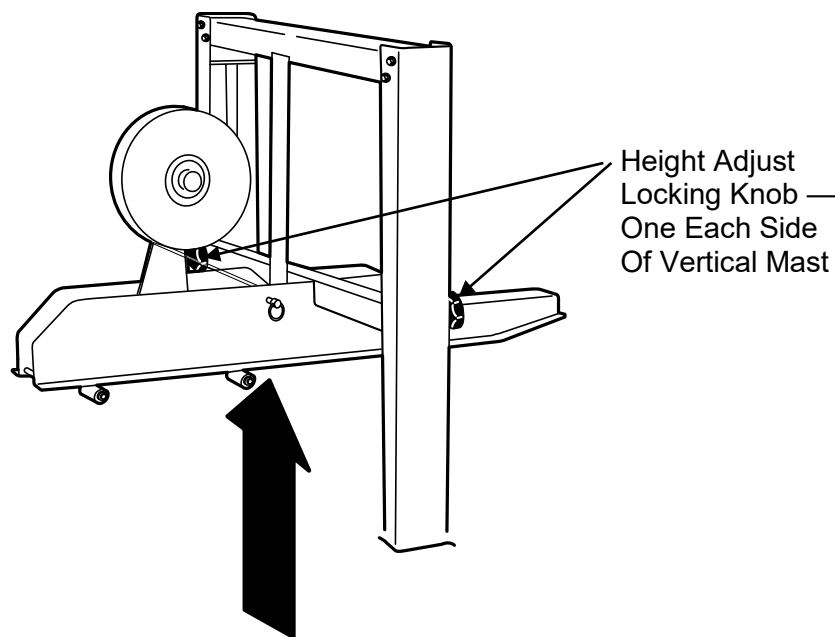

After raising the top taping head up, remove the lower taping cartridge from the bottom section by holding both lift points and lifting leading with the rear lift point first, raising the tape cartridge upward, out of the lower tape head seat.


CAUTION! Only lift the tape cartridge by the lift points. Lift leading with the rear lift point first. Take care to keep away from any cutting edges.

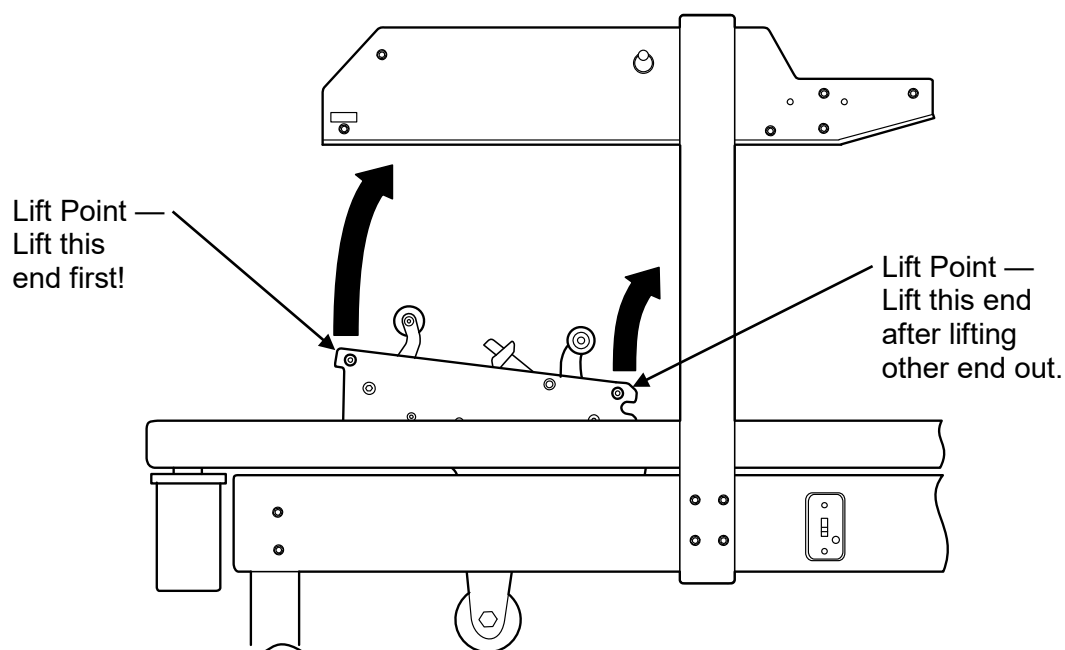


Prepare the Tape Roll

Push the tape roll onto the tape core assembly.

NOTE: Make sure the tape roll is pushed all the way on the tape core assembly.

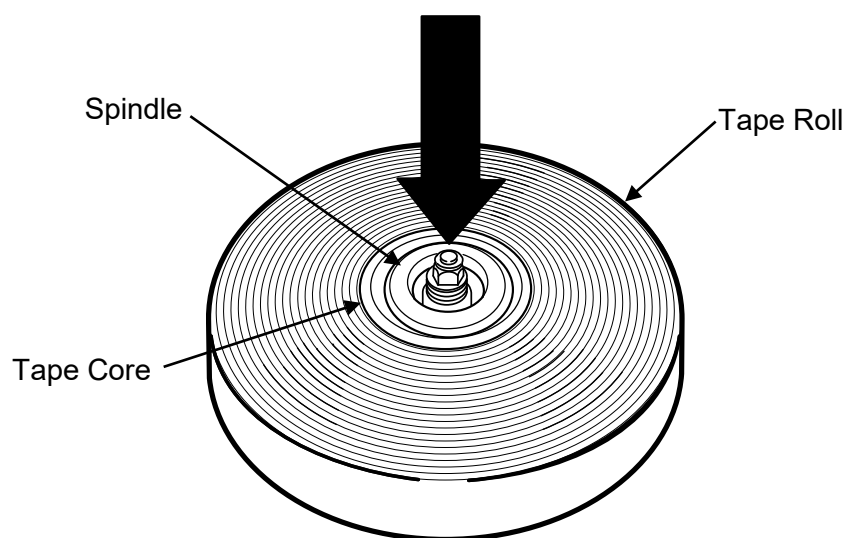

Check Tension

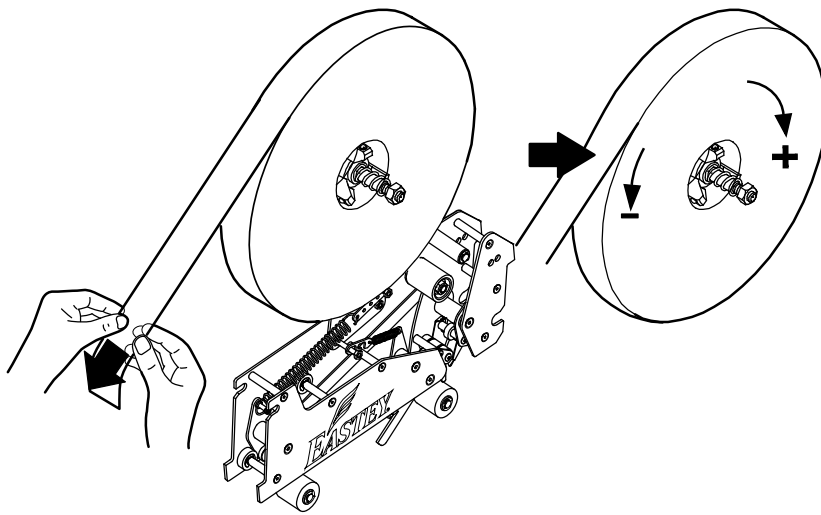


Check the tape for correct tension. If the tape head used with the taper allows for adjustment of tape tension, tighten or loosen the tape core holder to adjust to correct tension.

Thread Tape


Carefully thread the new tape through the rollers in the tape head as shown in the applicable diagram in the Tape Head User Guide provided with the tape head. Be careful to avoid the cutting edges.

For convenience, the diagram for threading tape in the EZ-EX Tape Head, which is the tape head normally offered with this machine, is provided on the following page. Follow the diagram that applies for your tape head, depending on the tape head model and position when installed in the taper.

EZ-EX Tape Head

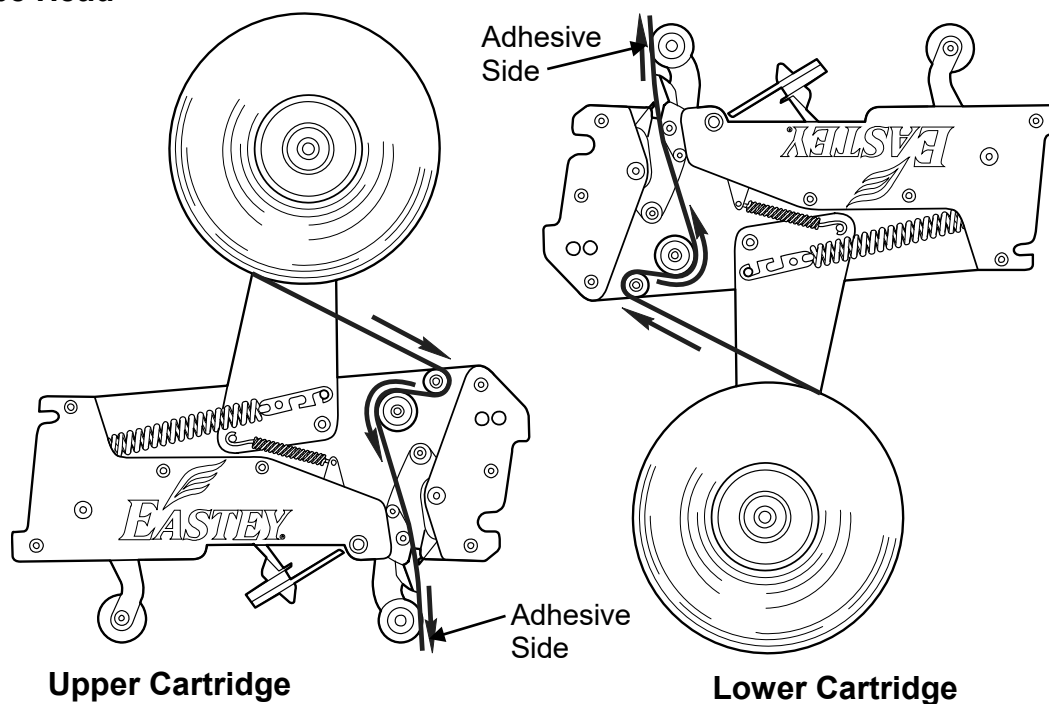


Reinstall the Lower Tape Cartridge

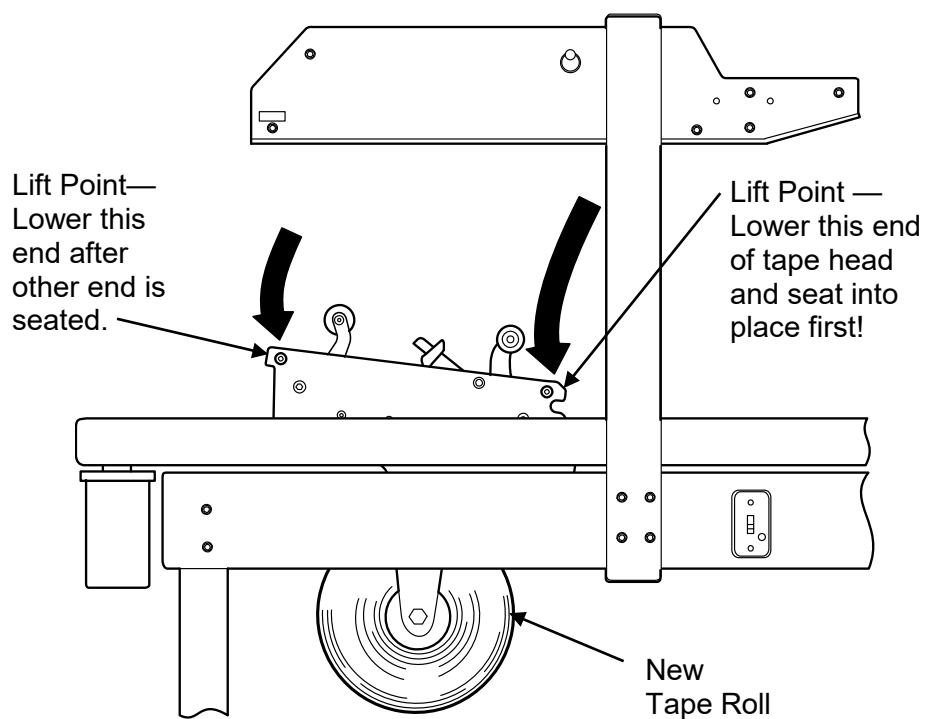


Upper Cartridge

To remove the upper cartridge, it is helpful to lower the upper taping head to its lowest position. Loosen the height adjust locking knobs (there is one on each side of the vertical mast supporting the tape head seat) and lower the upper tape head. Re tighten the locking knobs. Pull the detent pin and raise the right end of the cartridge first.

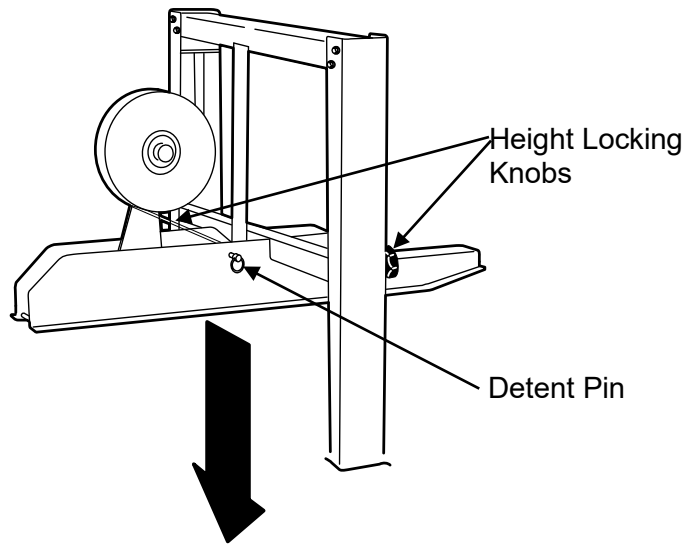

Lift the upper cartridge up and out of the machine.

CAUTION! Only lift the tape cartridge by the two lift points. Take care to keep away from any cutting edges.

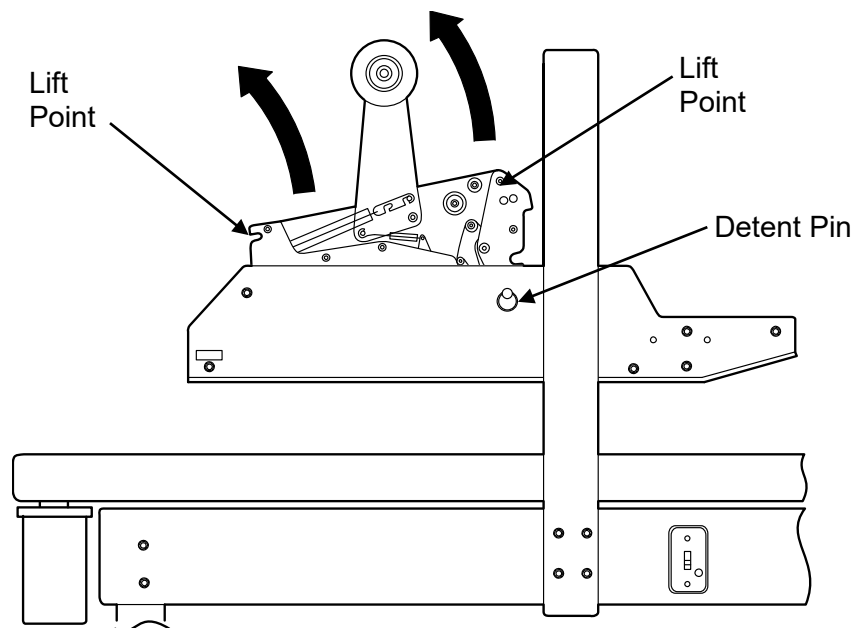

Thread Tape

Prepare the tape roll, check tape tension, and thread the tape through the rollers in the tape head for the upper tape cartridge following the same instructions provided for the lower tape cartridge.

Reinstall the Upper Tape Cartridge

Supporting the upper tape head by the lift points indicated, lower the tape head into the machine. Reinstall the detent pin to secure the upper tape head.

CAUTION! When replacing the upper tape cartridge only lift by the two lift points. Take care to keep away from any cutting edges.

