


Adjustments

CAUTION! Make all adjustments with the machine turned off.

Package Width

Adjust drive belt width according to the box width using the width adjustment handle at the side of the case taper.

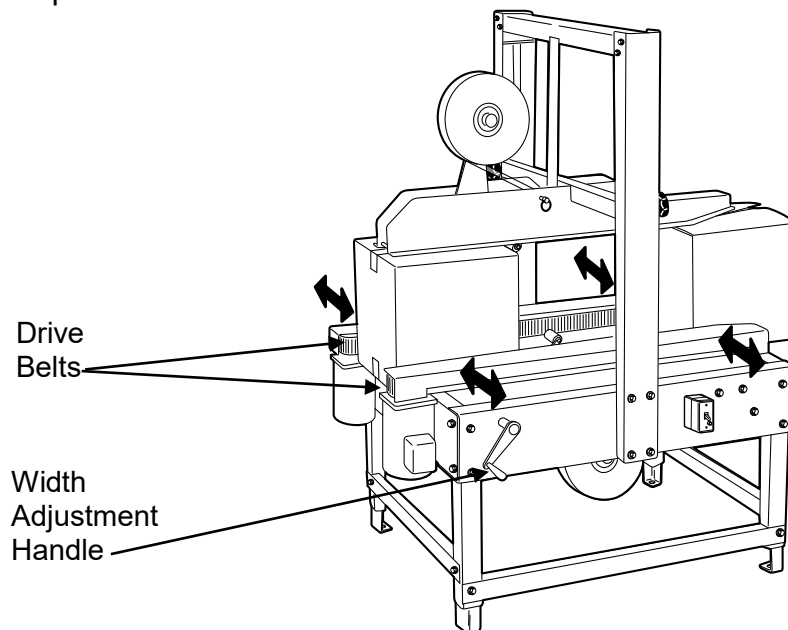

Package Height

Adjust upper tape head height according to the box height by loosening both height locking knobs, adjusting upper tape head to desired height, and then retightening the height locking knobs.

